

UPDATE

Check app updates manually. Get a matching OTA ZIP from Listener-Firmware Releases; select it in Device. Keep power/connection stable; verify version after reboot.

PAIR AGAIN

Double-click the knob; if needed, remove the old Windows listener entry and re-pair. This only resets pairing. Normal OTA preserves bonds/settings.

COMMON ISSUES

No charge: try another cable / 5 V supply. No text: check source, credentials, model and network; proxy is per provider. Insertion blocked: test a text editor or paste from clipboard / History.

DIAGNOSTICS

Use About for recovery/diagnostics. No keys or transcripts; saved debug audio may be attached. Debug recording defaults to off. Review packages and logs before sharing.

GET HELP

In Listener-Type Issues, include OS, app / firmware versions, input source and steps. Review logs before sharing.

01 SET A PHRASE

Connect the keyboard. In Settings → Device, check auto-start and its saved state. Default phrase: “开始录音”. Apply after changing it.

02 ENROLL

Say the current phrase three times as guided, about 9 seconds. Wait for completion; re-enroll after changing the phrase. Without enrollment, anyone saying it may trigger recording.

03 STOP / DISABLE

Auto-start and auto-stop default to on; check saved device settings. Stop manually if needed. Deleting a voiceprint does not disable wake; turn auto-start off separately.

INPUT GUARD

Voiceprint reduces interference; it is not authentication. Review final text in noise, at distance or with overlapping speakers.

Wake may send candidate audio to the computer; REC off is not microphone off. Cloud ASR processes audio; cloud styles, translation and QA process text. Local ASR alone does not make the whole flow offline.

PWR	Green / amber / red: battery; double red: critical. White breathes: charging; solid: full.
BLE	Blue pulses: pairing/reconnect; dim blue double: Type not ready; solid blue: ready.
REC	Gold follows audio: recording.
AI	Purple rhythm: transfer / processing.
OK	Green ~2 s: complete; cyan-green: OTA progress.
WARN	Amber / red: check the app error message.

IDLE / WAKE

Battery defaults: low power after 1 idle minute, off after 10. USB: low power after 3 minutes, no auto-off. Use a key or knob to wake; after shutdown, click the knob.

In Device, adjust status / key / knob / edge brightness and idle timers (0 disables a minute timer). Low power retains PWR feedback.

CARE / SAFETY

Use a compliant 5 V supply; keep the mic clear and charging ventilated. Do not open, crush, pierce, short, immerse or burn batteries. Disconnect for heat, odor, leaks or swelling; follow local recycling rules.

CONTROL / CURRENT DEFAULT	
KNOB CLICK	Start / stop dictation
ROTATE	Volume; brightness or off optional
KNOB DOUBLE	Reset Bluetooth pairing
KNOB HOLD	Hold until shutdown confirms
KEY1 / KEY2	Right Ctrl / Ctrl+C
KEY3 / KEY4	Ctrl+V / Ctrl+Z

Device maps key click / double / hold and knob click: dictation, copy/paste, undo, styles, translation, QA, templates, shortcuts, apps or off. Key double / hold defaults off; knob double / hold is reserved.

Vocabulary: Add terms, notes or presets. Set literal corrections for repeated errors. Vocabulary helps but does not guarantee recognition.

History: View, copy, delete or clear results. Retention defaults to 7 days. Ctrl+Shift+S restyles the previous result.

Settings: shortcuts, language, theme, autostart, capsule, mute, clipboard, streaming insert. Auto-send defaults off; optionally Enter / Ctrl+Enter.

Ctrl+Shift+O opens Type; tray Quit exits. Connect before writing device settings.

RECORD / INSERT

Focus a field. Click the knob or press Right Ctrl to start / stop; Esc cancels. Check final text; paste if insertion is blocked.

RAW / STYLES

Raw is default; filler cleanup is off. Choose Light, Structured or Formal in Styles. Clone/edit packs; import/export ZIPs.

TRANSLATE

Choose a target in Translation, then tap Shift while recording. A usable original is kept if translation or polishing fails.

SELECTION QA

Set up QA services first (panel 03). Select text; Ctrl+Shift+; opens QA. Check captured text, then use the recording key to ask / stop. Closing clears this session.

Vocabulary, History and preferences: panel 05.

01 INSTALL

Get the Windows MSI from Listener-Type Releases. Install, open and allow microphone access.

02 SET UP SERVICES

Set ASR credentials/model, or prepare Windows local ASR and try Raw without a key. Styles, translation and QA need a text provider; QA voice also needs a Volcengine App Key / Access Key.

03 PAIR THE KEYBOARD

Charge via USB-C; click the knob to power on. Start pairing in Settings → Device. Select listener in Windows Bluetooth, then check the connection in Type.

04 CHECK INPUT

Choose Listener BLE for the keyboard, or Computer microphone in Settings → Recording. Solid blue BLE means ready. Try dictation on panel 04.




GET THE SOFTWARE


Listener-Type / Releases

Free app; cloud providers bill separately. Bring your own keys. Windows is the main hardware path; macOS / Linux use source builds. See platform docs.


Listener Type turns speech into text at your cursor. The keyboard captures audio and provides controls. The app also works with a computer microphone.

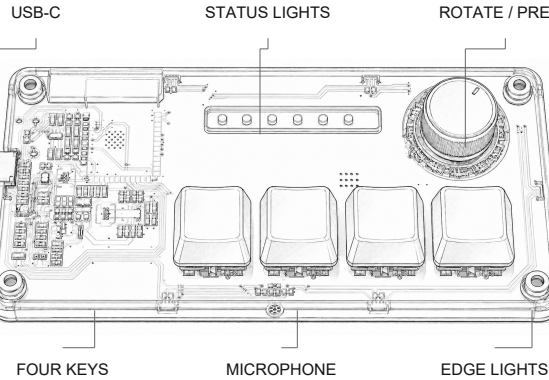

Model: Founder Edition V1.0 / ESP32-S3-WROOM-1
Battery: 2000 mAh / 50 × 34 × 10 mm (battery size)
Input: 5 V DC / 0.9 A Max; BLE / USB-C charge & service
USB-C cable and manual supplied. Original ratings; consult your batch documents for specifications and contents.



LISTENER VOICE KEYBOARD

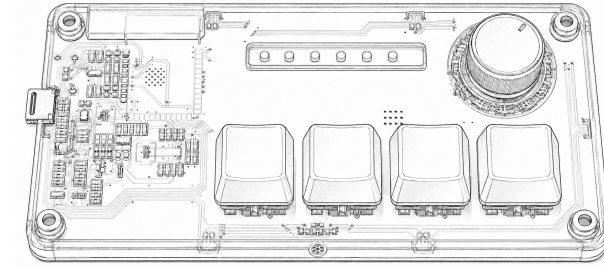

USER MANUAL

ENGLISH REVERSE / EIGHT-PANEL FOLD