




DENZIC

语音输入设备

LISTENER 语音键盘

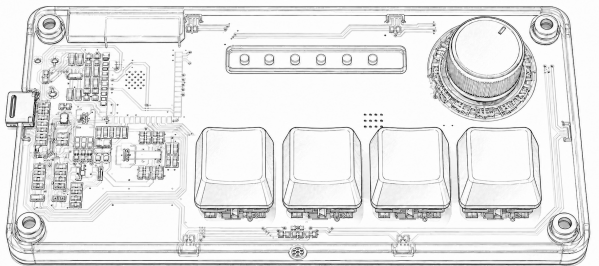


使用说明

中文正面·双面八折页

02 PRODUCT

认识 Listener

Listener Type 把语音转成文字并写入当前光标；键盘负责收音与实体控制。软件也可单独用电脑麦克风。

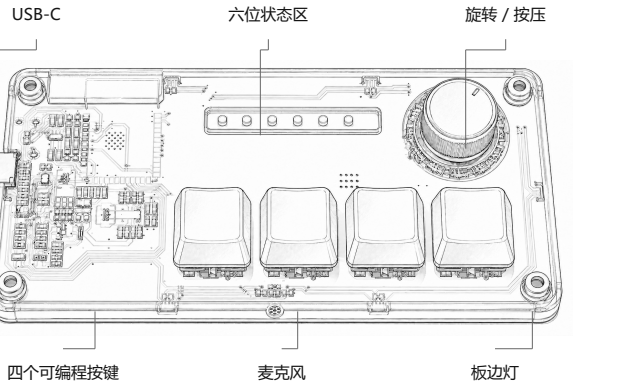

型号: Founder Edition V1.0 · ESP32-S3-WROOM-1
电池: 2000 mAh; 50 × 34 × 10 mm (电池尺寸)
输入: 5 V DC / 0.9 A Max; BLE / USB-C 充电与维护
随附 USB-C 线及说明书; 参数、清单以对应批次资料为准。

03 SETUP

安装与连接

01 安装软件

从 Listener-Type 的 Releases 下载 Windows MSI, 安装并打开, 允许麦克风访问。

02 配置服务

选择识别服务并填凭据与模型; 无密钥可先准备 Windows 本地模型, 用 Raw 听写。整理、翻译和问答需文字服务; 问答语音需火山引擎 App Key / Access Key。

03 连接键盘

USB-C 充电, 单击旋钮开机。在「设置 → 设备」开始配对; Windows 蓝牙选择 listener, 再回到 Type 检查连接。

04 确认录音来源

键盘选 Listener BLE; 不用键盘时, 在「设置 → 录音」改选电脑麦克风。BLE 蓝常亮表示就绪, 再按第 04 面试录。



扫码获取软件

Listener-Type / Releases

软件免费; 云服务按提供方计费, 密钥自备。
Windows 为主要硬件路径; macOS / Linux 从源码构建, 差异见仓库。

04 USE

录音与文字功能

录音与输出

聚焦输入框, 单击旋钮或按右 Ctrl 开始, 再按一次停止; Esc 取消。看最终文字; 写入受阻时按提示粘贴。

原文与风格

默认 Raw 原文, 去口癖默认关闭。风格页选 Light / Structured / Formal; 可复制编辑、导入导出风格 ZIP。

翻译

翻译页先选目标语言; 录音中按 Shift 启用本次翻译。整理或翻译失败时尽量保留可用原文。

选区问答

先配好第 03 面的问答服务。选中文本, 按 Ctrl+Shift+; 打开问答窗口, 再用录音键提问 / 结束。检查已取得的选区; 关闭窗口清空本次会话。

词库、历史与个人设置见第 05 面。

05 CONTROLS

按键与个人设置

控件 / 当前默认	
旋钮单击	开始 / 停止录音
旋转	音量; 可改亮度或禁用
旋钮双击	重置蓝牙配对
旋钮长按	保持按住至关机确认完成
KEY1 / KEY2	右 Ctrl / Ctrl+C
KEY3 / KEY4	Ctrl+V / Ctrl+Z

设备页映射四键单击 / 双击 / 长按与旋钮单击: 听写、复制粘贴、撤销、风格、翻译、问答、模板、快捷键、打开应用或禁用。四键双击 / 长按默认禁用; 旋钮双击 / 长按保留。

词库与纠错: 词库页添加专有词、备注或预设; 反复认错的词可设字面替换规则。词库不保证每次都认对。

历史: 历史页查看、复制、删除或清空; 默认保留 7 天, 可调整。Ctrl+Shift+S 可切换上一条结果的风格。

设置含快捷键、语言、主题、开机启动、胶囊、录音静音、剪贴板和流式插入。自动发送默认关闭, 可选 Enter / Ctrl+Enter。

Ctrl+Shift+O 打开软件; 托盘可完全退出。设备参数须连接后写入成功。

06 STATUS / POWER

灯语与电源

PWR	绿 / 琥珀 / 红: 电量; 红双闪: 极低。 白色呼吸: 充电; 白常亮: 充满。
BLE	蓝色脉冲: 配对 / 重连; 暗蓝双闪: Type 未就绪; 蓝常亮: 就绪。
REC	金色随声音起伏: 录音。
AI	紫色节拍: 传输 / 处理。
OK	绿短亮约 2 秒: 完成; 青绿: OTA 进度。
WARN	琥珀 / 红: 关注软件错误提示。

休眠与唤醒

电池默认空闲 1 分钟低功耗、10 分钟关机; USB 为 3 分钟低功耗, 默认不自动关机。低功耗按键或旋钮唤醒; 关机后按旋钮开机。

设备页分别调状态区、按键、旋钮、板边亮度及空闲计时; 分钟项 0 表示禁用。低功耗保留 PWR 提示。

安全与保养

使用合规 5 V 电源; 保持拾音口通畅、充电通风。勿拆解、挤压、刺穿、短路、浸水或焚烧电池。异常发热、异味、漏液或鼓包时断开停用; 按当地规定回收。

07 VOICE / PRIVACY

唤醒、声纹与隐私

01 设置唤醒词

连接键盘, 在「设置 → 设备」检查自动开始开关与写入状态。默认词为“开始录音”; 修改后点应用。

02 录制声纹

按向导说三次当前唤醒词, 约 9 秒, 等待完成。改词后必须重新录制。未录制时, 任何人说对唤醒词都可能触发。

03 结束或关闭

自动开始 / 自动停止当前默认开启, 实际以设备设置为准; 需要时手动停止。删除声纹不会关闭唤醒, 要另关自动开始。

使用边界

声纹用于减少输入干扰, 不是身份认证。噪声、远距离或多人重叠时检查最终文字。

启用唤醒时可能向电脑传送候选音频, REC 灭不等于麦克风完全关闭。云端识别处理音频; 云端整理、翻译与问答处理文字。仅本地识别不等于全程离线。

08 SUPPORT

更新与排障

更新

软件可手动检查更新。固件从 Listener-Firmware 的 Releases 下载匹配 OTA ZIP, 在设备页选包更新。保持供电与连接, 重启后核对版本。

重新配对

双击旋钮, 必要时删除 Windows 旧 listener 记录, 再重配。只清配对, 不等于全部恢复出厂; 普通 OTA 保留配对与设置。

常见问题

不充电: 更换线和 5 V 电源。无文字: 查来源、凭据、模型与网络; 代理按服务设置。用记事本试录; 写入受阻时从剪贴板或历史复制。

诊断与数据

关于页可恢复设备、导出诊断包。不含密钥或转写正文, 但可附已保存的调试录音; 调试录音默认关闭。分享前检查诊断包和日志。

问题反馈

在 Listener-Type Issues 提供系统、软件 / 固件版本、输入来源和复现步骤; 检查要分享的日志。

github.com/Listener-ai-Macau

UPDATE

Check app updates manually. Get a matching OTA ZIP from Listener-Firmware Releases; select it in Device. Keep power/connection stable; verify version after reboot.

PAIR AGAIN

Double-click the knob; if needed, remove the old Windows listener entry and re-pair. This only resets pairing. Normal OTA preserves bonds/settings.

COMMON ISSUES

No charge: try another cable / 5 V supply. No text: check source, credentials, model and network; proxy is per provider. Insertion blocked: test a text editor or paste from clipboard / History.

DIAGNOSTICS

Use About for recovery/diagnostics. No keys or transcripts; saved debug audio may be attached. Debug recording defaults to off. Review packages and logs before sharing.

GET HELP

In Listener-Type Issues, include OS, app / firmware versions, input source and steps. Review logs before sharing.

01 SET A PHRASE

Connect the keyboard. In Settings → Device, check auto-start and its saved state. Default phrase: “开始录音”. Apply after changing it.

02 ENROLL

Say the current phrase three times as guided, about 9 seconds. Wait for completion; re-enroll after changing the phrase. Without enrollment, anyone saying it may trigger recording.

03 STOP / DISABLE

Auto-start and auto-stop default to on; check saved device settings. Stop manually if needed. Deleting a voiceprint does not disable wake; turn auto-start off separately.

INPUT GUARD

Voiceprint reduces interference; it is not authentication. Review final text in noise, at distance or with overlapping speakers.

Wake may send candidate audio to the computer; REC off is not microphone off. Cloud ASR processes audio; cloud styles, translation and QA process text. Local ASR alone does not make the whole flow offline.

PWR	Green / amber / red: battery; double red: critical. White breathes: charging; solid: full.
BLE	Blue pulses: pairing/reconnect; dim blue double: Type not ready; solid blue: ready.
REC	Gold follows audio: recording.
AI	Purple rhythm: transfer / processing.
OK	Green ~2 s: complete; cyan-green: OTA progress.
WARN	Amber / red: check the app error message.

IDLE / WAKE

Battery defaults: low power after 1 idle minute, off after 10. USB: low power after 3 minutes, no auto-off. Use a key or knob to wake; after shutdown, click the knob.

In Device, adjust status / key / knob / edge brightness and idle timers (0 disables a minute timer). Low power retains PWR feedback.

CARE / SAFETY

Use a compliant 5 V supply; keep the mic clear and charging ventilated. Do not open, crush, pierce, short, immerse or burn batteries. Disconnect for heat, odor, leaks or swelling; follow local recycling rules.

CONTROL / CURRENT DEFAULT	
KNOB CLICK	Start / stop dictation
ROTATE	Volume; brightness or off optional
KNOB DOUBLE	Reset Bluetooth pairing
KNOB HOLD	Hold until shutdown confirms
KEY1 / KEY2	Right Ctrl / Ctrl+C
KEY3 / KEY4	Ctrl+V / Ctrl+Z

Device maps key click / double / hold and knob click: dictation, copy/paste, undo, styles, translation, QA, templates, shortcuts, apps or off. Key double / hold defaults off; knob double / hold is reserved.

Vocabulary: Add terms, notes or presets. Set literal corrections for repeated errors. Vocabulary helps but does not guarantee recognition.

History: View, copy, delete or clear results. Retention defaults to 7 days. Ctrl+Shift+S restyles the previous result.

Settings: shortcuts, language, theme, autostart, capsule, mute, clipboard, streaming insert. Auto-send defaults off; optionally Enter / Ctrl+Enter.

Ctrl+Shift+O opens Type; tray Quit exits. Connect before writing device settings.

RECORD / INSERT

Focus a field. Click the knob or press Right Ctrl to start / stop; Esc cancels. Check final text; paste if insertion is blocked.

RAW / STYLES

Raw is default; filler cleanup is off. Choose Light, Structured or Formal in Styles. Clone/edit packs; import/export ZIPs.

TRANSLATE

Choose a target in Translation, then tap Shift while recording. A usable original is kept if translation or polishing fails.

SELECTION QA

Set up QA services first (panel 03). Select text; Ctrl+Shift+; opens QA. Check captured text, then use the recording key to ask / stop. Closing clears this session.

Vocabulary, History and preferences: panel 05.

01 INSTALL

Get the Windows MSI from Listener-Type Releases. Install, open and allow microphone access.

02 SET UP SERVICES

Set ASR credentials/model, or prepare Windows local ASR and try Raw without a key. Styles, translation and QA need a text provider; QA voice also needs a Volcengine App Key / Access Key.

03 PAIR THE KEYBOARD

Charge via USB-C; click the knob to power on. Start pairing in Settings → Device. Select listener in Windows Bluetooth, then check the connection in Type.

04 CHECK INPUT

Choose Listener BLE for the keyboard, or Computer microphone in Settings → Recording. Solid blue BLE means ready. Try dictation on panel 04.




GET THE SOFTWARE

Listener-Type / Releases

Free app; cloud providers bill separately. Bring your own keys. Windows is the main hardware path; macOS / Linux use source builds. See platform docs.

Listener Type turns speech into text at your cursor. The keyboard captures audio and provides controls. The app also works with a computer microphone.

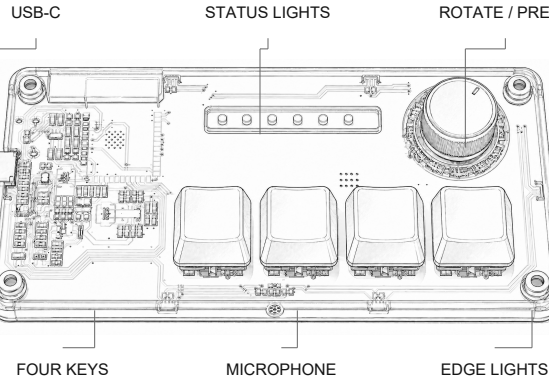

Model: Founder Edition V1.0 / ESP32-S3-WROOM-1
Battery: 2000 mAh / 50 × 34 × 10 mm (battery size)
Input: 5 V DC / 0.9 A Max; BLE / USB-C charge & service
USB-C cable and manual supplied. Original ratings; consult your batch documents for specifications and contents.




DENZIC

VOICE INPUT HARDWARE

LISTENER

VOICE KEYBOARD

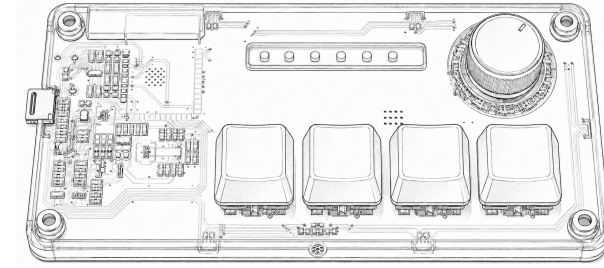

USER MANUAL

ENGLISH REVERSE / EIGHT-PANEL FOLD

DENZIC / LISTENER

EN / 01