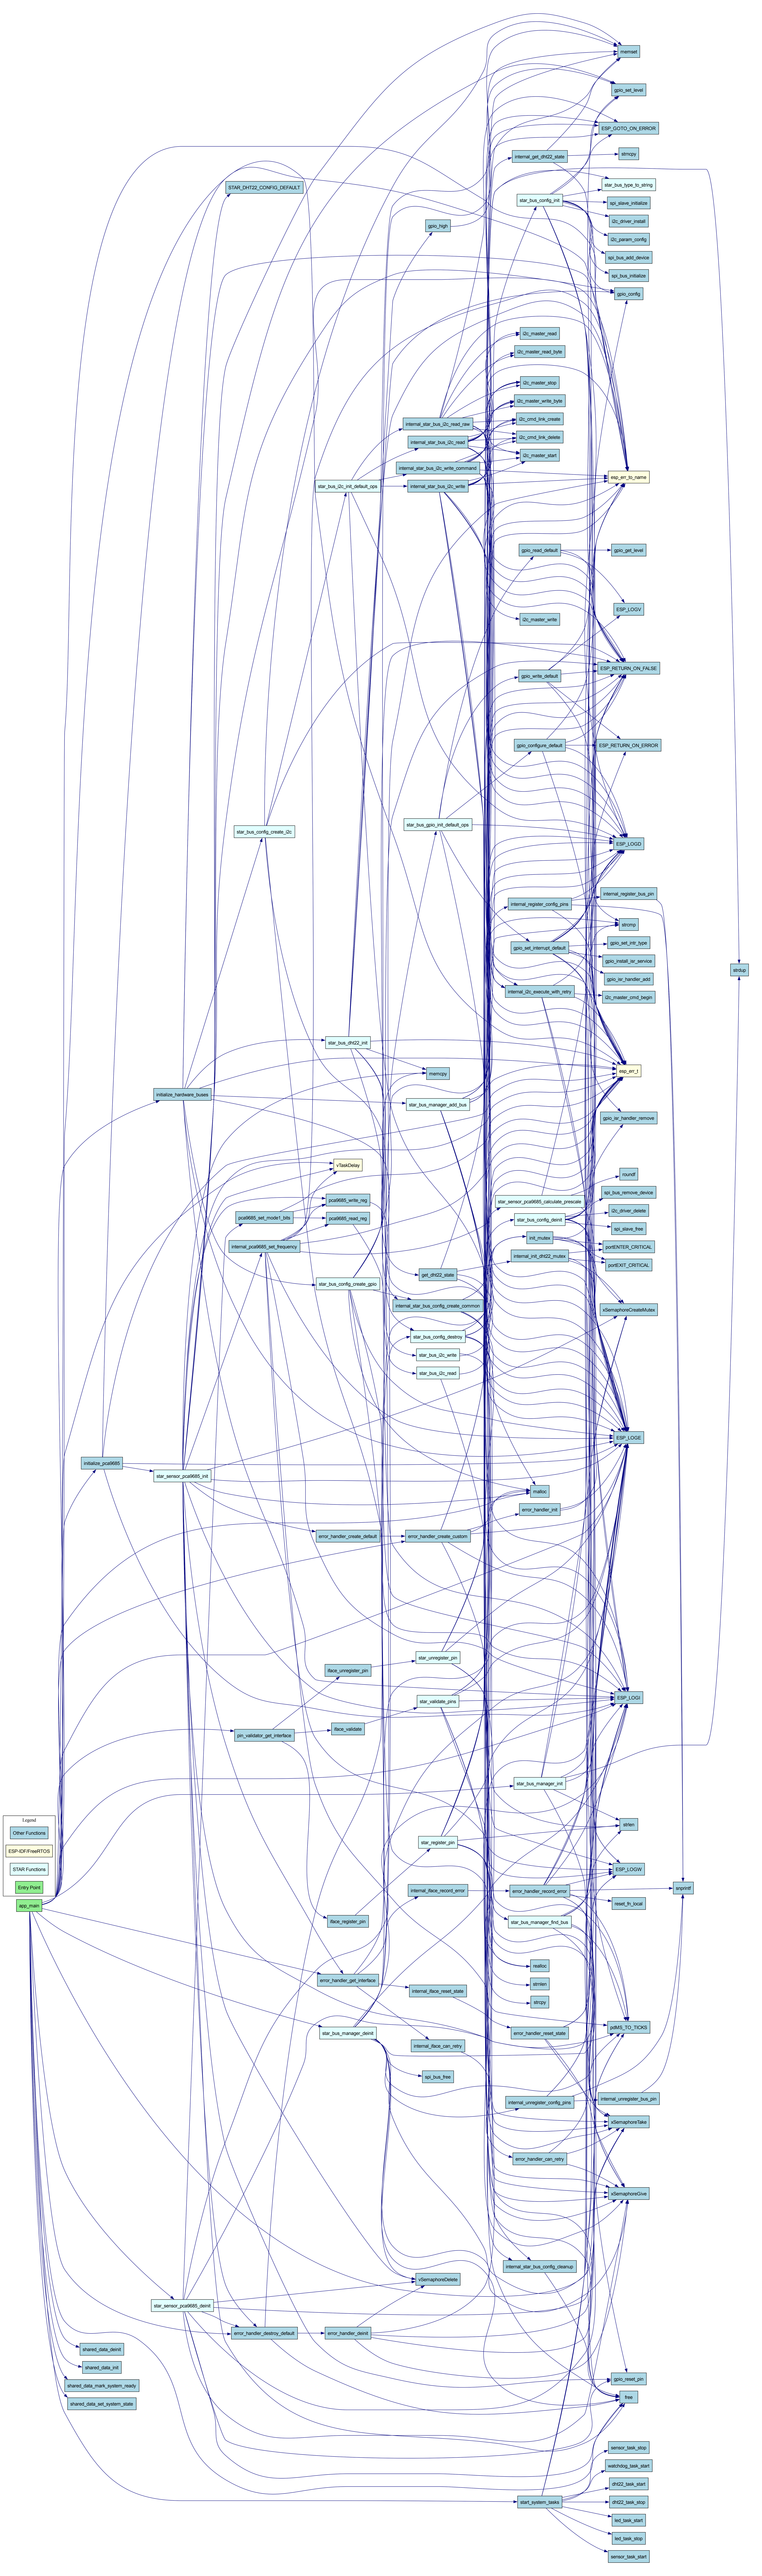
Legend
Other Functions
ESP-IDF/FreeRTOS
STAR Functions
Entry Point
app_main
STAR_DHT22_CONFIG_DEFAULT
initialize_hardware_buses
initialize_pca9685
star_sensor_pca9685_init
star_sensor_pca9685_deinit
star_bus_config_create_i2c
star_bus_config_create_gpio
star_bus_i2c_init_default_ops
internal_star_bus_i2c_write
internal_star_bus_i2c_read
internal_star_bus_i2c_read_raw
internal_star_bus_i2c_write_command
star_bus_gpio_init_default_ops
star_bus_dht22_init
star_bus_manager_add_bus
star_bus_manager_init
star_bus_manager_deinit
star_bus_config_destroy
star_bus_i2c_write
star_bus_i2c_read
internal_star_bus_config_create_common
internal_star_bus_config_cleanup
internal_pca9685_set_frequency
pca9685_write_reg
pca9685_read_reg
pca9685_set_mode1_bits
get_dht22_state
internal_dht22_mutex
internal_i2c_execute_with_retry
i2c_master_start
i2c_master_stop
i2c_master_write_byte
i2c_master_read_byte
i2c_master_write
i2c_cmd_link_create
i2c_cmd_link_delete
i2c_master_cmd_begin
gpio_high
gpio_config
gpio_set_level
gpio_get_level
gpio_read_default
gpio_write_default
gpio_configure_default
gpio_install_isr_service
gpio_isr_handler_add
gpio_isr_handler_remove
gpio_set_intr_type
gpio_set_intr_default
gpio_reset_pin
esp_err_to_name
esp_err_t
ESP_LOGI
ESP_LOGW
ESP_LOGE
ESP_LOGV
ESP_GOTO_ON_ERROR
ESP_RETURN_ON_FALSE
ESP_RETURN_ON_ERROR
internal_register_bus_pin
internal_unregister_bus_pin
internal_register_i2cnfg_pins
internal_unregister_i2cnfg_pins
pin_validator_get_interface
iface_unregister_pin
iface_validate
iface_register_pin
internal_iface_record_error
internal_iface_reset_state
internal_iface_can_retry
star_register_pin
star_unregister_pin
star_validate_pins
error_handler_init
error_handler_create_default
error_handler_create_custom
error_handler_get_interface
error_handler_destroy_default
error_handler_deinit
error_handler_record_error
error_handler_reset_state
error_handler_can_retry
i2c_driver_install
i2c_driver_delete
i2c_param_config
i2c_slave_initialize
spi_bus_add_device
spi_bus_initialize
spi_bus_free
spi_bus_free
star_bus_type_to_string
star_bus_config_init
star_bus_config_deinit
internal_get_dht22_state
internal_star_bus_config_init
internal_star_bus_config_deinit
internal_pca9685_calculate_prescale
internal_pca9685_set_mode1_bits
internal_pca9685_write_reg
internal_pca9685_read_reg
internal_pca9685_set_frequency
internal_dht22_mutex
internal_dht22_init
internal_dht22_deinit
internal_dht22_read
internal_dht22_calculate_checksum
internal_dht22_validate_data
internal_dht22_parse_data
internal_dht22_get_state
internal_dht22_set_state
internal_dht22_reset_state
internal_dht22_can_read
internal_dht22_record_error
internal_dht22_record_success
internal_dht22_get_error_count
internal_dht22_get_success_count
internal_dht22_get_last_read_time
internal_dht22_get_min_read_interval
internal_dht22_get_max_retries
internal_dht22_get_timeout_us
internal_dht22_get_bit_threshold
internal_dht22_get_start_signal_duration
internal_dht22_get_response_timeout
internal_dht22_get_bit_timeout
internal_dht22_get_data_timeout
internal_dht22_get_checksum_timeout
internal_dht22_get_error_timeout
internal_dht22_get_success_timeout
internal_dht22_get_retry_delay