Login Enterprise powered by NVIDIA nVector

Installation Guide (version 1.0.6)

March 2026

Table of Contents

Summary 3

Getting Started 4

- Pre-requisites 4
- nVector and Login Enterprise integration 4
- Downloads 4

Login Enterprise 6.4 update 5

Setup & Deployment Steps 6

- Login Enterprise Virtual Appliance setup 7
- Login Enterprise Launcher Machine(s) setup 8
- Login Enterprise Session Metrics Configuration 10
- Configuring your Login Enterprise Web UI to see Platform metrics 13

Testing 15

- Examples of Latency Results in Continuous Testing Results 17
- Examples of Latency Results in Load Testing Results 18

SSIM Results 19

Best Practices 19

Appendix A – Script Overview 20

- nVector_Client_Prepare.ps1 (for Login Enterprise Launcher machine) 20
- nVector_SSIM_Daemon.ps1 23
- nVector_Startup_Script.cmd (for Login Enterprise Launcher) 24
- NVIDIA nVector Desktop Prepare (C# Workload) 24
- get_nVectorMetrics.ps1 26
- Create-NvidiaGpuSessionMetricGroup.ps1 29
- Add-SessionMetrics.ps1 30

Additional Information 32

Revision History:

1.0.0 - May 20, 2025 - Release for GA

1.0.1 - May 23, 2025 - Fixed how to download scripts

1.0.2 - June 13, 2025 - Fix instructions on uploading Desktop Prepare script

1.0.3 - July 20, 2025 - Fix for timezone and LE v 6.1.8 API issue

1.0.4 - Sept 2025 - Updated *get_nVectorMetrics.ps1* section for v1.0.1 (adds *-ApiVersion, -ImportServerCert, -KeepCert, PS5/PS7* behavior, security notes, examples).

1.0.5 – Dec 2025 – Added Login Enterprise 6.4 update section documenting preinstalled nVector agent and built-in Desktop Prepare workload, including checksum and instructions for skipping manual setup.

1.0.6 - March 2026 - Major update for SSIM preview integration. Updated nVector_Client_Prepare.ps1 documentation to v2.5.0 (daemon architecture, updated parameters). Added nVector_SSIM_Daemon.ps1 appendix entry. Updated get_nVectorMetrics.ps1 documentation to v2.0.0 (updated parameters, multi-environment support). Added Create-NvidiaGpuSessionMetricGroup.ps1 and Add-SessionMetrics.ps1 appendix entries. Rewrote Downloads section to reference public GitHub repository. Updated session metrics setup to lead with automated scripts. Updated all LE documentation links to 6.5. Added SSIM results section. Updated best practices and known limitations. Updated Desktop Prepare workload documentation for agent 2.0.

Summary

Login VSI, in collaboration with **NVIDIA**, has developed an integration between Login Enterprise and NVIDIA nVector that leverages GPU and virtual GPU (vGPU) performance testing and analysis technology. This integration enables customers to collect round-trip graphics latency data and image quality scores from their VDI environments, upload them to Login Enterprise as platform metrics, and use them to optimize GPU-based configurations for performance and cost-efficiency.

Latency measurement is a production feature of Login Enterprise. SSIM-based image quality scoring is available as a usable preview — functional and customer-usable, but not yet a built-in Login Enterprise feature. Both capabilities are covered in this guide.

For the official Login Enterprise documentation on this integration, see NVIDIA nVector Integration at: https://docs.loginvsi.com/login-enterprise/6.5/nvidia-nvector-integration

Getting Started

Pre-requisites

1. A proper functioning VDI Solution based on Citrix, VMware, Omnissa, or Microsoft technologies.
2. A proper functioning Login Enterprise virtual appliance and launcher(s)
    a. **NOTE**: Login Enterprise version 6.1.8 has a known issue; please use a later version.
3. Admin access to Login Enterprise virtual appliance
4. Knowledge of NVIDIA virtual GPU technology
5. An NVIDIA GPU or vGPU-enabled launcher machine
6. The NVIDIA binaries (nvector-agent.exe and ssim-tool.exe) and integration scripts. See the Downloads section below for the full file list and how to obtain them.

nVector and Login Enterprise integration

This solution contains a suite of integration scripts that wrap NVIDIA's **nvector-agent.exe** for use with the Login Enterprise platform. These scripts enable you to collect and upload round-trip graphics latency data—measured via NVIDIA nVector's "click-to-pixel-change" mechanism—to the Login Enterprise API as platform metrics. The metrics can then be visualized in the Login Enterprise web interface or retrieved via an API. In addition, the solution also adds NVIDIA suggested, VM-based session metrics for greater visibility into the performance of the system.

Important:
The nvector-agent.exe and ssim-tool.exe are developed and distributed by NVIDIA. nvector-agent.exe v1.x is bundled with Login Enterprise 6.4 and newer appliances and supports latency measurement out of the box. nvector-agent.exe v2.0.0 and ssim-tool.exe v1.1.0, which are required for SSIM preview functionality, are not yet bundled in any Login Enterprise release — contact Blair Parkhill (b.parkhill@loginvsi.com) to obtain them if your appliance does not already include them. A future Login Enterprise release will formally include the updated binaries and launcher-side integration as a built-in feature.

Downloads

Integration scripts, workloads, and this guide are publicly available at the GitHub repository: https://github.com/LoginVSI/nVector

The NVIDIA binaries (nvector-agent.exe and ssim-tool.exe) are not included in the public repository. If your Login Enterprise appliance does not already bundle the version you need, contact Blair Parkhill (b.parkhill@loginvsi.com) to request them.

The following files are required for the integration:

1. nvector-agent.exe — NVIDIA binary. v1.x is bundled in Login Enterprise 6.4 and newer. v2.0.0 is required for SSIM preview functionality.
2. ssim-tool.exe — NVIDIA binary. v1.1.0. Required for SSIM mode only.
3. nVector_Client_Prepare.ps1 — Main launcher-side orchestration script. Manages the nVector agent lifecycle, collects latency data, uploads platform metrics to Login Enterprise, and coordinates SSIM processing via the daemon.
4. nVector_SSIM_Daemon.ps1 — SSIM processing daemon. Spawned automatically by nVector_Client_Prepare.ps1 when running in SSIM or both mode. Do not invoke directly. Must be in the same folder as nVector_Client_Prepare.ps1.
5. nVector_Startup_Script.cmd — Startup wrapper for the launcher. Invokes nVector_Client_Prepare.ps1 automatically at logon.
6. NVIDIA_nVector_Desktop_Prepare.cs — Login Enterprise workload for the target/desktop machine. Downloads and starts nvector-agent.exe in desktop role during a test session.
7. get_nVectorMetrics.ps1 — Export helper. Queries the Login Enterprise platform metrics API and outputs timestamped CSV and JSON files for analysis.
8. Create-NvidiaGpuSessionMetricGroup.ps1 — Setup script. Creates a pre-configured NVIDIA GPU session metrics group in Login Enterprise via the API. Run once before testing.
9. Add-SessionMetrics.ps1 — Interactive script for discovering and registering additional PerfMon and WMI session metrics in Login Enterprise. Optional; use when you need metrics beyond the pre-configured set.

SHA256 checksums for verification: nvector-agent.exe v1.0.0 (bundled in LE 6.4):
`2D6F61B5A67F72F8466E14CBCF625985C449898F867A0785A48909E8802E677B`

nvector-agent.exe v2.0.0:
`7BFE0C087ABB49F8202A6CED39505824D9F142BD02E6F4093FCBF2D4037B056F`

ssim-tool.exe v1.1.0:
`FEA65AB2FD037457EB3892B6191F9D9B93948523FFC05C75DD1DA81157937B07`

More information about each script can be found in Appendix A.

Login Enterprise 6.4 update

Login Enterprise 6.4 and newer include the NVIDIA nVector agent and the “NVIDIA nVector Desktop Prepare” workload by default. These files are present only when the appliance was originally deployed as version 6.4 or newer.

If your appliance was deployed as 6.4 or newer:

- The agent is already located at loginvsi/content/scriptcontent/nvector-agent.exe

- The workload named “NVIDIA nVector Desktop Prepare” is already listed under Applications
- You can skip all manual upload steps in this guide

Continue at “Login Enterprise Launcher Machine(s) setup” in this doc.

Note: The agent and workload bundled with Login Enterprise 6.4 are nvector-agent.exe v1.x and the original Desktop Prepare workload, which support latency measurement only. If you want to use the SSIM preview functionality, you will need to do the following regardless of your Login Enterprise version:

- Replace nvector-agent.exe on the appliance at loginvsi/content/scriptcontent/nvector-agent.exe with v2.0.0. The filename and path are the same — simply overwrite the existing file.
- Replace the Desktop Prepare workload in the Login Enterprise UI. Remove the existing NVIDIA nVector Desktop Prepare workload and import the updated NVIDIA_nVector_Desktop_Prepare.cs from the GitHub repository.
- Obtain nvector-agent.exe v2.0.0 and ssim-tool.exe v1.1.0 from Blair Parkhill (b.parkhill@loginvsi.com) if your appliance does not already include them.

These replacement steps will no longer be necessary once a future Login Enterprise release formally bundles the updated agent and workload.

If your appliance was upgraded from an older version, the agent and workload are not added automatically. In that case, follow the full setup steps in this guide and obtain the nVector agent from your Login Enterprise contact.

Checksum of the bundled agent: SHA256 (nvector-agent.exe)(v1.0):
`2D6F61B5A67F72F8466E14CBCF625985C449898F867A0785A48909E8802E677B`

(Checksums for nvector-agent.exe v2.0.0 and ssim-tool.exe v1.1.0 are listed in the Downloads section above.)

Setup & Deployment Steps

Use the following checklist to record your steps

- ☐ Upload nvector-agent.exe (v2.0.0) to virtual appliance (skip if on LE 6.4+ and testing latency only)
- ☐ Create nVector environment on virtual appliance (for latency metrics)
- ☐ Create a second LE environment for SSIM metrics (recommended — see note in the launcher setup section below)

- ☐ Create NVIDIA nVector Desktop Prepare workload on virtual appliance (skip if on LE 6.4+)
- ☐ Set up launcher: copy all required scripts and binaries, configure nVector_Client_Prepare.ps1
- ☐ Run Create-NvidiaGpuSessionMetricGroup.ps1 to create the session metrics group
- ☐ Add any additional session metrics using Add-SessionMetrics.ps1 (optional)
- ☐ Create load test
- ☐ Create continuous test
- ☐ Enable appliance WebUI for nVector platform metrics (feature flag required — see section below)

Login Enterprise Virtual Appliance setup

Upload nvector-agent.exe to the Login Enterprise Virtual Appliance

1. Place the `nvector-agent.exe` executable on the Login Enterprise virtual appliance. Use SSH to access the virtual appliance or use SFTP tools like WinSCP if necessary to transfer the file. The location on the virtual appliance Linux filesystem is `loginvsi/content/scriptcontent/nvector-agent.exe`.

Create an environment

1. On the virtual appliance, navigate to "Environments"
2. Click on "Add environment" in the top right corner of the UI
3. Give the environment a name (e.g., nvector environment)
4. Save
5. After clicking Save, select the environment and record the UUID from the page's URL

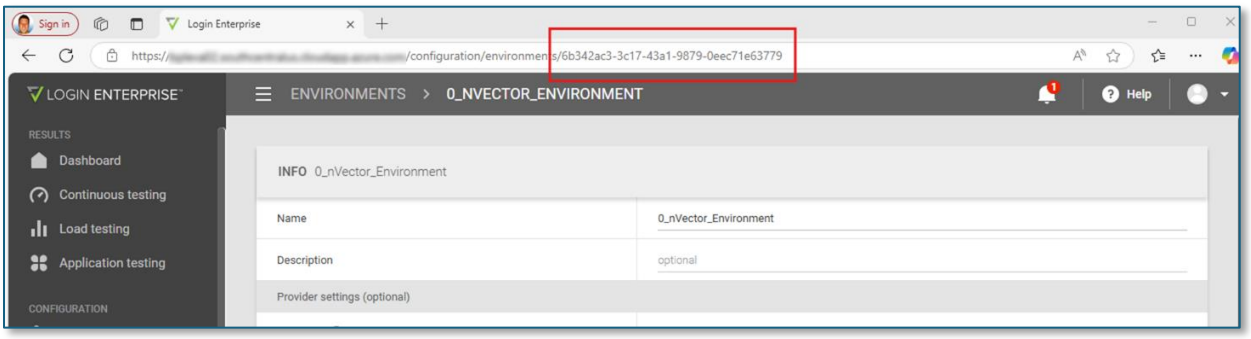

Create the nVector virtual user startup app

(for help see Adding a new application)

1. On the virtual appliance, navigate to "Applications"
2. Click on the green plus sign in the top right corner of the UI to add the application

3. Select “IMPORT APPLICATION”
4. Browse to the “`nvector_Desktop_Prepare.cs`” script and select “Open”
5. Click “SAVE”

Login Enterprise Launcher Machine(s) setup

1. If you don’t have a launcher yet, download installer from the virtual appliance and install launcher software
2. Copy the following files to the launcher machine. The recommended path is C:\ProgramData\NVIDIA Corporation\nVector\ — this is the default path used by the scripts and avoids the need to override path parameters manually.
   Required files:
   a. nVector_Client_Prepare.ps1
   b. nVector_SSIM_Daemon.ps1
   c. nVector_Startup_Script.cmd
   d. nvector-agent.exe (v2.0.0)
   e. ssim-tool.exe (required for SSIM mode)
   f. Important: nVector_Client_Prepare.ps1 and nVector_SSIM_Daemon.ps1 must be in the same folder. The launcher script spawns the daemon automatically at startup — do not invoke nVector_SSIM_Daemon.ps1 directly.
3. On the virtual appliance, add a system access token and record it for use in the next step
4. Open nVector_Client_Prepare.ps1 and configure it for your environment. You can either edit the values directly in the User Config section near the top of the script, or pass any parameter on the command line at runtime — command line values always override the in-script defaults. This means you can hardcode your environment's base URL, token, and environment IDs in the script and run it without any arguments, or keep the script generic and supply everything on the command line.
   a. Required parameters:
      i. -BaseUrl — base URL of your Login Enterprise appliance (e.g., https://myDomain.LoginEnterprise.com/)
      ii. -ConfigurationAccessToken — LE API token with Configuration access level
      iii. -EnvironmentId — UUID of the LE environment for latency metrics
      iv. -TargetHost — hostname of the target/desktop machine (used to construct the UNC path \TargetHost\C$\ProgramData\NVIDIA Corporation\nVector\ for SSIM desktop screenshot access)

b. Additional required parameters for SSIM mode:
   i. -SsimEnvironmentId — UUID of the LE environment for SSIM metrics. Can be the same environment as -EnvironmentId or a separate one. Using a separate environment is recommended — the Login Enterprise web interface currently displays one metric type per environment view, so two environments (one for latency, one for SSIM) allows you to see both charts simultaneously in the LE UI. If you use a single environment, both datapoint types are still captured and fully retrievable via get_nVectorMetrics.ps1, but you will only be able to chart one type at a time in the LE web interface. Note that continuous tests have a 1:1 mapping with environments, so two environments means two continuous tests. This UI limitation is expected to be addressed in a future Login Enterprise release.
   ii. -Mode — set to both (default), latency, or ssim. When set to latency, all SSIM processing is skipped and ssim-tool.exe is not required.

c. Commonly used optional parameters:
   i. -TargetWindowTitleMatch — case-insensitive substring to match against visible window titles on the launcher. When set, the script waits for a matching window before starting the agent and stops collection when the window closes. Leave empty for continuous (always-on) mode.
   ii. -HeatmapFolder — path where ssim-tool writes heatmap PNG files after each SSIM comparison. Leave empty to disable heatmap generation.
   iii. -HeatmapArchiveFolder — path where heatmaps are archived after each batch. Defaults to a heatmap_archive subfolder under the NVIDIA root path.
   iv. -NvectorScreenshotIntervalOverride — overrides the nvector-agent screenshot interval in seconds. Default is 24.
   v. -FocusTargetWindow — set to $true to have the script periodically bring the target window to the foreground. Default is $false.
   vi. -EnableClockAdjustment — set to $false to skip server time synchronization and use the local clock. Default is $true.
   vii. For the full parameter list, refer to Appendix A.

5. Modify the `nVector_Startup_Script.cmd` file to add the full path to the `nVector_Client_Prepare.ps1`
   (e.g., … `-File "c:\temp\nvidia\nVector_Client_Prepare.ps1"`)

6. Copy the nVector_Startup_Script.cmd to Windows Startup Folder (e.g., `C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Startup`). This will make sure that when the launcher is restarted, that the nVector agent will automatically start

and log new data. For more information on how to start a script on logon see this article for examples of other ways to automatically start a script.

Login Enterprise Session Metrics Configuration

Session metrics allow you to capture GPU usage, memory utilization, framerate, and other performance data from the target VM alongside your latency and SSIM measurements — giving you a complete picture of GPU performance in a single Login Enterprise view. For background on session metrics in Login Enterprise, see the Login Enterprise Session Metrics documentation at https://docs.loginvsi.com/login-enterprise/6.5/managing-session-metrics-optional.

Automated setup (recommended):

1. Run Create-NvidiaGpuSessionMetricGroup.ps1 from any machine with network access to your Login Enterprise appliance. This script discovers the NVIDIA GPU PerfMon instance name dynamically, verifies the required counters are present, and creates a pre-configured session metrics group containing the following metrics: % GPU Usage, % GPU Memory Usage, % FB Usage, % Video Decoder Usage, % Video Encoder Usage, CPU Utilization, and Memory Utilization. You need your LE API token and appliance URL. Run this once before testing. See Appendix A for full usage details.

   Example: .\Create-NvidiaGpuSessionMetricGroup.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token"

2. Optionally, run Add-SessionMetrics.ps1 if you need metrics beyond the pre-configured set — for example, remoting protocol framerate counters specific to your VDI stack (Citrix, Omnissa Blast, PCoIP, RDS). This script provides an interactive workflow to search available PerfMon counter sets and WMI classes on any Windows machine, select what you want, configure units and summarization, and register the metrics directly into Login Enterprise. Appendix A for full usage details.
   Example: .\Add-SessionMetrics.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token"
   Note: GPU PerfMon counter availability depends on the NVIDIA GPU-enabled virtual desktop and vGPU environment. Counter names and instance values will vary by vGPU profile — the instance name will change if you change the vGPU profile in use.

   Manual setup (reference):
   If you prefer to create the session metrics group and individual metrics manually through the Login Enterprise web interface, use the steps and screenshots below as a reference. This is the same configuration the automated scripts produce.

a. Create a new session metrics group for nVector.

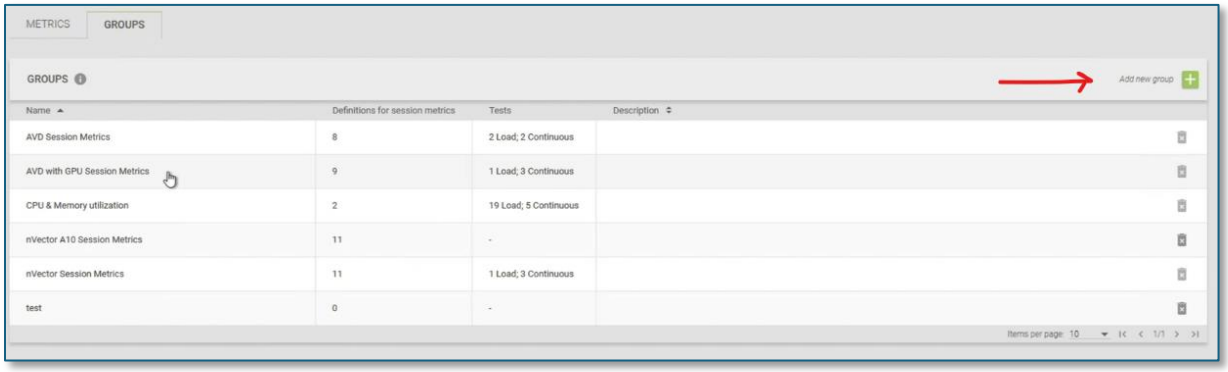

b. Create the session metrics you want to add to the group. For more information on creating session metrics see this Login Enterprise Session Metrics KB article. Create NVIDIA GPU session metrics for GPU Usage, GPU Memory Usage and Frame Buffer Usage. You should open Perfmon on the target VM to get the information you need. Note that "Counter Category", "Counter Name", and "Counter Instance" must exactly match the values you see in Perfmon. See the example below.

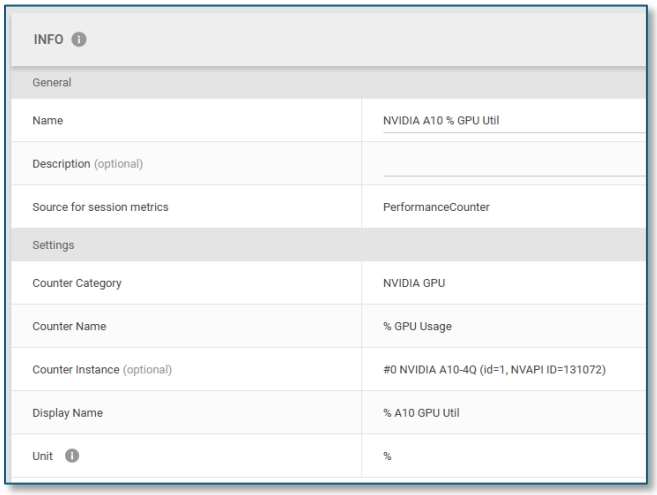

NOTE: The instance name will change as you change the vGPU profile being used.

c. Add Protocol Framerate session metrics. Because there can be many instances to collect it is best to use WMI counters. You will want to collect Input and Output

Framerate.

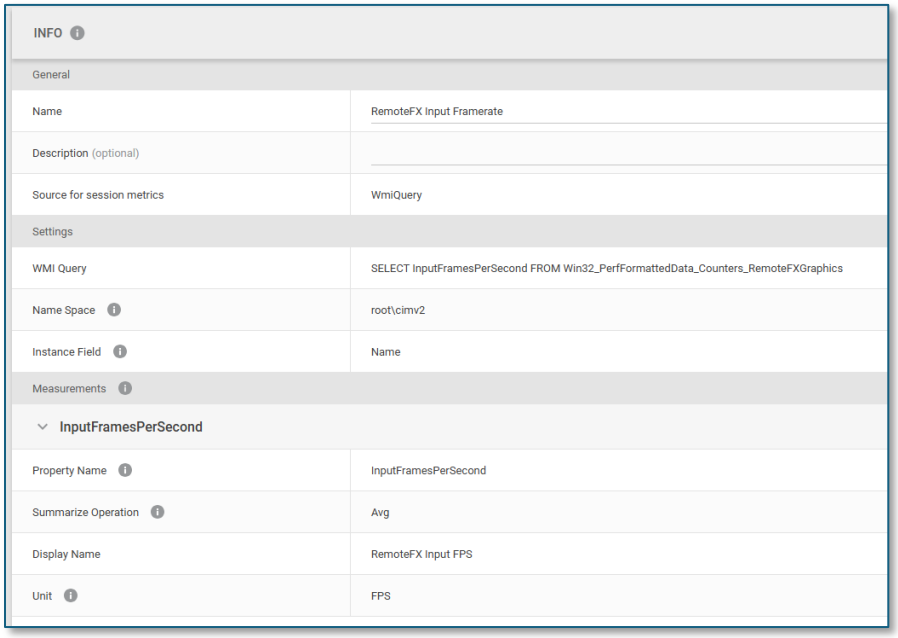

INFO	
General	
Name	RemoteFX Input Framerate
Description (optional)	
Source for session metrics	WmiQuery
Settings	
WMI Query	SELECT InputFramesPerSecond FROM Win32_PerfFormattedData_Counters_RemoteFXGraphics
Name Space	root\cimv2
Instance Field	Name
Measurements	
InputFramesPerSecond	
Property Name	InputFramesPerSecond
Summarize Operation	Avg
Display Name	RemoteFX Input FPS
Unit	FPS

a. To discover WMI counters try the following in PowerShell
   i. To list all counters run: `Get-cimclass | select-string PerfFormattedData`
   ii. Once you find the counter set you'd like to find objects within, run: `Get-CimInstance Win32_PerfFormattedData_`*`NameOfCounterSet`* (e.g., Get-CimInstance Win32_PerfFromattedData_Counters_RemoteFXGraphics)

```
PS C:\Users\b.parkhill> get-cimclass | select-string PerfFormattedData_Counters_R

ROOT/cimv2:Win32_PerfFormattedData_Counters_RDMAActivity
ROOT/cimv2:Win32_PerfFormattedData_Counters_ReFS
ROOT/cimv2:Win32_PerfFormattedData_Counters_ReFSBucketizedPerformance
ROOT/cimv2:Win32_PerfFormattedData_Counters_ReFSDedupMinstorePerfCounters
ROOT/cimv2:Win32_PerfFormattedData_Counters_ReFSDedupPerfCounters
ROOT/cimv2:Win32_PerfFormattedData_Counters_RemoteFXGraphics
ROOT/cimv2:Win32_PerfFormattedData_Counters_RemoteFXNetwork
```

   iii. From that result you can find the counters you'd like to use for your session metrics.

```
PS C:\Users\b.parkhill> Get-CimInstance Win32_PerfFormattedData_Counters_RemoteFXGraphics

Caption                                          :
Description                                      :
Name                                             : rdp-sxs250105600 0
Frequency_Object                                 :
Frequency_PerfTime                               :
Frequency_Sys100NS                               :
Timestamp_Object                                 :
Timestamp_PerfTime                               :
Timestamp_Sys100NS                               :
AverageEncodingTime                              : 0
FrameQuality                                     : 100
FramesSkippedPerSecondInsufficientClientResources  : 0
FramesSkippedPerSecondInsufficientNetworkResources : 0
FramesSkippedPerSecondInsufficientServerResources  : 0
GraphicsCompressionratio                         : 6
InputFramesPerSecond                             : 3
OutputFramesPerSecond                            : 3
SourceFramesPerSecond                            : 0
PSComputerName                                   :
```

2. Recommended metrics to include in the group:

a. CPU Utilization
b. Memory Utilization
c. GPU Usage
d. GPU Memory Usage
e. GPU Framebuffer Usage
f. Input FPS
g. Output FPS
h. Any additional metrics relevant to your environment
    i. Here is an example:

GROUP INFO

Name	nVector Session Metrics
Description	optional

SESSION METRIC DEFINITIONS

Name	Source	Description
CPU utilization	BuiltIn	
Memory utilization	BuiltIn	
Committed Bytes	PerformanceCounter	
Available MBytes	PerformanceCounter	
Avg. Disk sec/Transfer	PerformanceCounter	
NVIDIA GPU FB Usage	PerformanceCounter	
NVIDIA GPU Usage	PerformanceCounter	
NVIDIA GPU Memory Usage	PerformanceCounter	
Frame Quality	WmiQuery	
RemoteFX Input Framerate	WmiQuery	
RemoteFX Output Framerate	WmiQuery	

Configuring your Login Enterprise Web UI to see Platform metrics

As of Login Enterprise version 5.13.6, the virtual appliance is capable of logging 3rd party performance data to a time-series database. To see this data the browser used for the appliance WebUI must have a feature flag enabled.

Feature flag instructions:

1. Open the browser's developer mode. (e.g., hit F12) and select the “Console” view.

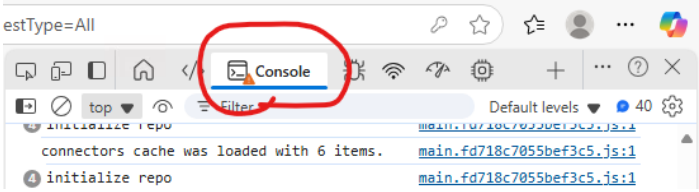

2. Enter the following command at the prompt on the bottom of the page to enable the feature:

```
leSetFeatureFlag('platformMetrics', 1)
```

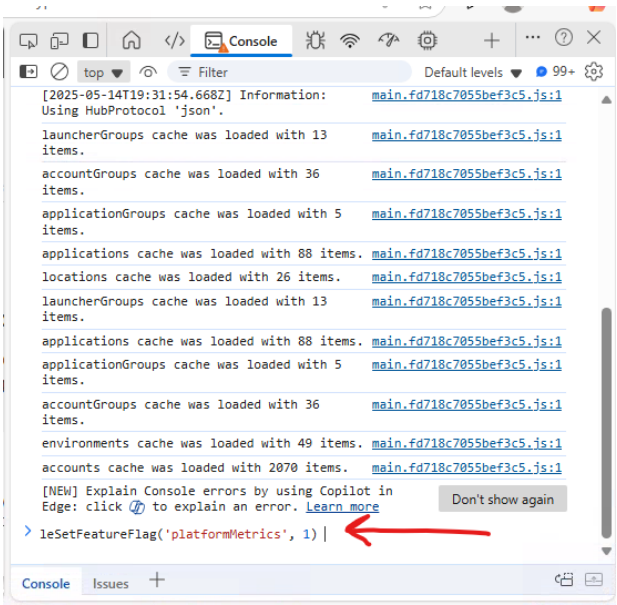

3. Press **Enter** to execute the command. Platform Metrics should now be visible.

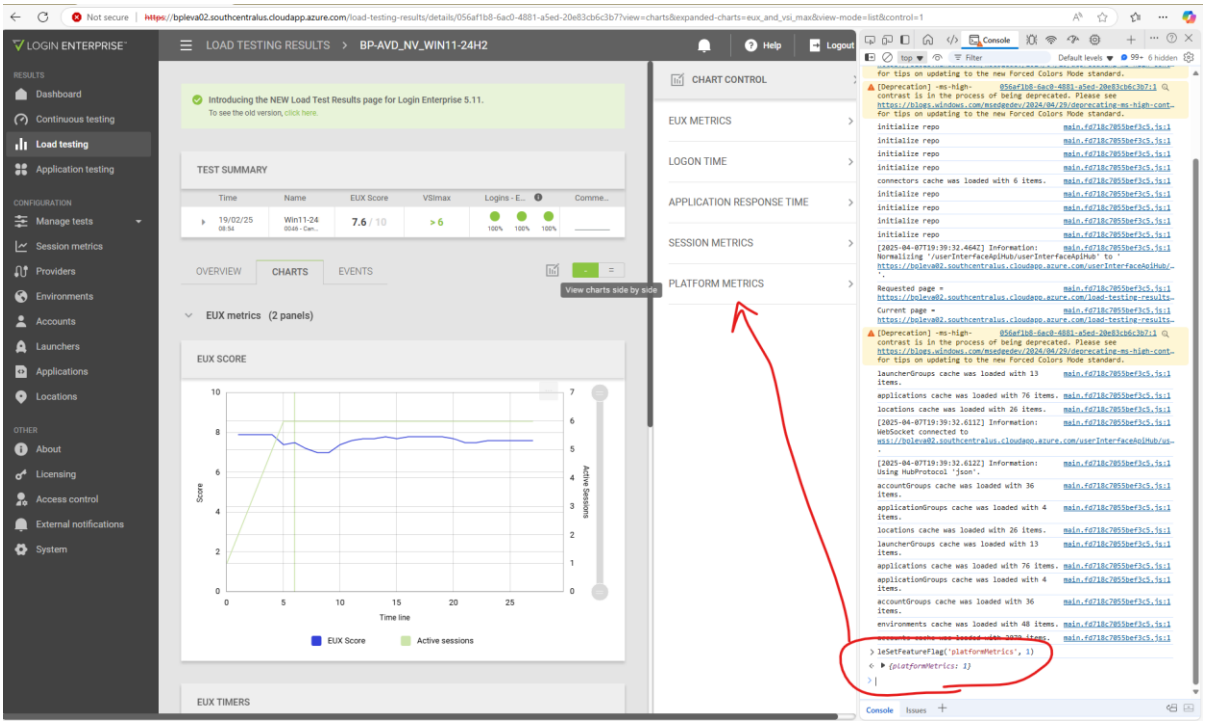

4. Please note that this feature flag is currently required to enable the Platform Metrics view in the Login Enterprise web interface. Keep this flag enabled for the duration of your testing.

Testing

1) Create a load test. See this KB article for creating your first load test
   a. In addition to setting up the general load test here are a few extra tasks to add nVector
      i. Make sure the connector is set to "Full Screen" mode. This is required for both latency and SSIM measurement — nVector captures the top-most full-screen session only.
      ii. Confirm the -Mode parameter in nVector_Client_Prepare.ps1 is set appropriately for your test: both to collect latency and SSIM, latency for latency only, or ssim for SSIM only.
      iii. If running in SSIM mode: confirm the launcher machine can reach the target machine via UNC path (\TargetHost\C$\ProgramData\NVIDIA Corporation\nVector) over SMB. The SSIM daemon uses this path to access desktop-side screenshots for comparison. Confirm connectivity and appropriate permissions before running.
      iv. Add the Environment you created in the step above
      v. Set the session metrics group to the group you created above
      vi. In the list of actions add a 30s wait to the beginning of the workload
      vii. After the "Wait" add the NVIDIA nVector Desktop Prepare workload and set it to "Run Once"

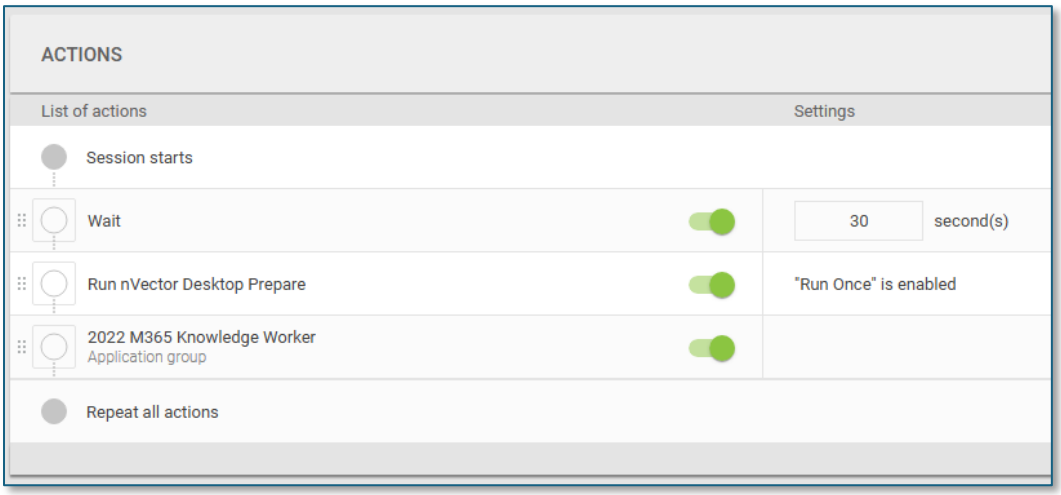

      viii. Feel free to add other applications and actions to your workload
2) Create a continuous test. See this Creating a Continuous Test article for creating your first continuous test.

a. A continuous test can be used to monitor a vGPU enabled VM. Apply the same settings as your load test.

3) Run test

4) To know if the agent is running successfully during the test you should see the nVector watermark on each launcher running the agent. The watermark is a small series of squares that will frequently change if the launcher agent detects the target agent.

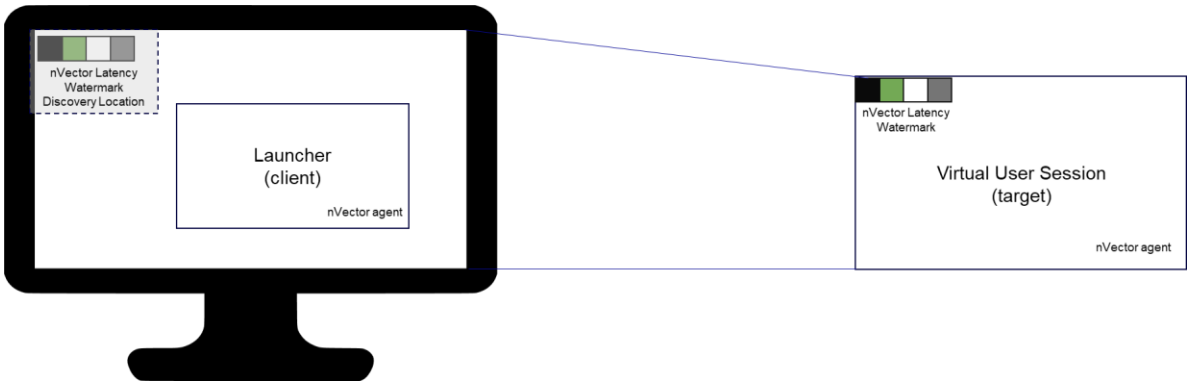

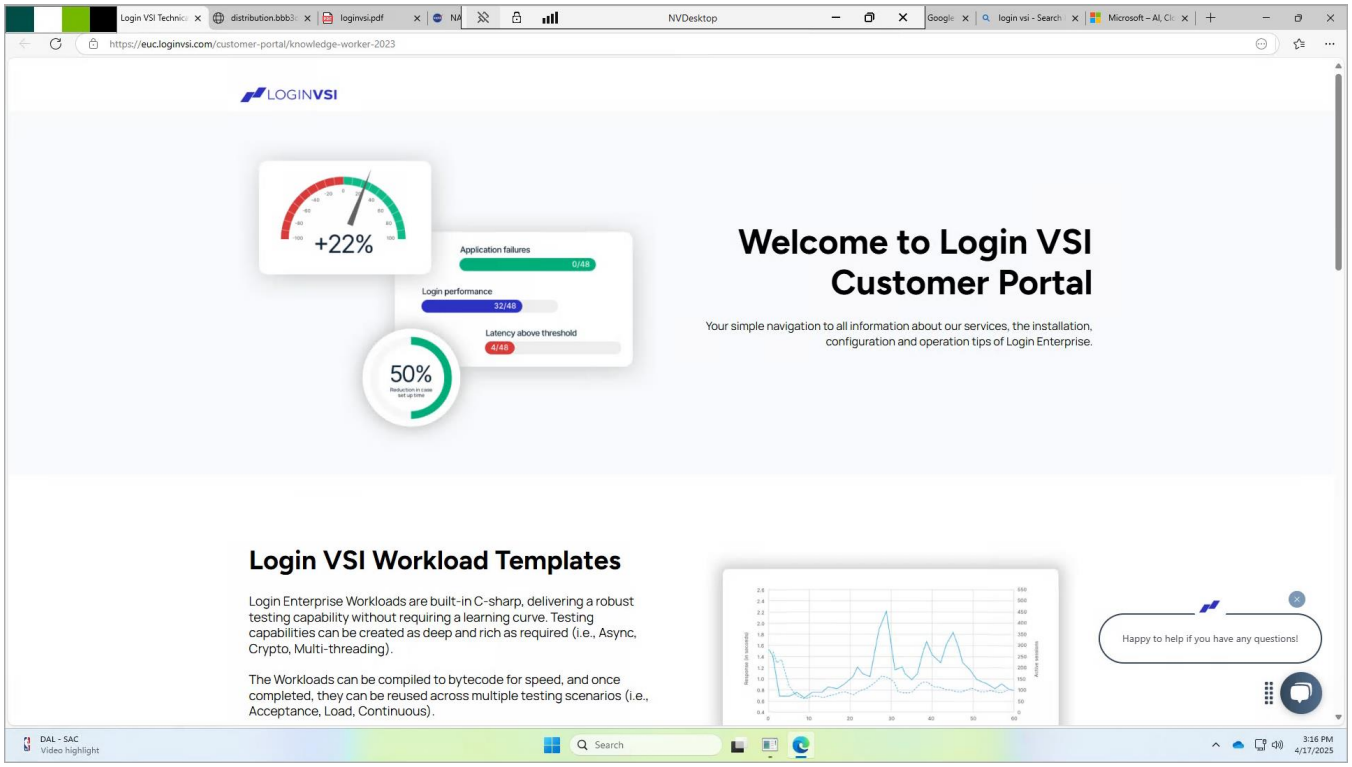

Reporting

Examples of Latency Results in Continuous Testing Results

Note: you can watch real-time test results of a load test using a continuous test view if they both use the same “environment” ID in their test configuration settings.

Hourly View

Screenshot

The following example graph visualizes nVector latency measurements over an hourly timeframe in the Login Enterprise web interface. (depending on LE version, you may have to turn on Platform Metrics with a feature flag in the browser)

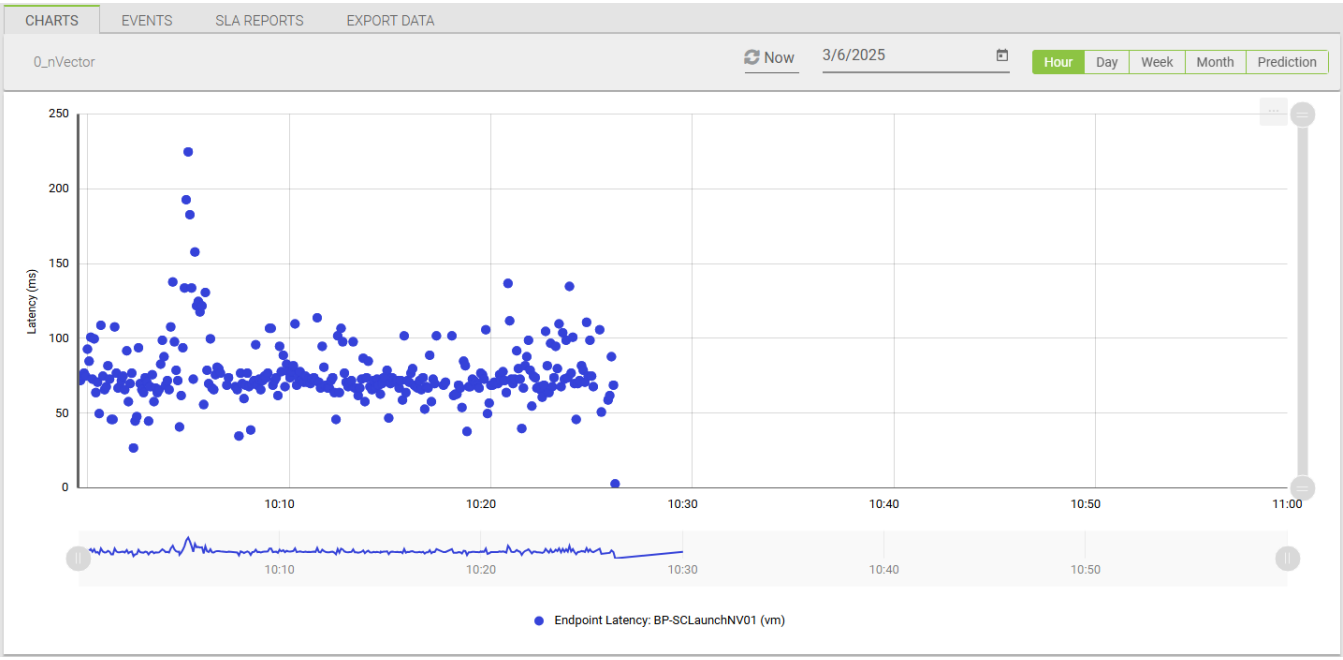

Explanation of Graph Elements:

- **Y-Axis (Latency in ms)** → Each **datapoint** represents a **latency measurement in milliseconds**.
- **X-Axis (Time in Hourly Span)** → Represents the **time range** for **nVector latency measurements**.
- **"Latency (ms)"** → This corresponds with the **unit key** in the API datapoint.
- **"Endpoint Latency"** → This corresponds with the **displayName key** in the API datapoint.
- **Hostname (e.g., BP-SCLaunchNV01)** → This corresponds with the **instance key** in the API datapoint.

- **"vm" (Component Type)** → This corresponds with the **componentType key** in the API datapoint.

These labels align **directly with the API response structure** and are displayed in the **Login Enterprise web interface graphs**.

Examples of Latency Results in Load Testing Results

To see load test results you must wait for the load test to complete. You can compare load tests. You can create a PDF report of the results as well.

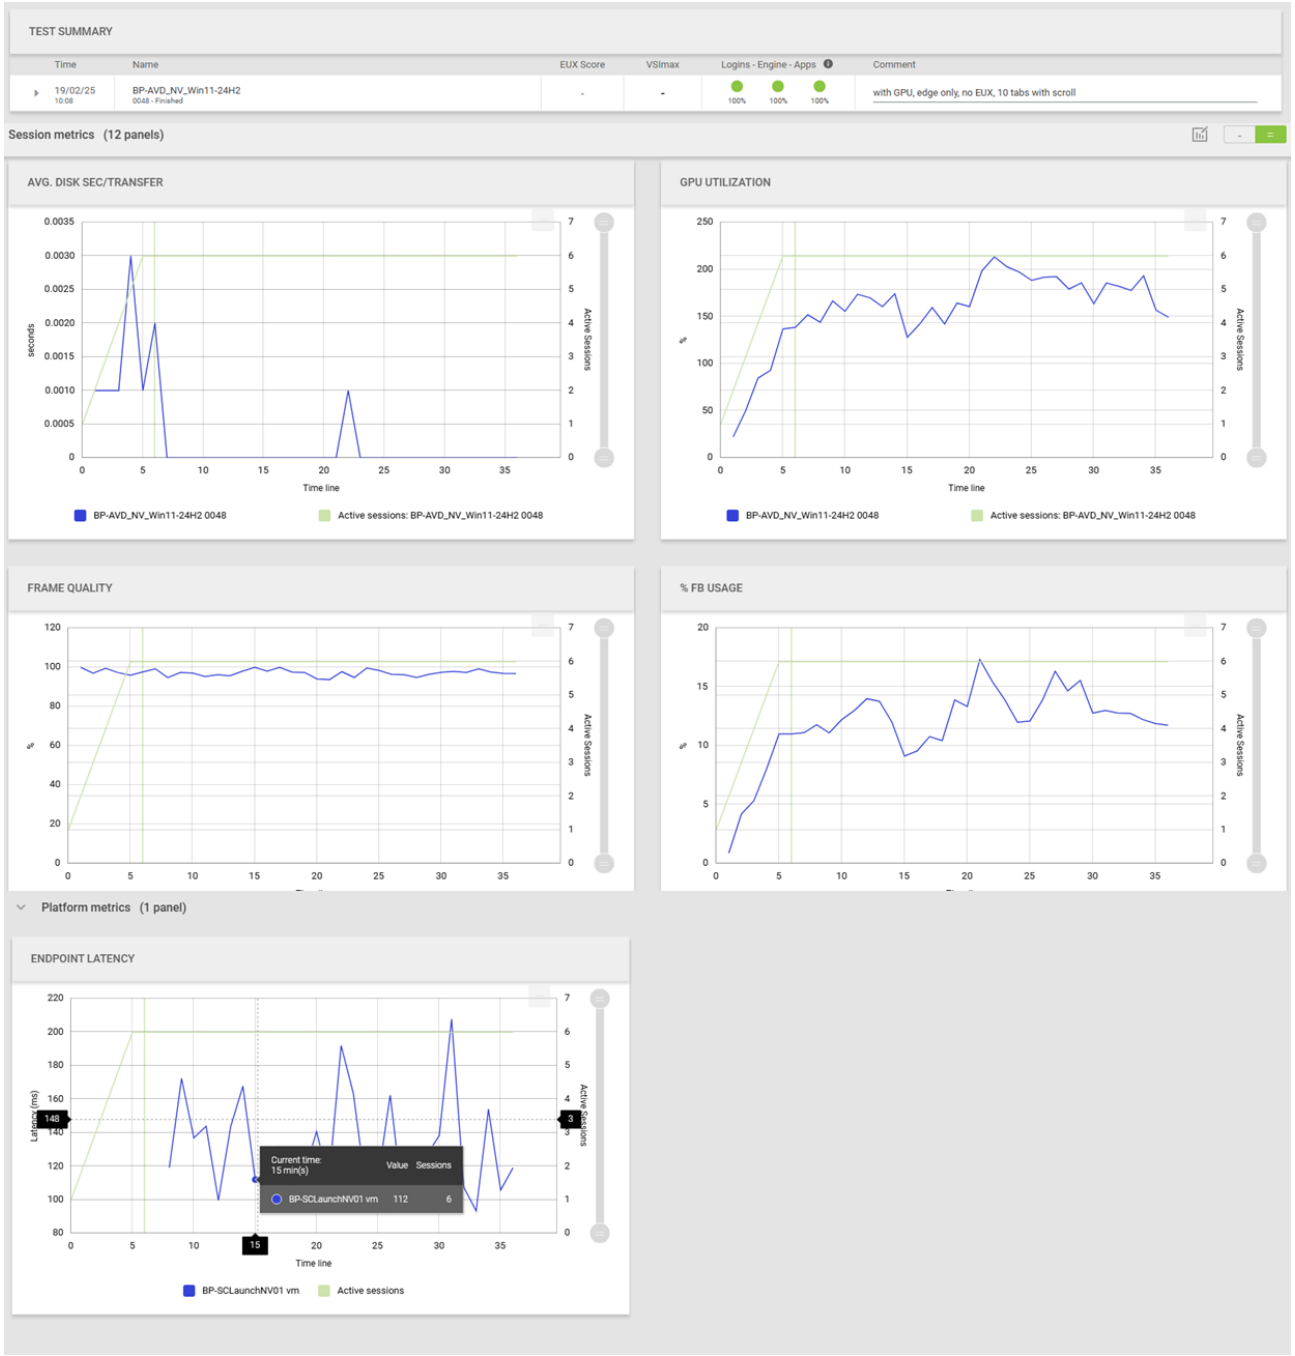

SSIM Results

When running in ssim or both mode, SSIM scores appear in the same Platform Metrics view as latency data. In the Login Enterprise web interface, look for the SSIM metric in your environment's Platform Metrics under the time window for your test.

SSIM scores are expressed as a value between 0 and 1 (the Login Enterprise UI may display this as a percentage), where higher is better. A score close to 1.0 indicates high visual fidelity between the desktop reference image and the image received through the remoting protocol. Lower scores indicate visible quality degradation — useful for identifying codec issues, compression artifacts, or scaling problems introduced by the remoting stack.

To export SSIM and latency data together, run get_nVectorMetrics.ps1 with both environment UUIDs in a single call using -EnvironmentIds. The script queries each environment separately and combines the output into one CSV and JSON file, with an environmentKey column identifying which rows came from which environment.

Example: .\get_nVectorMetrics.ps1 -LEApiToken "your-token" -EnvironmentIds "latency-env-uuid","ssim-env-uuid" -BaseUrl "https://myDomain.LoginEnterprise.com/" -LastHours 2

Note: If you used a single environment for both latency and SSIM, both metric types are present in the data and fully retrievable via get_nVectorMetrics.ps1. However, the Login Enterprise web UI currently displays one metric type per environment view, so you will only be able to chart one type at a time in the interface. To view latency and SSIM charts simultaneously in the LE UI, use two separate environments — one per metric type — each mapped to its own continuous test. This is a current UI limitation expected to be addressed in a future Login Enterprise release.

If heatmap archiving is enabled (via -HeatmapFolder and -HeatmapArchiveFolder in nVector_Client_Prepare.ps1), heatmap PNG files are saved per batch to the archive folder after each SSIM run. Heatmaps visualize where in the image quality degraded — useful for diagnosing specific codec or rendering issues beyond what the score alone tells you.

Best Practices

1) Best practices
    a. It is recommended to use only one session per launcher. If you would like to run a large load test and only have a limited number of launchers please contact support and we can help you with that.
    b. Always run sessions in full screen on the launcher

2) You can use an Application test in Login Enterprise with a Desktop connector to make sure the virtual user successfully downloads and runs nvector-agent.

3) If using -TargetWindowTitleMatch, ensure the target window title is unique on the launcher machine. If two windows share the same title string, the script cannot distinguish between them and may attach to the wrong session.

4) If the launcher script is force-stopped (via Ctrl+C or a process kill rather than a clean exit), ssim-tool.exe child processes may continue running in the background. Check Task Manager and terminate any remaining ssim-tool.exe processes manually before restarting the launcher script.
5) The UNC path from the launcher to the target machine must remain reachable for the duration of SSIM testing. Loss of SMB connectivity during a test will cause SSIM batches to be skipped for that session without a fatal error. If SSIM scores are unexpectedly absent, check the SSIM daemon log for connectivity errors.
6) ssim-tool.exe runs synchronously within the SSIM daemon. During a ssim-tool run (typically 30 to 90 seconds depending on image content), the daemon is not polling for new screenshot batches. In normal operation this is fine. In edge cases where a session ends exactly during ssim-tool execution, that session's remaining batches may be skipped. This is expected behavior and not a crash or error condition.

Appendix A – Script Overview

nVector_Client_Prepare.ps1 (for Login Enterprise Launcher machine)

Purpose

- Ensures the Login Enterprise Launcher process is running and starts it if not active.
- Manages the nvector-agent.exe lifecycle in the client role — starts, monitors, and restarts the agent as needed across test sessions.
- Monitors agent output for new latency readings and uploads them to Login Enterprise as platform metrics.
- When Mode includes SSIM: spawns nVector_SSIM_Daemon.ps1 once at startup. The daemon runs independently for the full script lifetime and owns all SSIM processing — batch folder detection, ssim-tool invocation, heatmap archiving, and SSIM metric upload to Login Enterprise.
- Tracks the target remote desktop window by title and window handle (HWND). Handles rapid session close and reopen correctly — each new window instance is treated as a new session regardless of whether the title is the same.
- Writes a per-session summary log entry on session end (session ID, start and end times, duration, latency rows uploaded).
- On script exit, terminates the SSIM daemon cleanly.

Key Variables & Parameters

Parameters can be set in the User Config section at the top of the script or passed on the command line at runtime. Command line values always override in-script defaults — this means you can hardcode your environment's connection details in the script for convenience, or keep the script generic and supply everything via CLI. Both approaches work.

Required:

- -BaseUrl — base URL of the Login Enterprise appliance (e.g., https://myDomain.LoginEnterprise.com/)
- -ConfigurationAccessToken — LE API token with Configuration access level
- -EnvironmentId — LE environment UUID for latency metrics
- -TargetHost — hostname of the target machine. Used to construct the UNC path \TargetHost\C$\ProgramData\NVIDIA Corporation\nVector\ for SSIM desktop screenshot access.

Required for SSIM mode:

- -SsimEnvironmentId — LE environment UUID for SSIM metrics. Can be the same as -EnvironmentId or a separate one. Using a separate environment is recommended — the Login Enterprise web interface currently displays one metric type per environment view, so two environments (one for latency, one for SSIM) allows you to see both charts simultaneously in the LE UI. If you use a single environment, both datapoint types are still captured and fully retrievable via get_nVectorMetrics.ps1, but you will only be able to chart one type at a time in the LE web interface. Note that continuous tests have a 1:1 mapping with environments, so two environments means two continuous tests. This UI limitation is expected to be addressed in a future Login Enterprise release.

Optional:

- -Mode — both (default), latency, or ssim. Use latency to skip all SSIM processing entirely (ssim-tool.exe is not required in this mode). Use ssim to skip latency collection.
- -TargetWindowTitleMatch — case-insensitive substring to match against visible window titles on the launcher. When set, the script waits for a matching window before starting the agent and stops collection when the window closes. Leave empty for continuous (always-on) mode.
- -HeatmapFolder — path where ssim-tool writes heatmap PNG files after each SSIM comparison. Leave empty to disable heatmap generation.
- -HeatmapArchiveFolder — archive destination for heatmaps after each batch is processed. Defaults to a heatmap_archive subfolder under the NVIDIA root path.

- -NvectorScreenshotIntervalOverride — overrides the nvector-agent screenshot interval in seconds. Default is 24.
- -FocusTargetWindow — set to $true to have the script periodically bring the target window to the foreground. Default is $false.
- -EnableClockAdjustment — set to $false to skip server time synchronization and use the local clock as-is. Default is $true.
- -SeparateSsimEnvironment — set to $false if you want SSIM metrics posted to the same LE environment as latency metrics. Default is $true (SSIM uses -SsimEnvironmentId).

Usage Example

1. Configure the script: In the User Config section of nVector_Client_Prepare.ps1, set BaseUrl, ConfigurationAccessToken, EnvironmentId, and TargetHost at minimum. For SSIM, also set SsimEnvironmentId and confirm Mode is set to both or ssim. All parameters can also be overridden at the command line without editing the script.

    - Example — latency only: .\nVector_Client_Prepare.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -EnvironmentId "your-latency-uuid" -TargetHost "targetvm01" -Mode latency
    - Example — latency and SSIM with heatmap archiving: .\nVector_Client_Prepare.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -EnvironmentId "your-latency-uuid" -SsimEnvironmentId "your-ssim-uuid" -TargetHost "targetvm01" -Mode both -HeatmapFolder "C:\ProgramData\NVIDIA Corporation\nVector\heatmaps" -HeatmapArchiveFolder "C:\ProgramData\NVIDIA Corporation\nVector\heatmap_archive"
    - Example — window title trigger mode (starts collection when session opens, stops when it closes): .\nVector_Client_Prepare.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -EnvironmentId "your-latency-uuid" -TargetHost "targetvm01" -TargetWindowTitleMatch "Desktop - myVDIEnvironment"

2. **Invoke the Script:**

    - Manually via PowerShell:

.\nVector_Client_Prepare.ps1

    - Or automatically through nVector_Startup_Script.cmd or a scheduled task.

3. **Verification:**

    - Check the PowerShell console or the ScriptLogFile to confirm that:

- The **Login Enterprise Launcher** process is running.
- The **nvector-agent.exe** was started in **client mode**.
- New lines in the CSV are being uploaded to the **Login Enterprise API**.

nVector_SSIM_Daemon.ps1

Note: This is an internal script. Do not invoke it directly. It is spawned and managed automatically by nVector_Client_Prepare.ps1 when Mode includes SSIM.

Purpose:

- Long-running SSIM processing daemon that runs for the full lifetime of nVector_Client_Prepare.ps1 when Mode is set to ssim or both.
- Continuously polls for new screenshot batch folders on both the client side (local launcher path) and the desktop side (UNC path to target machine).
- When a matching batch appears on both sides, copies it to a timestamped queue subfolder and runs ssim-tool.exe against the copy.
- Parses the best SSIM score from the ssim-tool output CSV and uploads it to Login Enterprise as a platform metric.
- Optionally archives heatmap PNG files to a timestamped subfolder under the heatmap archive folder after each batch is processed.
- Writes its own timestamped daemon log file, separate from the main nVector_Client_Prepare.ps1 log.
- Must be placed in the same folder as nVector_Client_Prepare.ps1. The launcher script resolves the daemon path automatically using $PSScriptRoot.

Key behaviors:

- Queue startup behavior on each script run is configurable: wipe (default — deletes any existing queue subfolders for a clean slate each run), archive (moves existing queue subfolders to a timestamped archive folder), or keep (leaves existing queue entries in place and skips already-processed batches).
- Does not track the target window or agent lifecycle — it watches for screenshot batch folders only. Batch folder name reuse across sessions is handled naturally because each new batch is copied to a uniquely timestamped queue subfolder.
- ssim-tool.exe runs synchronously. During a ssim-tool run the daemon is not polling for new batches. In edge cases where a session ends exactly during ssim-tool execution, remaining batches for that session may be skipped. This is expected behavior and not a crash.
- All settings are passed by nVector_Client_Prepare.ps1 at spawn time. There are no user-configurable parameters to edit in this script directly.

nVector_Startup_Script.cmd (for Login Enterprise Launcher)

Purpose

- A simple **Windows CMD script** that invokes nVector_Client_Prepare.ps1 on the **Login Enterprise Launcher**.
- Ensures that the **client script** runs automatically at user login without requiring manual execution.
- Can be placed in the **Windows Startup folder** or configured as a **scheduled task**.

Key Variables and Parameters

- **File Path to PowerShell Script -** Update the CMD file with the correct path to nVector_Client_Prepare.ps1 to match its location on the **Login Enterprise Launcher**.

Usage Example

To automatically start nVector_Client_Prepare.ps1 at user login, create the following **CMD script**:

```
powershell.exe -ExecutionPolicy Bypass -File "C:\Path\To\nVector_Client_Prepare.ps1"
```

- Save the CMD file and place it in the Windows Startup folder: C:\ProgramData\Microsoft\Windows\Start Menu\Programs\Startup

Automatic Invocation:

- When a user logs in, the CMD file runs and starts the **client integration** automatically.
- Alternatively, configure it as a **Windows Task Scheduler job** for more control over execution timing.

NVIDIA nVector Desktop Prepare (C# Workload)

Note: The canonical filename is now NVIDIA nVector Desktop Prepare.cs as exported from the Login Enterprise appliance UI. The repo has been updated to reflect this. Functionally identical to the previous nVector_Desktop_Prepare.cs — the only difference is the internal TARGET directive, now set to nvector-agent-prepare.

Purpose

- Runs on the target/desktop machine in Login Enterprise as a workload, typically set to Run Once at the start of a session.
- Ensures nvector-agent.exe is available on the target machine by copying it from the Login Enterprise appliance script content folder. This copy happens on every run by default to ensure the agent is always up to date.

- Starts nvector-agent.exe in the desktop role using long-form flags (--role desktop) to generate a watermark for latency measurement. The client role agent on the Login Enterprise launcher detects these watermarks to calculate round-trip latency.
- Configures the agent to write screenshot batches to C:\ProgramData\NVIDIA Corporation\nVector. The agent automatically creates batch1, batch2, etc. subfolders here per screenshot round. These batches are accessed by the SSIM daemon on the launcher via UNC path for image quality comparison.
- Verifies the agent process is running after launch and logs the result.

Key Variables & Parameters

- nvidiaRoot — Working directory for the agent on the target machine. Default: C:\ProgramData\NVIDIA Corporation\nVector. If the session user cannot write to this path due to FSLogix, GPO restrictions, or other profile management policies, update this variable to an accessible path and re-upload the workload to the Login Enterprise appliance. Alternatives include a %TEMP%-based path or a UNC path accessible from the target session.

- screenshotPath — Root directory where the agent writes screenshot batches. Set to nvidiaRoot by default. The agent automatically creates batch1, batch2, etc. subfolders here per screenshot round. Always point this at the root directory — do not point it at a subfolder.
- logFilePath — Path for the desktop agent log file. Default: C:\ProgramData\NVIDIA Corporation\nVector\agent.log.
- forceCopy — If true (default), copies nvector-agent.exe from the appliance script content on every workload run, ensuring the agent binary is always current.

Important: The --screenshots-per-batch and --max-screenshot-rounds values set in this workload must match the corresponding values configured in nVector_Client_Prepare.ps1 on the launcher. Mismatched values will cause screenshot synchronization failures between the client and desktop roles, resulting in unreliable or missing SSIM scores. The defaults in this workload are --screenshots-per-batch 4 and --max-screenshot-rounds 0 (unlimited rounds).

Usage Example

1. **Upload the Workload:**
    - Use the **Login Enterprise web interface** to upload NVIDIA nVector Desktop Prepare.cs as a **custom workload**.
    - Configure the workload settings (e.g., set to **Run Once** if applicable).
2. **Adjust Variables as Needed:**
    - Change logFilePath if needed to specify a different location for the log output.

3. **Run the Workload:**
    - When executed, the workload downloads and runs nvector-agent.exe in **desktop mode** (-r desktop).
    - The **client role** nvector-agent.exe on the Login Enterprise Launcher will detect the watermark changes and use them to compute round-trip latency.

get_nVectorMetrics.ps1

Purpose

- Retrieves raw **Platform Metrics** data (including nVector latency) from the Login Enterprise API.
- Queries the /publicApi/{ApiVersion}/platform-metrics endpoint (defaults to v8-preview).
- Exports results to **CSV** and **JSON** for analysis.
- Optional server certificate import flow to handle self-signed/privately signed appliance certs.

Key Parameters

Version 2.0.0. Key changes from v1.0.1: -ApiAccessToken renamed to -LEApiToken (mandatory). -OutputCsvFilePath and -OutputJsonFilePath replaced by -OutputDir — specify a folder only, filenames are auto-generated with timestamps. New -LastHours parameter (integer, default: 1) as a convenience alternative to manual ISO timestamps. New -EnvironmentIds string array parameter supports querying multiple environment UUIDs in one run; -EnvironmentId single UUID still works as before. Default API version updated from v7-preview to v8-preview.

Parameters can be set as defaults in the script or passed on the command line. Command line values always override in-script defaults.

Required:

- -LEApiToken — Login Enterprise API token with Configuration access level. Note: this parameter was named -ApiAccessToken in v1.x — update any saved commands or scripts that used the old name.
- -EnvironmentId or -EnvironmentIds — at least one environment UUID must be provided. Use -EnvironmentId for a single environment or -EnvironmentIds to query multiple environments in one run.

Optional:

- -EnvironmentIds — query multiple environment UUIDs in a single run. The script makes a separate API call per environment and combines the results into a single CSV and JSON output, with an environmentKey column so you can tell which rows came from which

environment. Useful for pulling latency and SSIM data together in one shot: -EnvironmentIds "latency-env-uuid","ssim-env-uuid". PowerShell 5 syntax: comma-separated values, no spaces, no @() array wrapper required.

- -LastHours — integer; retrieves metrics from the last N hours calculated from the current time. Default: 1. This is a convenience alternative to manually specifying -StartTime and -EndTime.
- -StartTime, -EndTime — ISO 8601 Zulu format (e.g., 2026-02-24T00:00:00.000Z). Use these for specific time ranges. If provided, they take precedence over -LastHours.
- -BaseUrl — Login Enterprise appliance base URL (e.g., https://mydomain.LoginEnterprise.com).
- -OutputDir — output folder for results. Timestamped CSV, JSON, and log filenames are auto-generated in this folder. This replaces the old -OutputCsvFilePath and -OutputJsonFilePath parameters from v1.x — if you previously used those, switch to -OutputDir.
- -ApiVersion — API version segment used in the request URL. Default: v8-preview. Use v7-preview for older appliances if needed.
- -ImportServerCert — switch; fetches and imports the server's leaf and chain certificates into CurrentUser\Root before making the request. Use this for appliances with self-signed or private CA certificates.
- -KeepCert — switch; used with -ImportServerCert. Retains the imported certificates after the run completes. If omitted, any newly imported certificates are removed on exit.

Usage examples:

Single environment, last 1 hour (default):

.\get_nVectorMetrics.ps1 -LEApiToken "your-token" -EnvironmentId "your-uuid" -BaseUrl "https://your-appliance.com"

Single environment, specific time range:

.\get_nVectorMetrics.ps1 -LEApiToken "your-token" -EnvironmentId "your-uuid" -StartTime "2026-02-24T00:00:00.000Z" -EndTime "2026-02-24T23:59:59.999Z" -BaseUrl "https://your-appliance.com"

Pull latency and SSIM environments together in one run (PS5 syntax — no @() wrapper):

.\get_nVectorMetrics.ps1 -LEApiToken "your-token" -EnvironmentIds "latency-env-uuid","ssim-env-uuid" -BaseUrl "https://your-appliance.com" -LastHours 2

Self-signed cert, last 2 hours:

.\get_nVectorMetrics.ps1 -LEApiToken "your-token" -EnvironmentId "your-uuid" -BaseUrl "https://appliance.local" -LastHours 2 -ImportServerCert

Security & Compatibility Notes

- **PS 5.x path:** Uses *HttpWebRequest* (certificate validation **not** skipped).
  Use *-ImportServerCert* for appliances with self-signed/private CA certs.
- **PS 7.x path:** Uses *Invoke-RestMethod -SkipCertificateCheck* (validation is **bypassed**).
  Use only on trusted networks. *-ImportServerCert* can still be used to trust the cert for other tools.
- Importing into **CurrentUser\Root** affects trust for the current user only. Use *-KeepCert* sparingly.

Usage Examples

1) # Single environment, last 1 hour
   .\get_nVectorMetrics.ps1 -LEApiToken "yourtoken" -EnvironmentId "your-uuid" -BaseUrl "https://your-appliance.com"
2) # Multiple environments, specific time range
   .\get_nVectorMetrics.ps1 -LEApiToken "yourtoken" -EnvironmentIds @("uuid-1","uuid-2") -StartTime "2026-02-24T00:00:00.000Z" -EndTime "2026-02-24T23:59:59.999Z" -BaseUrl "https://your-appliance.com"
3) # Self-signed cert, last 2 hours
   .\get_nVectorMetrics.ps1 -LEApiToken "yourtoken" -EnvironmentId "your-uuid" -BaseUrl "https://appliance.local" -LastHours 2 -ImportServerCert

Expected Behavior

- Builds the request URL with ***System.UriBuilder*** for safe path/query encoding.
- Saves the raw **JSON** response to *OutputJsonFilePath*.
- Parses JSON and exports flattened **CSV** rows to *OutputCsvFilePath* with:
  - *timestamp, value, metricId, environmentKey, displayName, unit, instance, group, componentType*.
- Writes detailed progress and errors to *LogFilePath*.
- When *-ImportServerCert* is used without *-KeepCert*, any newly imported certs are removed after execution.

Troubleshooting

- **Empty CSV / "No parsed JSON to convert to CSV":**
  - Verify the **time range** contains data and **EnvironmentId** is correct.
  - Confirm the **API token** has sufficient scope and the **BaseUrl** is correct.

- **Certificate errors on PS5:**
    - Re-run with *-ImportServerCert*. If you trust the cert long-term, add *-KeepCert*.

Create-NvidiaGpuSessionMetricGroup.ps1

Purpose:

- One-time setup script that creates a pre-configured NVIDIA GPU session metrics group in Login Enterprise via the LE API.
- Run this once before your first test. You do not need to run it again unless you need to recreate or reset the group.
- The script discovers the NVIDIA GPU PerfMon instance name dynamically on the target machine, verifies the required counters are present, creates metric definitions in Login Enterprise, and assembles them into a named group — all in a single run.
- Creates the following metrics and adds them to the group: % GPU Usage, % GPU Memory Usage, % FB (Framebuffer) Usage, % Video Decoder Usage, % Video Encoder Usage, CPU Utilization (built-in), and Memory Utilization (built-in). Total of 7 metrics.
- The group name is auto-generated from the detected GPU model and NVAPI ID (e.g., "NVIDIA A10-4Q (NVAPI 131072)") unless you specify a custom name with -GroupName.
- Saves a timestamped log to %TEMP% on completion.

Required parameters:

- -BaseUrl — Login Enterprise appliance base URL (e.g., https://myDomain.LoginEnterprise.com/)
- -ConfigurationAccessToken — LE API token with Configuration access level

Optional parameters:

- -GroupName — custom name for the session metrics group. Defaults to an auto-generated name based on the detected GPU model and NVAPI ID.
- -TargetComputer — hostname of a remote machine to query for GPU PerfMon counter discovery. Leave empty to query the local machine (default).
- -ImportServerCert — switch; imports the appliance certificate for appliances using self-signed or private CA certificates.
- -KeepCert — switch; used with -ImportServerCert. Retains the imported certificate after the run.

Usage examples:

Basic — uses defaults set in the script body:

```
.\Create-NvidiaGpuSessionMetricGroup.ps1
```

Override appliance URL and token on the command line:

.\Create-NvidiaGpuSessionMetricGroup.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token"

Target a remote GPU machine for counter discovery:

.\Create-NvidiaGpuSessionMetricGroup.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -TargetComputer "my-gpu-vm"

Custom group name:

.\Create-NvidiaGpuSessionMetricGroup.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -GroupName "NVIDIA A10-4Q GPU Metrics"

For appliances with self-signed certificates:

.\Create-NvidiaGpuSessionMetricGroup.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -ImportServerCert

After running, verify the group in the Login Enterprise UI under Configuration > Session Metrics > Groups. To assign the group to a test, go to Configuration > Manage Tests > [Your Test] > Test Settings > Session Metrics > Metrics Group.

Note: Running this script more than once will create duplicate metric definitions. If you need to re-run it, delete the previously created definitions first via the Login Enterprise UI (Configuration > Session Metrics > Metrics) or the API before running again.

Add-SessionMetrics.ps1

Purpose:

- Generic interactive script for discovering Windows PerfMon counters and WMI class properties on any Windows machine, then creating session metric definitions in Login Enterprise via the LE API.
- Use this when you need metrics beyond what Create-NvidiaGpuSessionMetricGroup.ps1 creates — for example, remoting protocol counters specific to your VDI stack (Citrix, Omnissa Blast, PCoIP, RDS RemoteFX), or any other custom PerfMon or WMI metric.
- Can be run on any Windows machine that has the counters you want to register installed and can reach the Login Enterprise API. It does not have to be a launcher or target machine.
- PowerShell 5 compatible.

Required parameters:

- -BaseUrl — Login Enterprise appliance base URL
- -ConfigurationAccessToken — LE API token with Configuration access level

Optional parameters:

- -SearchString — keyword to search for in available PerfMon counter sets and WMI classes. If not provided, the script will prompt for it interactively.
- -ExistingGroupId — UUID of an existing session metrics group to add the created metrics to. Skips the interactive group assignment prompt.
- -NewGroupName — if provided, creates a new session metrics group with this name and adds the created metrics to it. Skips the interactive group assignment prompt.
- -MetricTag — optional tag string applied to all metrics created in this run.
- -ImportServerCert — switch; imports the appliance certificate for appliances using self-signed or private CA certificates.
- -KeepCert — switch; used with -ImportServerCert. Retains the imported certificate after the run.

Interactive workflow:

1. Enter a keyword to search available PerfMon counter sets and WMI classes on the local machine (or supply via -SearchString).
2. Select from a numbered list of matching results.
3. For WMI classes: choose all properties or select specific ones by number.
4. Set units (e.g., ms, %, Frames/sec, Bytes/sec) and summarization operation (avg, sum, max, min, none) per metric. The script suggests sensible defaults based on property names.
5. Review all selections and confirm before any API calls are made.
6. Assign the new metrics to an existing group (by ID or fuzzy name search), create a new group, or skip group assignment.

Usage examples:

Fully interactive — prompted for everything:

```
.\Add-SessionMetrics.ps1
```

Provide search keyword upfront:

```
.\Add-SessionMetrics.ps1 -SearchString "RemoteFX"
```

Override appliance connection on the command line:

```
.\Add-SessionMetrics.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token"
```

Add to an existing group by ID:

.\Add-SessionMetrics.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -ExistingGroupId "a2f7d6d2-1dd8-4f42-a455-b741535527e1"

Create a new group with a specific name:

.\Add-SessionMetrics.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -NewGroupName "Blast Protocol Metrics"

For appliances with self-signed certificates:

.\Add-SessionMetrics.ps1 -BaseUrl "https://myDomain.LoginEnterprise.com/" -ConfigurationAccessToken "your-token" -ImportServerCert

Note: GPU PerfMon counter availability is scoped to NVIDIA GPU-enabled virtual desktops and vGPU environments. Counter names and instance values depend on the vGPU profile in use and will change if the profile changes. Re-running with the same search string will create duplicate metric definitions — check existing metrics in the Login Enterprise UI first.

Additional Information

Documentation Links

- NVIDIA nVector Integration (official Login Enterprise documentation): https://docs.loginvsi.com/login-enterprise/6.5/nvidia-nvector-integration
- nVector Integration GitHub Repository (scripts, workloads, and this guide): https://github.com/LoginVSI/nVector
- Login Enterprise — Managing Session Metrics: https://docs.loginvsi.com/login-enterprise/6.5/managing-session-metrics-optional
- Login Enterprise — Adding a System Access Token: https://docs.loginvsi.com/login-enterprise/6.5/using-the-public-api
- Login Enterprise — Configuring Applications for Testing (importing workloads): https://docs.loginvsi.com/login-enterprise/6.5/configuring-applications-for-testing
- Login Enterprise — Configuring Logon Components: https://docs.loginvsi.com/login-enterprise/6.5/configuring-logon-components
- Login Enterprise — Configuring Load Testing: https://docs.loginvsi.com/login-enterprise/6.5/configuring-load-testing
- Login Enterprise — Configuring Continuous Testing: https://docs.loginvsi.com/login-enterprise/6.5/configuring-continuous-testing
- Login Enterprise — Script Editor: https://docs.loginvsi.com/login-enterprise/6.5/using-the-script-editor