


Drawing steps

General flow

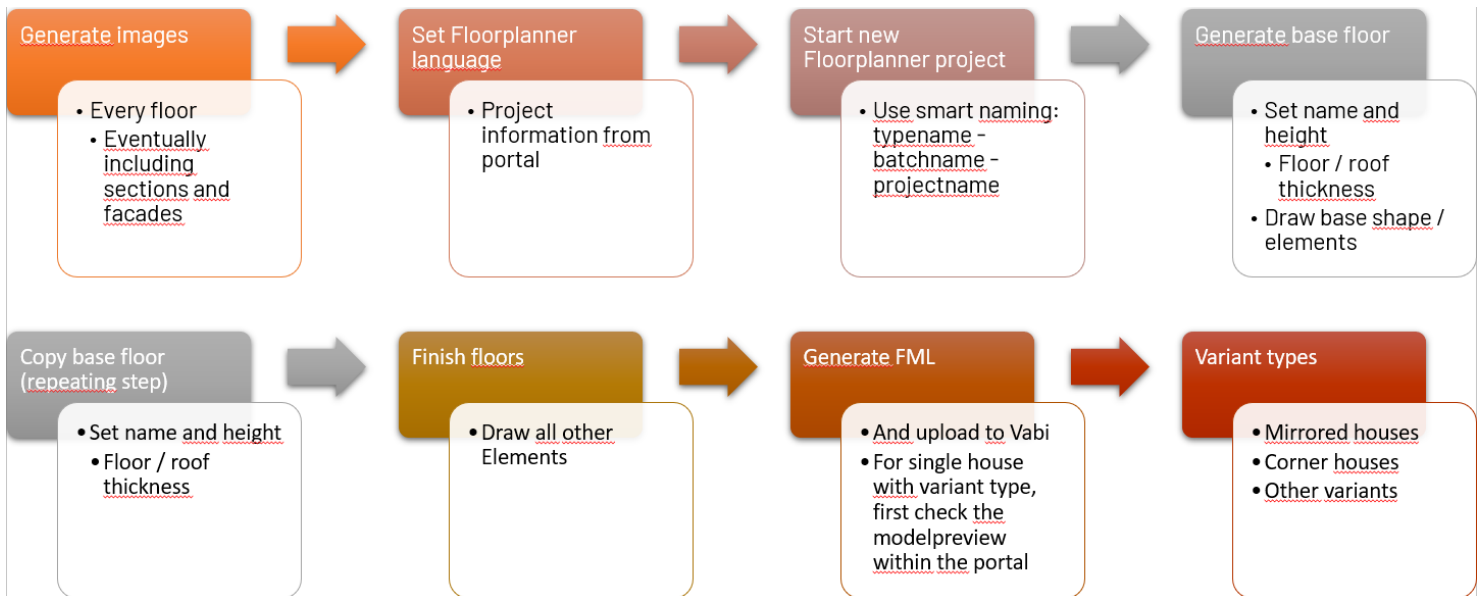

In this document only houses and apartments are explained.

Contents

Drawing steps	1
Step 1: Generate images	4
Step 2: Set Floorplanner language	4
2a: Login to Floorplanner	4
2b: Set language	4
Step 3: Start new Floorplanner project	4
Step 4: Edit the first floor	4
4a: Floor settings	4
4b: Set the background	5
4c: Rooms and walls	5
4d: Other elements	8
Step 5: Copy base floor (repeating step)	9
5a: Floor settings	9
5b: Set the background	9
5c: Rooms and walls	9
5d: Sloped roof	9
5d.1 Sloped roof	10
5d.2 Sloped roof on multiple floors	12
Step 6: Basepoint	14
Step 7: Finish floors	15
7a: Difficult roof shapes	15
7b: Gutters	17
7c: Skylights and Conservatory roofs	17
7d: Chimneys	18
7e: Dormers	19
Regular dormers	19
7f: Setting front	20
7g: Setting building separating walls	20
7h: Attic ladder or hatch	28
7i: Railing	28
7j: Balcony and roof terrace	29
7k: Horizontal awning	31
7l: Extension of the roof	31
7m: Carport	32
7n: Conservatory	34
7m: Terrace	35


Step 8: Generate FML	36
Step 9: Variant types	37
9a: Mirrored house	37
9b: Corner house.....	37
How to draw	38
How to set Floorplanner language	38
How to create a Floorplanner project	38
How to edit floor settings	39
How to edit background settings	39
How to measure within Floorplanner	40
How to draw walls.....	41
How to move walls	42
How to copy walls.....	42
How to draw difficult roofs	43
How to set rooms.....	46
How to add a cutout	47
How to add a not enclosed room	47
How to add doors and windows	48
How to add windows over multiple floors.....	48
How to add panels.....	49
How to add a protruding window frame.....	50
How to make a hole in walls or façade.....	51
How to add basic furniture	52
How to add stairs	52
How to draw a space underneath stairs.....	53
How to add columns.....	56
How to add desings.....	57
How to draw external buildings connected to the main building.....	57
How to add or remove a roof above a room.....	58
How to add an air vent to a window	58
Tables.....	59
Floor names	59
Example floor/design layout when using designs	59
Room types	60
Deviant area names	60
Room names	61

Step 1: Generate images

- For apartments we draw a full building floor including all apartment located on that floor.
- Generate an image for every floor.
- The maximum file size is 5 mb, if it is more it cannot be used as background in Floorplanner.
- The images can contain sections and facades if the scale is the same or if measurements are readable.

Step 2: Set Floorplanner language

2a: Login to Floorplanner

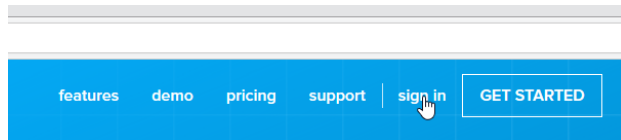

2b: Set language


For converting to Vabi it is necessary to draw a floor in the right language, because of the naming of rooms. To avoid typos, we use the Floorplanner general names as most as possible. In the Portal you can find the project language. [How to set Floorplanner language.](#)

Step 3: Start new Floorplanner project

Create a new Floorplanner project. For naming use "smart name": Unique type name – Batch name – Project name. [How to create a Floorplanner project.](#)

Step 4: Edit the first floor

When you have created the project, the first floor is already there, but this is not the first screen after creating the project. The first screen is the "create spaces" or "maak ruimtes" screen, choose the "floors" or "verdiepingen" screen. It is useful to start with a floor which has repeating walls on all other floors.

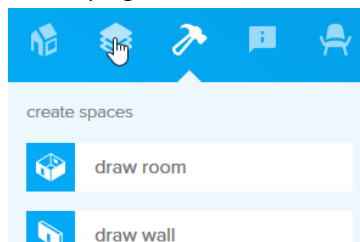


4a: Floor settings

First, we set some general settings in this floor.

1. Choose a **name** from the [Floor names](#) table. Within the floor name, embed also **floor thickness** and if necessary **roof thickness**. Every floor where a roof is located, should have the roof thickness mentioned in its floor name. Therefore, we use a special format, so it can be used to convert the 3D model.

'Level (floor thickness,roof thickness)'. The first number (200) represents the thickness of the floor (slab) in mm. The second number (200) is optional and represents roof thickness. [How to edit floor settings](#)

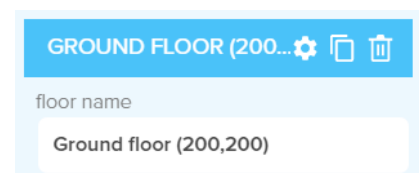

2. Set the **height** of the level. Fill in the **net ceiling height**.

Always use the ceiling height of the house and not of the storage. This height setting determines at what height the floor on top of this level will be placed. Most of the cases an external building like a storage doesn't even have a first floor, so we use the ceiling height of the house. The image shows an example of the difference between the ceiling height of the storage and the house.



In case of split levels follow these instructions. [How to draw split levels.](#)

4b: Set the background

Now we can go back to the “create spaces” or “maak ruimtes” screen, so we can set the background. Choose the option “background settings” or “achtergrond instellingen” and set the background. [How to edit background settings.](#) It is useful for a single house with a detached storage to have an image with the general building and detached storage on the same background image, so you don't have to switch background when drawing the detached storage. You don't have to draw the detached storage exactly on the right position, because when imported to the portal there will be an option to place the detached storage at the right position.

For an apartment building it is useful to have an image with the full floor including all apartments, because the whole floor must be drawn, not only the apartment types. For the portal applies: a building with all its apartments within, is a unique type.


When the heights of the windows and doors cannot be clearly read from the drawing, the cross-sections and / or façade drawings must also be converted into images. To make it even easier, the cross-sections and / or façade drawings can be placed next to the floor plans so the height of the windows and doors can be determined in Floorplanner, with a measurement tool. [How to measure within Floorplanner.](#)

4c: Rooms and walls

Drawing rooms and walls

Now we can start drawing walls using the “draw wall” or “teken muur” function. [How to draw walls](#) and [How to move walls](#). We only draw walls which are repeating at other floors right now. When drawing, locate the front door at the bottom of the drawing area.

When drawing, set the right thickness of the walls. When a wall is next to another unique type, choose half of the thickness, because the other half of the wall will be drawn in the other unique type. If a wall stops under a staircase choose a different height for this wall.

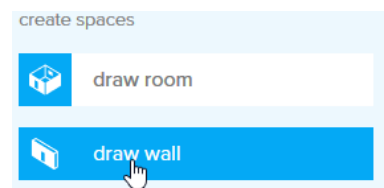



Walls must be connected to each other and split per room, see the example below. When walls are not properly connected and are not split, room definitions within Floorplanner cannot be made properly automatically.

When walls around a room are all connected Floorplanner will automatically generate a room. When rooms are repeating on other floors you can already set the rooms. [How to draw walls](#), [How to move walls](#), [How to copy walls](#) and [How to set rooms](#).

If there are multiple rooms without a separating wall, you can draw one of more walls with a thickness of 0cm. [How to add a not enclosed room](#) . Also add for this rooms the right room type.

We don't use the curved wall option. Instead, the curved wall should be split in straight segments.


Naming rooms

When naming rooms use the standard room type names that Floorplanner provides. So for example in Dutch storages are often named 'Berging' or 'Opslag' in plans. Floorplanner only provides a room type 'Opslag'. If 'Berging' is mentioned in the floorplan you can use the room type 'Opslag' and there is no need to rename it to 'Berging'. However, there are a few exceptions for rooms with a very specific function. These are explained in the schedule below.


Room name	Room type in Floorplanner	Rename to
Meterkast (Meter cupboard)	Technische ruimte (Utility)	Meterkast
Loggia	Balkon (Balcony)	Loggia
Schacht (Shaft)	Technische ruimte (Utility)	Schacht
Kelder (Cellar)	Opslag (Storage)	Kelder
Lift (Elevator)	Hal (Hallway)	Lift
Bijkeuken (Scullery)	Opslag (Storage)	Bijkeuken
Trappenhuis (Staircase)*	Hal (Hallway)	Trappenhuis
Galerij (Access balcony)	Hal (Hallway)	Galerij
Dakterras (Roof terrace)	Balkon (Balcony)	Dakterras
Room with a 'CV' (Central heating unit)	Technische ruimte (Utility)	n/a***
Unknown/not named room	Other	Overig
Hobbykamer (Hobby room)**	Kantoor (Office)	n/a***
Carport	Parkeren (Parking)	Carport
Conservatory	Patio (Patio)	Serre
Terras (Terrace)	Tuin (Garden)	Terras
Studio****	Woonkamer (Living)	Woon- / slaapkamer

So for example for a shaft ("schacht"), there is no room type, so you have to use "Utility" and edit the name manually to "Schacht".

* A 'Trappenhuis' (Staircase) is an element, usually in big buildings like an apartment complex, with stairs that connect all floors. The source material might name these areas as "Hal" or "Trappenhuis". In the case of a "Trappenhuis" these areas should have the room type 'Hal' (Hallway) and be renamed to 'Trappenhuis'.

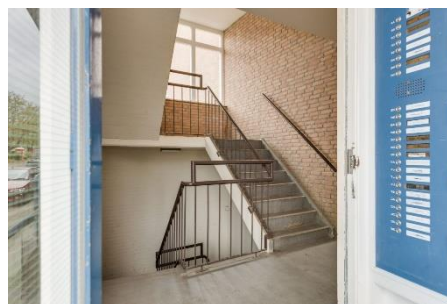

** A 'hobbykamer' (hobby room) should have the room type 'kantoor' office, but make sure to choose the office from the room types of a house (see image) and not office from the room types of an office building.

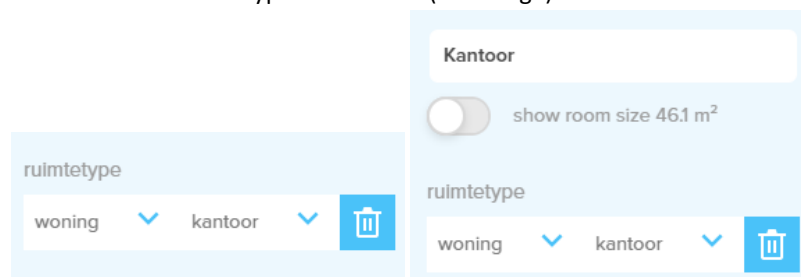

*** Not applicable: this means that you don't have to rename the space manually. The standard name of the room type is sufficient. For example, the hobby room doesn't have to be renamed, because 'kantoor' (office) is correct (see image).


**** Sometimes in source material the room name: 'Studio' is mentioned. When this is the case, in Floorplanner you can choose roomtype 'Woonkamer' and rename to 'Woon- / slaapkamer'. In other cases the source material the room name is already 'Woon- / slaapkamer'. In this case, do the same: choose roomtype 'Woonkamer' and rename to 'Woon- / slaapkamer'. Keep in mind, this way is only for rooms used for dwelling buildings. Utility buildings can also have studio's, but we can not draw them yet.

Cutouts

We draw a cutout with the methods explained here: [How to add a cutout](#). We draw a cutout for the following situations.

Name	Cutout, yes/no	Room type	Rename to
Trapgat (Staircase opening)	Yes	n/a*	Trapgat
Luik (Hatch)	Yes	n/a*	Luik
Vide (Void)	Yes	n/a*	Vide

* Not applicable: this means that you don't have to set a room type for the surface. Renaming it manually is sufficient. For example for a staircase opening you only have to write 'Trapgat' in the name box (see image).

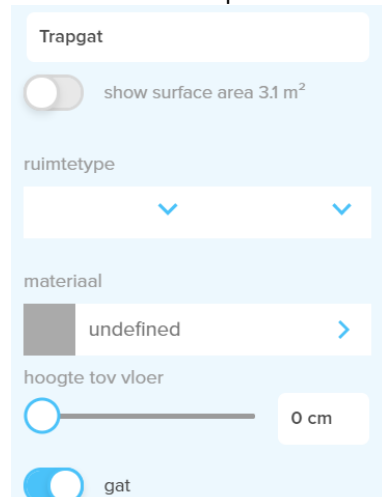

4d: Other elements

Now we can add doors, windows and other structures/furniture to the floorplan drawn if they are also the same on the other floors. When a window or door type is not there, choose the simplest one. This can be done using the options “place doors” or “place windows”, in Dutch “plaats deuren” and “plaats ramen”. [How to add doors and windows](#). Don’t forget to set the right width, height and raise from floor.

When a structure is not there, chose the most similar one. [How to add stairs](#). Measurements are important for converting to 3D, see linked paragraphs.

The following elements for furniture are drawn, these furniture elements are only drawn if present in the source drawings. Only draw toilets, urinals, sinks, showers, baths, central heating units and kitchen blocks. For kitchen blocks draw a block as big as the kitchen work top, including eventually embedded sink or hotplate, but not the fridge.


Step 5: Copy base floor (repeating step)

When the base floor is complete, copy the floor as many times as you need. If you have more than 7 floors, there's two options. The first one is to upgrade the project to 'Level 3: Presentation'. Image b below shows where to find the upgrade option. This does cost an extra 8 credits and you can add up to 15 floor in one project.

Another option is to use the multiple design per floor option to draw more floors, because 7 floors are the maximum in Floorplanner if your project is on 'Level 2: HD'. [How to add designs.](#)



a. How to copy a floor.

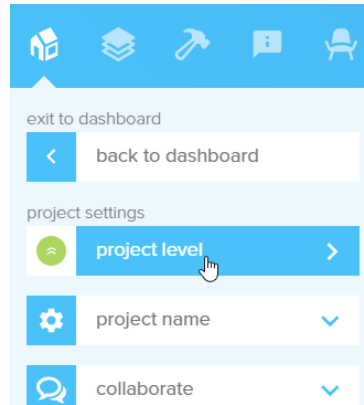

b. How to upgrade the project.

5a: Floor settings

Set the name and height of the new floors equal to how it is explained in [4a:Floor settings](#). When necessary you can edit the order of floors. [How to edit floor settings](#). When you have more than 7 floors and you are forced to use the design option drawing order is more important, because it is not possible to reorder designs within a floor. Also, when using designs, use the design name to fill in floor names. [Example floor/design layout when using designs](#). For sloped roofs set the maximum internal height as floor height.

In case of split levels follow these instructions. [How to draw split levels](#).

5b: Set the background

Now you can set backgrounds for all other floors. When using the multiple design option, it is possible to add a different background for every design. [How to edit background settings](#).

5c: Rooms and walls

Complete the floors with walls and rooms like explained in [4c:Rooms and walls](#).

In most cases there aren't voids or staircase openings (stairwells) in the base floor. In this phase of drawing they must be drawn. Therefore draw a surface at the location of the void or the stairwell. For this "surface" function the "cutout" option must be turned on and the area has to be named in the right way: Stairwell ("Trapgat") or Void ("Vide"). When a stairwell and void are connected to each other. Draw it as 1 area with the name "Stairwell" ("Trapgat"). During the import into Vastgoeddata, this surface is removed from the total floor surface so that a net floor area remains. [How to add a cutout](#).


5d: Sloped roof

Mostly sloped roofs only occur on the top floor. All the walls should have the right shape below the sloped roof. This can be done by the point height function of walls. Sometimes it is also necessary to split walls. [How to draw walls](#).


We use the inner wall measurements, so interior walls should be connecting with exterior walls on the inner side. Setting the walls to their height and slope can take up a lot of time, but when following these steps it should not take any more time than a model with a flat roof. It is important to first draw the exterior walls correctly and then start with the interior walls.

5d.1 Sloped roof


1. Move the exterior walls that are parallel to the ridge of the roof over their axis to 100% or 0% so the connection dots are on the interior side. The other exterior walls can stay on the standard 50% of its axis.

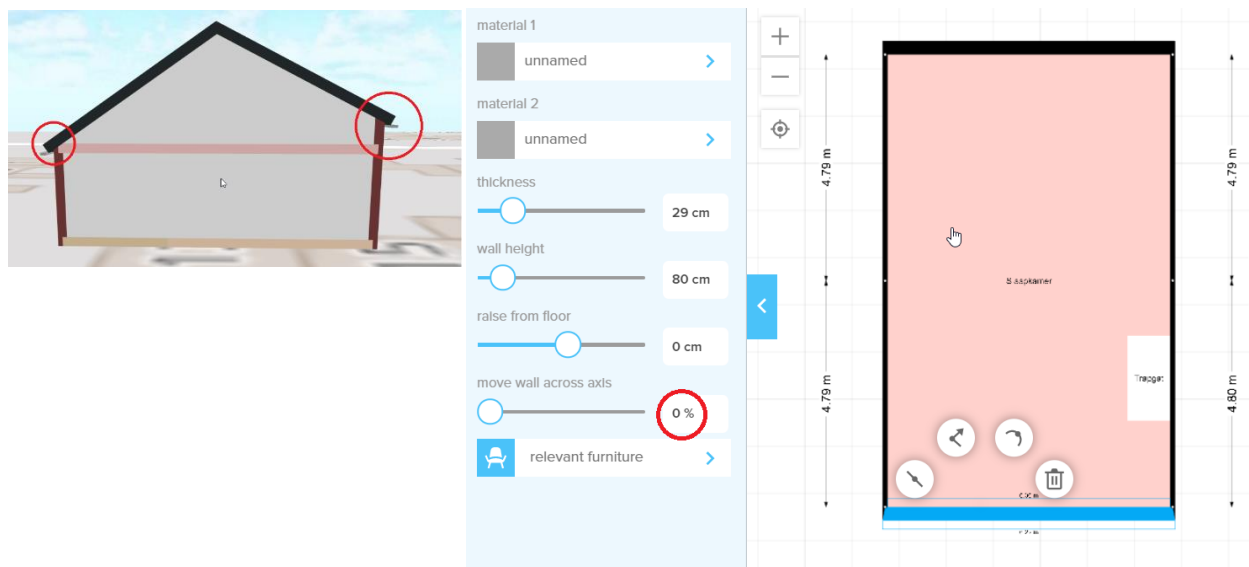


2. Set the height of the exterior walls measured from the source drawings.
If the roof reaches all the way to the floor, the wall at this end of the roof should be set to 0cm height.
3. **Interior walls:** we start with the interior walls that are **parallel to the slope of the roof**. Draw these interior walls and set the height in the joints.

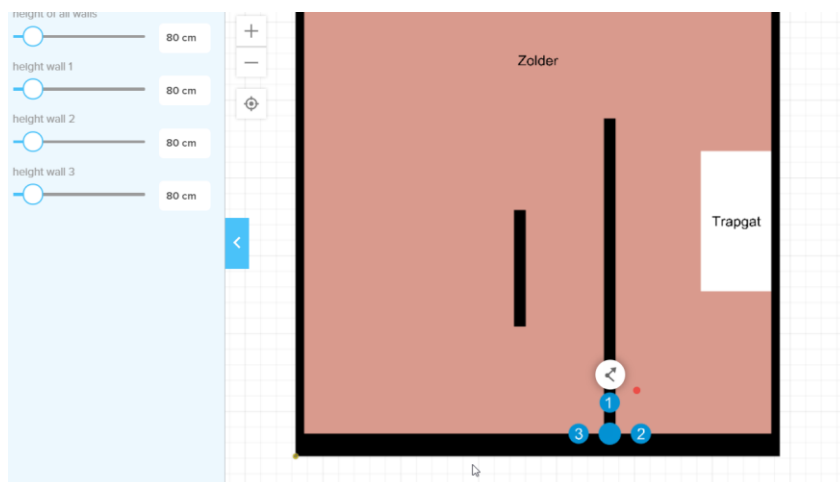


- In the following steps we start drawing the interior walls that are **parallel to the ridge of the roof**. If you need to move the interior walls to the right location or dimensions, do this before connection the interior with the exterior wall.

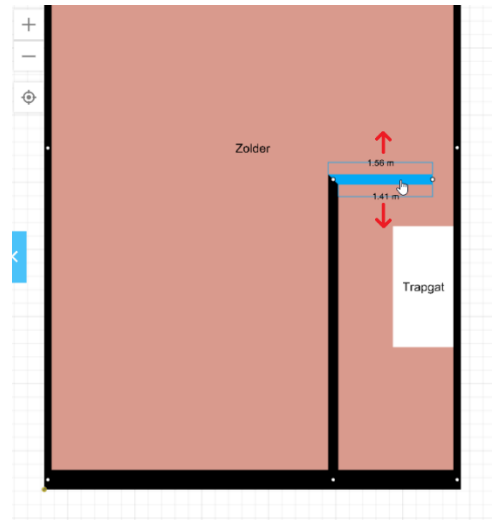



- Extend the interior wall to the exterior wall. Check the height in the joint that connects with the exterior wall. This is the right height for this interior wall, so also set the joint on the other side of this wall to this height.

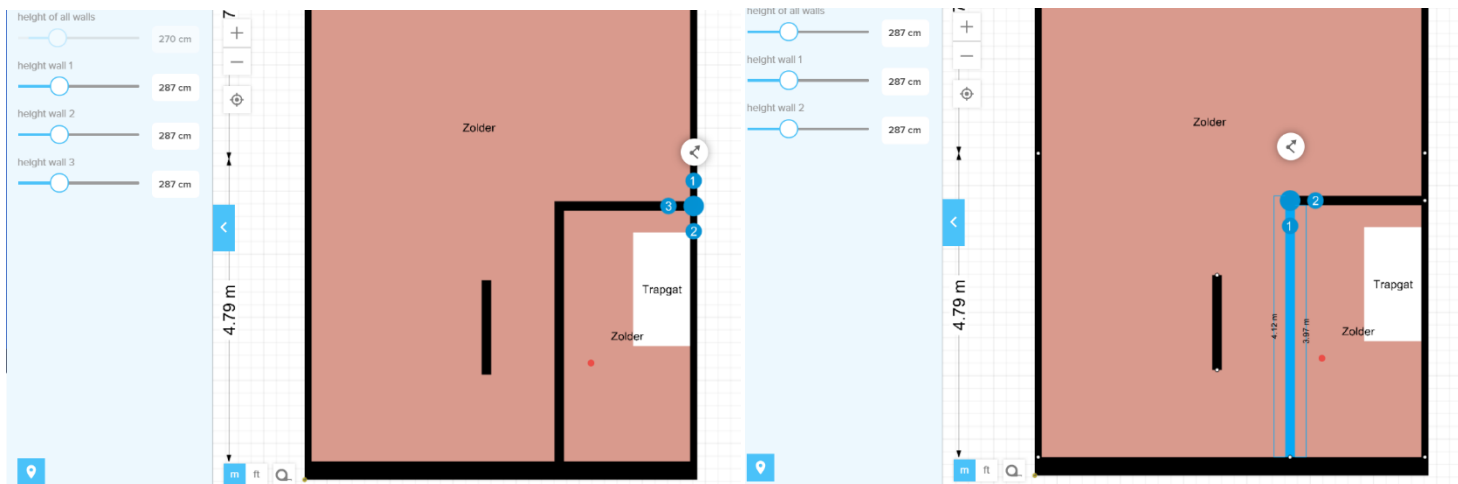

- Repeat steps 4-5 for other interior walls that are **parallel to the ridge of the roof**. In the case shown below we take the height from another interior wall instead of an exterior wall, because this interior wall was already set to its correct height in step 4.

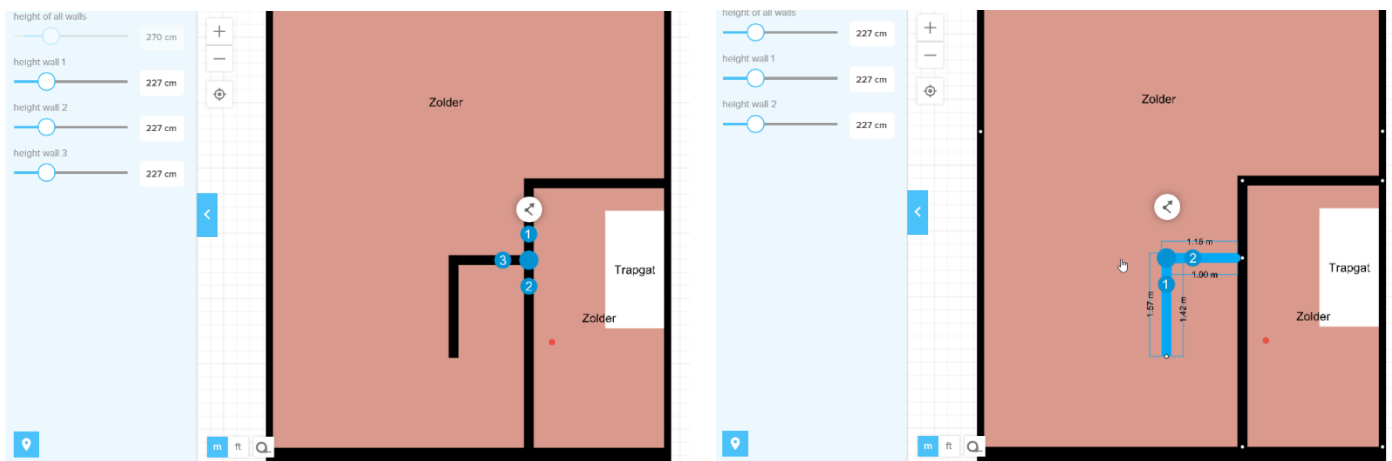

Now all walls on the top floor have the same height and slope so a sloped roof will be generated.

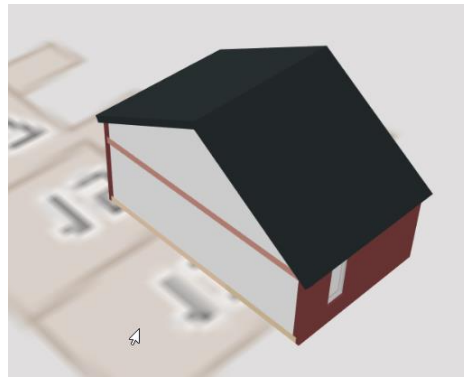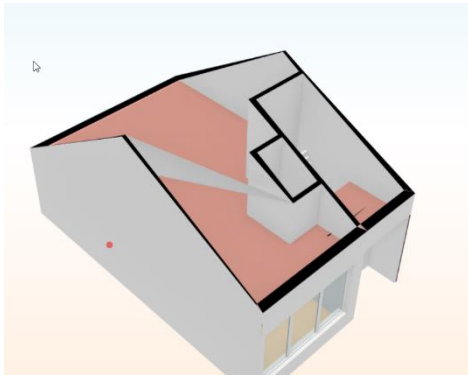


5d.2 Sloped roof on multiple floors

In this situation the sloped roof continues onto multiple floor. The drawing steps that need to be done are almost the same as described in 'Sloped roof', pg6-8 in this document. The only difference is drawing the exterior wall where the roof continues onto the floor beneath it. The drawing steps for drawing the exterior walls for a sloped roof on multiple floors are described below:

First floor


1. Move the exterior walls where the sloped roof ends and that are **parallel to the ridge of the roof** over their axis to 100% or 0% so the connection dots are on the interior side. The other exterior walls can stay on the standard 50% of its axis.
 - **height**: measured from source drawing
 - **Width**: measured from source drawing
 - **Move** over axis: 0 % or 100 % (differs per walls, but the connection point should be on the interior side of the wall).

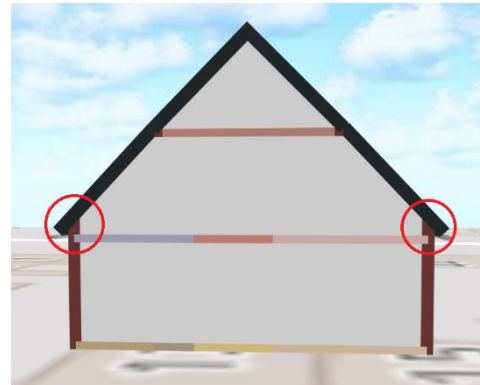

2. Set the height of the walls. Make sure the top of the walls are aligned.

Second floor

3. Set the length and width of the floor. It's important that these are correct, otherwise a continues roof will not be generated. The image shows how to measure the length of the second floor (and the wall of the first floor). These are inner measurements.


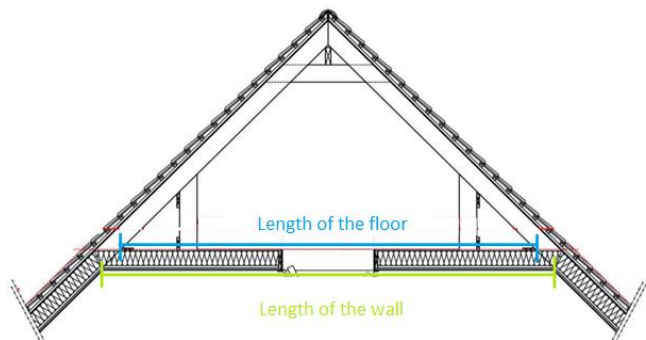


4. Set the walls where the roof continues onto the first floor:

- **Height:** 0cm
- **Width:** 0cm
- **Move over axis:** 50% (standard)


There are actually no walls here, but we still draw them to create a closed surface of the attic.

After setting the walls, check if the length and width (inner measurements) of the floor are still correct.

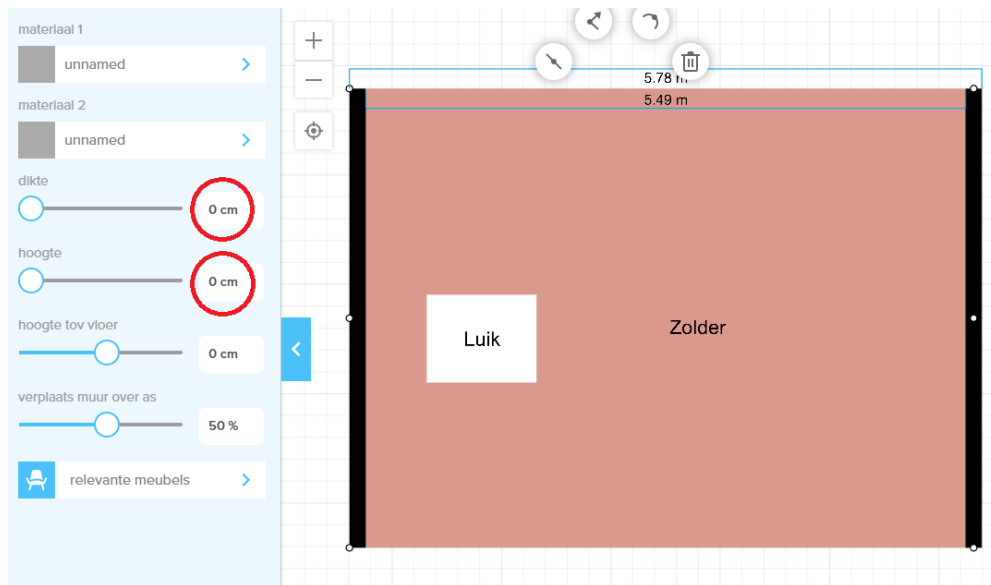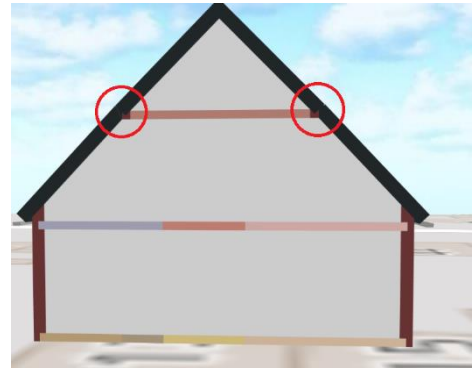

5. Set the height of the walls. Make sure the top of the walls are aligned.

The images below show what a continuous roof looks like in Floorplanner and Vastgoeddata.

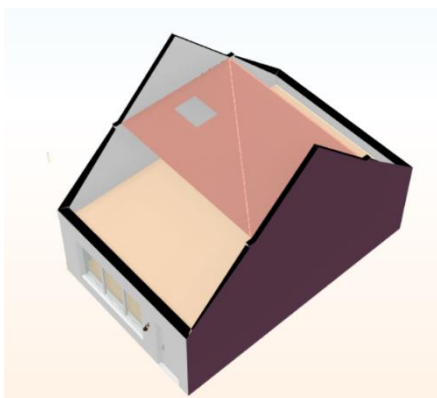


6. Continue drawing the interior walls following the drawing steps described in 'Sloped roof', pg. 6-8 in this document.

For drawing steps of other roof types: [How to draw difficult roofs.](#)

Step 6: Basepoint

Sometimes Floorplanner changes the basepoint of a floor. Therefore we are going to use a basepoint object. With this basepoint object we can align the floors right above each other, without having problems when mirroring or other kind of misplacements.

1. Add the **yellow “oil bottle”** on every floor. The highlighted object in the image shows what object to use.
2. Set the object to the same location on every floor.

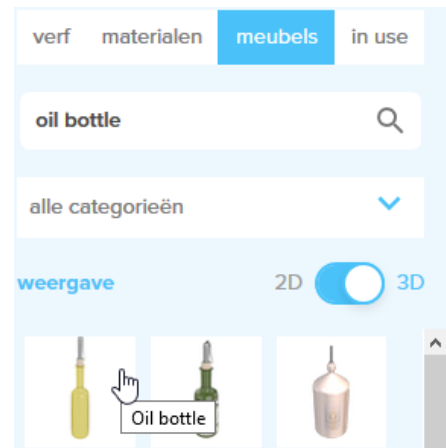


Step 7: Finish floors

There are some elements which most of the time don't repeat at other floors, so they can be drawn now.



7a: Difficult roof shapes

For more difficult roofs with a pyramid shape, you can use this option in Floorplanner: "Place structurals". Then use the structure as shown below:

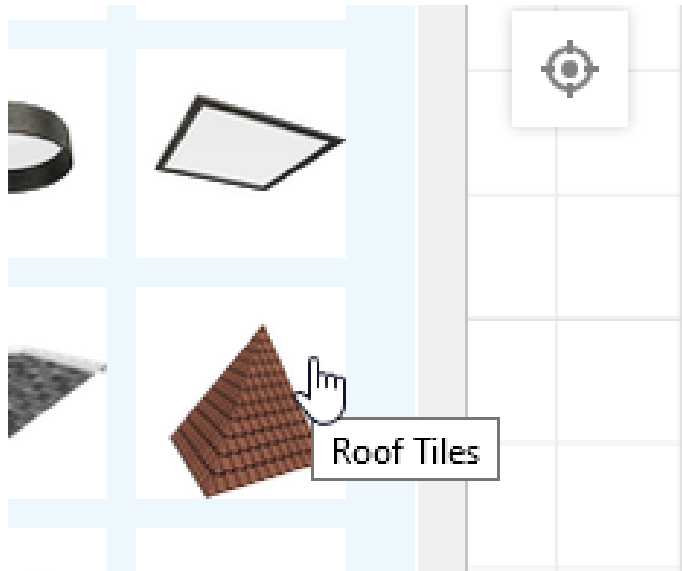


Placing these structures should be done following the steps described below.

1. Rotate the structural in the right direction;
2. Set the raise from the floor, height, width and length of the structure. The images show how to measure these from the source drawing. We use the inner measurements.

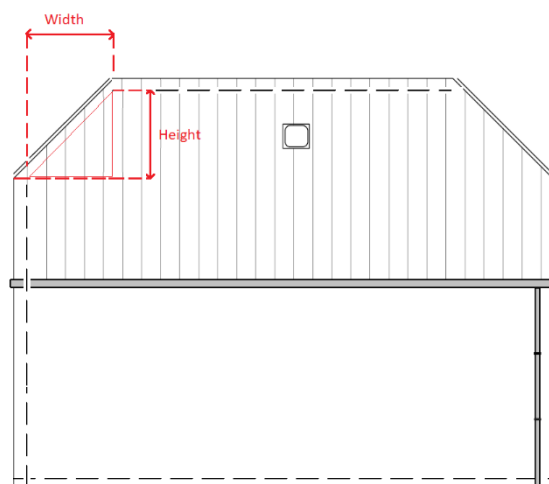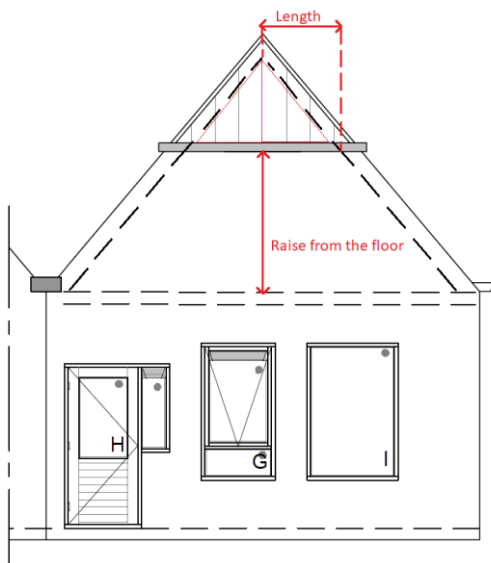

3. Set the roof structure to the right location. Make sure the top of the structure is placed at the ridge of the roof. Also check if the structure is placed to the inner side of the exterior walls and not on top of the exterior walls. This is important, because the roof is generated from the inner measurements.


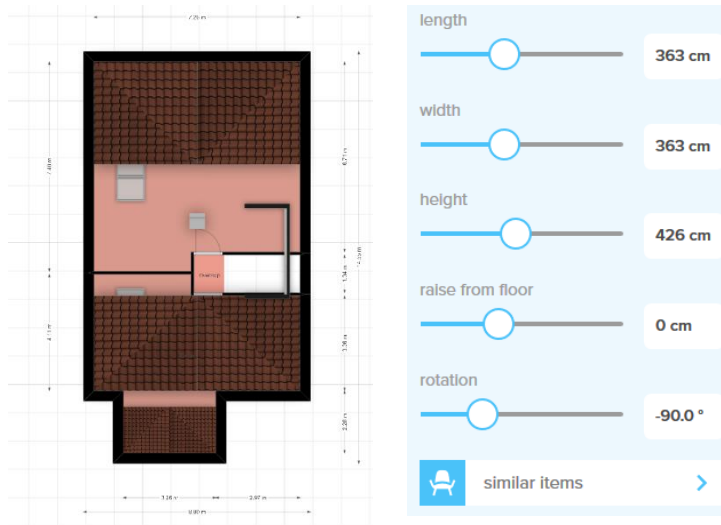


7b: Gutters

Gutters cannot be drawn in Floorplanner, so we use a **“metal beam”** as representation for a gutter. Follow these steps when adding a metal beam:

1. Add the **“Metal beam”** object to the floor where the roof is located and rotate it so it's parallel to the wall.
2. Set the width: make sure the gutter doesn't intersect with a roof on a different floor, for example the storage on the ground floor.
3. Place it on the exterior wall. It doesn't matter if it's aligned to the interior or exterior side of the wall.

The height, raise from the floor and the length option in Floorplanner are not relevant for the metal beam object.

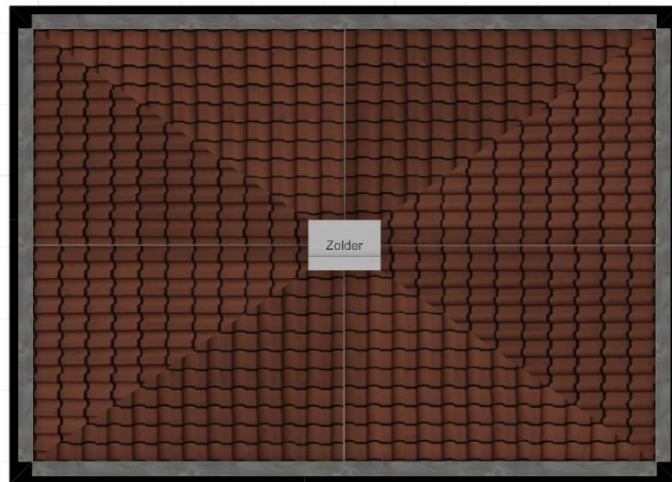
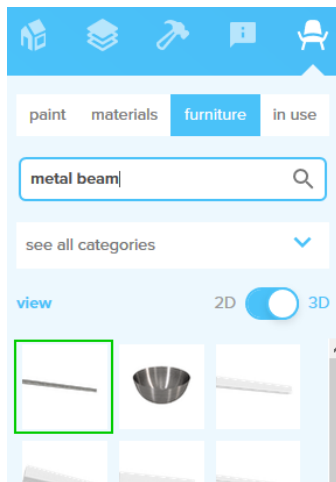


7c: Skylights and Conservatory roofs

For skylights structures there are two ty: Skylights and Conservatory Roofs. In the image below you can see how to find them.

For the skylights there are three options:

1. Rectangular skylight for a sloped roof
2. Rectangular skylight for a flat roof
3. Round skylight for a flat roof.

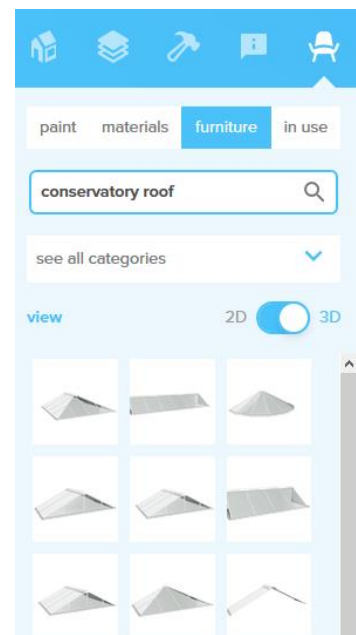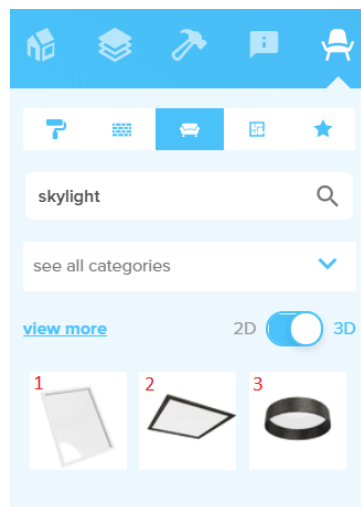

For all skylight follow these steps to add them to a model:


1. Set the length and width seen from top view.
2. Place at the right location seen from top view.

The height, raise from the floor and rotation are irrelevant, because the software will generate them correctly in the roof.

7d: Chimneys


For drawing a chimney we use a chimney object (see image) to generate the part that is protruding from the roof. Follow these steps when drawing a chimney:

1. Add a chimney object to the top floor.
2. Set the length and width seen from top view.
3. Set the height measured from the source drawing: from top of the floor slab to the top of the chimney (see image).
4. Keep the standard value of the raise from the floor to: 0 cm.


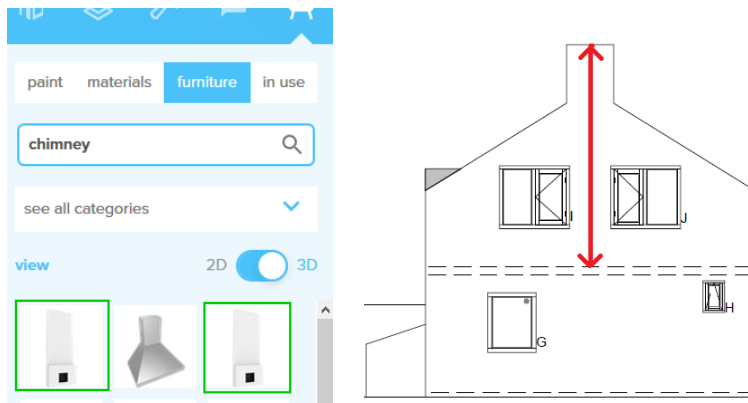


In most cases there are also **shafts** drawn on the source plans. Those shafts should be drawn separately in Floorplanner with walls. These images show an example of what that could look like in source drawings. Follow these steps:

1. Draw the shaft with 'Draw wall' option.
2. Set the height, measured from the source drawings.
3. Place a chimney object according to the steps 1-4 explained above.

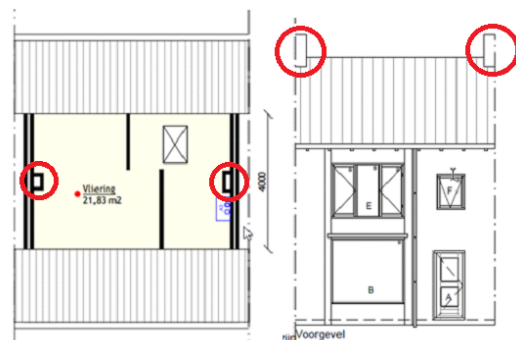

It's okay if the walls of the shafts and the chimney object overlap. The images below show what this looks like in Floorplanner.

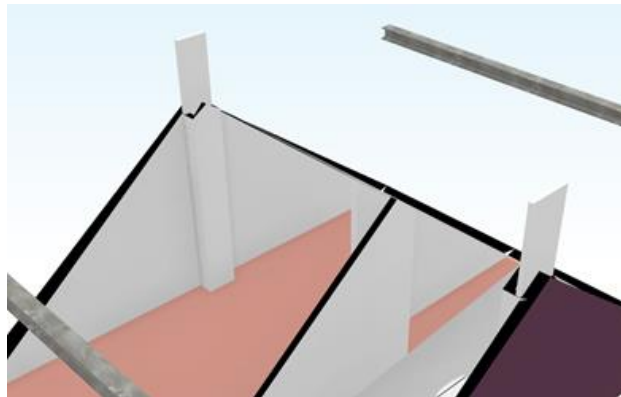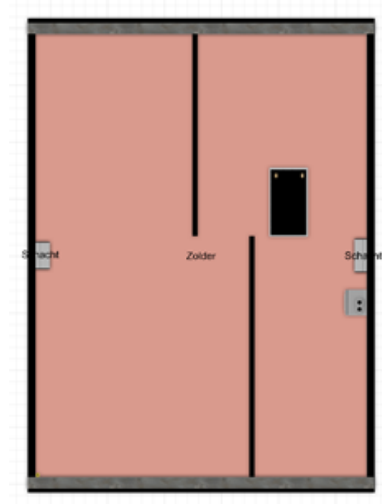


7e: Dormers


Regular dormers

For dormers you can use three options, highlighted with green in the image below. In the image you can also see how to find them.

1. Rotate the dormer to the right direction.

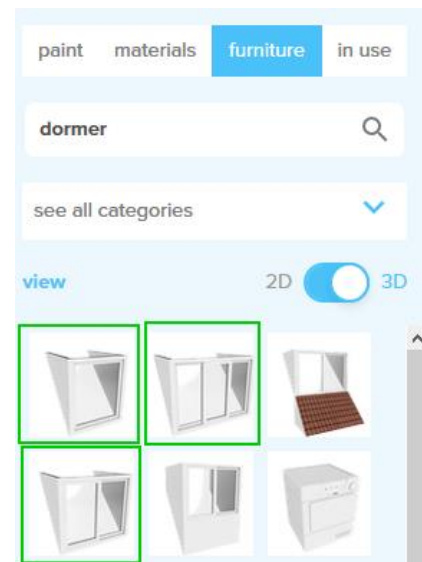


2. Set the width of the dormer: measure the interior width and **add 30 cm** to that dimension.

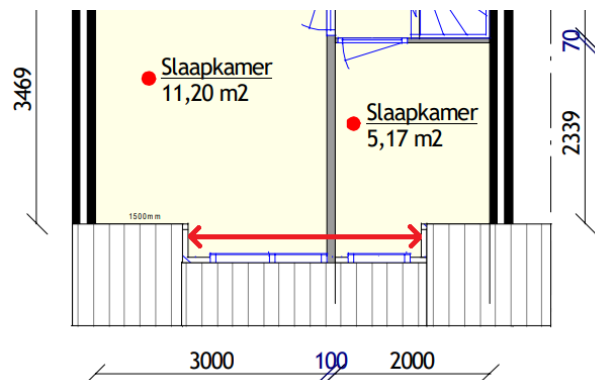

3. Set the length of the dormer: use a section or an elevation for the dimension.
4. Place the dormer at the right location.

The height and raise from the floor are not relevant.

Always place one dormer object, even if the dormer has multiple windows or if the dormer stretches out over multiple rooms (see image below).

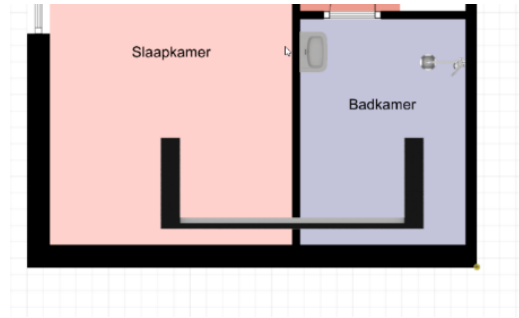

7f: Setting front

For setting the front we are going to use “doorbells”. We use different doorbells for apartments and houses.


Single houses

1. Add option 1: “Flower Doorbell”.
2. Place it on the front façade on the ground floor. The front façade is usually assigned in the source material. If not you can assume that the front façade is the façade that is facing the street. Placing the doorbell on one floor is sufficient.

Apartments



For apartment we need to set multiple doorbells.

1. **Apartment:** Add option 2 or 3 next to the front door of every single apartment within the building. It doesn't matter which option you choose.
2. **Building:** Add option 1 to the front façade of the building. The front façade is usually assigned in the source material. If not, you can assume that the front façade is the façade that is facing the street. Placing the doorbell on one floor is sufficient.

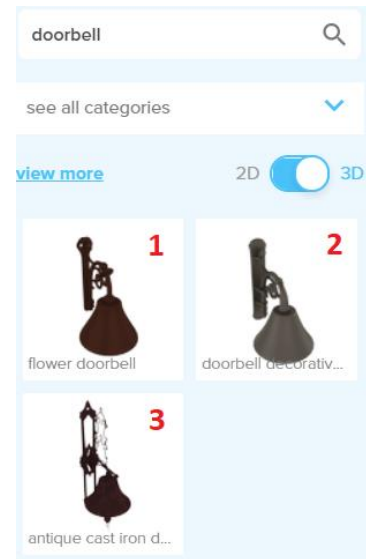


7g: Setting building separating walls

For setting building separating walls we are going to use the paint wall option. Use the colour “**Russian Velvet 1**” for every party wall. This is a dividing wall between two adjoining buildings. Painting only one side of the wall is enough. It doesn't matter which side of the building separating wall gets the painted.

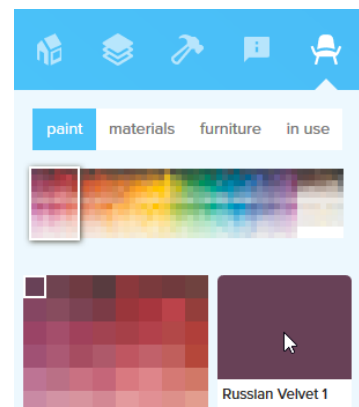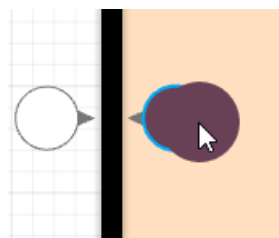


Complicated separating walls

In some cases with sloped roofs or external buildings like storages it not possible to set only the correct part of the wall as a separating wall. Two examples will be explained below. In order to have the exterior and shared wall correctly generated we add a rectangular “Roof tiles” object with a single slope. There are four different types and they can all be used (see image).

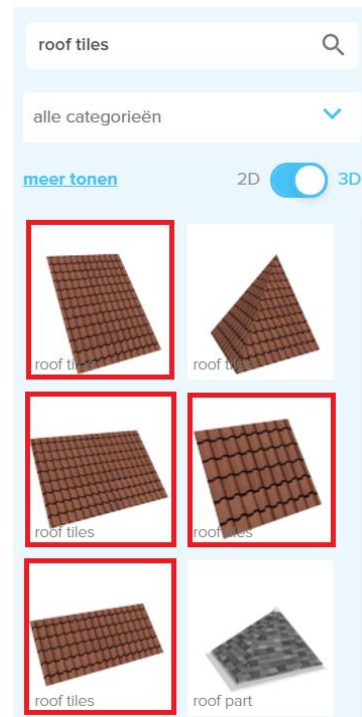


Sloped roof


In this example on the ground floor the walls of the side façade (see image) can be split at the transition between exterior walls and building separating wall (shared wall). These two walls can then be set to their correct thickness and colour. However on the first floor it is not possible in Floorplanner to draw the walls correctly as exterior wall or shared wall. In order to have these walls generated right we add an object that will split the walls and in that way the wall will be generated as part exterior and part shared wall. Follow the steps below.

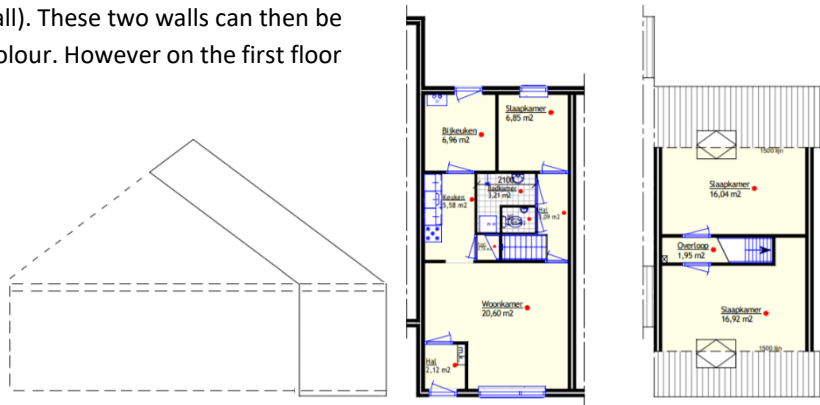


1. Draw the **exterior walls** of the first floor and set the height.
2. **Split** the left façade at the red lines (see image). We divide the walls in three areas.
3. **Wall no. 1:** completely **shared** wall. Set the thickness of this wall and apply the “Russian Velvet 1” colour.
4. **Walls no. 2:** part shared and part exterior wall. However we will set as a **shared** wall. Set the thickness of this wall and apply the “Russian Velvet 1” colour.

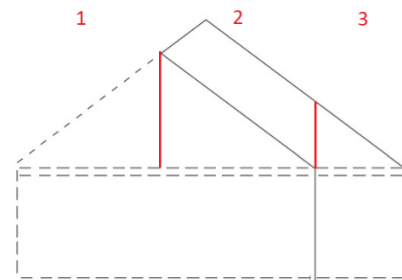


5. **Wall no. 3:** completely **exterior** wall. Set the thickness of the wall. No colour is needed for an exterior wall.
6. Place one of the “Roof tiles” objects. We are going to place it at the location of the thick red line in the image.
7. **Rotate** the object so the slope is parallel to the red line.
8. Set the **length** of the object (see image).
9. Set the **height** of the object. This is similar to the wall height in the joint of wall 1 and 2. (see image).
10. Set the raise from the floor. In this example it is 0 cm.
11. Place it to its correct position on the wall aligned with the interior side. See the images below for the plan and 3d view in Floorplanner.
12. Draw interior walls. [How to draw sloped roofs.](#)

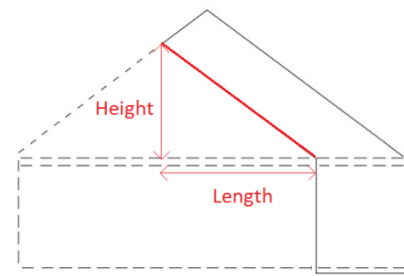

If the neighbouring house is identical to the model there is an easier way of placing the “Roof tiles” object. In those situations you can align the “Roof tiles” object to the roof of the model and set the object to the same the length and height of the roof. Afterwards, place it according to step 11. In this case the object will stick out from the wall, but that is not a problem.

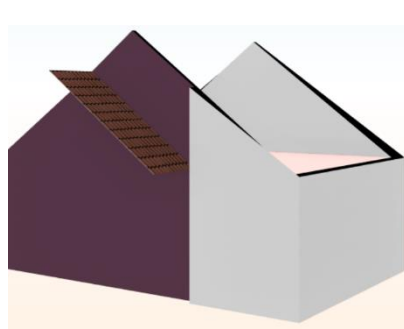



The width of the object is not relevant and can be kept on the standard value.

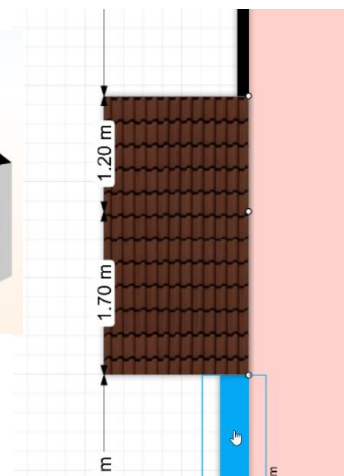



Sloped roof over multiple floors

In this example the walls where a “Roof tiles” object needs to be placed are on the ground and first floor. Follow the steps below.

1. **Split** the walls on the ground and first floor at the location of the red line in the image.
2. Set all walls to the left of the red lines as **shared** walls. Set the thickness measured from the source drawing and add the “Russian Velvet 1” colour.
3. Set the walls to the right of the red lines as **exterior** walls. Set their thickness measured from the source drawings.
4. Add a “Roof tiles” object on the **ground floor** and **rotate** it so it is parallel to the red line (see image).
5. Set the **height, length and raise from the floor** of the object (see image).
6. Set the “Roof tiles” object to its correct location and align it with the interior side of the wall. See images below for a top and 3d view in Floorplanner.

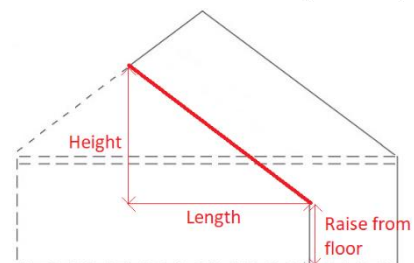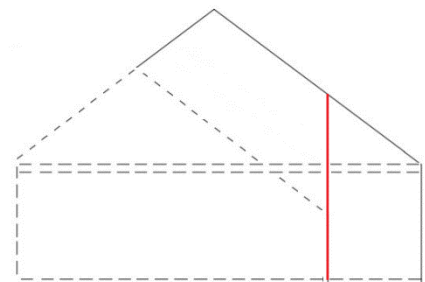

Note that it won't look completely aligned in the Floorplanner 3D view, because the floor thickness is not shown there. Make sure to measure the dimensions for the "Roof tiles" object from the source drawing and not adjust it by how it looks in Floorplanner.

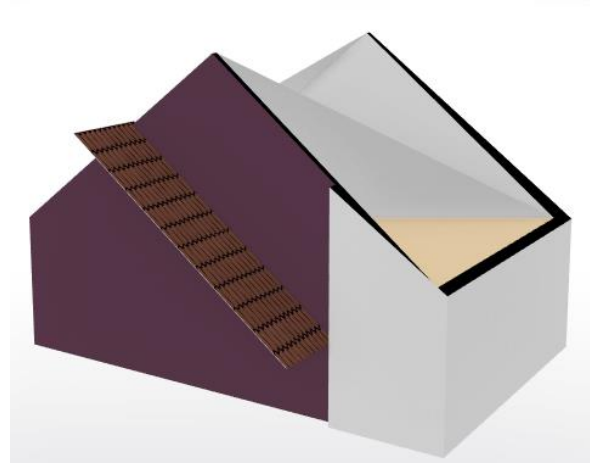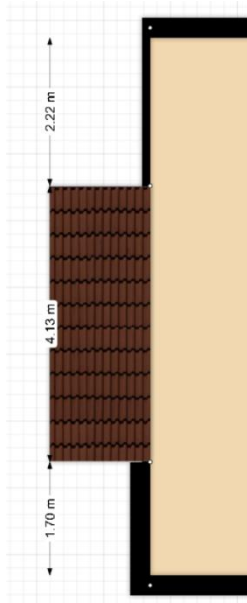


Neighbouring external buildings


In a lot of housing complexes the external buildings like storages also share walls with their neighbouring houses. The image below shows an example of a neighbouring storage that shares a part of the back facade. If the storage wall is the exact same height as the ground floor walls of the house, this part of the wall can be drawn as a shared wall. However, in this case the storage walls are lower than the ground floor walls of the house, so then we need to add one of the "Roof tiles" objects. Follow the steps below.

Storage flat roof

1. **Split** the walls on the ground floor at the red line (see image).
2. Set the thickness of the wall that is shared with the neighbouring storage and add the "Russian Velvet 1" colour.
3. Add a "Roof tiles" object.
4. Set the **raise** from the floor and **width** of the object (see image). Make sure to take the height from top of the floor to top of the roof.
5. **Height** for a flat roof: **1 cm**. Because of the 1cm height this object is still in fact in a slope, but it is very minimal so it can be ignored. Also, rotating it to a correct direction is not necessary.

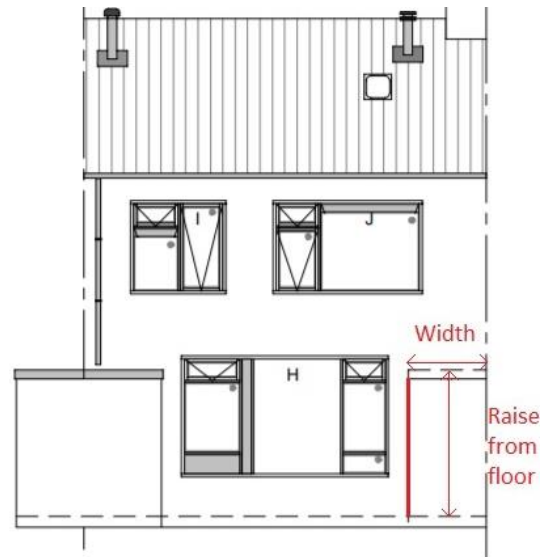


6. **Place** it at the right location and align it with the interior side of the wall. See images for a top and 3d view in Floorplanner.

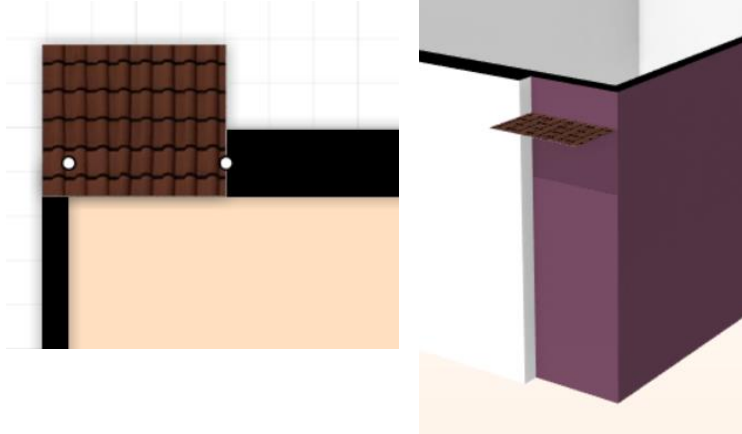


Storage flat roof: higher than the ground floor


1. **Split** the walls on the **ground and first** floor at the red line (see image).
2. Set the thickness of the walls that are shared with the neighbouring storage and add the "Russian Velvet 1" colour.
3. Add a "Roof tiles" object to **the first floor**.

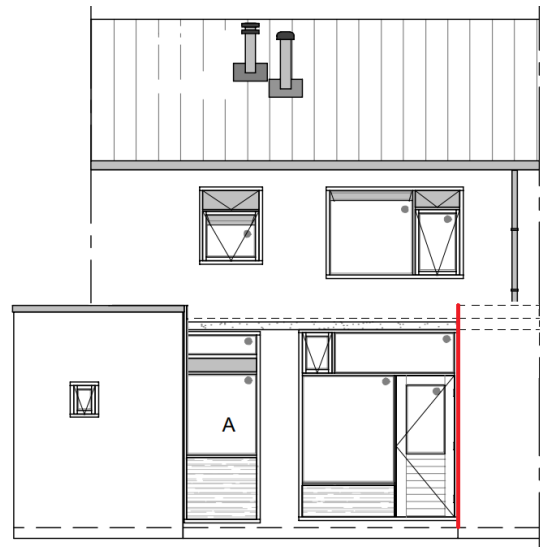

4. Set the **raise** from the floor and **width** of the object (see image). Make sure to take the height from top of the floor slab of the first floor to top of the storage roof.
5. **Height** for a flat roof: **1 cm**. Because of the 1cm height this object is still in fact in a slope, but it is very minimal so it can be ignored. Also, rotating it to a correct direction is not necessary.

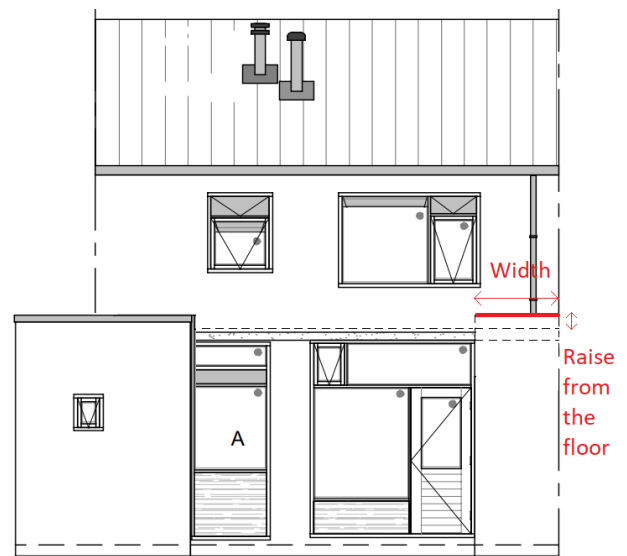


6. **Place** it at the right location and align it with the interior side of the wall. See images for a top and 3d view in Floorplanner.

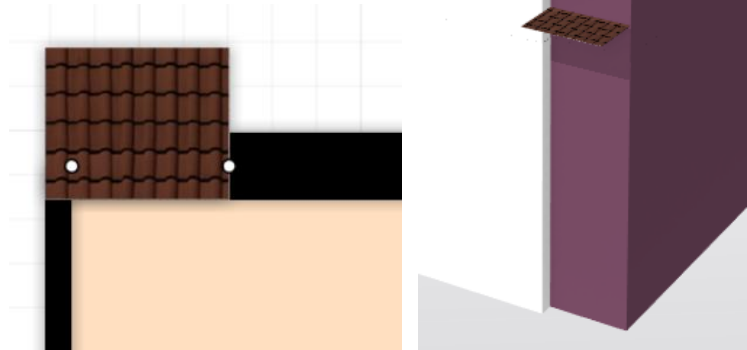


Storage sloped roof


In this example the neighbouring storage has a sloped roof so we also need to add a “Roof tiles” object in order to have the walls generated correctly. Follow the steps below.

1. **Split** the walls on the **ground and first floor** at the red line (see image).
2. Set the thickness of the wall that is shared with the neighbouring storage and add the “Russian Velvet 1” colour.
3. Add a “**Roof tiles**” object to the **first floor** and rotate it so it’s parallel to the roof of the neighbouring storage.
4. Set the **raise** from the floor and **length** of the object (see image).
5. Set the **height** of the object (see image). Note that in this case the height from the floor is a negative value.
6. **Place** it at the right location and align it with the interior side of the wall. See images below for a top and 3d view in Floorplanner.

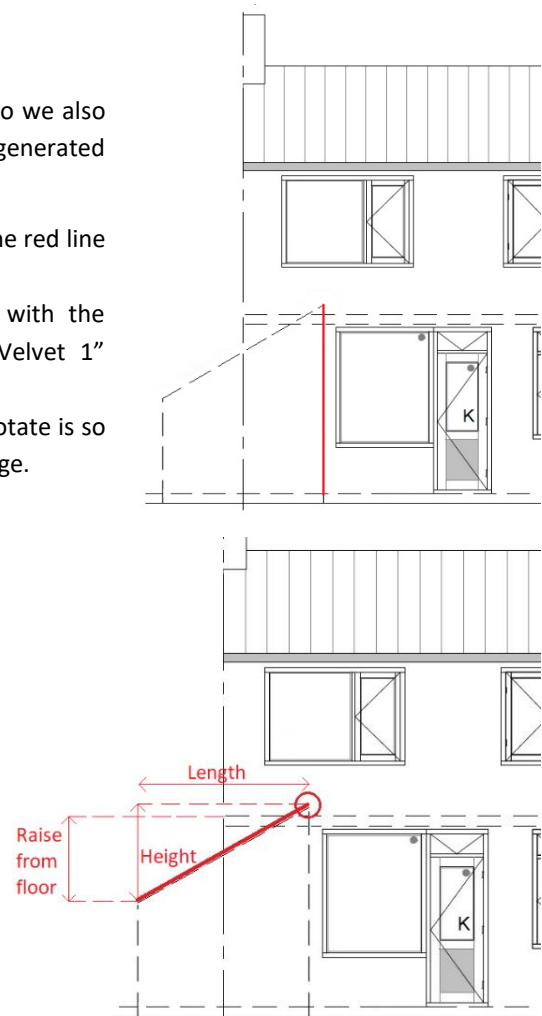

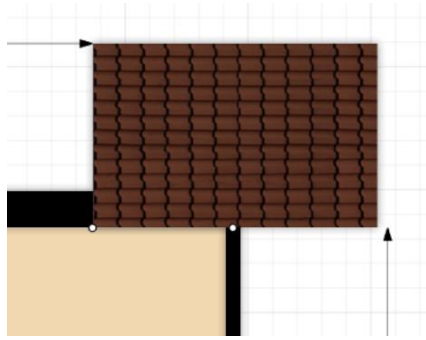

*Location of
a sloped roof*

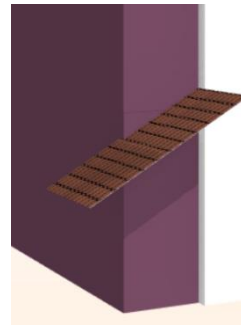


"Roof tiles" object with


The sloped roof of a neighbouring house or storage can intersect the house at different floors and so the location of the "Roof tiles" object changes. We place the "Roof tiles" object at the floor level where the roof and façade of the storage and the façade of the house meet. This point is indicated by the red circle in the discussed examples. The examples are explained below and at what floor the "Roof tiles" object should be placed.

a. "Roof tiles" object at **ground floor** level: red circle is underneath the bottom of the first floor slab.


- The object will be placed at the ground floor level if the whole roof of the neighbouring building only intersects the house at the ground floor walls. This means that the point where the façade and roof meet of this neighbouring house decides at what floor level the "Roof tiles" object should be placed. This point is indicated by the red circle.

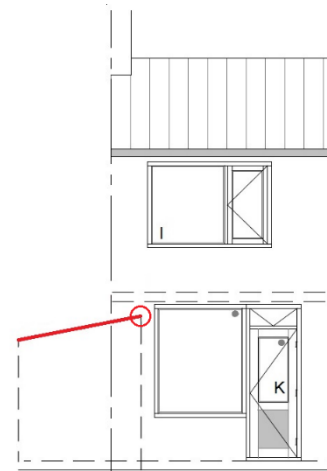

- In this example a part of the storage is at first floor level, but the point where the façade and roof meet of this neighbouring house is at ground floor level. The red circle indicated this point, so we place the "Roof tiles" object at ground floor level and let it extend to the first floor. This also means that both the walls of the ground and first floor should be split and drawn as shared walls with the corresponding thickness and colour.

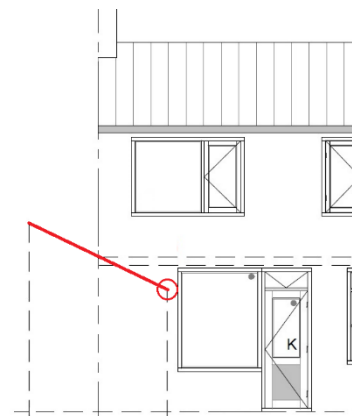


- b. “Roof tiles” object at **upper floor level**: red circle is above the bottom of the first floor slab.
- The object will be placed at the upper floor level if the point where the façade and roof meet of this neighbouring house is above the bottom of the first floor slab. The red circle indicated this point, the “Roof tiles object should be placed on the first floor and be extended to the ground floor. This also means that both the walls of the ground and first floor should be split and drawn as shared walls with the corresponding thickness and colour.

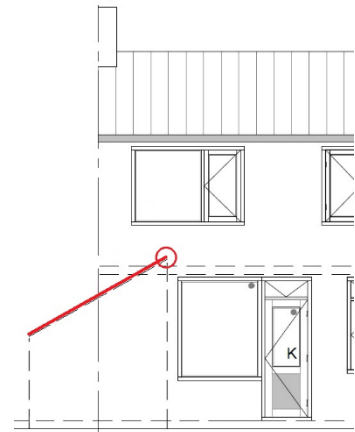


Back façade: storage and a neighbouring storage

In a situation where the back façade of a house is connected to the storage that belongs to the house and the neighbouring storage, we need to use a specific way of drawing the walls of the back façade.


1. Set all walls of the back façade over their axis to 0 or 100%, so the connection dots are on the interior side of the storage that belongs to the house. The back façade will look similar to the image below. In the image below it is clear that the shared wall, where the neighbouring storage is connected, is not in its right position at this point.

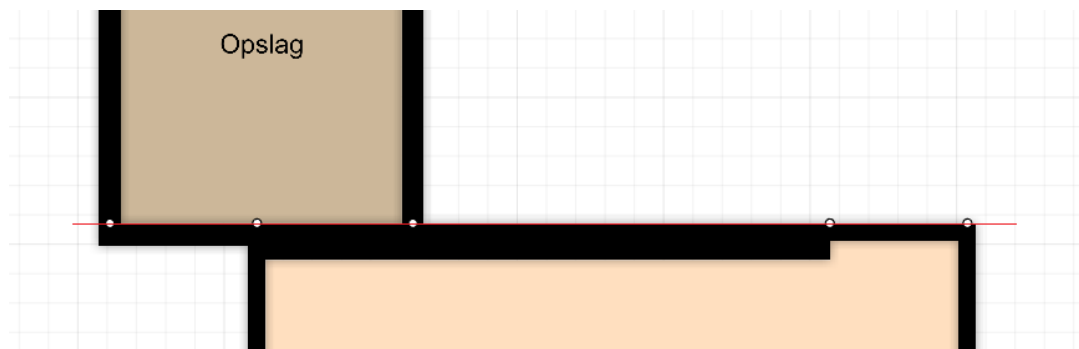

2. Move the shared wall, where the neighboring storage connects, down to its correct location. Set this wall to the 'Russian Velvet 1' color.

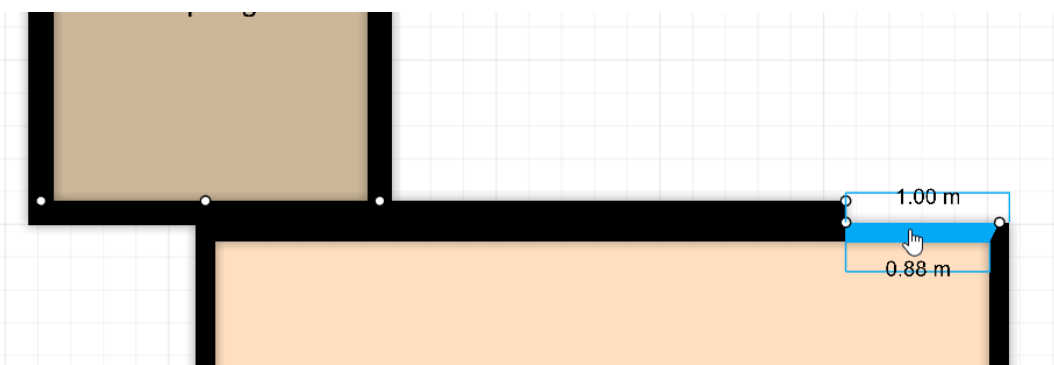


3. A small piece of wall is created to keep the back façade and this shared wall connected. Set this wall to 0 cm thickness.

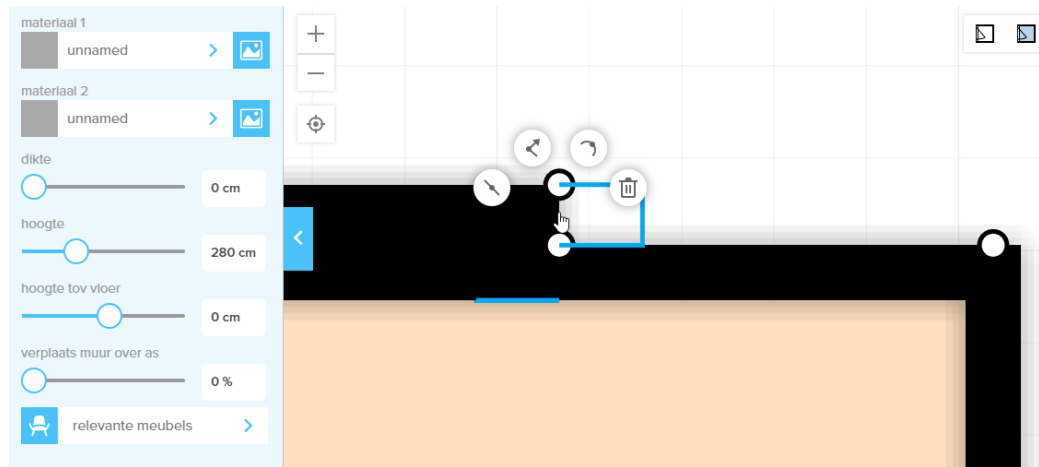

7h: Attic ladder or hatch

Sometimes there is no staircase to the attic. There are usually two situations:

- No entrance:** Nothing has to be done if there is no entrance to the attic level at all.
- Attic Ladder:** A folding stairs is usually shown in source material in one of the following ways:
 - Attic ladder/folding stairs drawn in plan and/or section. The image shows what it looks like in a picture.
 - The word “**vlizotrap**” is mentioned next to a hatch or opening in the floor. This means folding stairs in Dutch.
 1. Add one of the three options that are highlighted in the image.
 2. **Place it at the attic floor** and not the floor below. Set it to the right location.
 3. Set the length and width seen from top view.

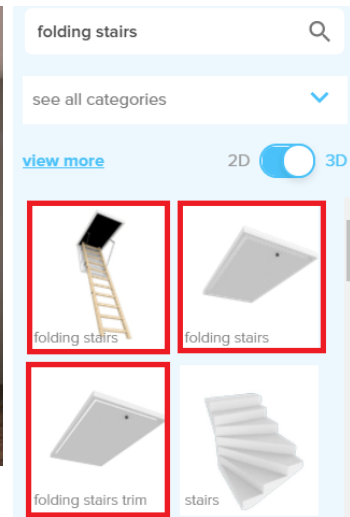

The height and raise from the floor for the folding stairs are not relevant. Drawing a cut out in the floor for this stairs is not needed.

- Hatch:** If there is an opening in the floor or a hatch, but no stairs, we draw a **cut out** in the floor.
 1. Use the option ‘Draw surface’ to draw the hatch on the attic floor. Make sure to set the surface as a cut out.
 2. Set it to the right width and length seen from top view.
 3. Place it to the correct location.
 4. Rename the surface to “Luik” (hatch).

7i: Railing

In some cases there are railings indoor next to floor openings for example staircases or a mezzanine. If they are drawn in the source material, they should be drawn in the model. Follow these steps.

1. Choose a railing object from the Floorplanner library that resembles the source material. You can choose any railing object. Make sure the railing is placed **in the surface** of the floor and not next to it.
2. Rotate it to the right direction.
3. Set the width of the object so it stretches out over the whole width of the area. The maximum width of a railing is 10 m. If the railing is longer than 10 m you can add a second railing object. Adding multiple objects to match the amount of panels in the source drawings is not necessary.
4. Set the height of the railing (important!).

The length option is not relevant, for more information and examples, see next paragraph.

7j: Balcony and roof terrace

The floor slabs of the balconies and roof terraces and the railings will be drawn separately and not by adding a complete balcony object to the model.

Floor slab (Balcony):


1. Draw the outline of the balcony with walls with a thickness of 0cm. the height of the walls must be more than 0cm, but the exact height does not matter.
2. Set the roomtype to 'Balkon' (Balcony).

Floor slab (Roof terrace):


1. Draw the outline of the roof terrace with walls with a thickness of 0cm. the height of the walls must be more than 0cm, but the exact height does not matter.
2. Set the roomtype to 'Balkon' (Balcony) and rename it to 'Dakterras' (Roof terrace).

Railing: We have distinguished three types of balcony or roof terrace rails (see next page). Choose the type that matches the source drawing best. When placing the railing there are two points of attention:

1. The railing must be on the balcony itself

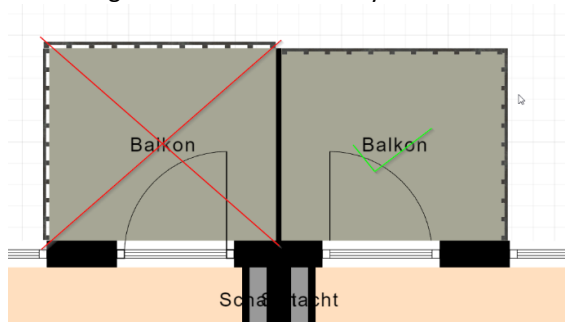


2. Each balcony needs to have its own railing, and cannot share it with another balcony.

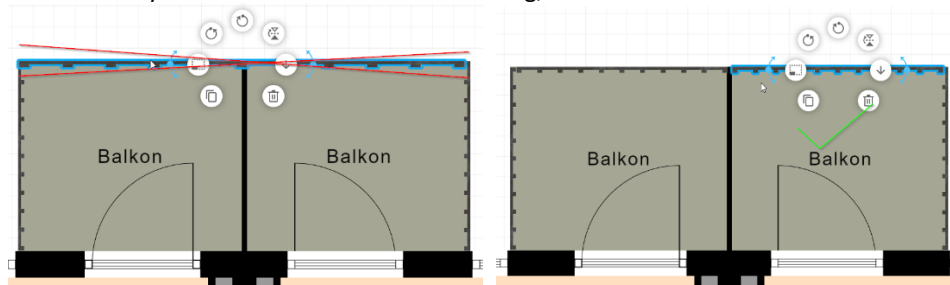


a. Balcony rail with **panels**

Search '**Balcony rail**' in Floorplanner. Add one of the objects shown in the image below for a balcony rail with panels.

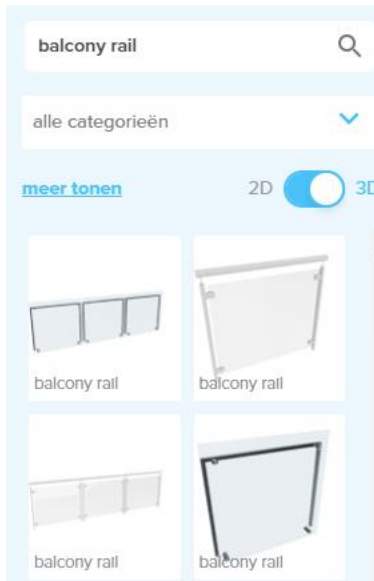

b. Balcony rail with **balusters**

Search '**Fence Steel**' in Floorplanner. You can also find these objects under 'Structures'. Add one of the objects shown in the image below for a balcony rail with balusters.

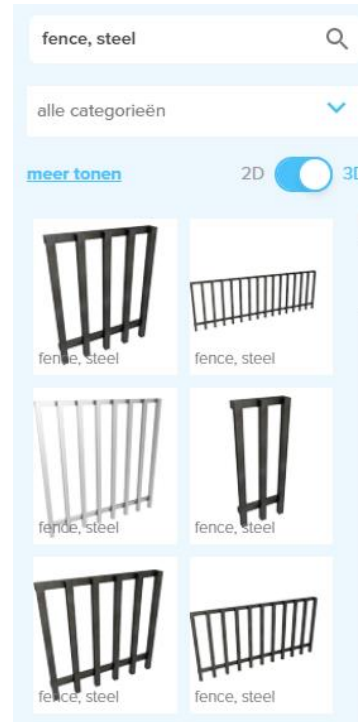

After adding a railing object follow these steps:


1. Place one railing object to every side of the balcony and rotate it to the right direction. Make sure the railing is placed **on top** of the balcony area and not next to it.
2. Set the width of the object so it stretches out over the whole width of the balcony. The maximum width of a railing is 10 m. If the balcony is bigger than 10m you can add a second railing object. Adding multiple objects to match the amount of panels in the source drawings is not necessary.
3. Set the height of the railing (important!).
4. Set the raise from the floor.

The length option for the railing in Floorplanner is not relevant.

- c. The last type of 'Railing' is a **brick wall**. Some houses have a brick wall as a 'railing' for a balcony and for this type we simply use the 'Draw wall' option.
 1. Draw a wall by using the 'Draw wall' option.
 2. Set the height, thickness and raise from the floor as measured from the source drawings.


7k: Horizontal awning

An awning is a small piece of roofing and it could be placed above a front door for example. The images show what it could look like in source drawings.

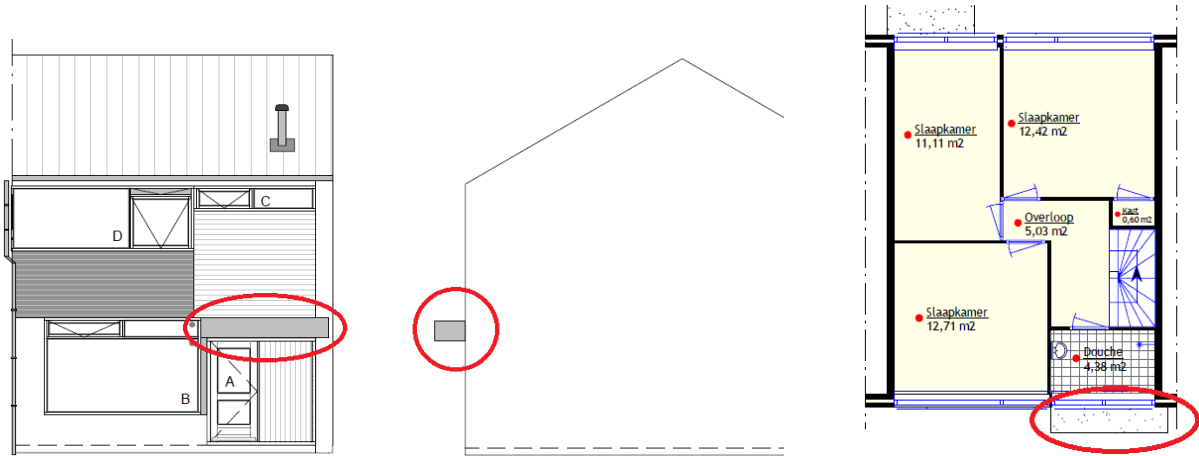


For an awning the highlighted object in the image can be added, **“Hawaii Awning”**.

1. Set the length and width.
2. Use the height option in Floorplanner for the thickness of the awning
3. Set the raise from the floor: this is the distance measured from top of the floor to the bottom edge of the awning.

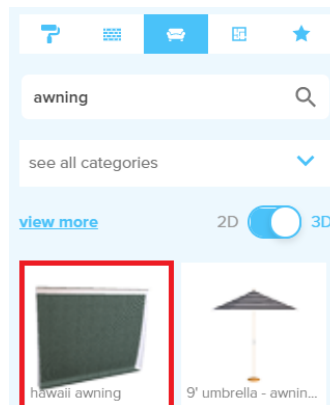

7l: Extension of the roof

Some buildings have an extending roof and for these cases we place a “Roof Part” object in order to generate this extension. There are three rectangular “Roof Part” objects with a slope in one direction and these can be used (see image).

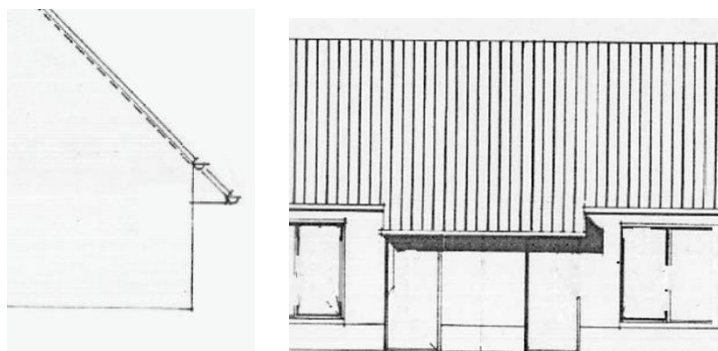


a. Roof extension in side and front view.



b. “Roof Part” objects in Floorplanner library to use for a roof extension.

When placing a “Roof Part” object for a roof extensions, follow these steps:

1. **Split** the walls where the roof extension should go. Do this at the level where also the roof itself will go, so in this example on the **first floor** (see image).
2. Place a “**Roof Part**” object and align it with the interior side of the facade. An object can extend over multiple rooms.
3. **Rotate** it to the right directions, so it corresponds with the slope of the roof.
4. Set the **width and length** of the object seen from top view (see image). When you measure the length of the extension, make sure to add the thickness of the façade for the object in Floorplanner, since we place it to the interior side of the façade.
5. Add a “**Metal beam**” object on the “Roof part” object (see image).
6. Add **column** objects to the **ground floor** if there are any underneath the roof extension. Set the height of the columns.
7. **Upper floor:** make sure to not extend the “Metal beam” object over the whole width of the house, but only place a “Metal beam” where there is no roof extension on the floor below. Otherwise there will be a gutter intersecting the roof.

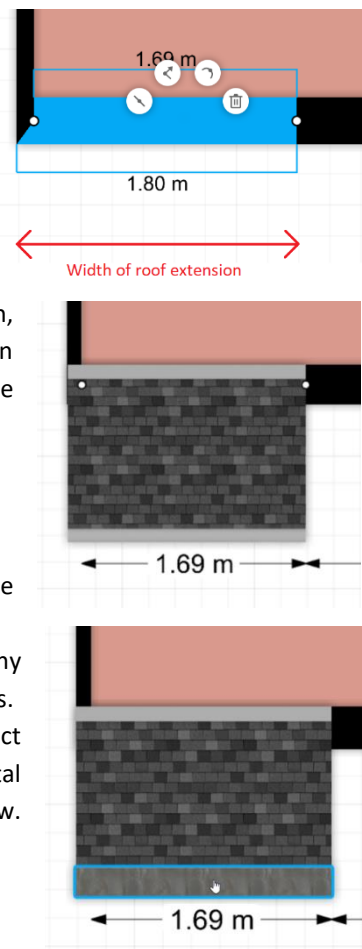


The height and raise from the floor of the “Roof part” objects are not relevant.

7m: Carport

Drawing steps:

1. Draw walls with a thickness of 0cm as the outline of the carport. The height of these walls is important, because the is the height the roof of the carport will be placed at.

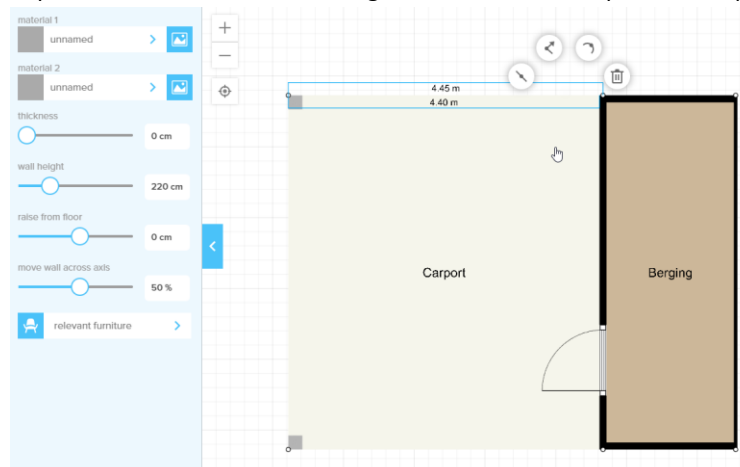


2. Rename the room that is created by the walls, use the room type ‘Parkeren’ (Parking) and rename it to ‘Carport’. ([Room types](#))
3. Place columns if needed ([How to add columns](#))

1. If there are no columns drawn and it is not likely that there are no columns. Ask the solution partner for the location of the columns.
4. Add the roof thickness.
 1. Situation A, the carport is the only building part that has a roof on the floor the carport is placed at. In this case you need to add the roof thickness of the carport to the floor name. ([Floor settings](#))
 2. Situation B, there is already another building part that has a roof on the floor the carport is placed at. In this case you can use the roof thickness of the other building part and not the carport.


7n: Conservatory

Drawing steps:

1. Draw the walls of the Conservatory, give the walls the height displayed in de source drawings.
2. Give the room type room type "Patio" and rename the room to "Serre".

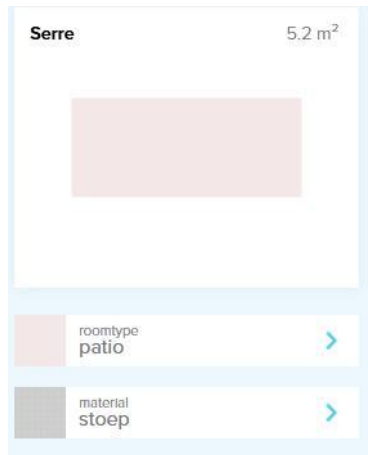



3. The solution partner will indicate whether the conservatory has an open floor or not. If the conservatory has an open floor, you need to give the room the following material "Volcanic Splash 1"

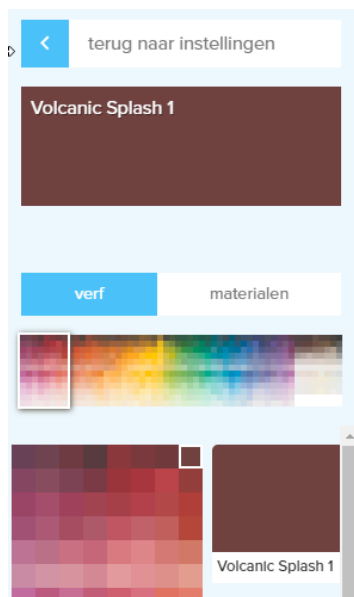

4. If there is no indication of whether the conservatory has an open floor or not, you need to contact the solution partner.


7m: Terrace

If outdoor terraces are shown in the source material they should be drawn. Terraces will often be drawn in projects, such as apartment complexes, as an outdoor space with tiles. The images below show some examples of terraces in source drawings.

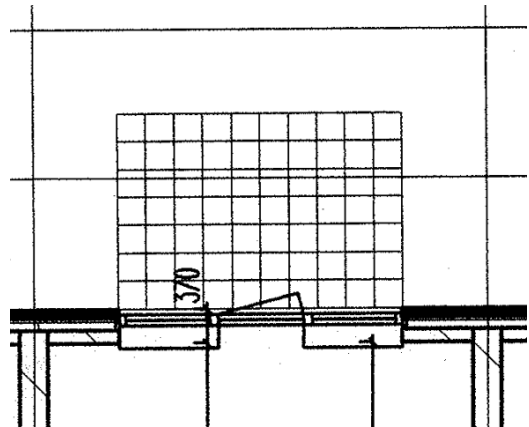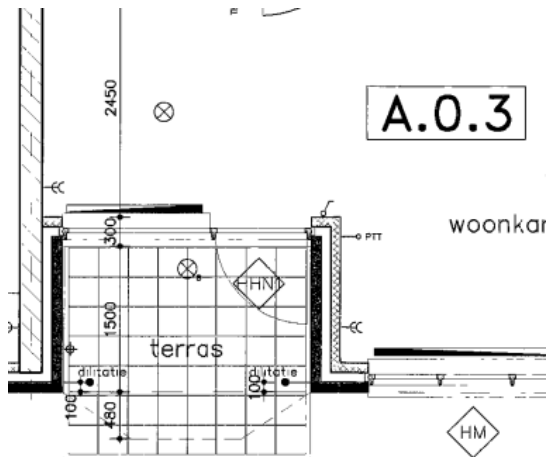


Drawing steps:

1. Draw the terrace surface with 0-walls.
2. Set the space to 'Tuin' (garden) and rename to 'Terras' (Terrace).

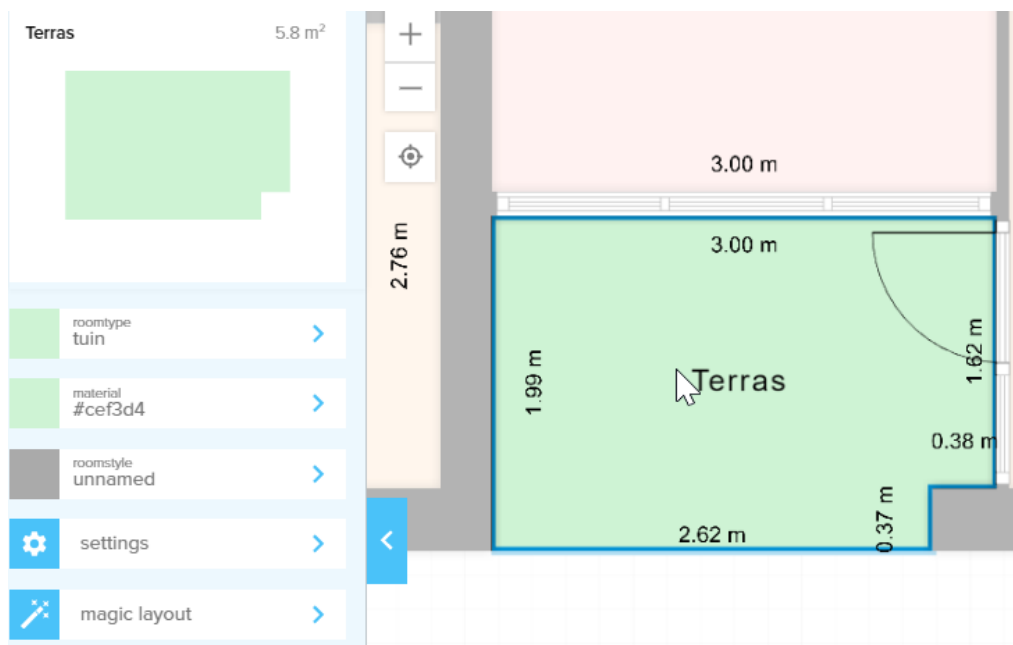


Step 8: Generate FML

Download the fml file so it can be imported into Vabi.

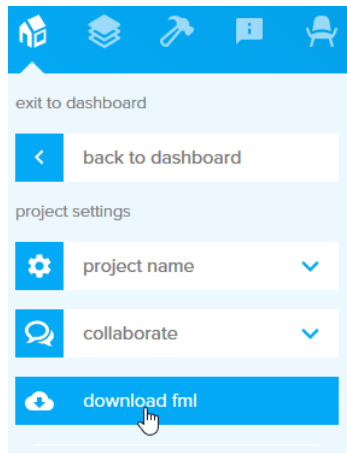

Step 9: Variant types

Especially for single houses it is important to first import the main type, check the model in Vabi and when the model is complete, you should draw the mirrored, end houses and eventually other variants. To start a variant type within Floorplanner, you can use the duplicate project function, or upload the downloaded FML file into a new Floorplanner project.

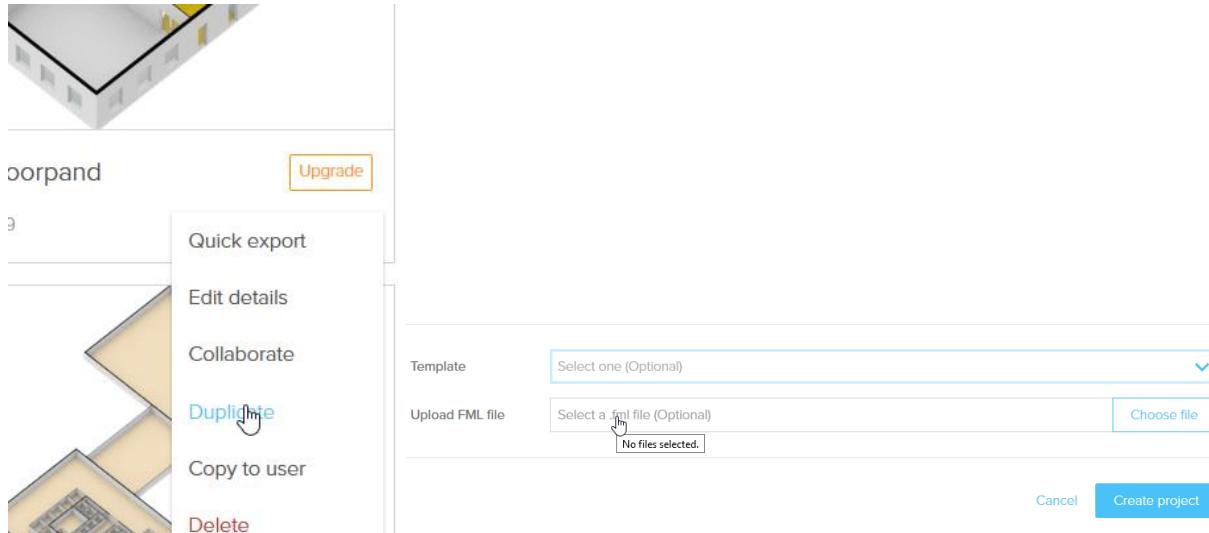

After duplicating the project, set the right project name. [Start new Floorplanner project.](#)

9a: Mirrored house

Now you can, mirror the project. This must be done for every floor separately. See [How to add desings](#) for mirroring a floorplan.


9b: Corner house

When drawing an end house, pay attention to the wall thickness and eventually move the walls to set the right inner measurements. Also, end houses will sometimes have extra windows, so pay attention. [How to draw walls](#), [How to move walls](#) and [How to add doors and windows](#)

How to draw

How to set Floorplanner language

Go to Dashboard --> Personal --> Language to set the language:

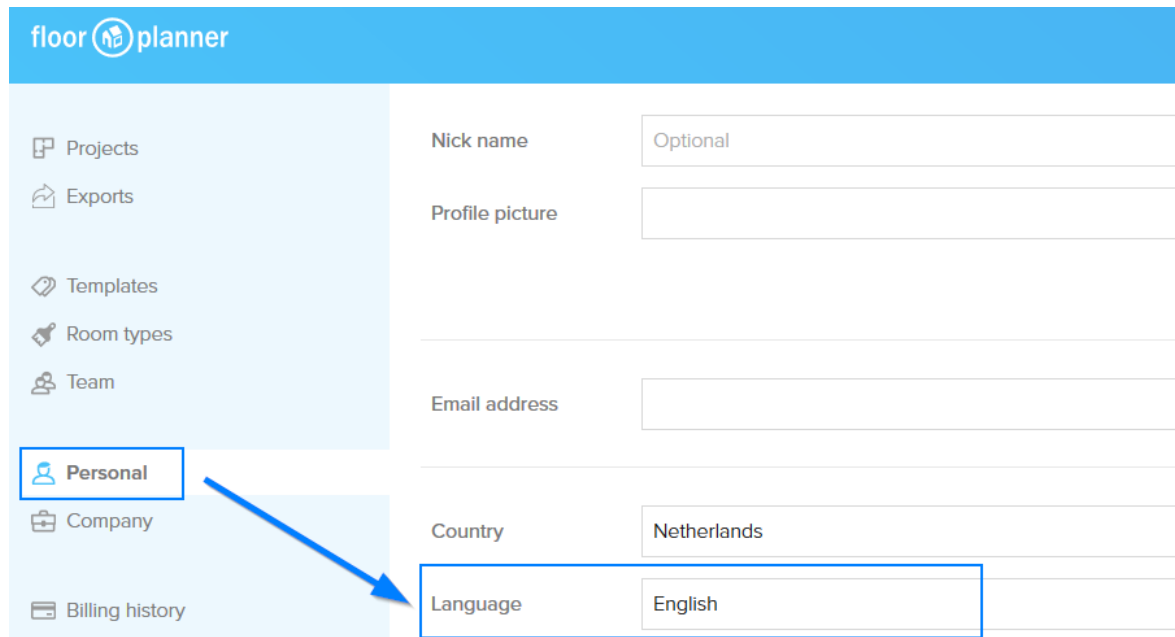

floor planner

Projects

Exports

Templates

Room types

Team

Personal

Company

Billing history

Nick name

Optional

Profile picture

Email address

Country


Netherlands

Language

English

How to create a Floorplanner project

Click on “Create project” or “Project aanmaken” on the start screen (Floorplanner Dashboard).

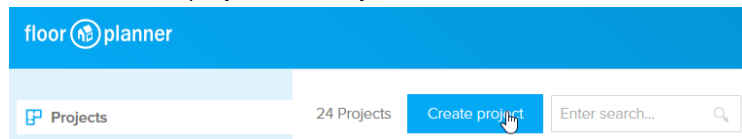

floor planner

Projects


24 Projects

Create project

Enter search...

Enter the project details. Provide a clear “Name” or “Naam” so that the project can be found easily later if necessary. Other information is not necessary. Click on “Create project” or “Project aanmaken” on the bottom of this screen. After this choose “empty plan”.

Edit details

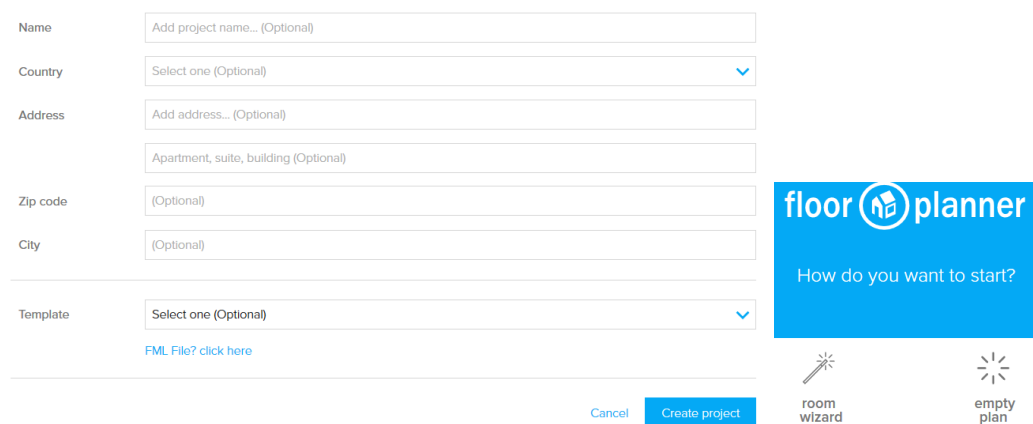

Name

Add project name... (Optional)

Country

Select one (Optional)

Address

Add address... (Optional)

Apartment, suite, building (Optional)

Zip code

(Optional)

City

(Optional)

Template

Select one (Optional)

FML File? [click here](#)

Cancel

Create project

room wizard


empty plan

floor planner

How do you want to start?

How to edit floor settings

Renaming floors can be done as shown below. Also set the floor height as shown below. This can only be in centimeters.

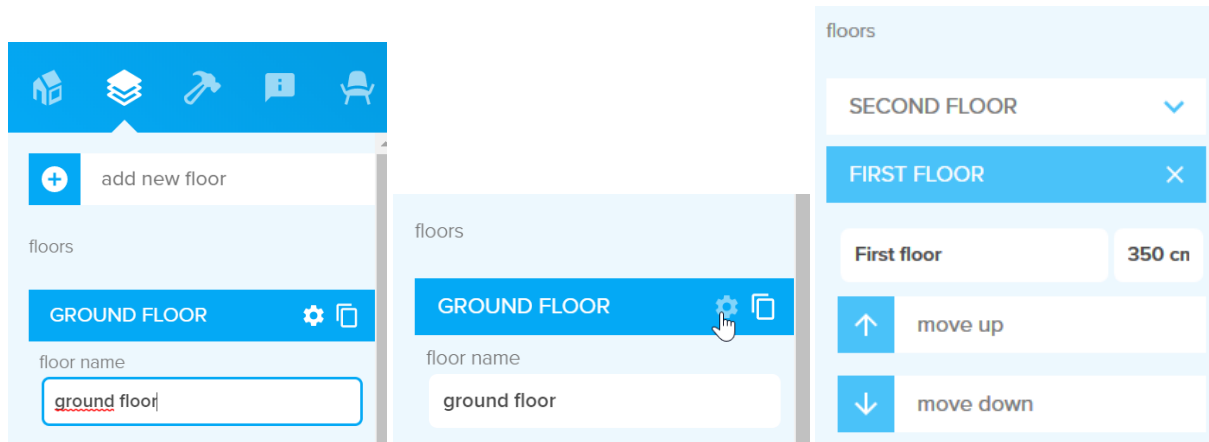

Editing floorname


Go to floorsettings

Set floor height / move floor


If necessary, it is also possible to change the order of the floors. Use the option “move up” or “move down”. So, if you want to draw floors in the wrong order, because that is the fastest way, you can set the order right when you are finished drawing.

How to edit background settings


Choose the option “background settings” or “achtergrond instellingen”. Upload an image (no pdf- or cadfile) with the floor plan corresponding to the name of the floor. The maximum image size is 5 mb.

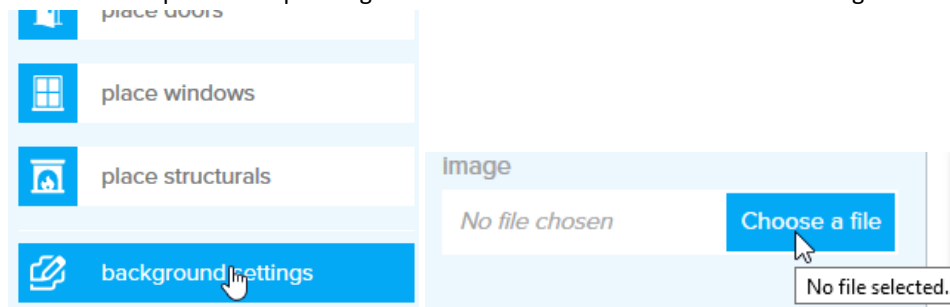

Scale the image to the right size, two points must be marked on the image, after which the actual distance between these two points can be entered manually. This length is in centimeters [cm].

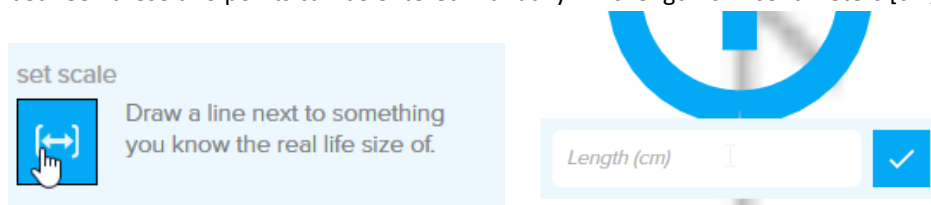


Other settings can be used if the image is not completely straight or the transparency can be changed. These can also be changed later, if necessary.

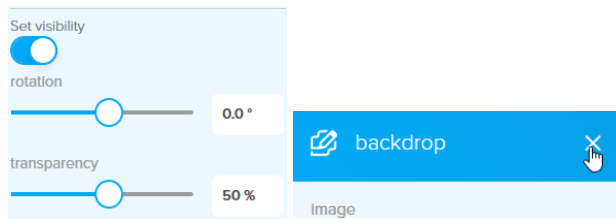

Close the backdrop settings by clicking on the cross and go back to “create spaces” or “maak ruimtes”.

How to measure within Floorplanner

In the bottom left corner of the drawing screen you can select the measure tool. When selecting this option, choose two points and you get the distance between these two points.

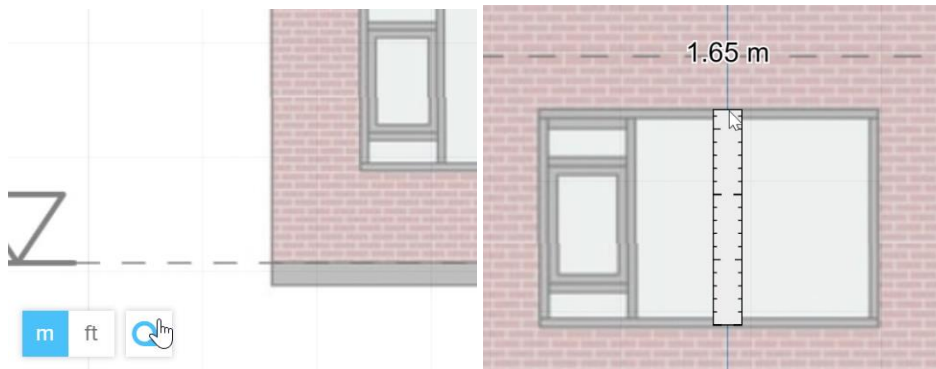

How to draw walls

material 1

unnamed >

material 2

unnamed >

thickness

30 cm

wall height

350 cm

raise from floor

0 cm

move wall across axis

50 %

relevant furniture >

The material options we don't use for import

The thickness of the wall can be pre-set as a standard, but it can also be adjusted by clicking on a wall or while drawing a wall. The thickness can be derived from the background or in this case the thickness is stated directly in the source drawings.

The wall height corresponds with the net height of the floor.

With the "raise from floor" option we can start the bottom of the wall at another position.

The "move wall across axis" option we can move the wall. This option is use when a wall has another thickness in the same wall.

Choose the first two points of the background that represent a wall.



For sloped roofs it is necessary to edit the height of connecting points. By selecting a point, the height of this point can be edited. When editing this point, both endpoints of attached walls will change.

height of all walls

20 cm

height wall 1


20 cm

height wall 2

20 cm


2

If you want to split a wall you can use this option. The split point can be moved over the wall by dragging the blue dot.

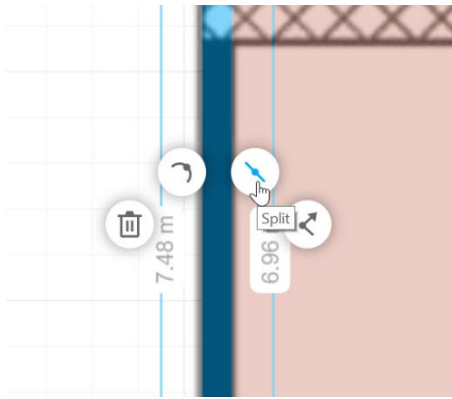

How to move walls


The length of the walls can be adjusted by dragging the wall perpendicular to it, the length can then be entered manually.

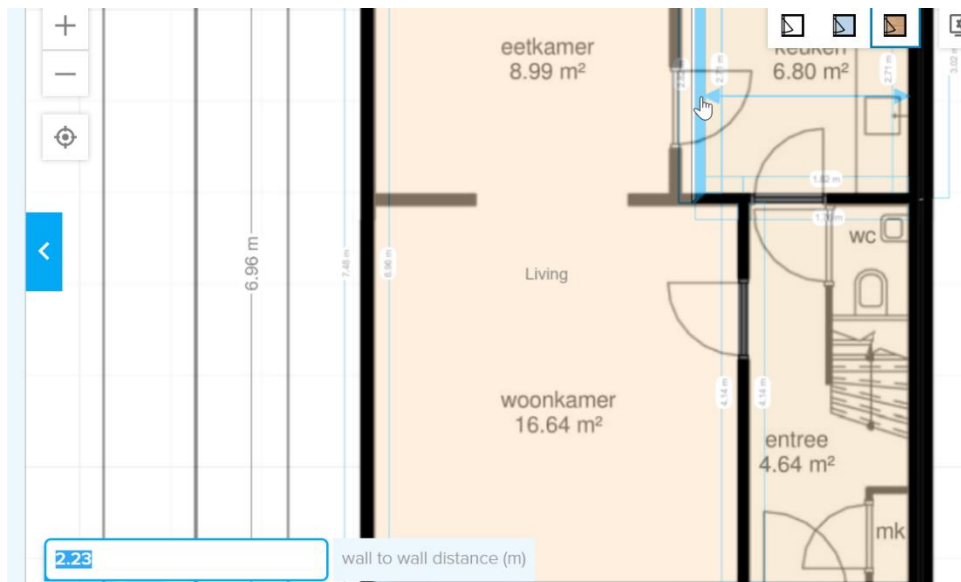

How to copy walls

For apartment buildings it costs a lot of time to draw all the units, therefore use the copy function to copy all the walls of an apartment. This has to be done in two base steps, because it is not possible to copy walls and furniture at once. Use the visibility options in the right upper corner to turn off Furniture and Fixtures.

Now it is possible to select all the walls of one apartment. Use the shift button in combination with making a box with the selection function. After this selection it is possible to copy, mirror and move the selection. Now you can turn on furniture and fixtures and copy it in the same way. It is also possible to copy walls to another project.

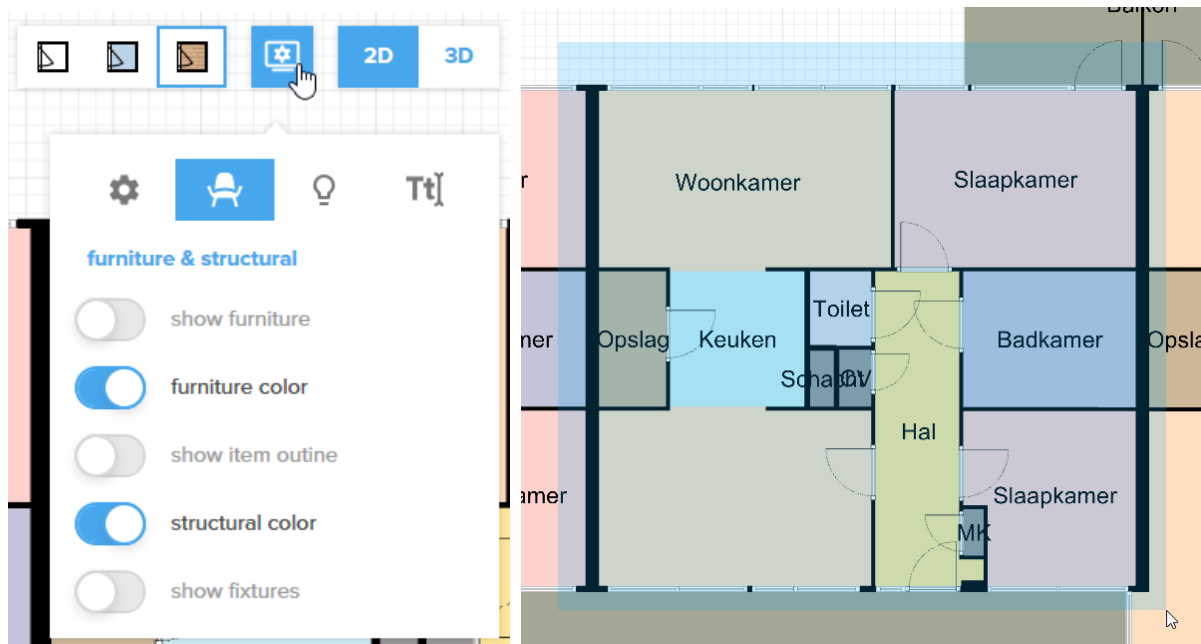


How to draw difficult roofs

The basic steps to draw sloped roofs are described here: [How to draw sloped roofs](#). There are some situations that are more difficult to draw, they will be explained here.


Sloped roof that partially continues

For situations where the roof partially continues onto the floor beneath it, we use a combination of methods that are explained here: [How to draw sloped roofs](#). In the example that we use to explain this, the roof continues from the first floor onto the storage on the ground floor.

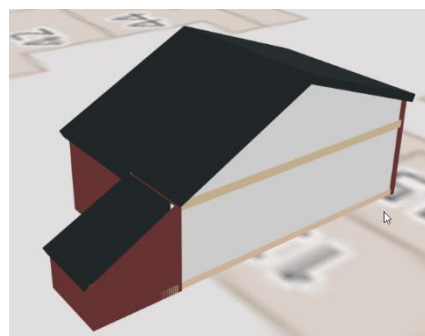


Ground floor:


1. Move the exterior wall, that is shared with the storage, to 0 or 100%. This differs per wall, but the connection dots should be on the **exterior side** of the wall.

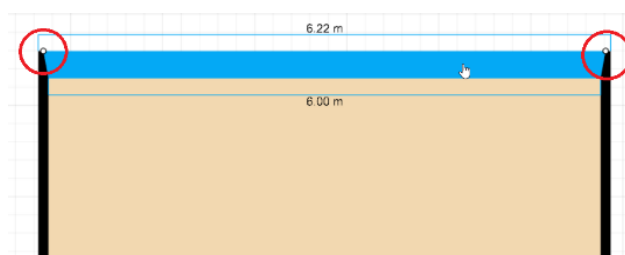

2. Draw the walls of the storage and move the wall where the sloped roof ends to 0 or 100 %. The connections dots should be on the **interior side**.

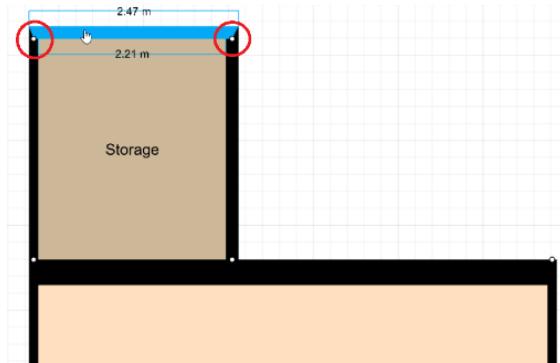


3. Set the height of the storage walls measured from the source drawings. In this case the top of the storage walls are 260 cm, which is 10cm higher than the ground floor walls of the house. Still, the ceiling height of the ground floor should be set to 250 cm. [How to edit floor settings.](#)

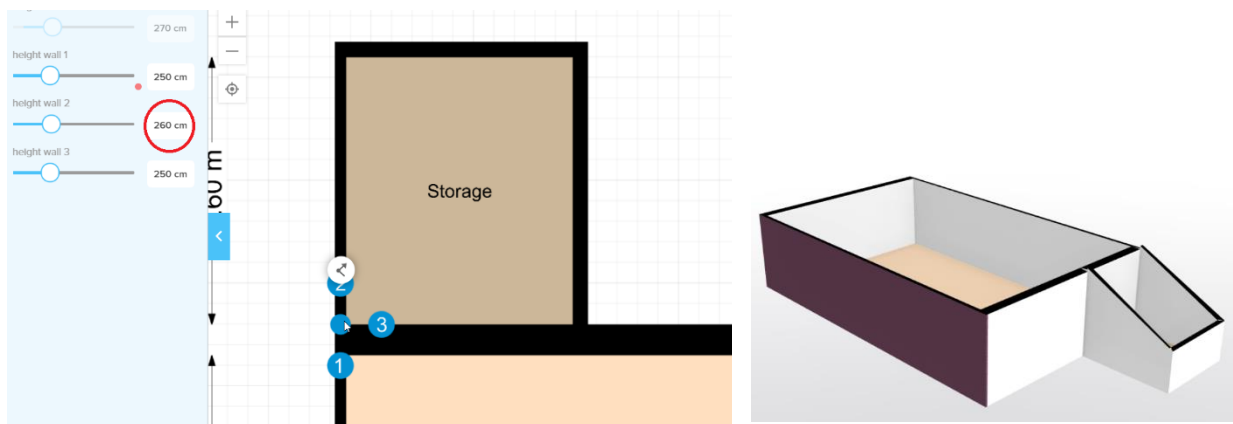


First floor

4. Move the whole wall where the roof continues to the ground floor to 0 or 100%, the connection dots should be on the **interior side**.


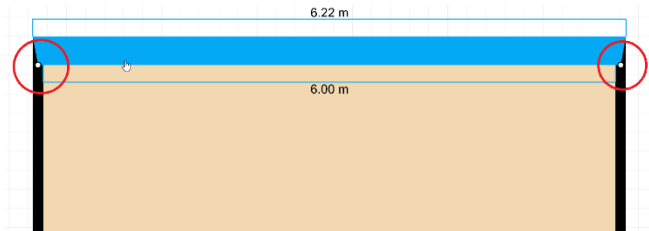


5. Split the wall and set the joint to the width of the storage .
6. The wall on the left is where the roof will continue onto the roof of the storage. Set this wall to:
 - Height: 0 cm
 - Width: 0 cm

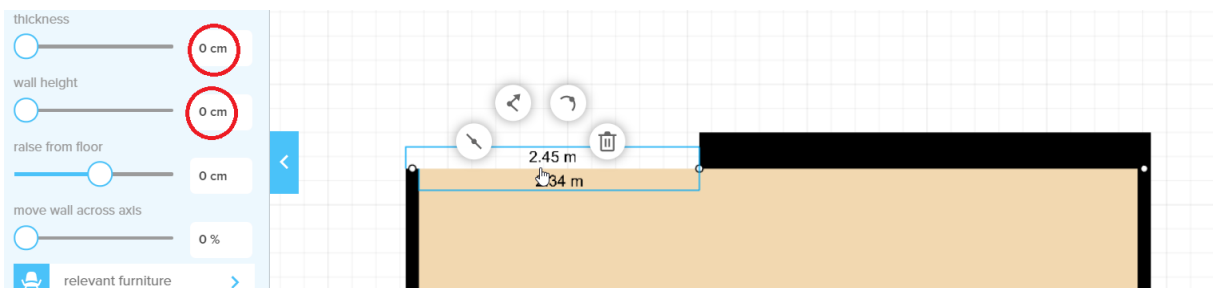

7. Set all other walls using the methods explained here: [How to draw sloped roofs.](#)

These pictures below show what it looks like in Floorplanner and Vastgoeddata. In vastgoeddata the roof is not generated correctly yet, but it is drawn correctly.

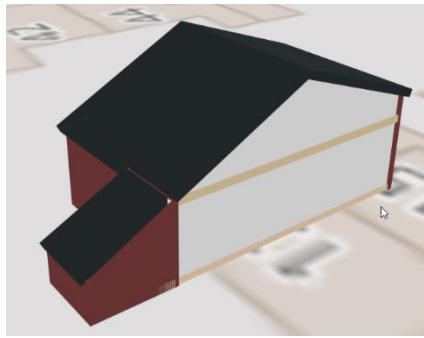
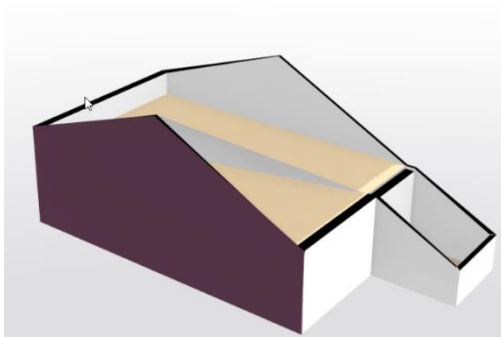


Cross gable roof

A cross gable roof has two sloped roof shapes in different directions. How to draw the walls of the top floor to generate a cross gable roof like this, is explained below.


1. Move all walls on the top floor that are parallel to the roof ridges over their axis to 0 or 100%. The connection points should be on the **interior side** of the walls. In this case all walls of the top floor should be set to 0 or 100%, because there are roof ridges in both directions.
2. Split walls at the locations where the ridges of the roof are and set the height of the walls.

The images below show what the models will look like in Floorplanner and Vastgoeddata. After setting the exterior walls follow the drawing instruction for the interior walls if there are any. [How to draw sloped roofs.](#)

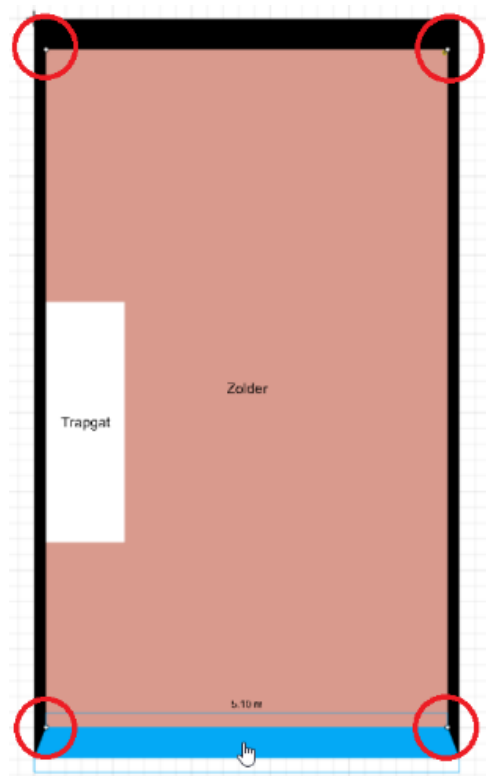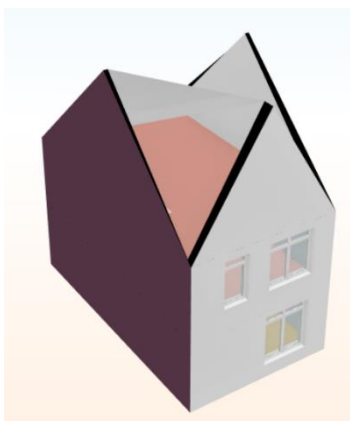


How to set rooms

Different room types can be placed by the option “set room type” or “stel kamertype in” under de cloud with the “i”. In this case the category is “house” or “woning”. Only choose from the basic room types in this category that are available in Floorplanner. By dragging the space types into the spaces, they can be assigned quickly.

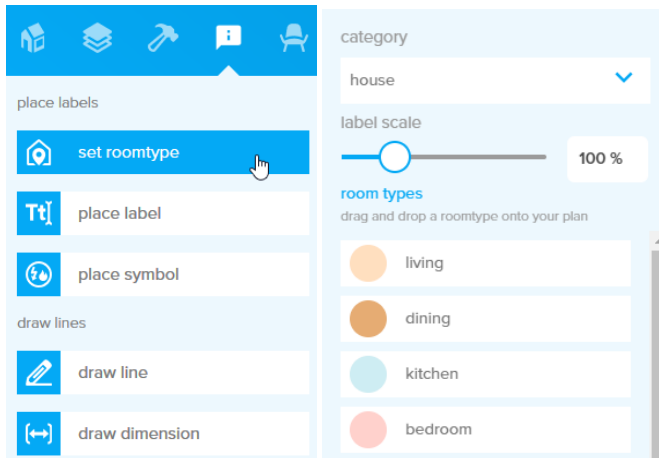

There are a few points of attention when drawing a room within a room. The example below shows that it can be drawn. The designation of the room will look strange but is not relevant for the conversion to the 3D model. The automatic surface of the surrounding space within Floorplanner will also be incorrect. When imported into Vabi, interior spaces will be subtracted from the enclosing space, so that floors, walls and surfaces become correct.

Within Floorplanner, as soon as the rooms are created, it is important to immediately set the room types of the surrounding room and of the central room. If this does not happen, it may not be possible to adjust it properly later and the internal spaces will have to be redrawn.

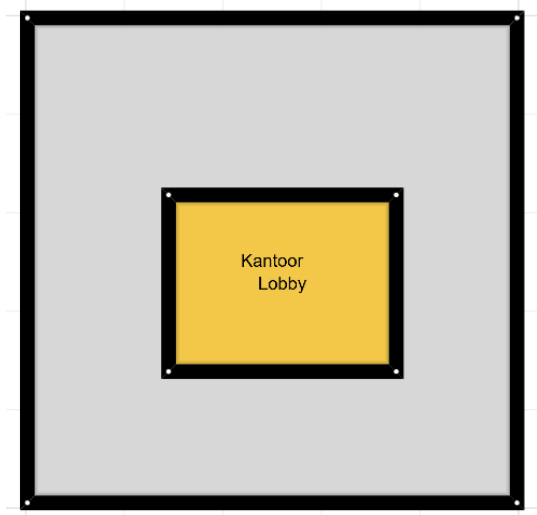


How to add a cutout

Currently there are three situations where it is necessary to create a cutout.

Name	Cutout, yes/no	Room type	Rename to
Trapgat (Stairwell)	Yes	n/a*	Trapgat
Luik (Hatch)	Yes	n/a*	Luik
Vide (Void)	Yes	n/a*	Vide

You can create a cutout by following the steps below:


1. Draw a surface using the 'Draw surface'/'Teken oppervlakte' function. Do this by following the outline of the cutout on the source drawings.
2. The cutout doesn't need a room type, so you can keep that blank.
3. The last step is checking the cutout box in the surface settings.

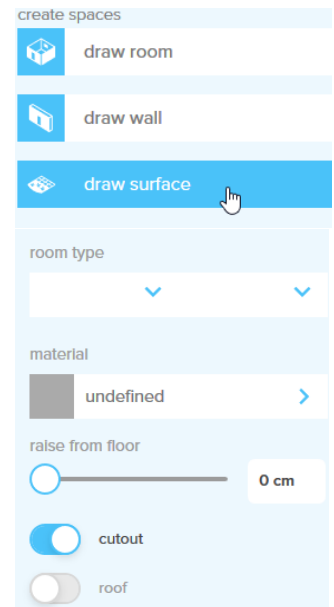

How to add a not enclosed room


It could be possible that the kitchen has no enclosing walls, but forms one room together with the living room. The kitchen must then be drawn as a separate "room".

You can do this by using walls with a thickness of 0cm, by drawing walls around the kitchen and setting the thickness of the walls to 0cm you create new room without visible walls.

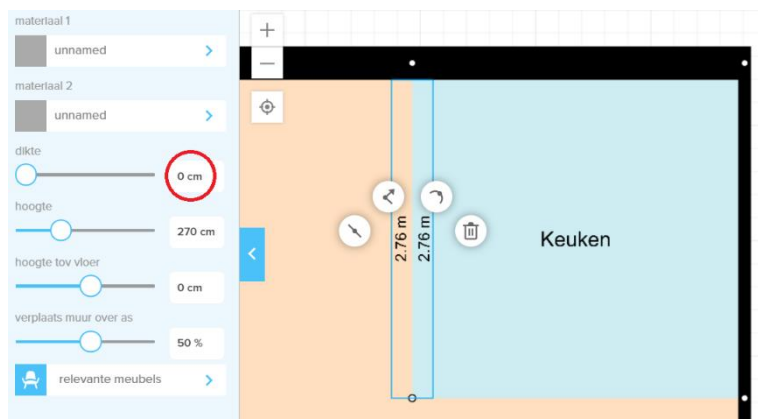

How to add doors and windows


Placing doors or windows can be done by using the options “place doors” or “place windows”, in Dutch “plaats deuren” and “plaats ramen”. The doors and windows can be dragged from the list into the floor plan.

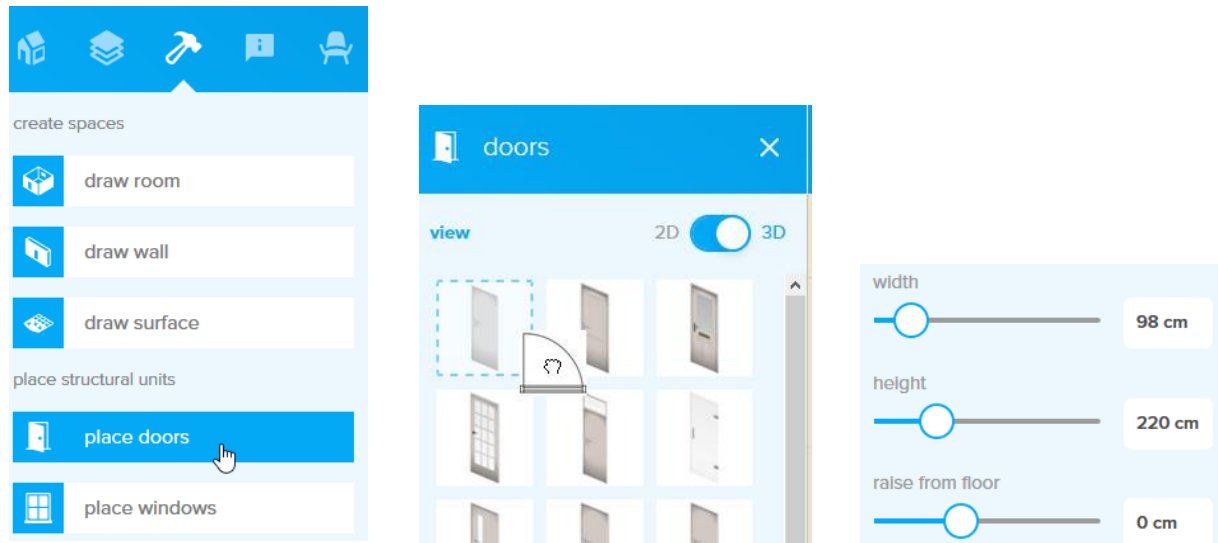

Adjusting the dimensions of a door or window can be done by clicking on it. By clicking on a door or window, the direction of rotation can be adjusted or the side on which a door or window turns. A window or door can therefore be removed or copied. This copy function can be used once a door or window has been given the correct dimensions, copying it to places wherever the same occurs.

Window above door

In some situations a small window is located above a door, add a **separate door** and a **separate window**.

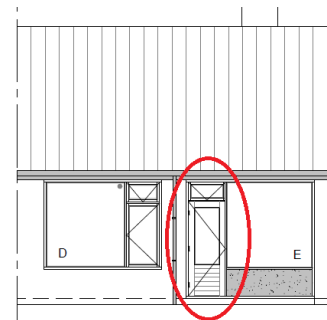

How to add windows over multiple floors


In some situations the window frames will continue over multiple floors, for example in curtain walls. There are two ways to draw the window frames. Choose the method that matches the sources drawings. In the used example method 1 matches the locations of the frames best.

Lower floor

1. Add the window frame and set the length.
2. Height of the window frame: measure from the top of the lower floor slab to the top of the upper floor slab.
3. Raise from the floor: 0cm.


Upper floor

4. Add the window frame and set the length.
5. Height: measure from the top of the floor slab to the top of the frame.
6. Raise from the floor: 0cm.

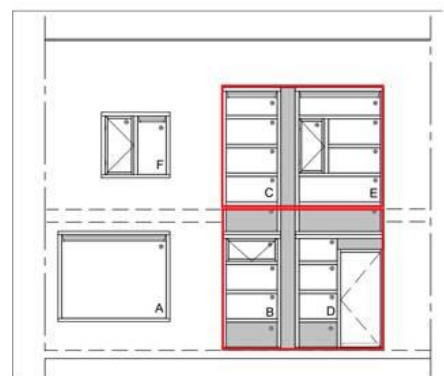

How to add panels

A panel is shown in plans and elevations as a closed surface in a frame. The images below show how you can recognize a panel in drawings.

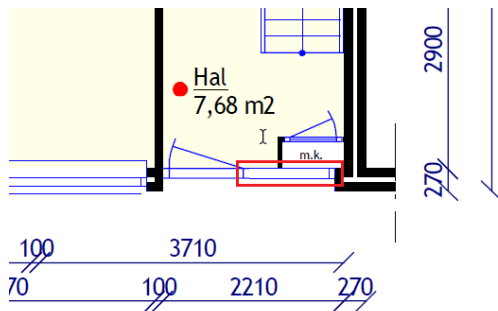

a. Panel in plan.



b. Panel in elevation.

Panels should be drawn like windows, so by adding a window object from the Floorplanner library to the plan.



1. Set the width, height and raise from the floor
2. If the panel is part of a **combination** of windows, this how to draw the situation:

Place separate window objects for panels and windows. In this example we place one separate window object for all three panels and place one separate window object for all three windows above. In total there are two window objects.



How to add a protruding window frame

A protruding window frame is sticking out of the façade in photos and drawings, but in the model a regular window object should be placed. In the software there is no distinction needed between a regular window frame and a protruding window frame. The photo and drawings below show an example of a protruding window frame. The Floorplanner plan on the next page shows that a regular window frame is placed in this situation.

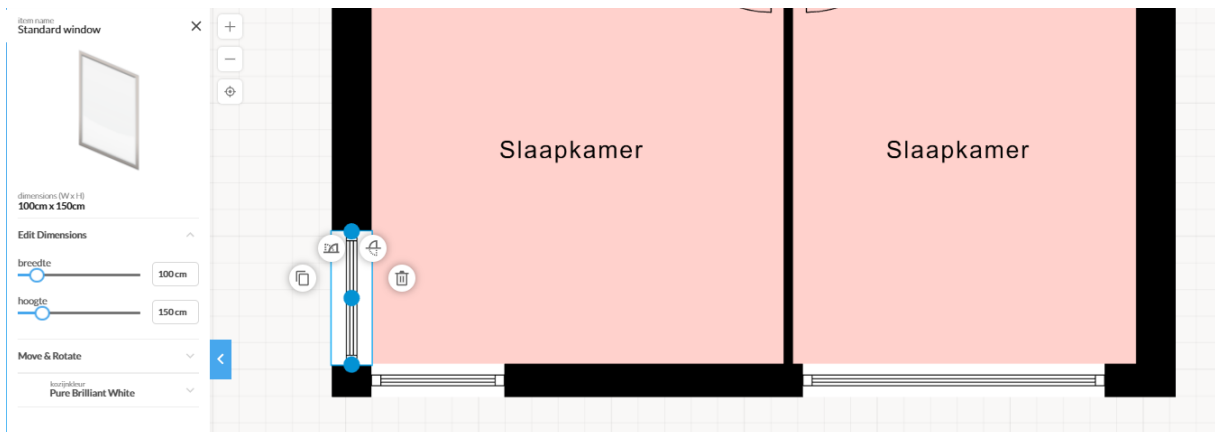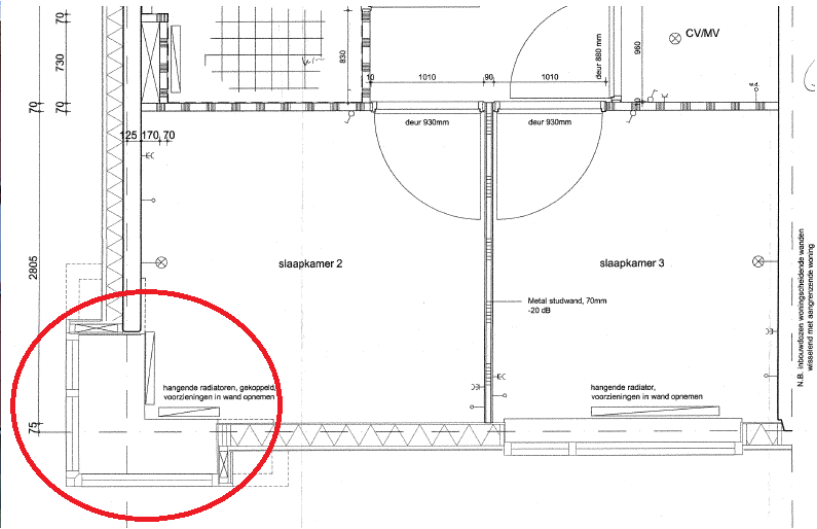


a. Floorplanner model of a dwelling with a protruding window frame.

How to make a hole in walls or façade

There are three situations in which holes are necessary in the walls of façade. You can make these hole by using the following elements, some of the elements have an arc shape and some are rectangular. You can find the elements under the doors section in Floorplanner.


Name	Shape
Entryway	Rectangular
Archway	Arc
Entryway Clone	Rectangular
Archway White	Rectangular
Archway White x	Rectangular

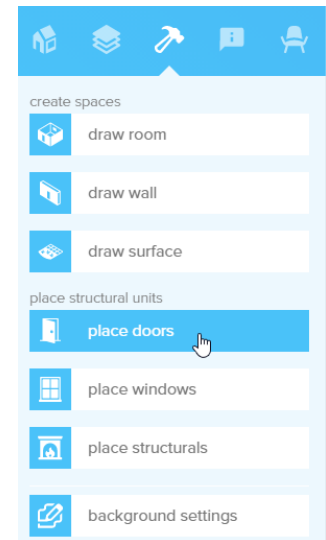


a. Menu in Floorplanner

Situation 1

When there is a loggia (an indoor balcony) you need to make a hole in the façade adjacent to the loggia. Like this:

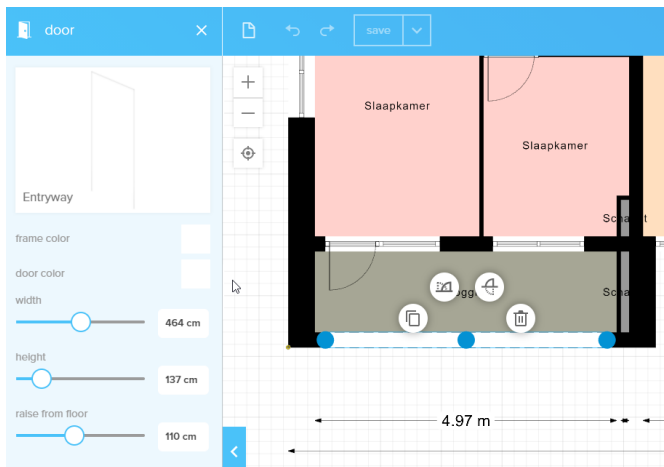


b. Loggia, Floorplanner

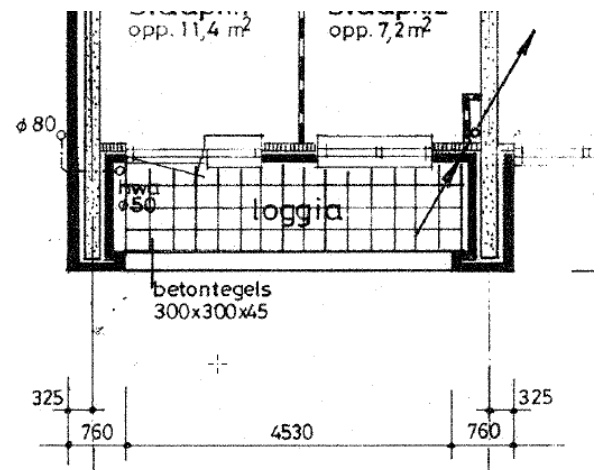

c. Loggia, Source drawing

Situation 2

Within a home there are mainly two situations in which there is a hole in a wall. The first one is between two rooms, like this:

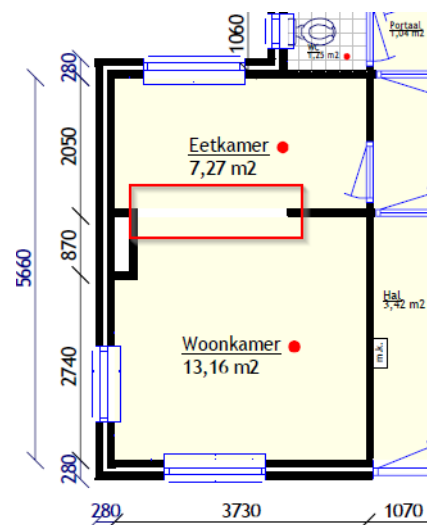

d. Passage between rooms

The second one is on the attic, when there is a wall with a doorway without a door. If it is not clear whether the hole has an arc or rectangular shape, you can assume it has a rectangular shape.

Situation 3


The third situation is a gateway under the building, or an opening in the facade at the entrance (See image). In these cases it is clear what shape the opening has, based on that you can choose which element to use.



e. Opening at entrance

How to add basic furniture


Placing furniture can be done by dragging the furniture you want into the floorplan. There is a large amount of options for furniture that can be found with the “furniture” option. There is a search button which can be used, or a category can be selected for narrowing down the possibilities.

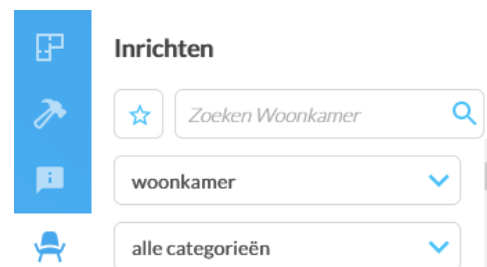

How to add stairs

Stairs can be added by the option “place structurals” (see image). Follow the steps:

1. Choose a stairs object that resembles the stairs in the source material. Drag the stairs object to the floorplan.
1. **Point of attention**
If a stair continuous over multiple floor you have to divide the stairs into separate elements per floor.
2. Add the right measurements, by clicking on the placed stair. The height is measured from top of the floor slab to the top of the floor slab of the level above.

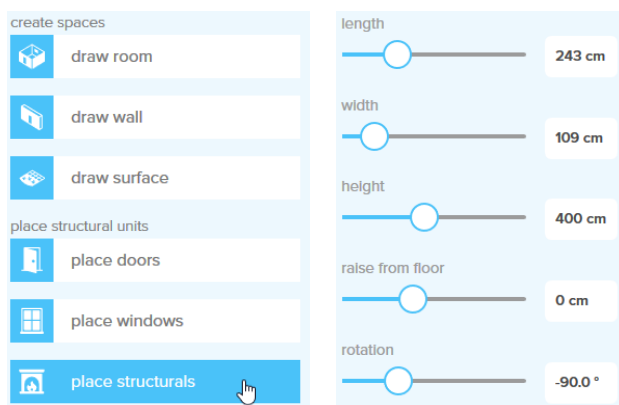

3. Upper level: draw a staircase opening in the floor above of where you placed the stairs. Use the ‘Draw surface’ option, check the ‘cutout’ box and rename the surface to ‘Trapgat’ (see images below). [How to add a cutout](#)




How to draw a space underneath stairs

There are different ways the spaces underneath stairs are drawn. Sometimes there is a closet underneath the stairs and sometimes the space is not usable. A few example will be discussed and how to model them. [How to add a not enclosed room.](#)


1. A Closet underneath stairs

In the source drawings shown below there is a wall drawn and the space underneath the stairs is called 'Kelderkast' (closet).


1. Draw the wall next to the stairs
2. Draw a not enclosed room. Make sure to draw the closet space underneath the whole surface of the stairs. Set the room to the room type 'Kast' (closet). See the second image below.
3. Place the stairs object and set to right dimensions

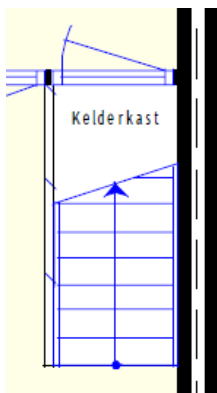

a. Source plan.

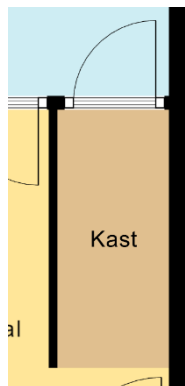

c. Closet surface

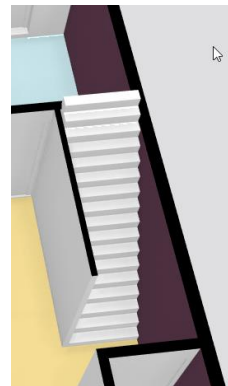


b. 3d view in Floorplanner


B Unknown space underneath stairs

This example is similar to the first one, but now there is no function given to the space underneath the stairs (see image below for source plan). In those cases this space should be modelled as a separate space.


1. Draw the wall next to the stairs.
2. Draw a not enclosed room. Make sure to draw the room underneath the whole surface of the stairs. Set the space to room type 'Other' and rename to 'Overig'. See the image below.
3. Place a stairs object and set it to the right dimensions. See the image below for the model in 3D view in Floorplanner.

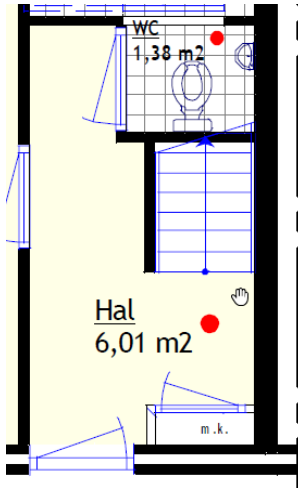

a. Source plan.

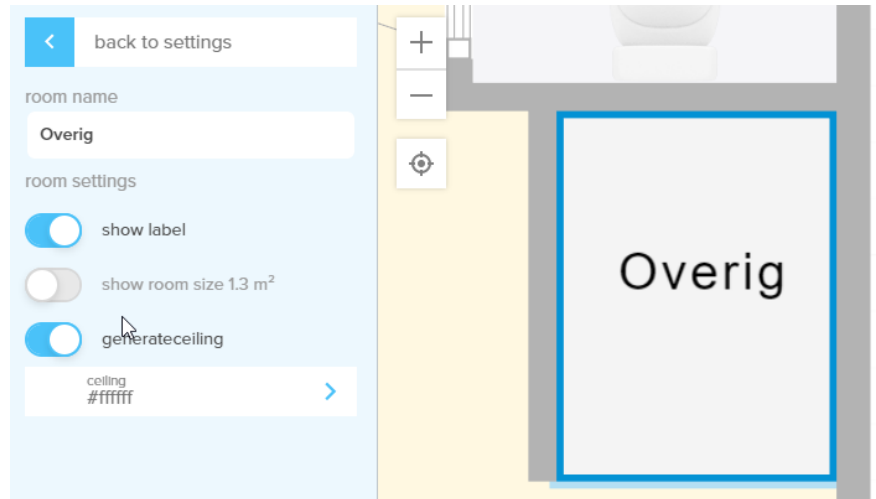

b. 'Overig' surface

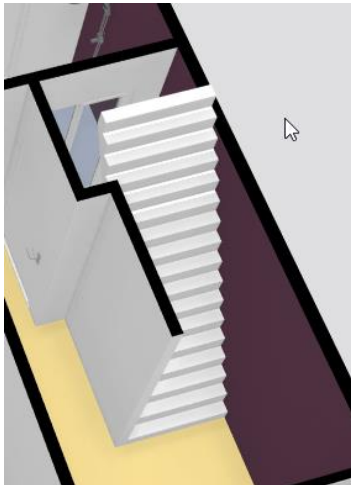


c. 3D view in Floorplanner.


2. No walls or space drawn underneath the stairs

Some plans of the source material do not address the space and walls underneath the stairs. In those cases we only draw the stairs.

1. Place the stairs object and set to right dimensions

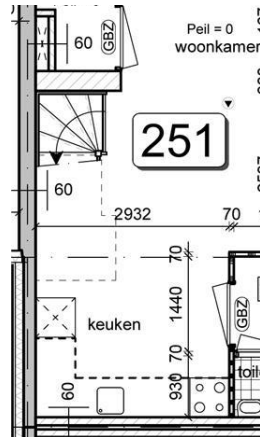

a. Source plan

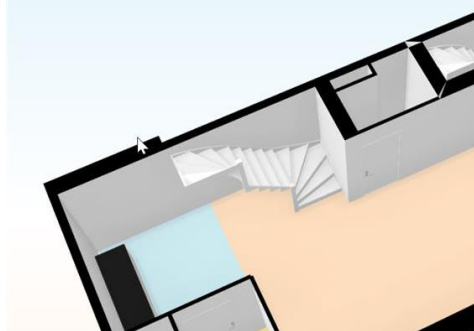


b. 3D view in Floorplanner.


3. Raised floor in front of the stairs

In some cases the floor in front of the stairs is raised. You can draw this by using a stair element with only one step.


1. Place the stair element and set the right dimensions.
2. Make sure the surface under stairs isn't drawn under the raised floor, instead the hall must continue under the raised floor.

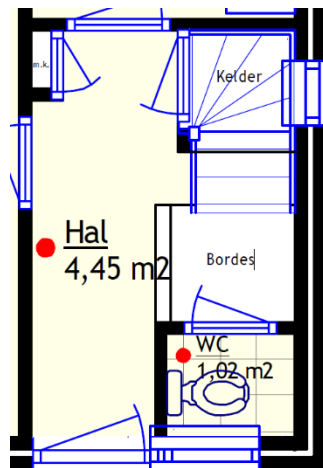


a. Source plan

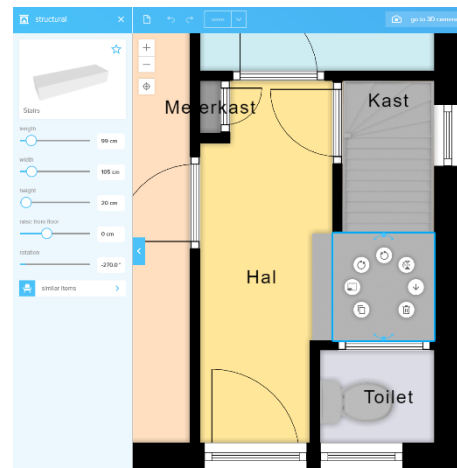

b. Floorplanner

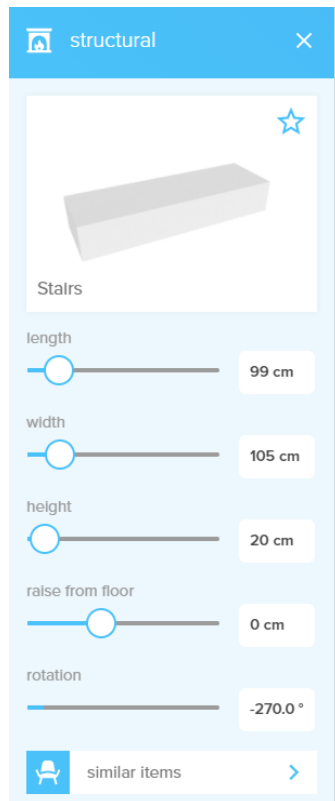


c. Stair element

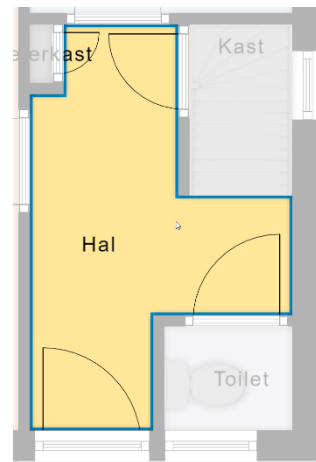


d. Outline hall

How to add columns

Columns can be added by the option “place structurals”. Choose a column closed to the one in the source material. Placing a column can be done by dragging the column you want to the floorplan. Add the right measurements, by clicking the placed column. The height is the height excluding the thickness of floor above.

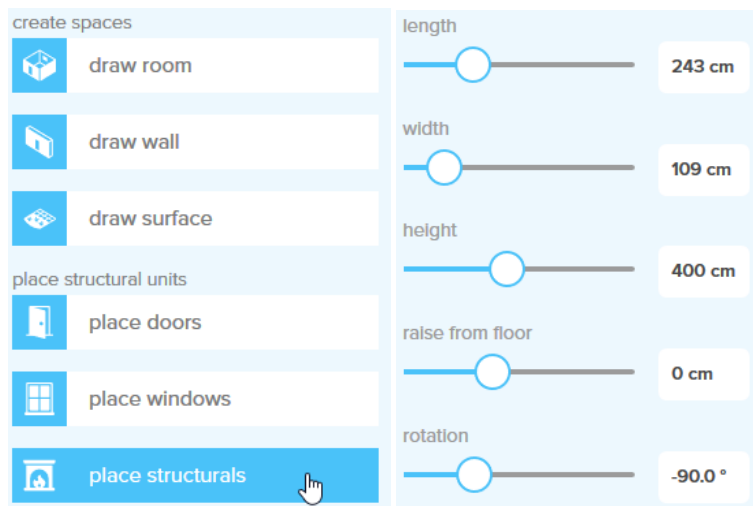

How to add designs

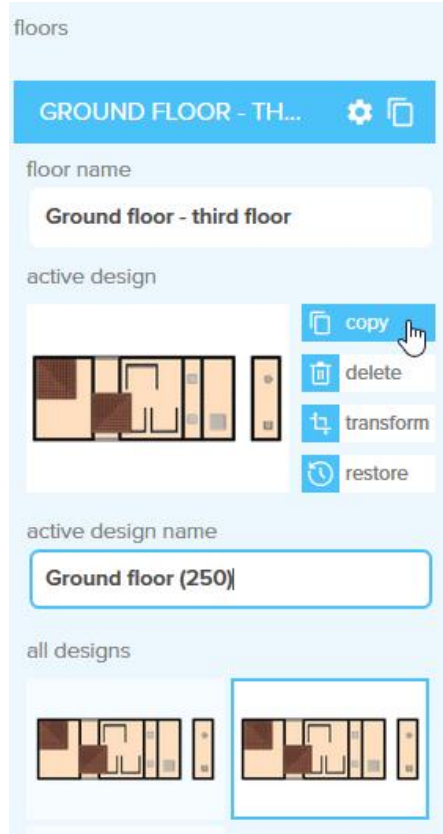


If a project has more than 7 floor, it is possible to add multiple designs (with a maximum of 10) within a floor. There are options to copy, delete, transform or restore designs.

Restoring is used to go back to an earlier version of the design.

With the option copy, you copy your current design. This one is often used for conversion to 3D. Keep in mind, ordering design is not possible.

The transform option is used for mirroring buildings. For converting to 3D, the switch shown below is mostly used. Don't forget to click "apply" after turning the switch.

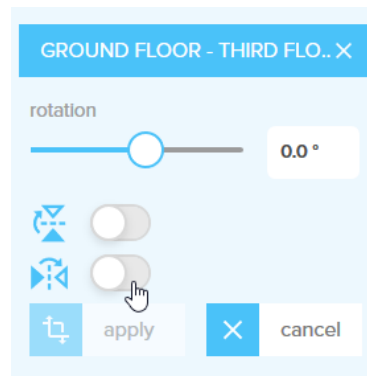


If a project has more than 7 floors it is also possible to upgrade your project to 'Level 3: Presentation'. This costs an extra 8 credits and you can add up to 15 floors in a project.


How to draw external buildings connected to the main building

No shared walls

In some very unlikely situation an external building is right next to the main building, but they do not share a wall. In those cases both buildings have their own exterior walls and this should also be drawn in Floorplanner. The images below show an example.

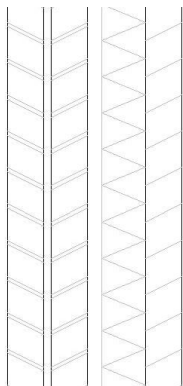

a. Separate walls in source drawing.

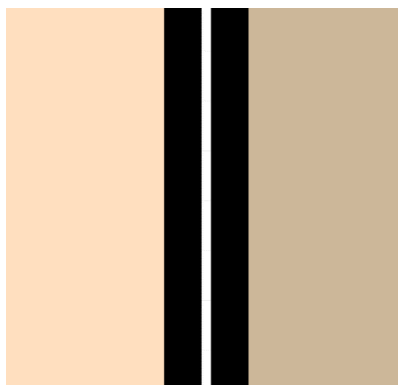

b. separate walls in Floorplanner.


How to add or remove a roof above a room

Depending on the function of the room a roof will be generated or not. For example, above a balcony there will be no roof generated, but by adapting the ceiling colour of a room we can add or remove the roof as wished.

First two situation are presented and afterwards the steps to add or remove a roof will be explained.


Two situations are explained:

1. **Add a roof above a room:** Some rooms will not have a roof generated above it, such as a balcony or a gallery. However, in some specific situation there is a roof above the balcony. In this case we change the ceiling colour of the balcony to the following colour code: #000000. This is the color 'Black'.
2. **Remove a roof above a room:** most rooms do have a room generated above it, but in some specific situation there is no roof. In those situation we change the ceiling colour of that room to the following colour code: #008abd. This is the color 'Sky Blue'.

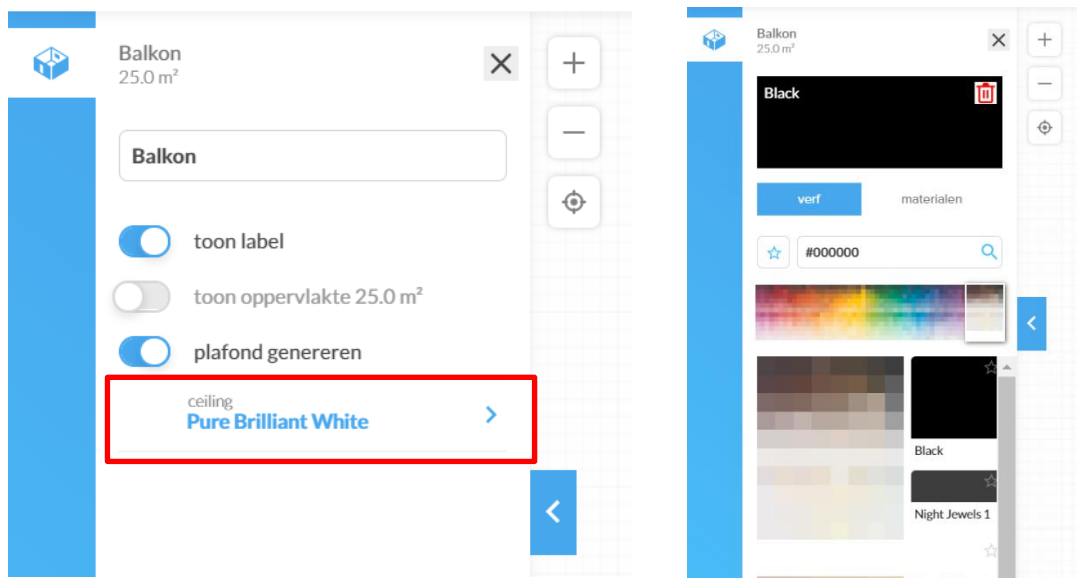

How to add an air vent to a window

In some situations there is an air vent that's integrated in a window or panel in the façade. In the drawing below you can see that the left two windows have an air vent above them, and the right windows don't. Vents like these don't need to be drawn separately and can just be merged and drawn as one window object together with the window in Floorplanner.

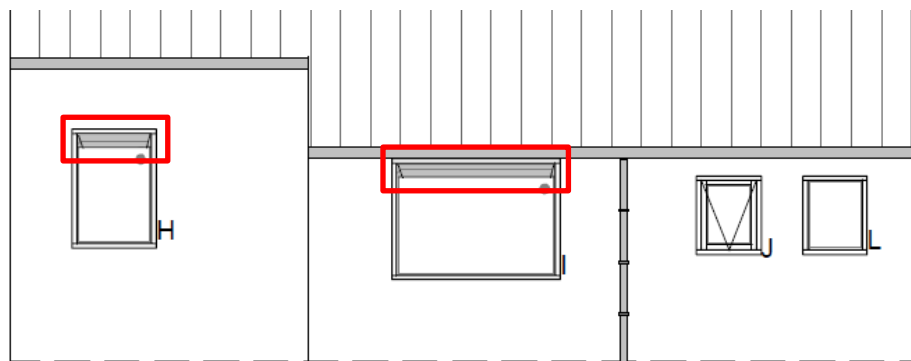

Tables

Floor names

English (floors)	Dutch (verdiepingen)
Basement	Kelder
Ground floor	Begane grond
First floor	Eerste verdieping
Second floor	Tweede verdieping
Third floor	Derde verdieping
Fourth floor	Vierde verdieping
Fifth floor	Vijfde verdieping
Sixth floor	Zesde verdieping
Seventh floor	Zevende verdieping
Eighth floor	Achtste verdieping
Ninth floor	Negende verdieping
Tenth floor	Tiende verdieping
Eleventh floor	Elfde verdieping
Twelfth floor	Twaalfde verdieping
Thirteenth floor	Dertiende verdieping
Fourteenth floor	Veertiende verdieping
Fifteenth floor	Vijftiende verdieping

Example floor/design layout when using designs

English (floors)	(designs)	Dutch (verdiepingen)	(designs)
Basement – second floor	Basement	Kelder – tweede verdieping	Kelder
	Ground floor		Begane grond
	First floor		Eerste verdieping
	Second floor		Tweede verdieping
Third – sixth floor	Third floor	Derde – zesde verdieping	Derde verdieping
	Fourth floor		Vierde verdieping
	Fifth floor		Vijfde verdieping
	Sixth floor		Zesde verdieping
Seventh – tenth floor	Seventh floor	Zevende – tiende verdieping	Zevende verdieping
	Eighth floor		Achtste verdieping
	Ninth floor		Negende verdieping
	Tenth floor		Tiende verdieping
Eleventh – thirteenth floor	Eleventh floor	Elfde – dertiende verdieping	Elfde verdieping
	Twelfth floor		Twaalfde verdieping
	Thirteenth floor		Dertiende verdieping

Room types

English (rooms)	Dutch (ruimten)
Living	Woonkamer
Dining	Eetkamer
Kitchen	Keuken
Bedroom	Slaapkamer
Bathroom	Badkamer
Toilet	Toilet
Office	Kantoor
Hallway	Hal
Utility	Technische ruimte
Bijkeuken	Opslag
Closet	Kast
Landing	Overloop
Attic	Zolder
Balcony	Balkon
Garden	Tuin
Patio	Patio
Parking	Parkeren
Porch	Veranda
Garage	Garage
Shed	Schuur

Deviant area names

English (rooms)	Dutch (ruimten)
Shaft	Schacht
Stairwell	Trapgat
Void	Vide
Meter cupboard	Meterkast
Loggia	Loggia
Elevator	Lift
Basement	Kelder
Hatch	Luik

Room names

Room name	Room type in Floorplanner	Rename to
Meterkast (Meter cupboard)	Technische ruimte (Utility)	Meterkast
Loggia	Balkon (Balcony)	Loggia
Schacht (Shaft)	Technische ruimte (Utility)	Schacht
Kelder (Cellar)	Opslag (Storage)	Kelder
Lift (Elevator)	Hal (Hallway)	Lift
Bijkeuken (Scullery)	Opslag (Storage)	Bijkeuken
Trappenhuis (Staircase)	Hal (Hallway)	Trappenhuis
Galerij (Access balcony)	Hal (Hallway)	Galerij
Dakterras (Roof terrace)	Balkon (Balcony)	Dakterras
Room with a 'CV' (Central heating unit)	Technische ruimte (Utility)	n/a*
Unknown/not named room	Other	Overig
Hobbykamer (Hobby room)	Kantoor (Office)	n/a*
Carport	Parkeren (Parking)	Carport
Conservatory	Patio (Patio)	Serre
Terras (Terrace)	Tuin (Garden)	Terras
Studio	Woonkamer (Living)	Woon- / slaapkamer

* Not applicable