

USBSID-Configtool manual

Author: LouD - generated on 2026-09-13

Table of Contents

Disclaimer	2
About	2
Drivers	2
Linux Udev rules	2
Windows driver	2
Screens	3
Welcome screen	3
v1.5 Sockets confirmation message	4
Sockets screen	5
Clock screen	6
LEDS screen	7
Features screen	7
SID tests screen	8
Debug screen	9
Development	10
License	10
Software License ~ GNuv2	10
Configtool Software License ~ EPLv2	10
USBSID-Pico v1.5 PCB Hardware License ~ CC BY-NC-ND 4.0	10
USBSID-Pico v1.3 PCB Hardware License ~ CC BY-SA 4.0	10
USBSID-Pico v1.0 PCB Hardware License ~ CC BY-SA 4.0	10
USBSID-Volume-daughterboard v1.0 PCB Hardware License ~ CC BY-SA 4.0	11

Disclaimer

I do this stuff in my free time for my enjoyment. Since I like to share my joy in creating this with everyone I try my best to provide a working PCB and Firmware. I am in no way an electronics engineer and can give ***no guarantees*** that this stuff does not break or damage your hardware, computer, phone, or whatever you try to hook it up to. Be sure to take great care when inserting any real MOS SID chips into the board. While everything has been tested with real chips, this is in no way a guarantee that nothing could go wrong. Use of this board and firmware at your own risk! I am in no way responsible for your damaged hardware. That being said, have fun!

About

What is there to say, you can configure your board with this tool and it is self explanatory. Prefer the command line? A CLI config tool (`cfg_usbaid`) is also available - see the [USBID-Pico-firmware-manual](#) file for its usage.

Drivers


Linux Udev rules


In the [examples/udev](#) directory you can find the [udev rules](#) that I use on Linux. This purely an example file that you can use and change to your own needs. Steps required for this to work

```
# Check if you are in the plugdev group with the groups command
groups
# If not, add yourself to the plugdev group, then log out and in
sudo usermod -aG plugdev $USER
# Copy the udev ules file to the correct directory
sudo cp 69-usbaid-permissions.rules /etc/udev/rules.d
# Now reload the udev rules
udevadm control --reload-rules && udevadm trigger
# Not working? Try reloading the service
sudo systemctl restart udev
```

Windows driver

Use [Zadig](#) to install the correct driver. Replace the driver for **USBID-Pico Data** with WinUSB.

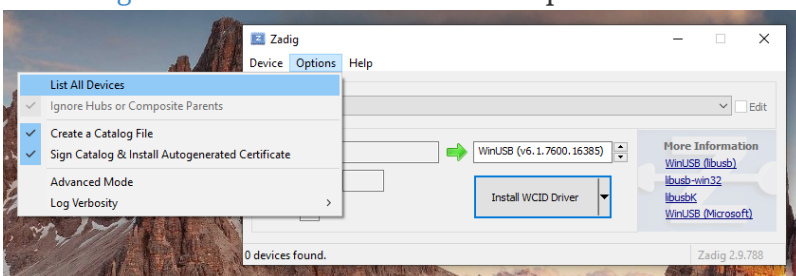

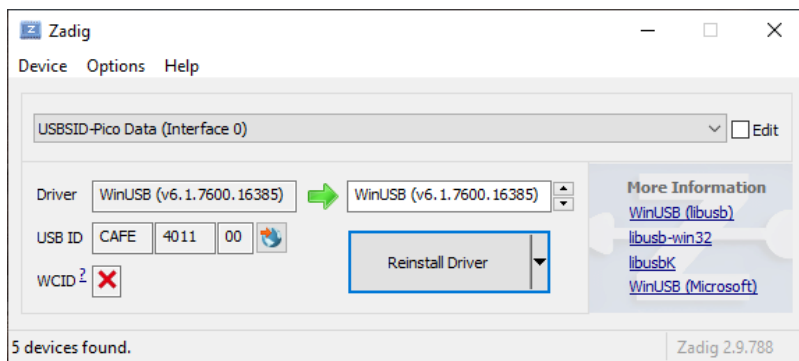

Screens

Welcome screen






v1.5 Sockets confirmation message



Sockets screen




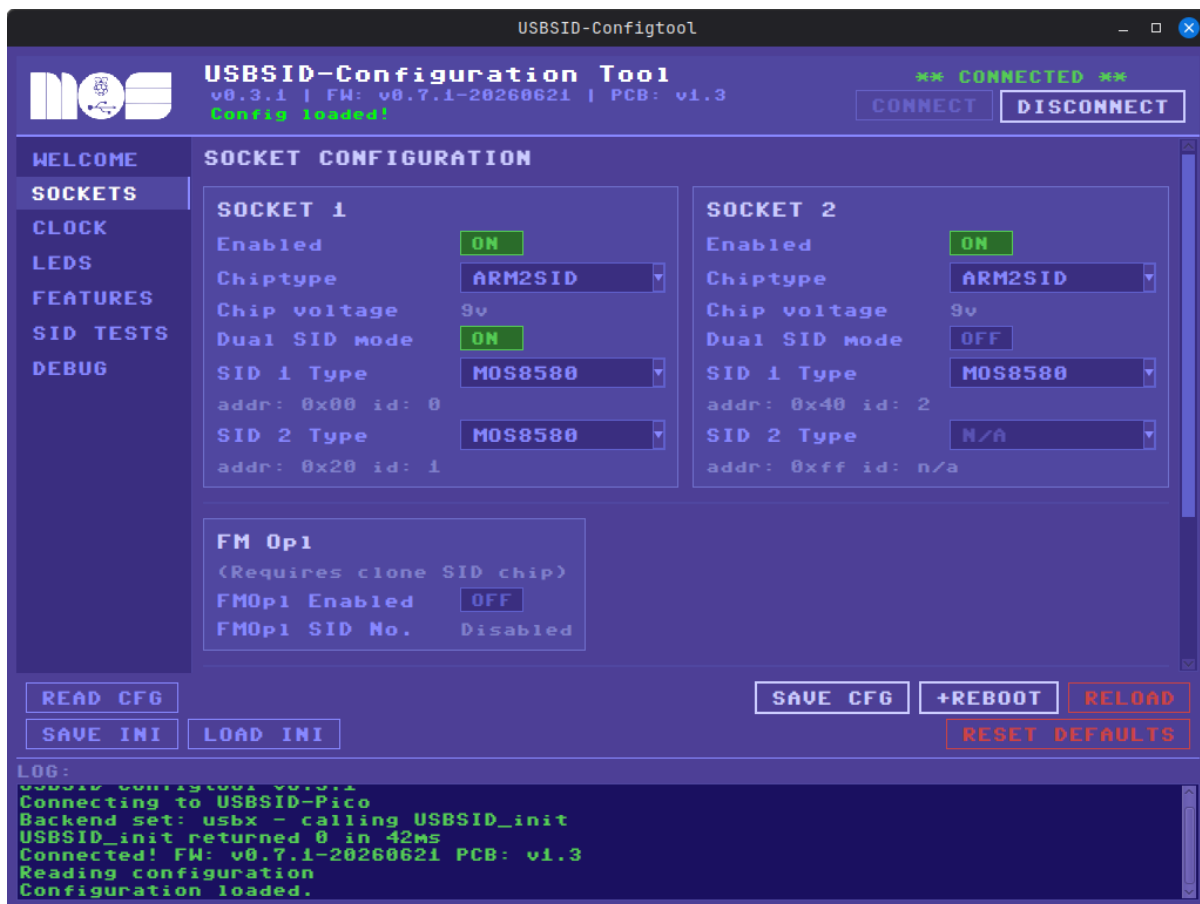

Clock screen




LEDS screen

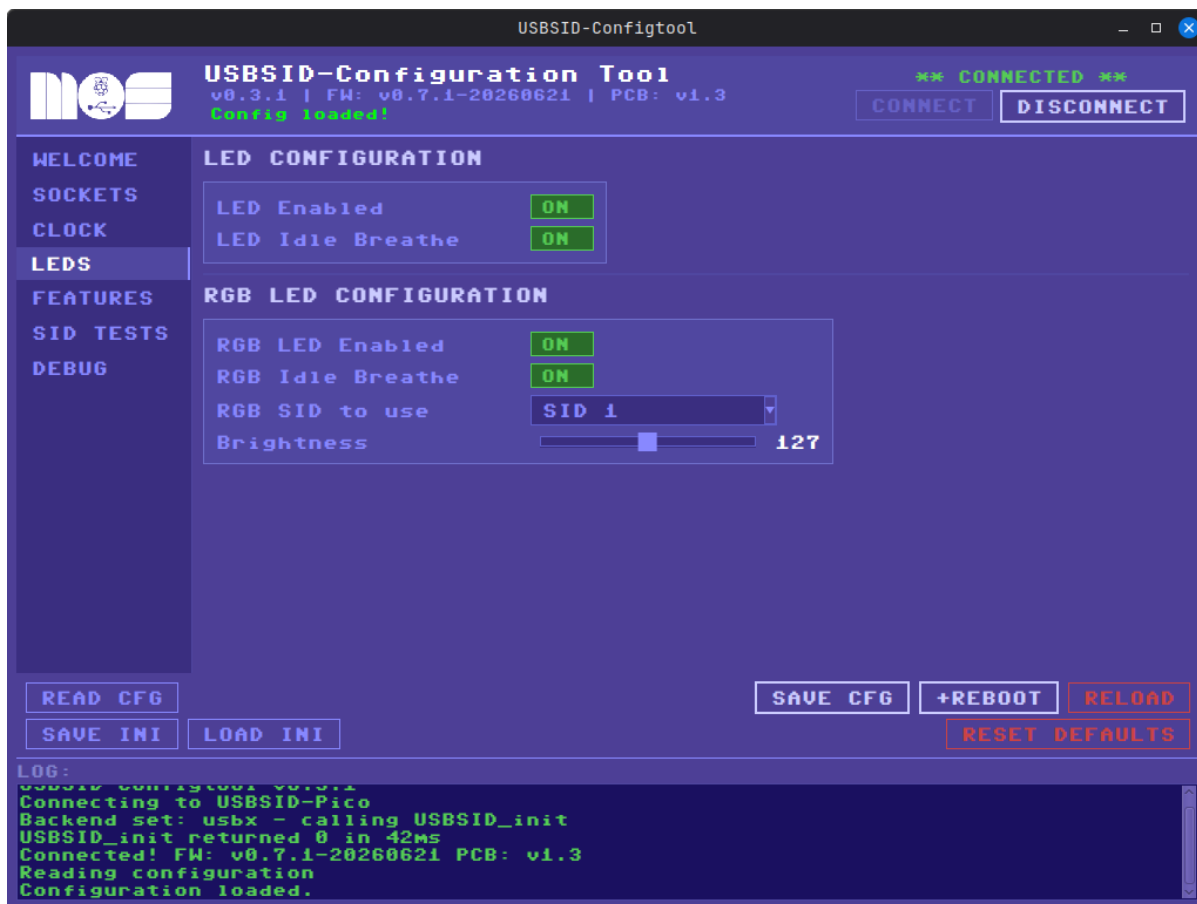

Features screen



SID tests screen

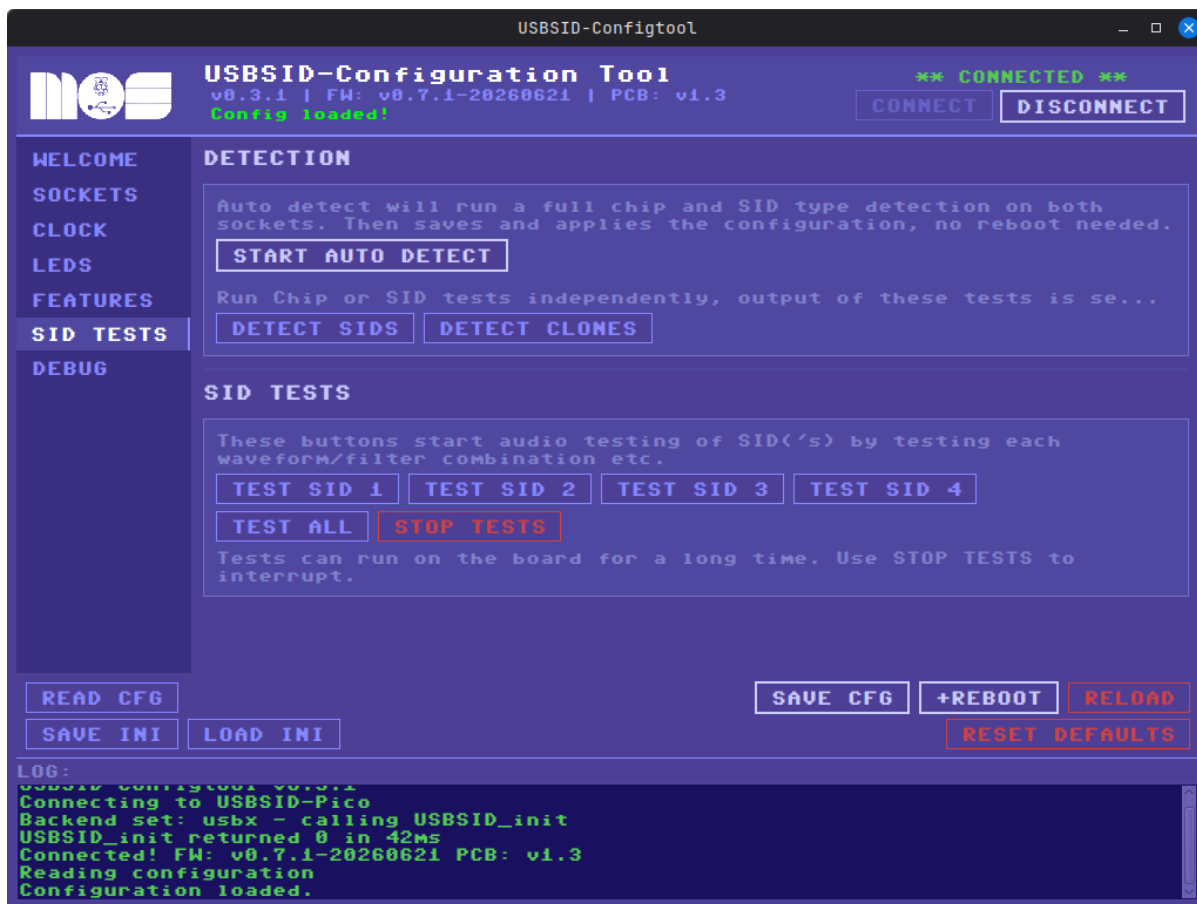

Debug screen



Development

More information about USBID-Configtool is available on the [github repo](#)

License

Software License ~ GNUv2

All code written by me in this repository is licensed under the terms of the GNU General Public License as published by the Free Software Foundation, version 2. Any code in this repository that is not written by me automatically falls under the licensing conditions by the authors of said code as mentioned in the source code header. For more information about this license please read the LICENSE document in the root of the USBID-Pico repository.

Configtool Software License ~ EPLv2

This program and the accompanying materials are made available under the terms of the Eclipse Public License 2.0 which is available at [eclipse.org](#).

SPDX-License-Identifier: EPL-2.0

USBID-Pico v1.5 PCB Hardware License ~ CC BY-NC-ND 4.0

USBID-Pico v1.5 PCB © 2026 by [LouD](#) is licensed under
[Creative Commons Attribution-NonCommercial-NoDerivatives 4.0 International](#)



USBID-Pico v1.3 PCB Hardware License ~ CC BY-SA 4.0

USBID-Pico v1.3 PCB © 2025-2026 by [LouD](#) is licensed under
[Creative Commons Attribution-ShareAlike 4.0 International](#)



USBID-Pico v1.0 PCB Hardware License ~ CC BY-SA 4.0

USBID-Pico v1.0 PCB © 2024-2026 by [LouD](#) is licensed under
[Creative Commons Attribution-ShareAlike 4.0 International](#)



USBSID-Volume-daughterboard v1.0 PCB Hardware License ~ CC BY-SA 4.0

Volume-daughterboard v1.0 PCB © 2026 by [LouD](#) is licensed under [Creative Commons Attribution-ShareAlike 4.0 International](#)



Author: LouD - generated on 2026-09-13