USBSID-Pico Cynthcart manual

Author: LouD - generated on 2026-10-25

Table of Contents

Disclaimer . . . 2
Thank you . . . 2
Firmwares with Cynthcart embedded . . . 2
Usage . . . 2
- CC messages . . . 2
- Cynthcart control . . . 2

License . . . 3
- Software License ~ GNUv2 . . . 3
- Configtool Software License ~ EPLv2 . . . 3
- USBSID-Pico v1.5 PCB Hardware License ~ CC BY-NC-ND 4.0 . . . 3
- USBSID-Pico v1.3 PCB Hardware License ~ CC BY-SA 4.0 . . . 3
- USBSID-Pico v1.0 PCB Hardware License ~ CC BY-SA 4.0 . . . 3
- USBSID-Volume-daughterboard v1.0 PCB Hardware License ~ CC BY-SA 4.0 . . . 4

Disclaimer

I do this stuff in my free time for my enjoyment. Since I like to share my joy in creating this with everyone I try my best to provide a working PCB and Firmware. I am in no way an electronics engineer and can give ***no guarantees*** that this stuff does not break or damage your hardware, computer, phone, or whatever you try to hook it up to. Be sure to take great care when inserting any real MOS SID chips into the board. While everything has been tested with real chips, this is in no way a guarantee that nothing could go wrong. Use of this board and firmware at your own risk! I am in no way responsible for your damaged hardware. That being said, have fun!

Thank you

First off thanks go out to Paul Slocum for creating Cynthcart and Mario Ballano for creating emudore.

Firmwares with Cynthcart embedded

Starting with firmware version v0.8.0 firmwares ending with `_em` can run Cynthcart.
For example `usbsidpico-v1.0_em.uf2` or `usbsidpico2-rgb-v1.3_em.uf2`
Cynthcart runs through the embedded USBSID-Player, all Cynthcart firmwares come with the onboard USBSID-Player included. See the `USBSID-Player-manual` file for more information.

WARNING! Cynthcart runs through the embedded USBSID-Player and overclocks the Pico MCU to 250MHz (rp2040 & rp2350). Passive cooling *might/could* be needed.

Usage

To start the emulator and Cynthcart you will need an USB-midi connection to USBSID=Pico.

CC messages

85 (0x55) ~ Enable Cynthcart
86 (0x56) ~ Disable Cynthcart
87 (0x57) ~ Reset Cynthcart (**not implemented yet**, currently a no-op)

Cynthcart control

For all other midi CC messages to control Cynthcart please refer to the Cynthcart manual.
Page two in github.com/PaulSlocum/cynthcart/blob/master/manual/cynthcart2.0.1.pdf [cynthcart2.0.1.pdf] or cynthcart2.0.1_5x7.pdf
On the right side of cynthcartCommandChart1.pdf
Or on the bottom of cynthcartCommandChart2.pdf

License

Software License ~ GNUv2


All code written by me in this repository is licensed under the terms of the GNU General Public License as published by the Free Software Foundation, version 2. Any code in this repository that is not written by me automatically falls under the licensing conditions by the authors of said code as mentioned in the source code header. For for more information about this license please read the LICENSE document in the root of the USBSID-Pico repository.

Configtool Software License ~ EPLv2

This program and the accompanying materials are made available under the terms of the Eclipse Public License 2.0 which is available at eclipse.org.
SPDX-License-Identifier: EPL-2.0

USBSID-Pico v1.5 PCB Hardware License ~ CC BY-NC-ND 4.0

USBSID-Pico v1.5 PCB © 2026 by LouD is licensed under
Creative Commons Attribution-NonCommercial-NoDerivatives 4.0 International

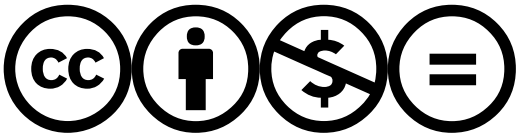

USBSID-Pico v1.3 PCB Hardware License ~ CC BY-SA 4.0

USBSID-Pico v1.3 PCB © 2025-2026 by LouD is licensed under
Creative Commons Attribution-ShareAlike 4.0 International



USBSID-Pico v1.0 PCB Hardware License ~ CC BY-SA 4.0

USBSID-Pico v1.0 PCB © 2024-2026 by LouD is licensed under
Creative Commons Attribution-ShareAlike 4.0 International



USBSID-Volume-daughterboard v1.0 PCB Hardware License ~ CC BY-SA 4.0

Volume-daughterboard v1.0 PCB © 2026 by LouD is licensed under
Creative Commons Attribution-ShareAlike 4.0 International



Author: LouD - generated on 2026-10-25