App:

BLE Controller – Arduino ESP32 on the Apple Store and Google Play

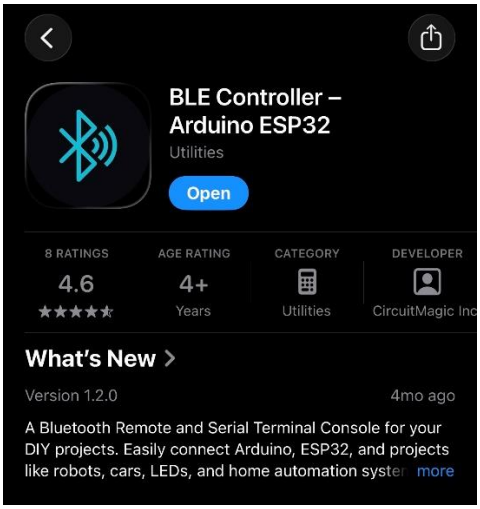

How to configure the app for robot:

Open the BLE Controller App on a phone or tablet.

In the main menu, press the Remote button on the bottom of the page

I set my layout to have Left, Forward, and Right in my top three cells on the top row.

I set Stop, Backwards, and Autonomous/Roam as the next cells.

Followed by Manual mode as the last cell needed to control the robot.

These are the commands to use when setting up the buttons.

Button	Command
Left	"L"
Forward	"F"
Right	"R"
Stop	"S"
Backwards	"B"
Autonomous	"A"
Manual	"T"

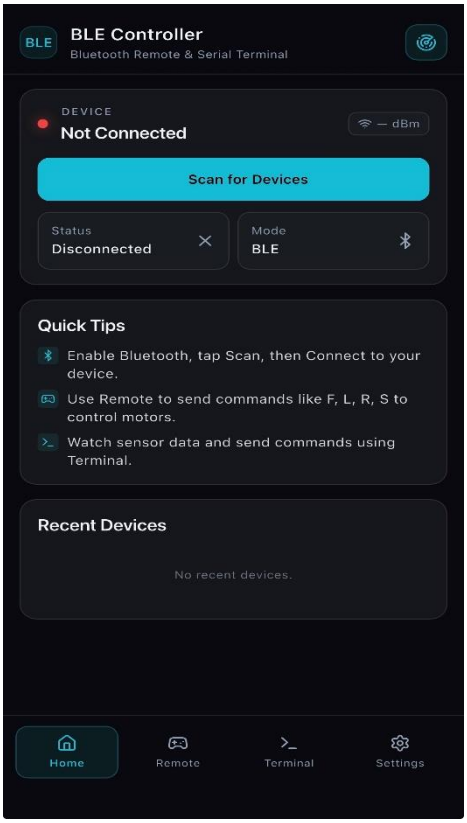
BLE
BLE Controller
Bluetooth Remote & Serial Terminal
DEVICE
Not Connected
— dBm
Scan for Devices
Status
Disconnected
Mode
BLE
Quick Tips
Enable Bluetooth, tap Scan, then Connect to your device.
Use Remote to send commands like F, L, R, S to control motors.
Watch sensor data and send commands using Terminal.
Recent Devices
No recent devices.
Home
Remote
Terminal
Settings

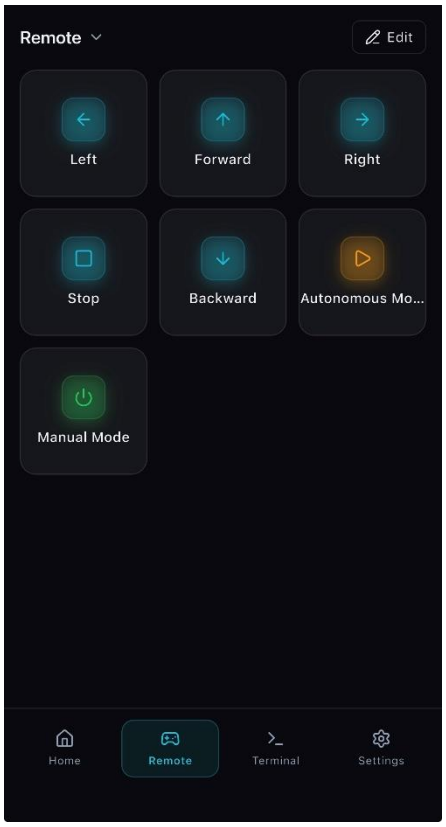
Remote
Edit
Left
Forward
Right
Stop
Backward
Autonomous Mo...
Manual Mode
Home
Remote
Terminal
Settings

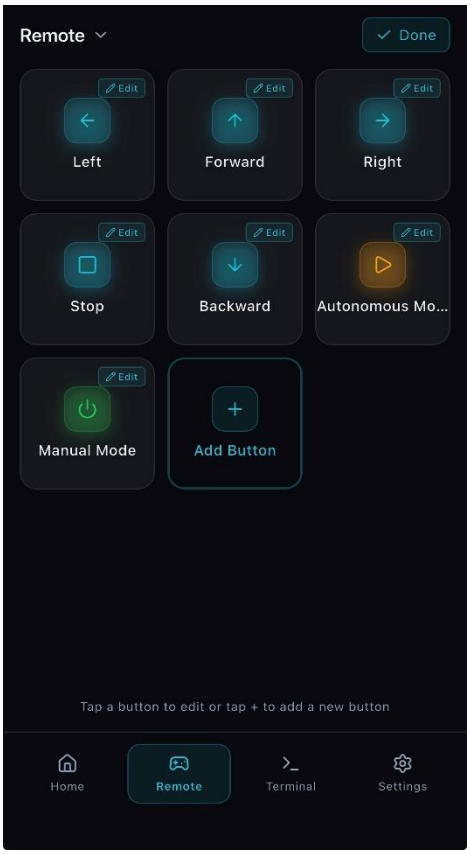
Remote
Done
Edit
Left
Forward
Right
Stop
Backward
Autonomous Mo...
Manual Mode
Add Button
Tap a button to edit or tap + to add a new button
Home
Remote
Terminal
Settings

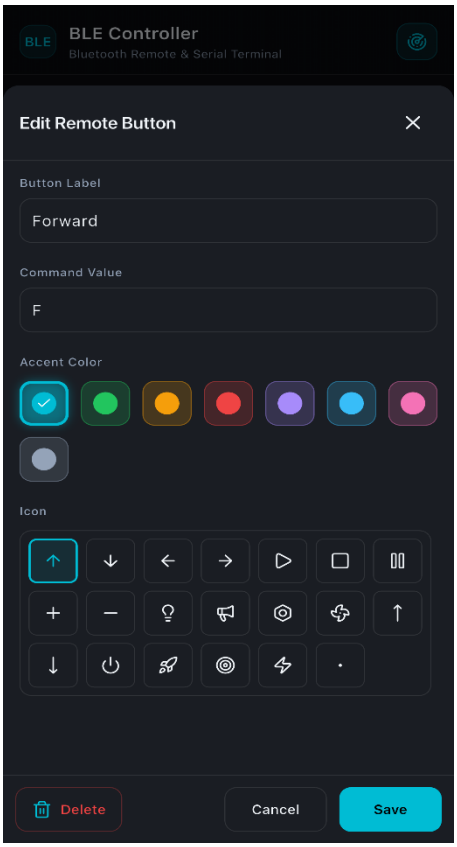
BLE
BLE Controller
Bluetooth Remote & Serial Terminal
Edit Remote Button
Button Label
Forward
Command Value
F
Accent Color
Icon
Delete
Cancel
Save

Connecting the Robot to the app:

Flip the on switch on the back of the robot and wait for the red and white LEDs to turn on.

Once the robot is powered, go to the home page of the app and press the “Scan for Devices button”

Choose the “Arduino” device on the list to connect to.
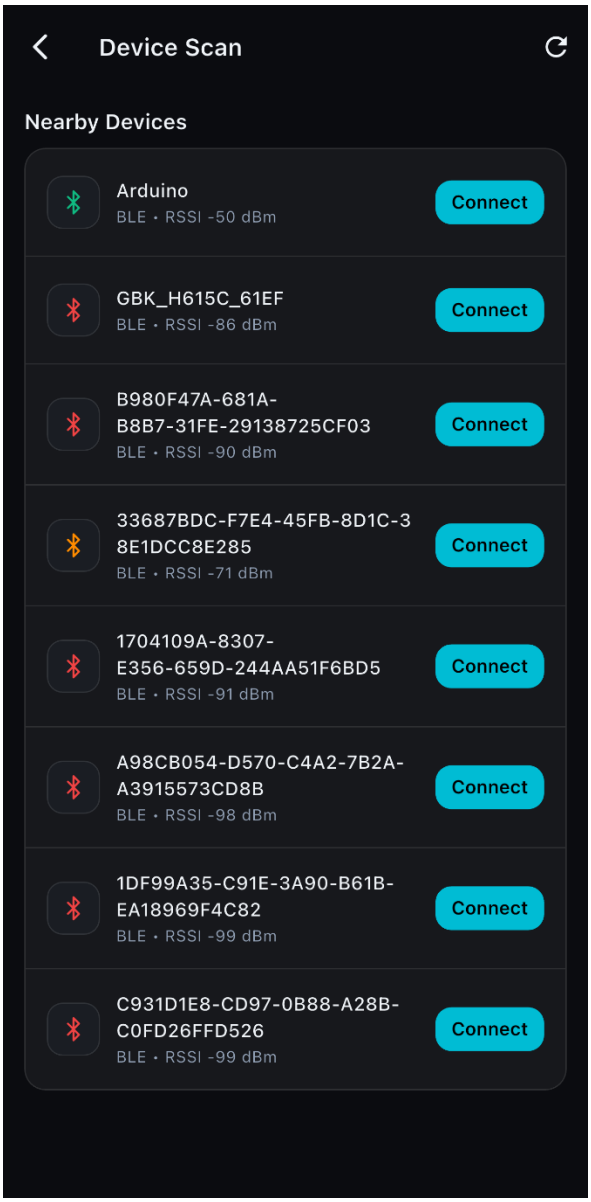
Now you can go to the remote page and control the robot.