

Curva de calibración del LM331	
Frecuencia (KHz)	Voltaje de salida (V)
0.1	0
0.5	0
1	1.12
1.5	1.68
2.0	2.23
2.5	2.79
3.0	3.35
3.5	3.91
4.0	4.47
4.5	5.03
5.0	5.60
5.5	6.16
6.0	6.72
6.5	7.28
7.0	7.84
7.5	8.41
8.0	8.96
8.5	9.53
9.0	10.1
9.5	10.6
10	11.2

# 0.1k

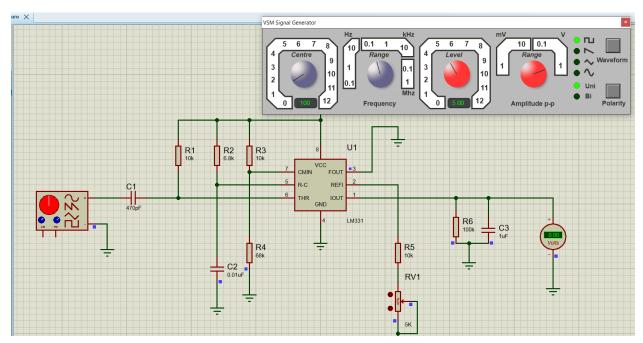

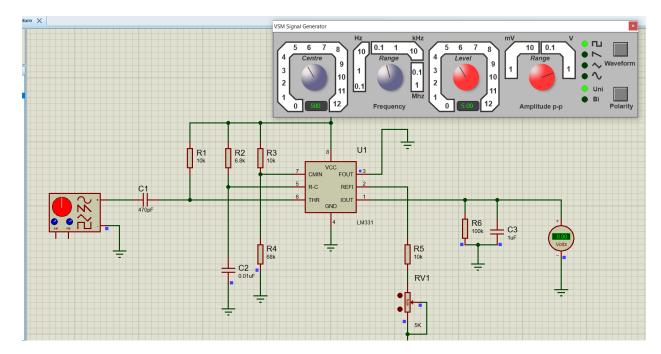

1

