
CONVENTIONAL FORK (SLIDER BUSHING TYPE)


DISASSEMBLY



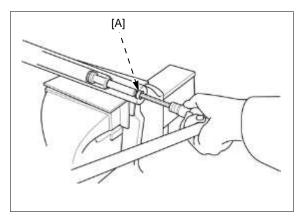


Hold the fork slider in a vice with soft jaws or a shop towel.
Loosen the fork socket bolt [A].

· Pour out the fork fluid by pumping the fork pipe several

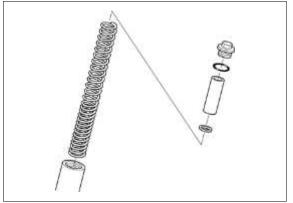




- Fork cap bolt O-ring
- Spring collar
- Spring seat
- Spring

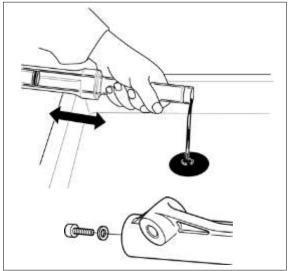

times. Socket bolt



Sealing washer

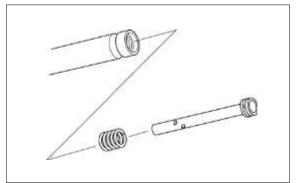



- Fork piston Rebound spring