

Flock-You — Complete Hardware Guide

Firmware: Flock-You · **Upstream:** [colonelpanichacks/flock-you](#) (flock cam detection) **Chip:** ESP32-S3 (8MB) · **Cyber Controller profile:** [flock-you](#) (esptool backend, merged single `.bin` @ 0x0, source-build firmware) **This guide:** purchase → build → flash → integrate into Cyber Controller → use → troubleshoot. **Detector, not attacker:** Flock-You only *listens*. It transmits nothing and attacks nothing — it is a lawful counter-surveillance / public-awareness tool.

1. Overview

Flock-You is a **passive detector for Flock Safety ALPR (automated license-plate reader) cameras** and related surveillance gear. Running on an ESP32-S3, it puts the WiFi radio into 2.4 GHz **promiscuous (receive-only) mode** and watches the management and data frames that Flock hardware leaks while trying to phone home — matching against ~31 known Flock MAC OUI prefixes plus **Information-Element (IE) fingerprinting** of wildcard SSID probe requests (detection signature `wifi_wildcard_probe_ie_sig`). A companion **BLE** path on the `main` branch flags Flock and Raven gear by OUI, advertised device name, manufacturer ID `0x09c8`, and Raven service UUIDs. It runs **standalone** (logging hits to on-board flash, with a buzzer/LED/screen alert depending on board) or **connected** to a small Flask dashboard over USB for live GPS-tagged mapping and wardriving export. Cyber Controller flashes the ESP32-S3 image and exposes the device's serial output in the Devices tab. There is **no offensive command set** here — the firmware emits detection records; it does not take attack verbs.

2. Legal & Safety

This is a receive-only detector — that is the whole point. Flock-You never transmits 802.11 frames, never deauths, never associates, and never authenticates. It performs **passive reception of publicly-broadcast radio frames** for security research, privacy auditing, and public awareness — which is broadly lawful in most jurisdictions, but **passive RF reception can still be regulated where you live, so check local law.** Use it to understand surveillance in *your own* environment. **Do not interfere with, jam, deface, or tamper with camera hardware** — that crosses from detection into illegal conduct. The firmware's own framing: *"always comply with local laws regarding wireless reception."* Detections are probabilistic (signature/OUI heuristics), so treat a hit as "worth a look," not proof. Cyber Controller treats this profile as a benign sensor — there are **no dangerous commands** and **no Dead Man's Switch / suicide** support for this firmware.

3. Hardware & Purchasing

Flock-You is built for **ESP32-S3** boards specifically (the Cyber Controller profile ships a single ESP32-S3 Generic board target: 8MB flash, dio mode, 80 MHz). The two boards the upstream firmware directly supports are:

Tier	Board	Why	Where to buy (search terms)
Smallest / default	Seeed XIAO ESP32-S3 (env xiao_esp32s3)	Thumb-sized, native USB, onboard LED + piezo buzzer alert; the firmware's default target	Seeed Studio store; Amazon/AliExpress: "Seeed XIAO ESP32-S3"
With screen	LilyGO T-Dongle-S3 (env lilygo_t_dongle_s3)	Integrated ST7735 TFT + APA102 RGB LED (red flash on hit); USB-A stick form factor	LilyGO store (lilygo.cc); AliExpress/Amazon: "LilyGO T-Dongle S3"
Pre-built kit	OUI-Spy (Colonel Panic)	Purpose-built ESP32-S3 (8MB) device from the firmware author; no soldering	colonelpanic.tech — <i>verify: store availability/price at purchase time</i>
Bare / DIY	Any generic ESP32-S3 DevKit (e.g. ESP32-S3-DevKitC-1 , 8MB)	Cheapest serial-only sensor; no screen, drive via Cyber Controller	AliExpress/Amazon: "ESP32-S3-DevKitC-1 N8"

Accessories: a real **USB-C data cable** (not charge-only); optional **USB NMEA GPS puck** for wardriving via the Flask dashboard (a phone browser's Geolocation API also works); the XIAO can take an external antenna where a u.FL pad is exposed. **Verify 8MB flash** — the profile and SPIFFS layout assume it; a 4MB clone may fail. *Verify: a third-party M5 Atom Lite pre-flashed variant is sold by some resellers, but the Atom Lite is plain ESP32 (not ESP32-S3) and does not match this profile's ESP32-S3 board target — confirm the chip before buying.*


4. Building / Assembly

Flock-You is **source-build firmware (PlatformIO)** — upstream publishes no guaranteed pre-compiled binaries (formal GitHub releases **may 404**; Cyber Controller's flash core tolerates that — see §5).

- **Pre-built boards (XIAO, T-Dongle-S3, OUI-Spy):** no physical assembly — just a data cable.
- **Build from source (the normal path):** install **PlatformIO** (CLI: `pip install platformio`, or the VS Code extension), clone the repo, then build/flash your board's environment: `git clone https://github.com/colonelpanichacks/flock-you` `cd flock-you` `pio run -e xiao_esp32s3 -t upload # XIAO ESP32-S3` `pio run -e lilygo_t_dongle_s3 -t upload # LilyGO T-Dongle-S3` `pio device monitor # serial @ 115200` To flash via Cyber Controller instead, build **without** upload (`pio run -e xiao_esp32s3`) and grab the merged image PlatformIO produces under `.pio/build/<env>/` (verify the exact filename, e.g. `firmware.bin` vs a `merged-factory bin`), then point the Flash tab at it.
- **Pin map / peripherals** (handled by firmware — useful for DIY wiring):
- **XIAO ESP32-S3:** GPIO 3 = piezo buzzer · GPIO 21 = onboard LED (active-low) · GPIO 43 = Serial1 TX mirror (115200). Plays the first six notes of the SMB World 1-2 theme on boot.
- **LilyGO T-Dongle-S3:** GPIO 1–5, 38 = ST7735 (RST/DC/MOSI/CS/SCLK/backlight via TFT_eSPI) · GPIO 39/40 = APA102 RGB (clock/data, red on detection). No buzzer.
- **Drivers:** XIAO and T-Dongle-S3 use the ESP32-S3's **native USB** (no CP210x/CH340 needed); a generic DevKit with a USB-serial bridge needs its **CP210x/CH340** driver before a COM port appears.

5. Flashing & First Run (via Cyber Controller)

Flashing connection — ESP32 (native USB)

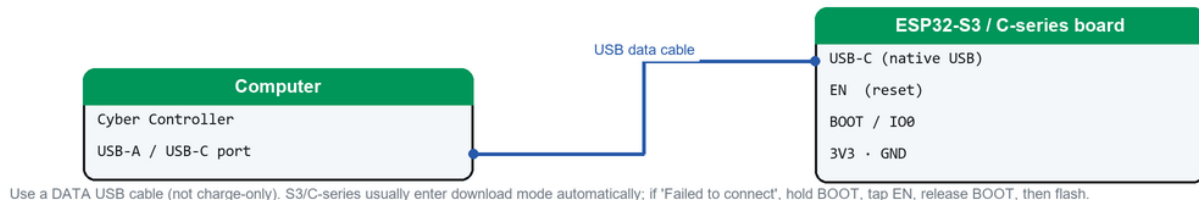

How to connect the board to flash it via Cyber Controller (native-USB ESP32).

1. Connect the board by USB; open Cyber Controller → **Flash** tab.
2. **Port:** pick the board's COM/tty (click *Refresh* if missing → native-USB enumeration or driver issue).
3. **Firmware Profile:** flock-you (backend **esptool**, chip **esp32s3**).
4. **Board:** ESP32-S3 Generic (8MB, dio, 80 MHz) — the profile's single target; flashed as a **merged single .bin at offset 0x0**, baud **115200**.
5. Click **Flash**. Cyber Controller resolves the firmware via the GitHub-release resolver. **Important:** because Flock-You is source-build-first, the release lookup **may return no .bin (404)**; the profile's `on_error: source_only_empty` means the Flash tab can come up **empty with no downloadable asset**. If that happens, build the merged image yourself (§4) and select it as a **local/custom firmware file** in the Flash tab (*verify the exact custom-file control name in your Cyber Controller build*), then flash to 0x0.
6. **First boot:** the XIAO chirps its boot tune and the LED activity begins; the T-Dongle-S3 lights its screen showing scan status/channel/hit count. On serial (115200) you'll see a **Flock-You ESP32** init banner, then one **JSON detection line per hit**.

6. Integrate into Cyber Controller

- **Profile:** flock-you (esptool; merged single bin @ 0x0; chip esp32s3; 8MB/dio/80 MHz; default baud 115200). supports_suicide: false, protocol: null — it is a **sensor**, not a command target.
- **Control / monitor:** open the **Devices** tab → select the port → **Connect**. Because the profile has no protocol parser, treat the connection as a **raw serial monitor**: the persistent terminal shows the firmware's JSON detection lines and status output. There is **no firmware command palette** for Flock-You (no scanap/ attack-style verbs) — detection is automatic and continuous on boot.
- **No attack routing:** there are no dangerous verbs to confirm and no Dead Man's Switch for this profile; it only emits detections. *Verify whether your Cyber Controller build maps Flock-You JSON lines into the shared Targets pool — if not, read them in the terminal or via the Flask dashboard below.*
- **Backup first:** use **Backup** in the Flash tab to dump existing flash before overwriting (especially on an OUI-Spy or a board that shipped with other firmware).

7. Usage (end-to-end)

1. **Standalone sweep:** power the board from any USB battery and walk/drive. Hits trigger the **buzzer/LED** (XIAO) or a **red flash + on-screen popup** (T-Dongle-S3, ~5 s). Detections persist to **SPIFFS** (/session.json, atomic CRC-protected; autosave ~60 s; up to ~200 unique MACs) and survive power loss.
2. **Monitor live in Cyber Controller:** Devices tab → Connect → read the JSON detection stream in the terminal (115200).
3. **Mapping / wardriving (Flask dashboard):** connect the board by USB to a host running the bundled dashboard: `cd api pip install -r requirements.txt python flockyou.py # open`
`http://localhost:5000` It ingests the firmware's JSON lines, tags them with GPS (USB **NMEA puck** on the host, or the phone **browser Geolocation API**), does temporal matching, and **exports JSON / CSV / KML** (KML opens in Google Earth). The BLE companion firmware also serves its own WiFi AP at `192.168.4.1` with the same JSON schema.
4. **Tune sensitivity (rebuild required):** edit the top of `main.cpp` before building — `CHANNEL_MODE` (custom 11/6/1 descend, full 11→1, or single), `CHANNEL_DWELL_MS` (350), `RSSI_MIN` (−95 dBm), per-MAC cooldown (~5 s), `MAX_DETECTIONS` (200).
5. **Interpret responsibly:** a hit means a Flock-signature device is *nearby on the air* — investigate lawfully; do not touch the hardware.

8. Troubleshooting

- **No COM port:** for XIAO/T-Dongle-S3 (native USB) try another **data** cable and re-plug; for a generic DevKit install the **CP210x/CH340** driver. On Linux add your user to `dialout` and replug.
- **Flash tab shows no firmware to download:** expected for source-build firmware — the GitHub-release lookup 404'd (`source_only_empty`). **Build the merged bin with PlatformIO** (§4) and flash it as a local/custom file to `0x0`.
- **"Failed to connect" while flashing:** hold **BOOT** (and tap **RESET**) to force download mode, lower the flash baud in Settings, and close any serial monitor (including `pio device monitor` or the Devices tab) holding the port.
- **Boots but no detections:** normal in a clean RF area; confirm it's scanning (XIAO boot tune / T-Dongle status line / serial banner). Loosen `RSSI_MIN` or switch `CHANNEL_MODE` to full hop and rebuild if you expect hits but see none.
- **Blank screen on T-Dongle-S3:** wrong build environment — flash the `lilygo_t_dongle_s3` image, not the XIAO one (the display pins/driver differ).
- **No buzzer/LED on T-Dongle-S3:** by design — that board has no buzzer; it alerts via the **APA102 RGB LED** and screen instead.
- **Flask dashboard empty:** confirm the board is on USB at **115200**, that no other app holds the port, and that `pip install -r requirements.txt` succeeded; open `http://localhost:5000`.
- **Boot-loop / brick: Erase Flash** in the Flash tab, then re-flash; verify the board is genuinely **8MB ESP32-S3** (4MB clones break the SPIFFS layout).

9. Sources

- Upstream: <https://github.com/colonelpanichacks/flock-you> — README, PlatformIO envs (xiao_esp32s3, lilygo_t_dongle_s3), pin maps, api/ Flask dashboard, detection signatures, channel/SPIFFS config.
- Cyber Controller profile: src/config/profiles/flock_you.json — id flock-you, esptool backend, chip esp32s3 (8MB/dio/80 MHz), merged single bin @ 0x0, baud 115200, supports_suicide: false, protocol: null, github_release resolver with on_error: source_only_empty.
- Hardware: **Seeed Studio** (XIAO ESP32-S3), **LilyGO** (T-Dongle-S3), **Colonel Panic** (OUI-Spy, colonelpanic.tech), generic ESP32-S3-DevKitC-1.
- Background: Hackaday, "Detecting Surveillance Cameras With The ESP32" (2025-09-26); simeononsecurity Flock-You hardware guide (2026). Treat third-party board/price claims as **verify-before-buy**.
- Verify current board availability, prices, release-asset presence, and exact PlatformIO output filenames at build/purchase time; vendor links and repo layout change.