

Kali Linux ARM (Raspberry Pi) — Complete Hardware Guide

Distro: Kali Linux ARM (64-bit / arm64) · **Upstream:** kali.org (Kali Linux / OffSec — GPL + mixed FOSS licenses) **Target hardware:** Raspberry Pi 3 / 4 / 400 / 5 / 500 (arm64) and Pi Zero 2 W · **Cyber Controller profile:** [kali-arm](#) (sd backend — removable-only image writer, no serial protocol) **This guide:** purchase → build the deck → write the SD image via Cyber Controller → integrate → use → troubleshoot.

1. Overview

Kali Linux ARM is the full Kali penetration-testing distribution pre-built as a flashable disk image for Raspberry Pi and other ARM single-board computers. Unlike a single-purpose firmware, it is a complete Debian-based OS carrying Kali's toolset (Nmap, Metasploit, Aircrack-ng, Wireshark, Burp Suite, the wireless/Nexmon stack, etc.) on a credit-card-sized board. On a Pi with a touchscreen and battery it becomes a self-contained **cyberdeck** — the Cyber Controller cyberdeck OS. Cyber Controller's role here is narrow but important: it downloads the official Kali ARM image and **writes it to a microSD card** through its hardened, removable-only SD/Software-OS writer. After that, the Pi boots and runs Kali directly — Cyber Controller does not drive it over a serial link (the profile has no protocol).

2. Legal & Safety

Authorized testing only. Kali is an offensive-security distribution: it ships tools that scan, exploit, deauthenticate, capture handshakes, and crack credentials. Running any of these against networks, systems, or people you do not own or have **explicit written permission** to test is illegal in most jurisdictions (US: CFAA/Wiretap Act/FCC; EU and others similar). Use Kali only on your own lab gear or under a signed engagement scope. Two hardware-specific cautions: (1) the SD write in §5 **erases the entire target drive** — pick the right removable device; (2) onboard/USB WiFi monitor-mode and injection transmit on regulated bands — passive *and* active radio use may be restricted where you live. Change the default password immediately (§7); a Kali box on kali/kali is itself a liability.

3. Hardware & Purchasing

Cyber Controller's `kali-arm` profile fetches the **64-bit (arm64)** generic Raspberry Pi image, so target an arm64-capable Pi. Pick by form factor:

Tier	Board	Why	Where to buy (search terms)
Best cyberdeck	Raspberry Pi 5 (4GB/8GB)	Fastest Pi; best for the full toolset + touchscreen deck	"Raspberry Pi 5 8GB" — official resellers: PiShop , Adafruit , CanaKit , The Pi Hut
Reliable workhorse	Raspberry Pi 4 (4GB/8GB)	Mature, well-supported, cheaper than Pi 5	"Raspberry Pi 4 Model B 4GB" — same resellers
All-in-one keyboard	Raspberry Pi 400 / 500	Pi built into a keyboard — instant portable rig	"Raspberry Pi 400 kit" / "Raspberry Pi 500"
Pocket / drop box	Raspberry Pi Zero 2 W	Tiny, low-power; great headless implant (Pi-Tail variant)	"Raspberry Pi Zero 2 W" — see verify note below

Display for a deck: any HDMI monitor works, but for a true cyberdeck use a small touchscreen — e.g. the **official Raspberry Pi Touch Display**, or a **Waveshare / SunFounder HDMI/DSI touchscreen** (search "Raspberry Pi touchscreen 5 inch HDMI" or "Waveshare DSI touch display"). **microSD card:** the Kali docs require **"at least 16GB capacity"** and **"Class 10 cards are highly recommended."** For the full toolset plus updates, buy **32GB+** with an **A1/A2** application-class rating — e.g. **Samsung EVO Plus**, **SanDisk Extreme**, or **SanDisk Ultra** (search "Samsung EVO Plus 64GB microSD A2" / "SanDisk Extreme microSD"). **Accessories:** a quality USB-C (Pi 4/5) or micro-USB (Zero 2 W) power supply rated for the board, a **USB microSD card reader** for writing from your PC, optional case/heatsink/fan, and — for wireless work — a **USB WiFi adapter that supports monitor mode + injection** (verify chipset; common recommendations: Atheros AR9271, Realtek RTL8812AU). Onboard Pi WiFi can now do monitor mode via Nexmon (see §7).


verify: Cyber Controller's profile pattern matches the **arm64** Raspberry Pi image. The **Pi Zero 2 W** and the **32-bit (armhf) Pi 2/3/4/400** images are published under different filenames on kali.org; if you target those, confirm the downloaded asset name before writing (the Zero 2 W has its own dedicated image, including a "Pi-Tail" build). See §9.

4. Building / Assembly

- **Bare Pi (3/4/5):** seat it in a case with a heatsink (Pi 4/5 run hot under load). No soldering.
- **Pi 400/500:** nothing to assemble — Pi-in-a-keyboard. Add an HDMI display and power.
- **Cyberdeck build:** mount the Pi + touchscreen (HDMI or DSI ribbon) and, optionally, a LiPo/UPS HAT and keyboard into an enclosure. DSI/official touch displays are plug-and-play under Kali; cheap HDMI panels may need a `config.txt` resolution/overscan tweak (verify per panel).
- **microSD prep (for the host PC that runs Cyber Controller):** insert the microSD into a **USB card reader** so it enumerates as a **removable** drive — Cyber Controller's writer refuses fixed/system disks and anything ≥ 256 GB by design (§6). No special USB-serial driver is needed (this is block storage, not a serial board).
- **Wireless add-on:** if using a USB WiFi adapter, plug it into a USB port; you'll bring up monitor mode in software after first boot (§7).

5. Write the Kali ARM image via Cyber Controller

Writing the image — Raspberry Pi / SBC (microSD)

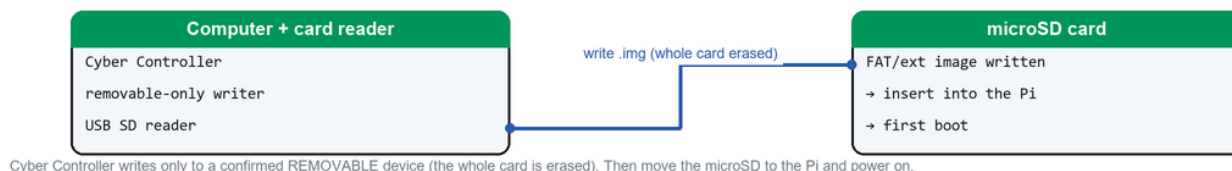

Cyber Controller writes the image to a removable microSD/USB; then boot the device.

Cyber Controller writes the compressed Kali `.img.xz` straight to the microSD — no separate imager needed. 1. Insert the **microSD via a USB card reader** so it shows up as a removable drive. On Windows, run Cyber Controller **as Administrator** (raw disk writes need it); on Linux/macOS the write uses `dd` and will prompt for `sudo`. 2. Open Cyber Controller → the **SD / Software-OS** imaging flow and select the **Kali Linux ARM64** image profile (`kali-arm`). 3. **Scan/refresh removable drives**, then **select your microSD** from the detected list. Double-check the device path and size — **this operation erases the whole card**. Fixed/system disks never appear. 4. **Confirm** the destructive write (the backend will not proceed without an explicit confirmation — a built-in safety invariant). Cyber Controller then runs the full pipeline automatically: **download** the latest `kali-linux-<version>-raspberry-pi-arm64.img.xz` from `kali.download` (an allowlisted host) → **stream-decompress** the `.xz` (never loading the whole image into RAM) → **block-write** the raw `.img` to the card → **SHA-256 verify** the write by reading it back. 5. When it reports verification passed / "SD card is ready," eject the reader, move the microSD into the Pi, attach power (and a display if not going headless), and boot. First boot resizes the filesystem and may reboot once.

6. Integrate into Cyber Controller (SD-image)

- **Profile:** `kali-arm` — `backend: "sd", protocol: null`. Because there is no serial protocol, this is a **one-shot imaging target**, not a live-controlled device: there's no Devices/Targets/terminal session, no Cross-Comm routing, and no Dead Man's Switch for it (those apply to serial firmware like Marauder). Integration *is* the write pipeline.
- **Backend routing:** the flash engine maps `backend: "sd"` to the SD-image handler, which calls into `src/core/backends/sd_backend.py`. That module's `PI_IMAGE_PROFILES["kali-arm"]` defines the source: `download_url = https://kali.download/arm-images/` and the asset filter `kali-linux.*arm64.*\img\.*xz$` (so it selects the 64-bit Raspberry Pi image).
- **Shared writer with the Software-OS tab:** the Pi SD image and the **Software-OS tab** (which writes desktop/USB OS ISOs like Kali installer, Tails, and Arch) use the **same hardened removable-only writer** in `sd_backend` — Windows raw `PhysicalDriveN` via `ctypes`, Linux/macOS via `dd`. Think of `kali-arm` as the *Raspberry Pi (SD)* sibling of the Software-OS *desktop (USB)* images, sharing one download → decompress → write → verify path.
- **Safety invariants (enforced before any byte is written):** target must be **removable** (never a fixed/system disk), must be **< 256 GB** (SD sanity ceiling), and the caller must pass `confirmed=True`. Downloads are restricted to an **HTTPS allowlist** (`kali.download / *.kali.download`, plus GitHub hosts for the other Pi profiles), with redirect re-validation and filename path-traversal checks.
- **Versioning:** there is no GitHub release for Kali ARM — images come straight from `kali.download`, and Cyber Controller resolves the latest matching arm64 image at write time. Prefer the latest **point release** (e.g. 2026.x) unless you specifically need a weekly build.

7. Usage (end-to-end)

1. **First boot & login:** Kali ARM ships with **default credentials kali / kali** (the non-root default in place since Kali **2020.1** for pre-built ARM/VM images). Log in at the desktop or console.
2. **Lock it down immediately:** run `passwd` to change the `kali` password. For a network-exposed box, also regenerate SSH host keys (verify: e.g. `sudo dpkg-reconfigure openssh-server` or remove `/etc/ssh/ssh_host_*` then `sudo ssh-keygen -A`).
3. **Update first:** `sudo apt update && sudo apt full-upgrade -y` then reboot — Kali moves fast and the image may be weeks old.
4. **Headless / SSH:** to run without a monitor, pre-stage WiFi by adding a `wpa_supplicant.conf` to the card's **first (boot) partition** before first boot: `wpa_passphrase YOURNETWORK > wpa_supplicant.conf` (per the Kali docs). Then connect over SSH as `kali@<pi-ip>`. **verify:** whether the SSH service is enabled by default on the ARM image; if it isn't, attach a screen/keyboard once and run `sudo systemctl enable --now ssh`.
5. **Wireless testing:** onboard Pi WiFi can do **monitor mode + injection via Nexmon** on supported boards (Pi 5, Pi 4 32/64-bit, 3B, 3B+, Zero W, Zero 2 W). Since **Kali 2025.1** this is packaged — install with `sudo apt install -y brcmfmac-nexmon-dkms firmware-nexmon` then reboot. Otherwise use a USB WiFi adapter with monitor-mode support. **verify:** current Nexmon status for your exact board/kernel — older Pi 5 images shipped *without* internal-WiFi Nexmon and required a USB adapter.
6. **Bluetooth (Pi 4 etc.):** if needed, enable it with `sudo systemctl enable --now hciuart.service` and `sudo systemctl enable --now bluetooth.service` (audio defaults to HDMI, not the 3.5mm jack).
7. **Run your tools** (authorized scope only): standard Kali — `nmap`, `aircrack-ng/airodump-ng`, `wireshark`, `msfconsole`, etc. On Pi 5, kernel headers for DKMS builds are named `linux-headers-rpi-2712` and `linux-headers-rpi-v8` (not the generic Debian names).

8. Troubleshooting

- **microSD not listed in Cyber Controller:** use a **USB card reader** (built-in slots may read as fixed); re-scan; on Windows launch **as Administrator**; confirm the card is **< 256 GB**.
- **Write fails / permission denied:** Windows needs Administrator for raw disk access; Linux/macOS needs the `sudo/root dd` prompt to succeed. Close any Explorer/Finder window holding the card.
- **Verification MISMATCH after write:** usually a flaky card or reader — re-seat, try another reader/card, and re-write. A failed verify means the card may be corrupt; don't boot it.
- **Pi shows no display / rainbow screen / boot loop:** re-write the image; confirm an arm64-capable model (Pi 3/4/400/5/500); for cheap HDMI touchscreens, set the panel resolution in `config.txt` (verify per panel). Try a known-good power supply — under-volting causes instability on Pi 4/5.
- **Can't SSH in headless:** verify SSH is enabled (step 4); confirm the `wpa_supplicant.conf` was placed on the **boot** partition and the network name/passphrase are correct; check the Pi got a DHCP lease.
- **Onboard WiFi won't go to monitor mode:** install the Nexmon packages (\$7) and reboot, or fall back to a USB adapter with a monitor-mode-capable chipset.
- **Login rejected:** defaults are `kali / kali`; if you already changed it and forgot, re-write the card (no in-place recovery on a fresh image).

9. Sources

- Kali ARM image downloads & model list: <https://www.kali.org/get-kali/> (Get Kali → ARM / Raspberry Pi).
- Kali on ARM docs hub: <https://www.kali.org/docs/arm/> and the per-model pages (<https://www.kali.org/docs/arm/raspberry-pi-4/>, <https://www.kali.org/docs/arm/raspberry-pi-5/>, <https://www.kali.org/docs/arm/raspberry-pi-zero-2-w/>) — microSD/Class 10, `.img.xz`, `dd/Imager`, `wpa_supplicant.conf` headless, audio/Bluetooth notes.
- Default credentials (`kali/kali`, since 2020.1): <https://www.kali.org/docs/introduction/default-credentials/>.
- Nexmon onboard-WiFi monitor mode (2025.1 packaging): <https://www.kali.org/blog/raspberry-pi-wi-fi-glow-up/>.
- Cyber Controller profile: `src/config/profiles/kali_arm.json` (`id: kali-arm`, `backend: sd`, `protocol: null`, image host `kali.download/arm-images/`).
- Cyber Controller SD writer & safety invariants: `src/core/backends/sd_backend.py` (`PI_IMAGE_PROFILES["kali-arm"]`, `arm64 .img.xz` pattern, `removable-only / <256 GB / confirmed=True`, HTTPS allowlist) and the Software-OS tab `src/ui/qt/software_tab.py` (shared `removable-only` writer).
- Verify current image filenames, prices, board availability, and Nexmon status at use time — `kali.org` versions and vendor links change.