Welcome to Teensy® 4.1

32 Bit Arduino-Compatible Microcontroller

To begin using Teensy, please visit the website & click Getting Started.


www.pjrc.com/teensy

				GND				Vin (3.6 to 5.5 volts)		
PWM	CRX2	CS1	RX1	0				GND		
PWM	CTX2	MISO1	TX1	1				3.3V (250 mA max)		
PWM	OUT2			2	23	A9	CRX1	MCLK1	PWM	
PWM	LRCLK2			3	22	A8	CTX1		PWM	
PWM	BCLK2			4	21	A7	RX5	BCLK1		
PWM	IN2			5	20	A6	TX5	LRCLK1		
PWM	OUT1D			6	19	A5		SCL	PWM	
PWM	OUT1A		RX2	7	18	A4		SDA	PWM	
PWM	IN1		TX2	8	17	A3	TX4	SDA1		
PWM	OUT1C			9	16	A2	RX4	SCL1		
PWM	MQSR	CS		10	15	A1	RX3	S/PDIF IN	PWM	
PWM	CTX1	MOSI		11	14	A0	TX3	S/PDIF OUT	PWM	
PWM	MQSL	MISO		12	13	(LED)	SCK		PWM	
				3.3V				GND		
PWM	SCL2		TX6	A10 24	41	A17				
PWM	SDA2		RX6	A11 25	40	A16				
		MOSI1		A12 26	39	A15	MISO1	OUT1A		
		SCK1		A13 27	38	A14	CS1	IN1		
PWM			RX7	28	37		CS		PWM	
PWM			TX7	29	36		CS		PWM	
	CRX3			30	35		TX8			
	CTX3			31	34		RX8			
	OUT1B			32	33			MCLK2	PWM	

All digital pins have interrupt capability.

Teensy® 4.1 Features

Special Features and Additional Pins

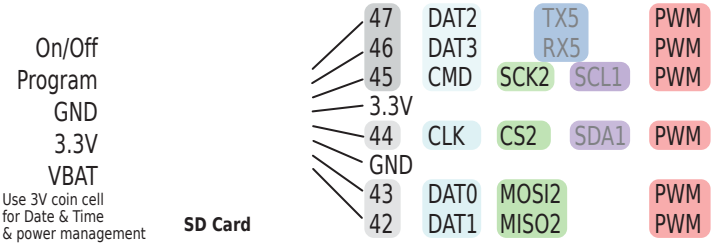

For solutions to the most common issues and technical support, please visit:

www.pjrc.com/help

Teensy 4.1 pins are **not 5 volt tolerant**. Do not apply more than 3.3V to any pin, except VIN & VUSB.

Teensy 4.1 System Requirements:
PC computer with Windows 7, 8, 10, 11 or later
or Ubuntu Linux 14.04 or later
or Macintosh MacOS 10.10 or later
USB Micro-B Cable