



MASTERKRAFT

Curved Treadmill Pro Assembly Instructions


MCTMSP01

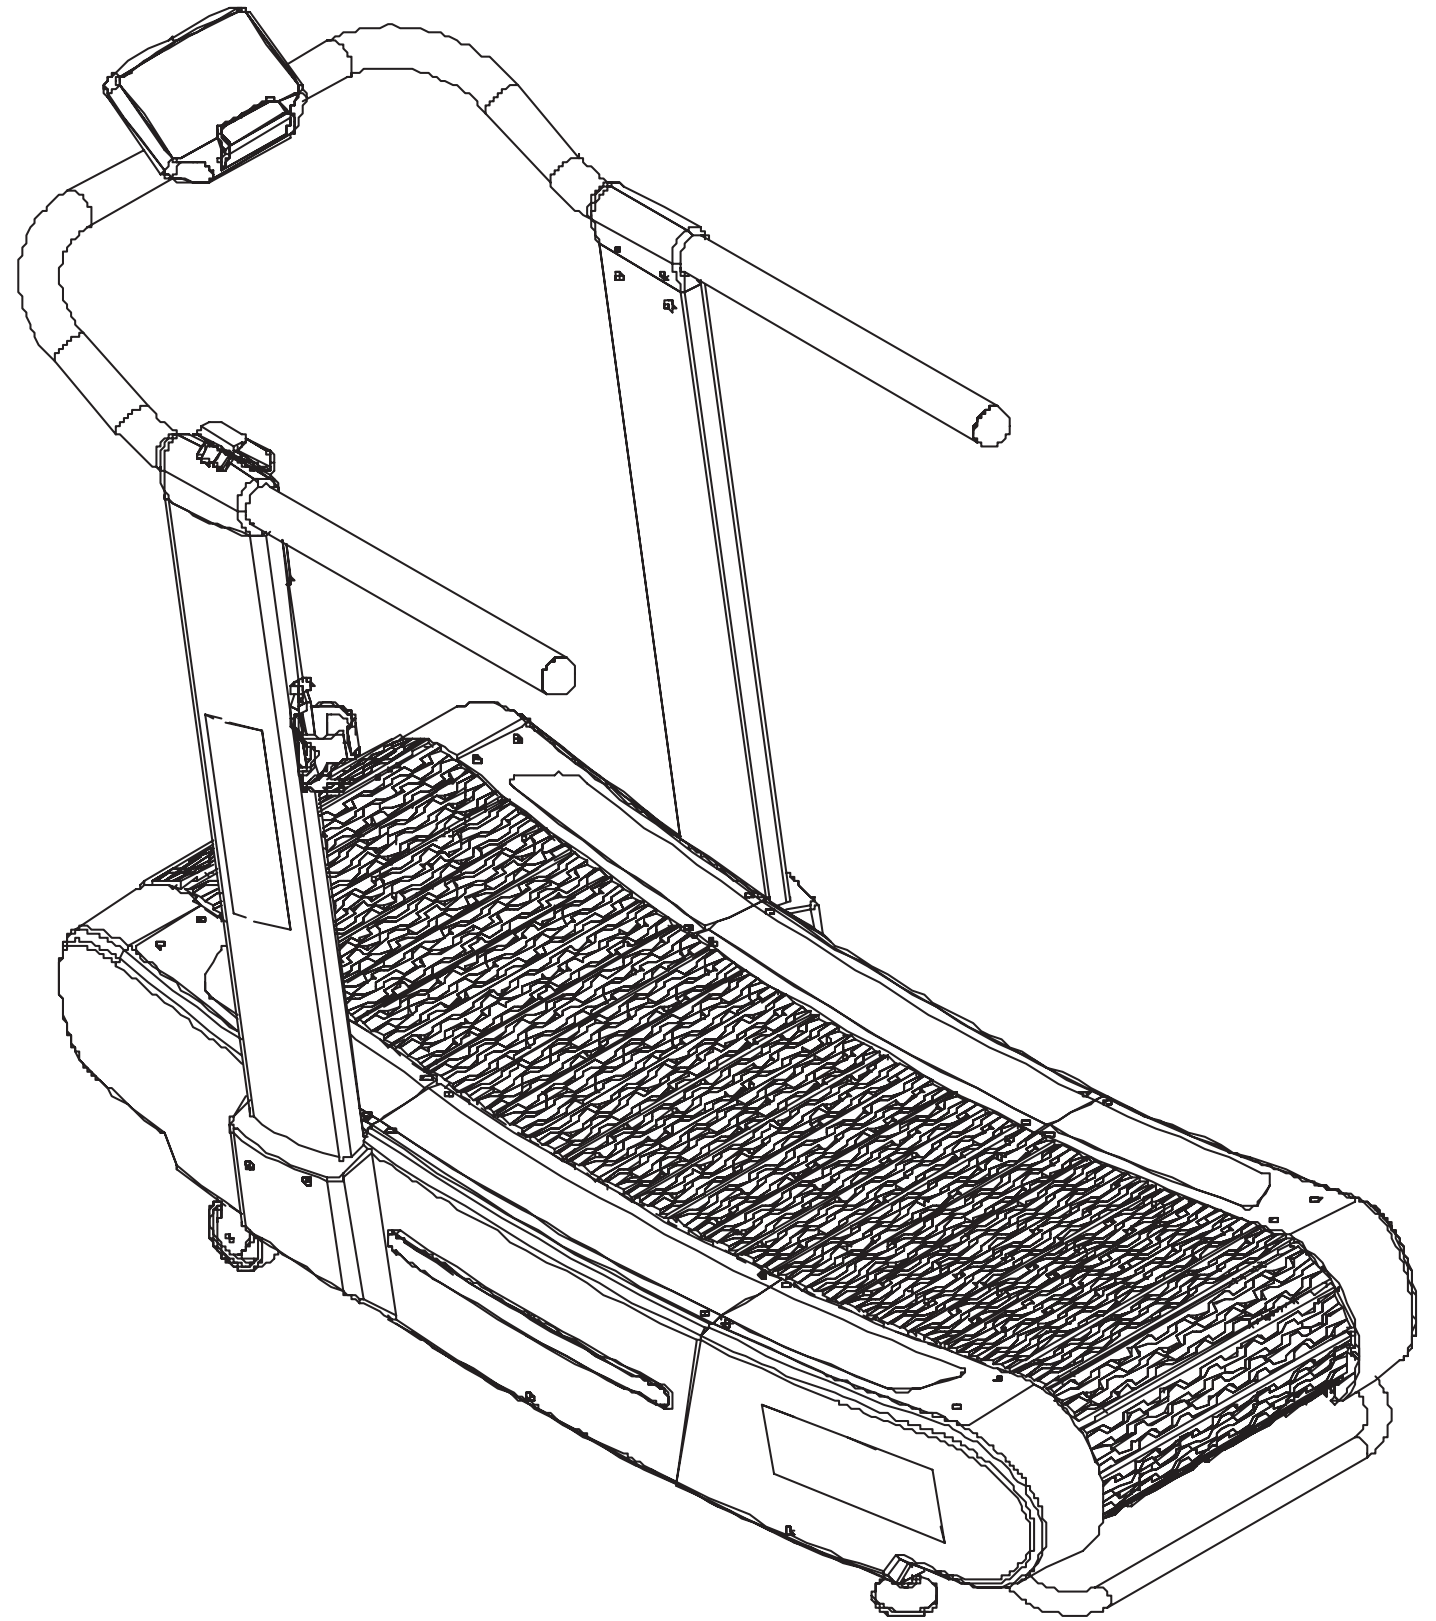


A-x1

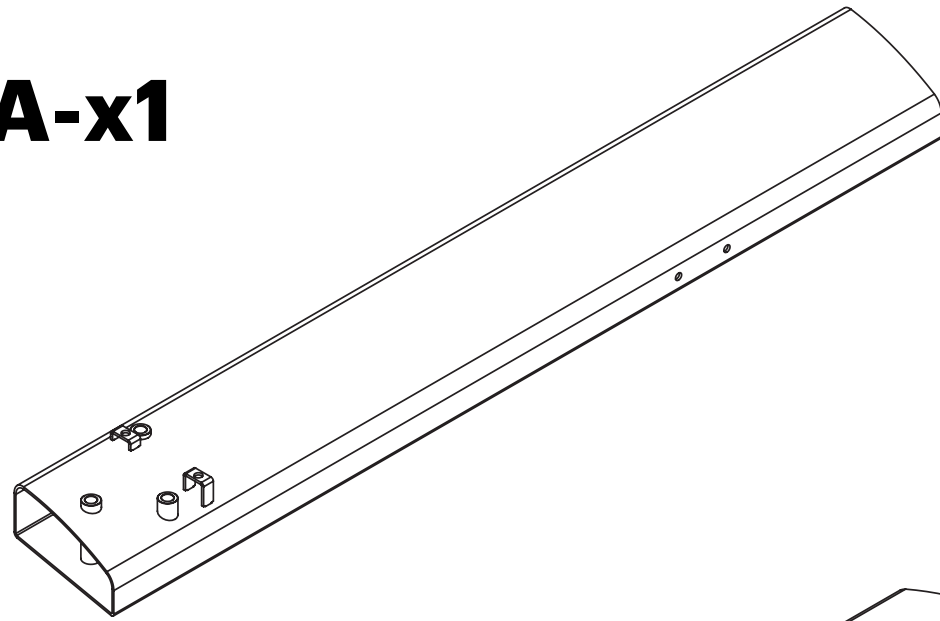


C-x1

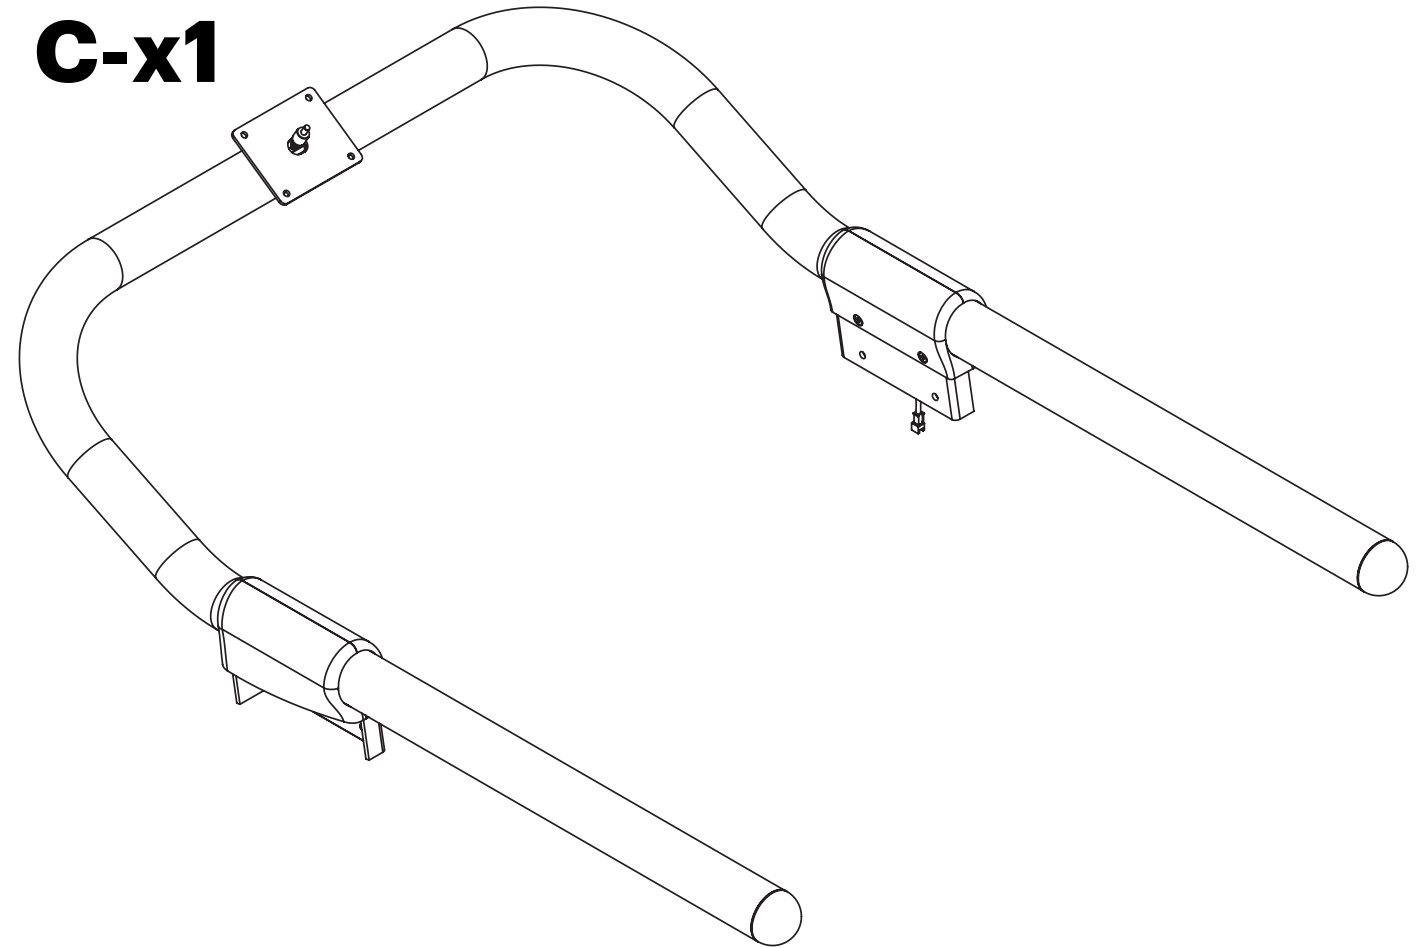


B-x1

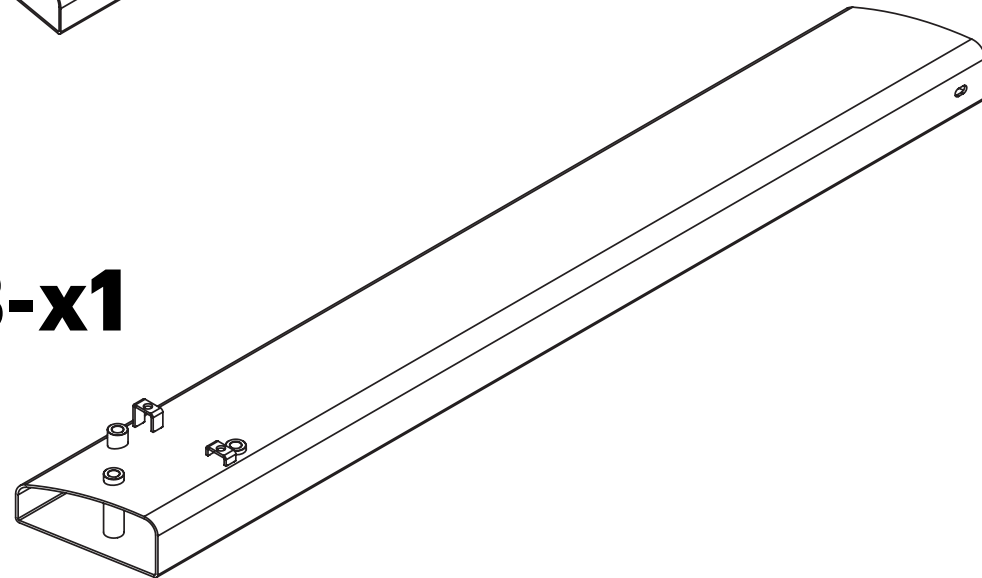


F-x1

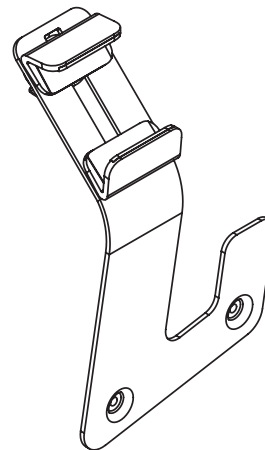


G-x1

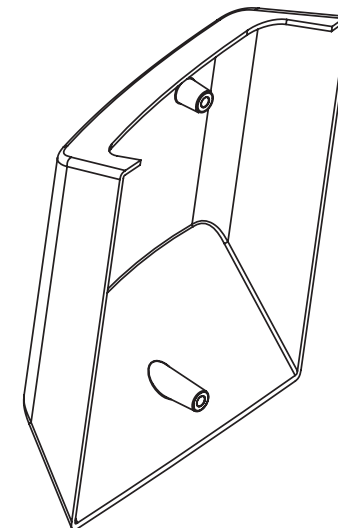


H-x1

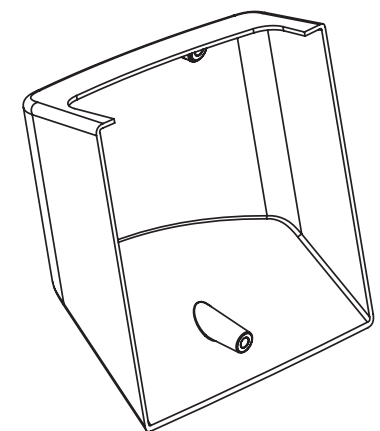


D-x1

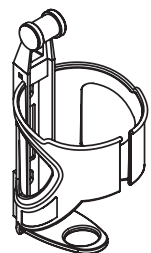

E-x1

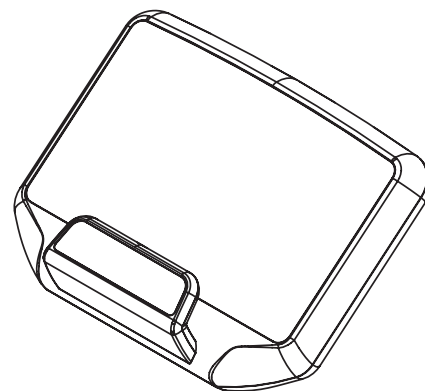


6-M10x90IL AA

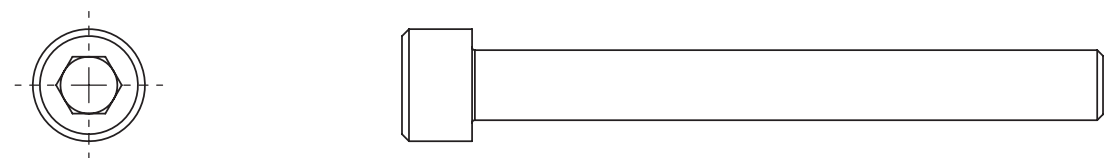

6-M8x12L GG



6-018x010.5X1.5t BB

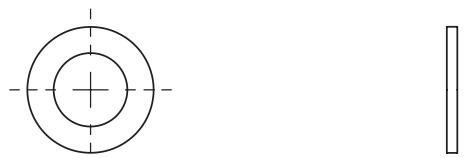

6-M5x16L HH



2-M5x16L CC




3MM LL



6-M5x12L DD




4MM KK

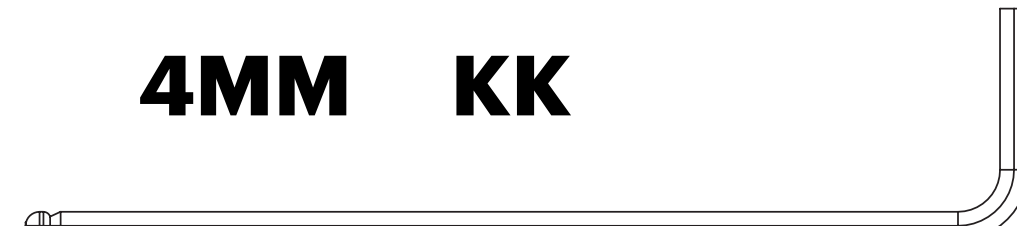

2-M5x25L EE




5MM JJ

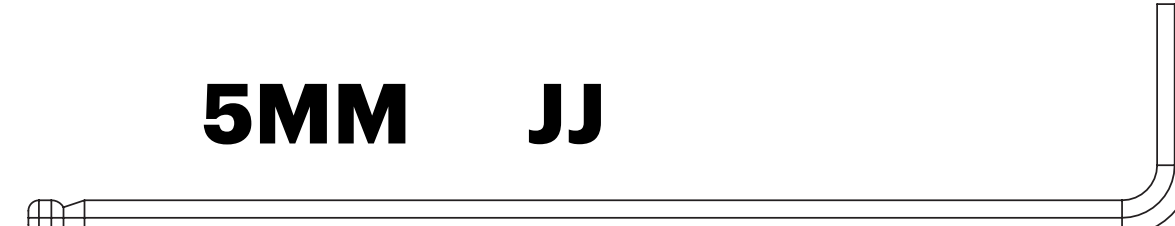

2-M5x30L FF





8MM II




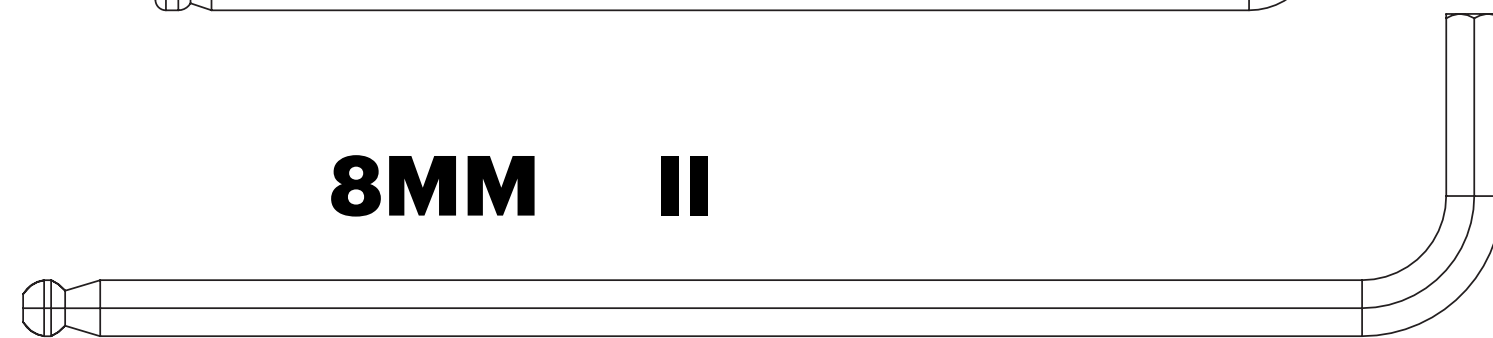





Unpack the treadmill base and parts and ensure that all listed parts are included in the packaging. Place the treadmill base facing forward (logo will be at the rear of the base).

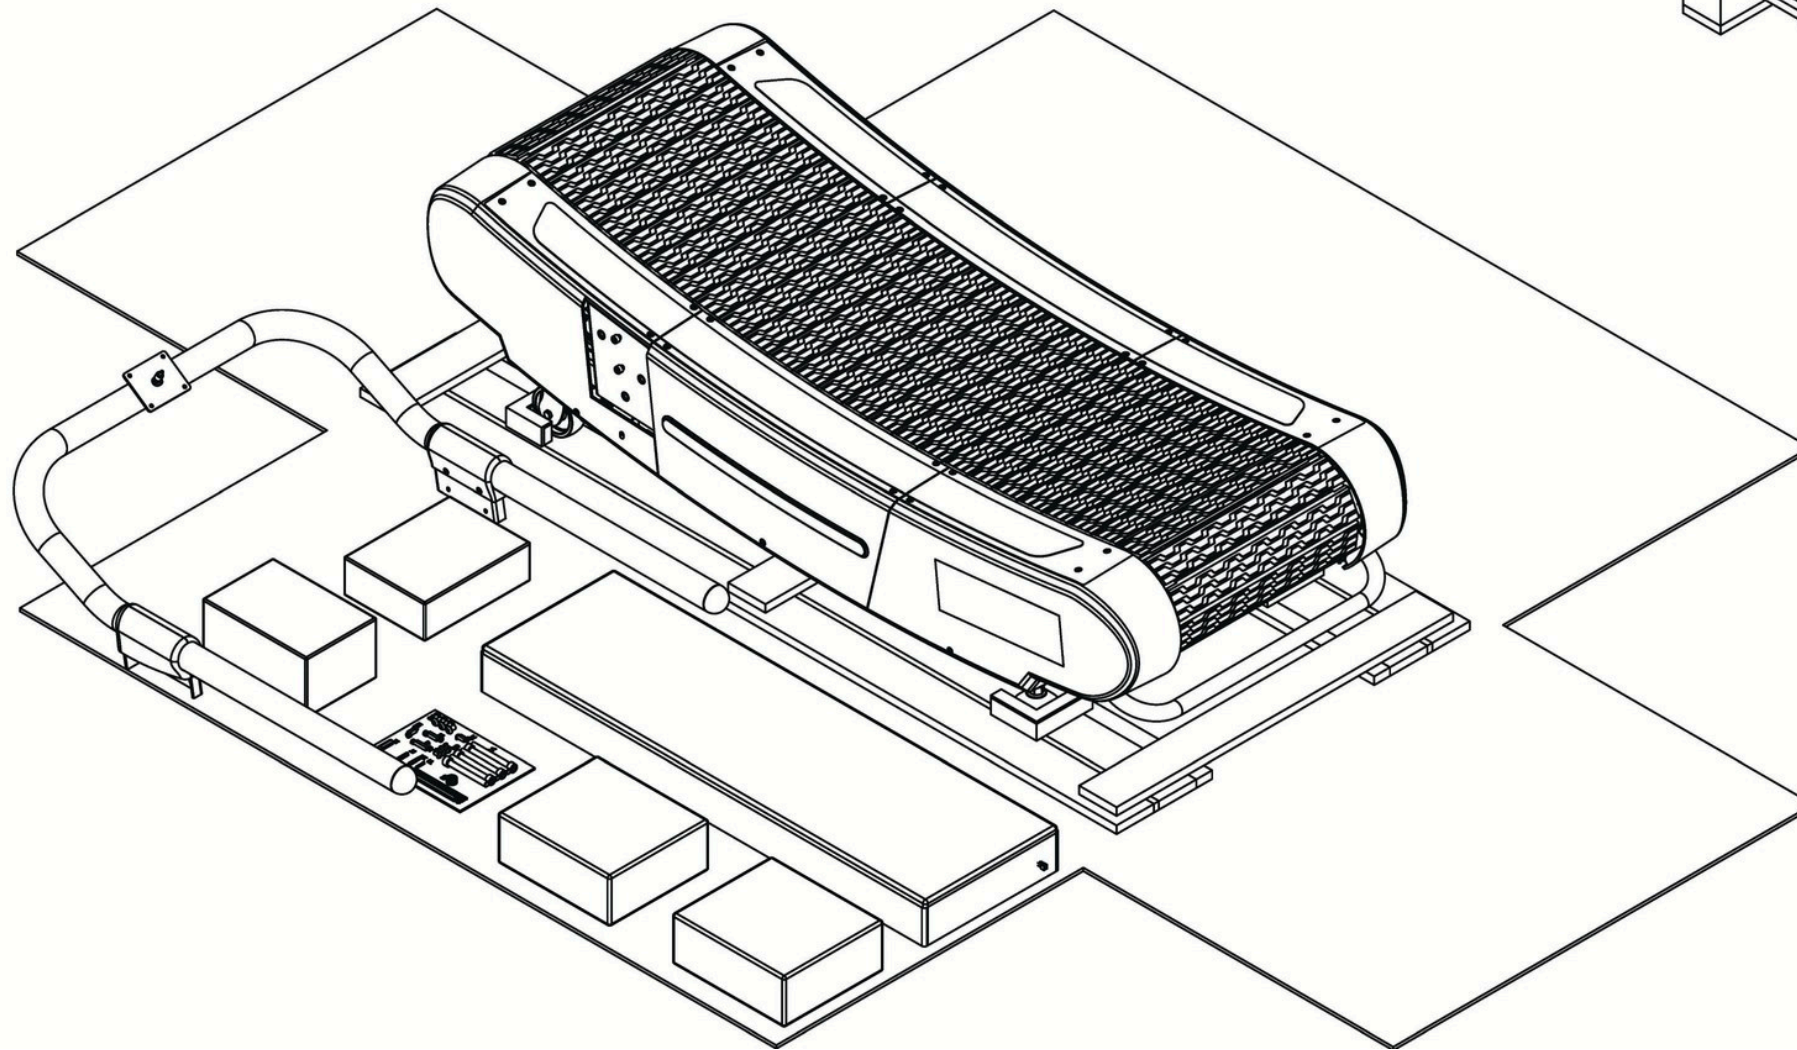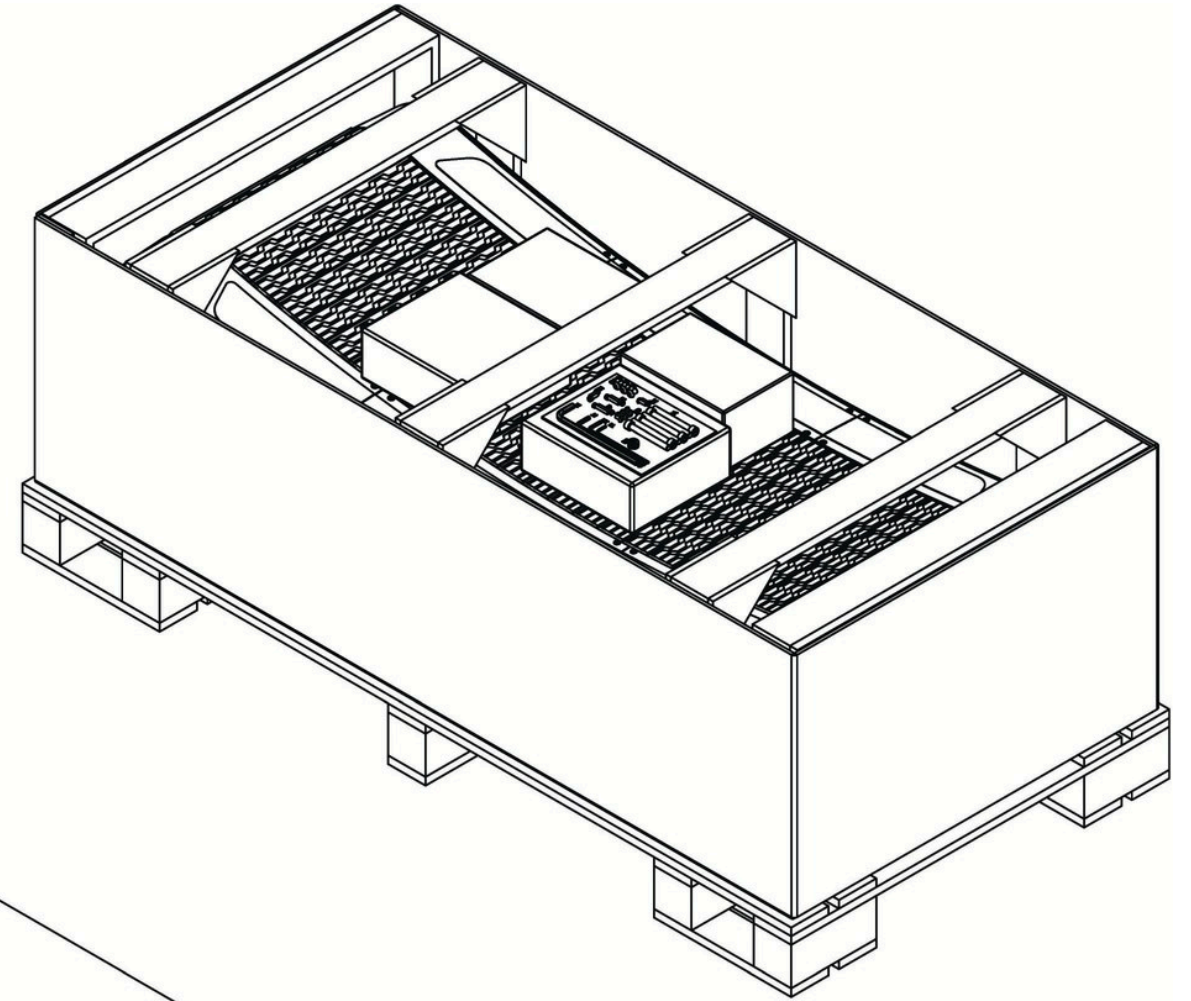


With the treadmill base facing forward, attach the left upright handle (A) to the left side of the base with 3 screws (AA) and 3 washers (BB), using the included 8mm allen wrench (II)

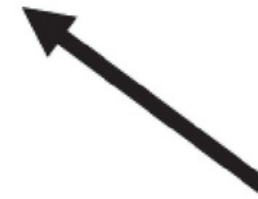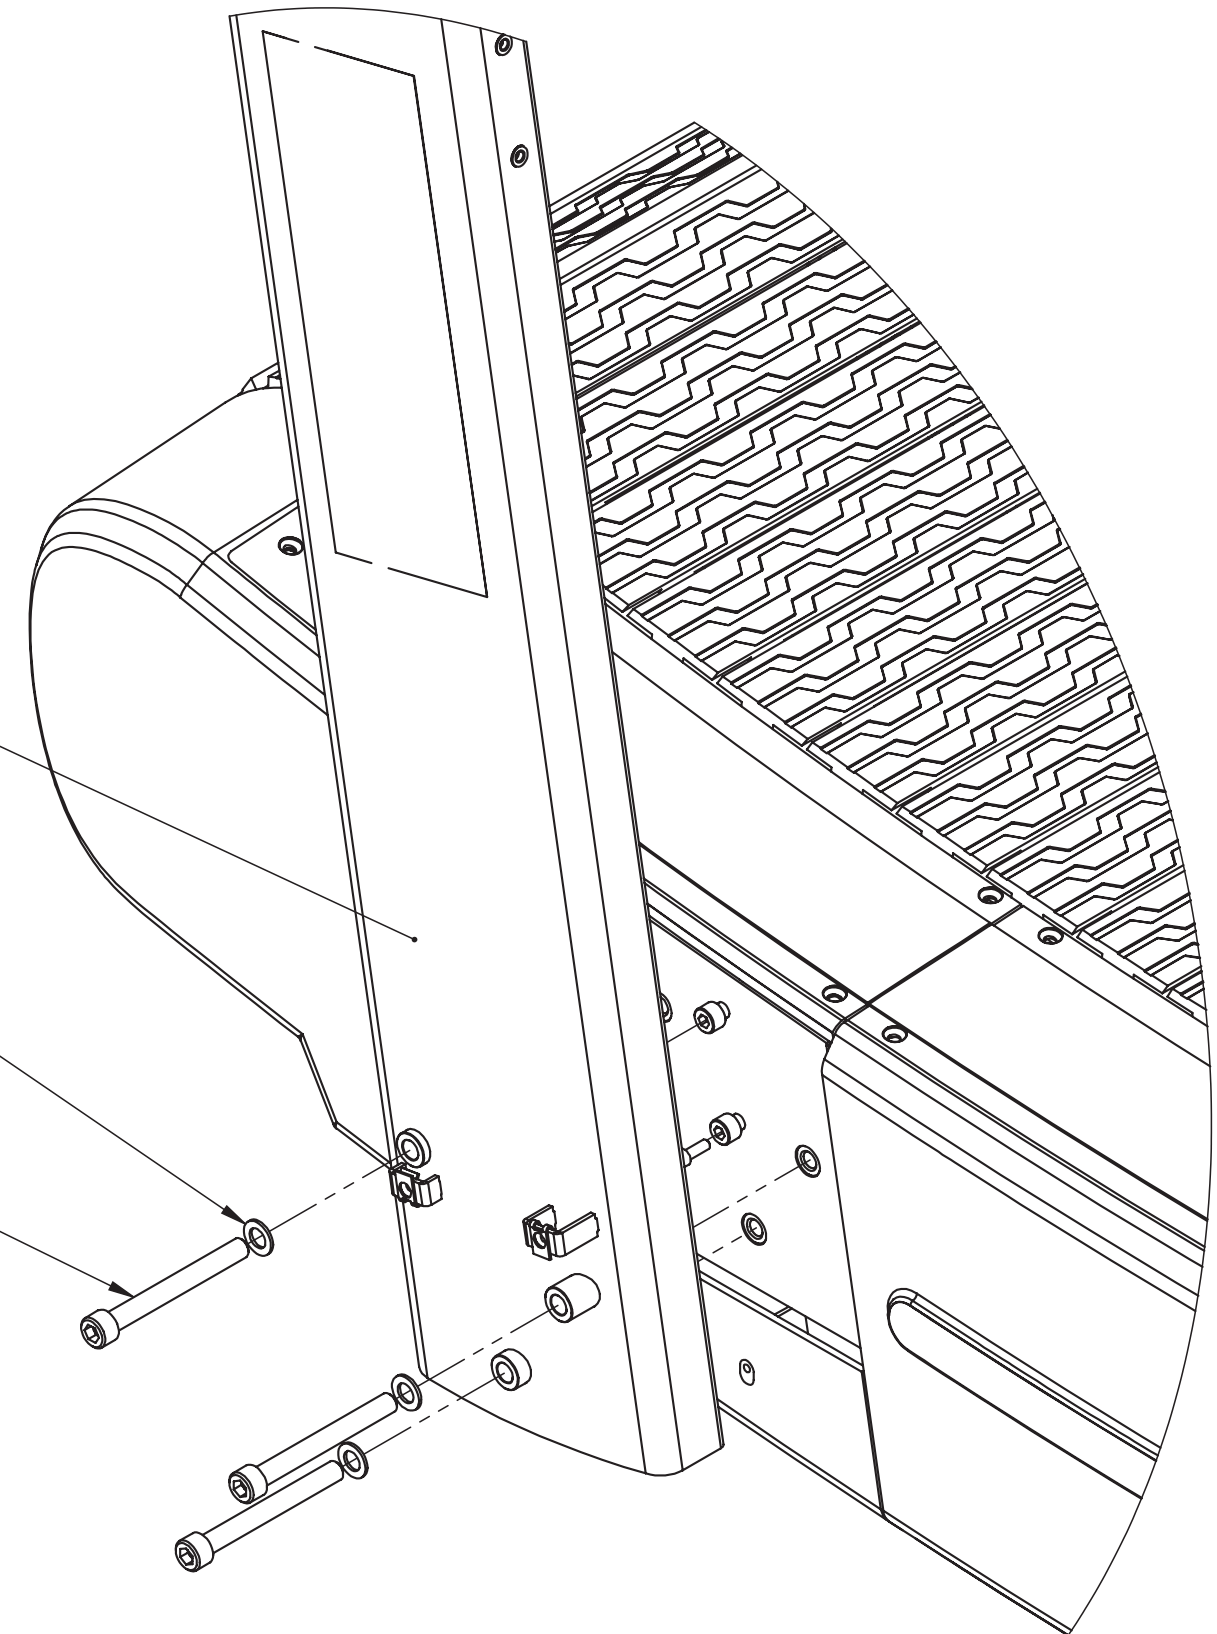
FRONT**A****BB****AA****8MM II****AA x3****BB x3**

On the right side of the base, connect wire FW to wire BW and repeat the previous step to attach the right upright handle (B) to the right side of the base.

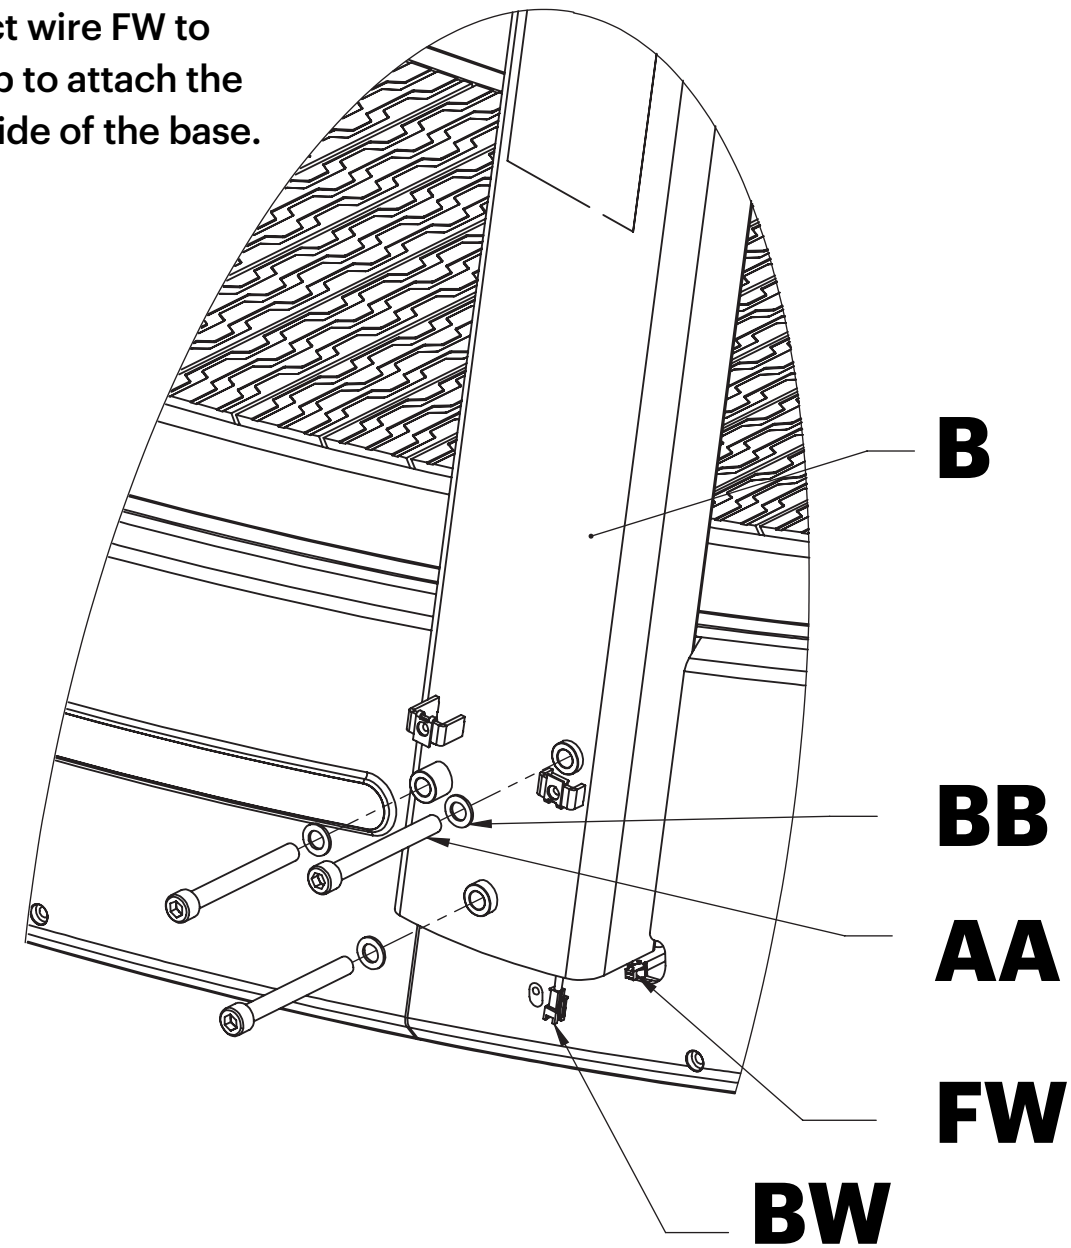

FRONT

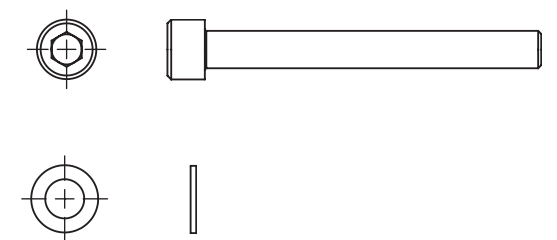


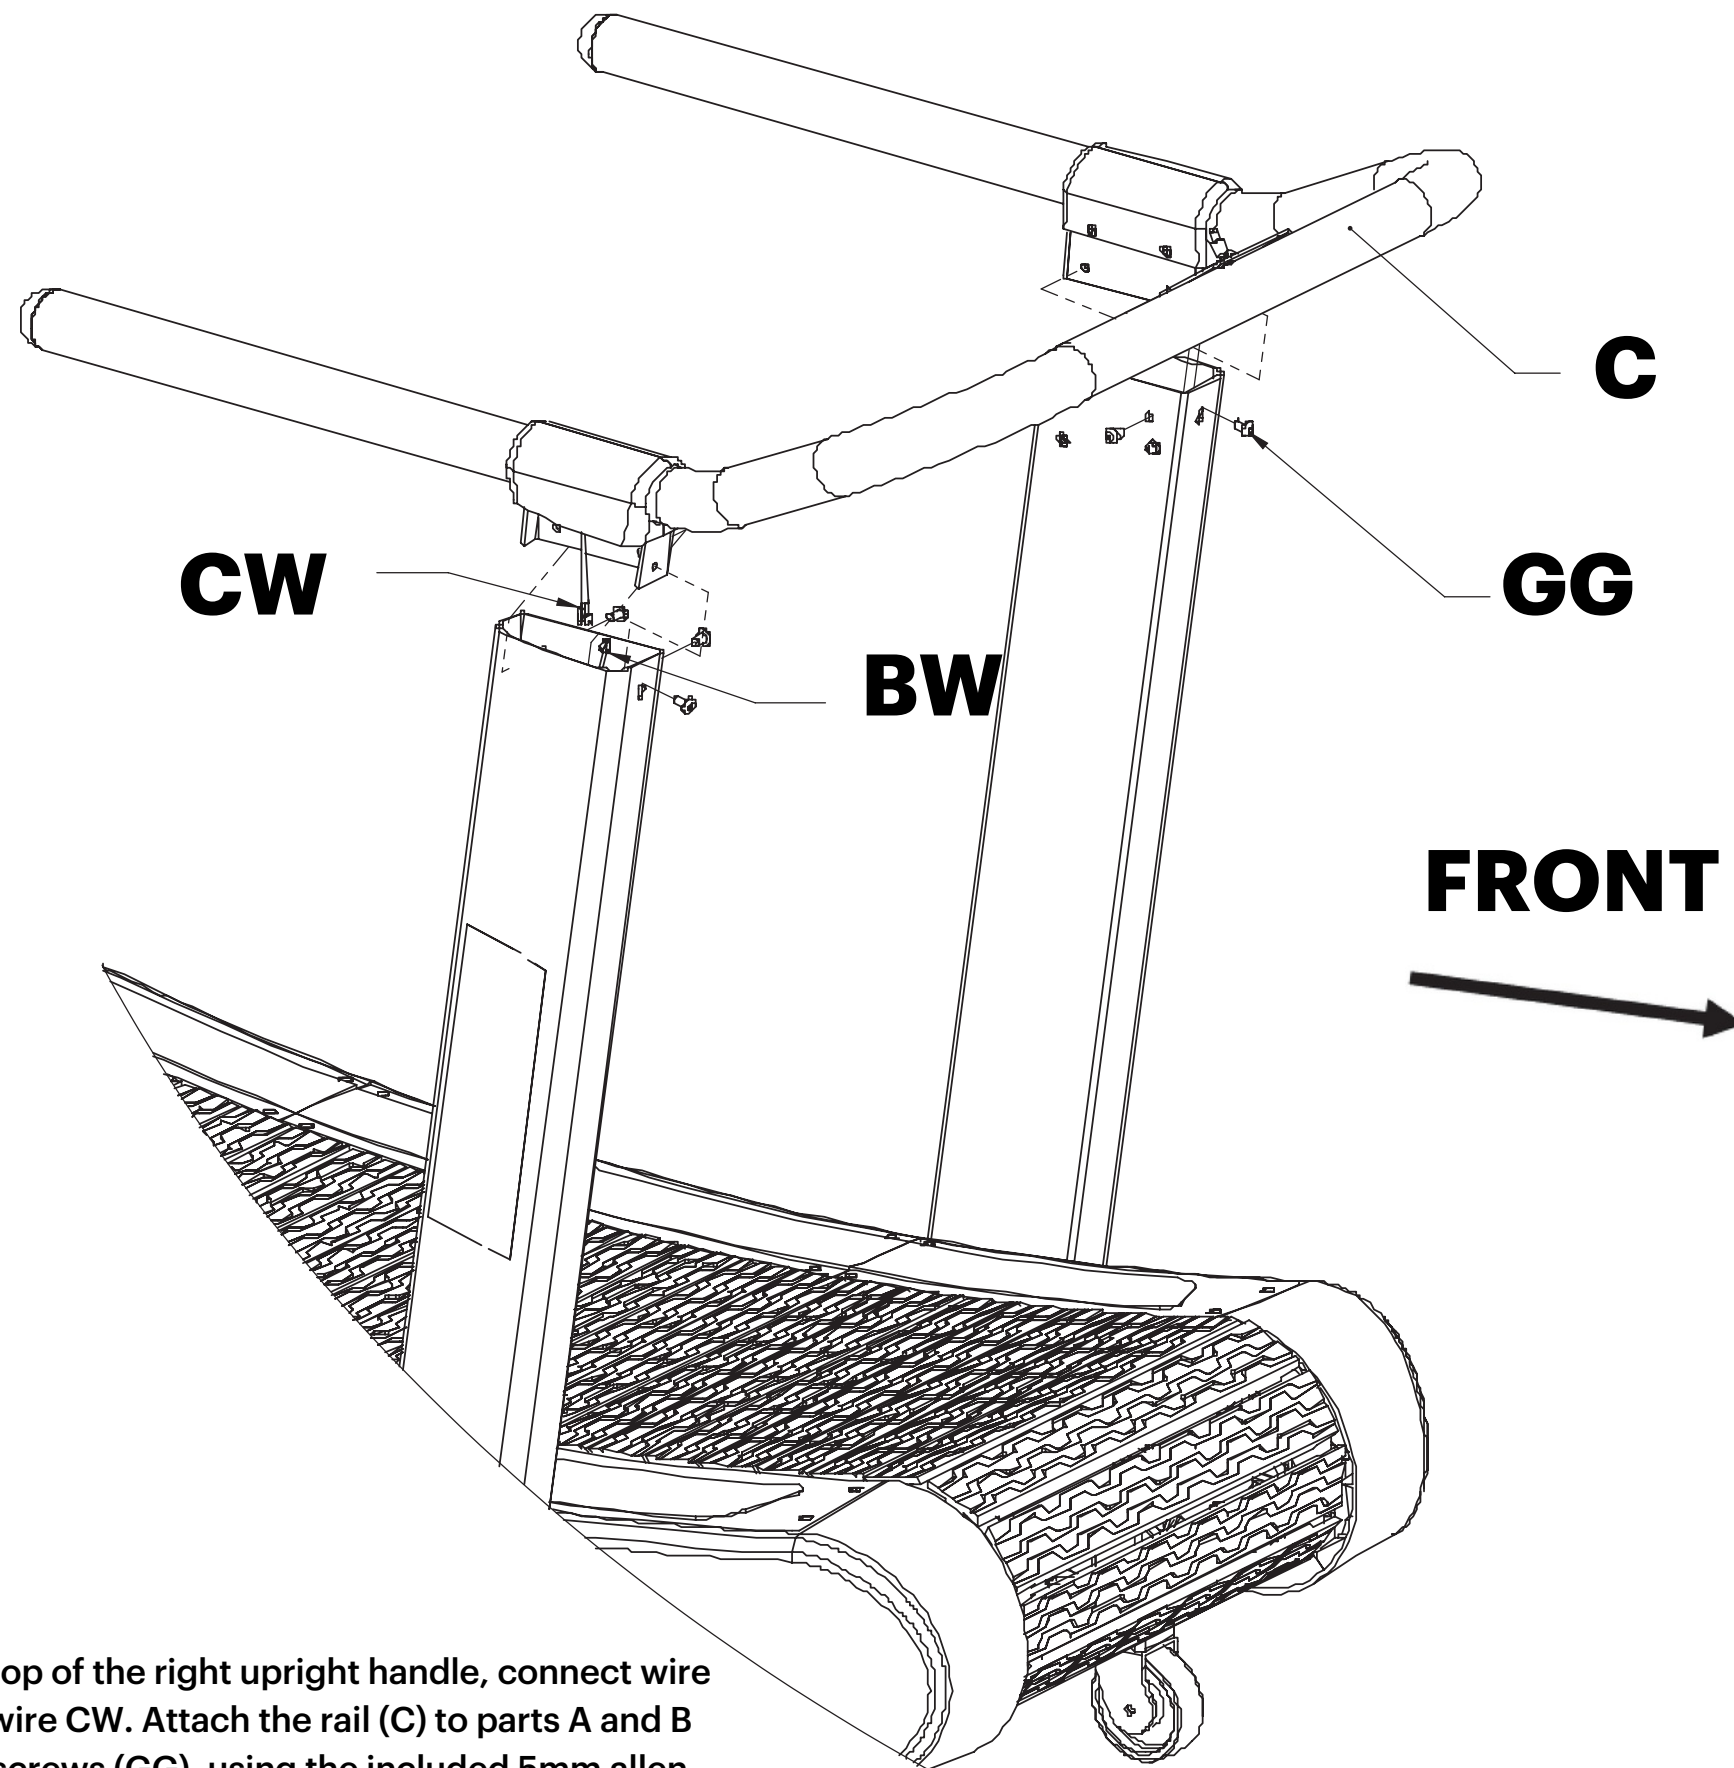**5MM JJ****GG x6**

At the top of the right upright handle, connect wire BW to wire CW. Attach the rail (C) to parts A and B with 6 screws (GG), using the included 5mm allen wrench (JJ).

Attach the cup holder (D) to the left upright handle with 2 screws (CC) using the included 3mm allen wrench (LL).

At the centre of the rail, connect wire CW to wire EW. Attach the console (E) to the centre of the rail (C) with 4 screws (DD) using the 3mm allen wrench. (LL)

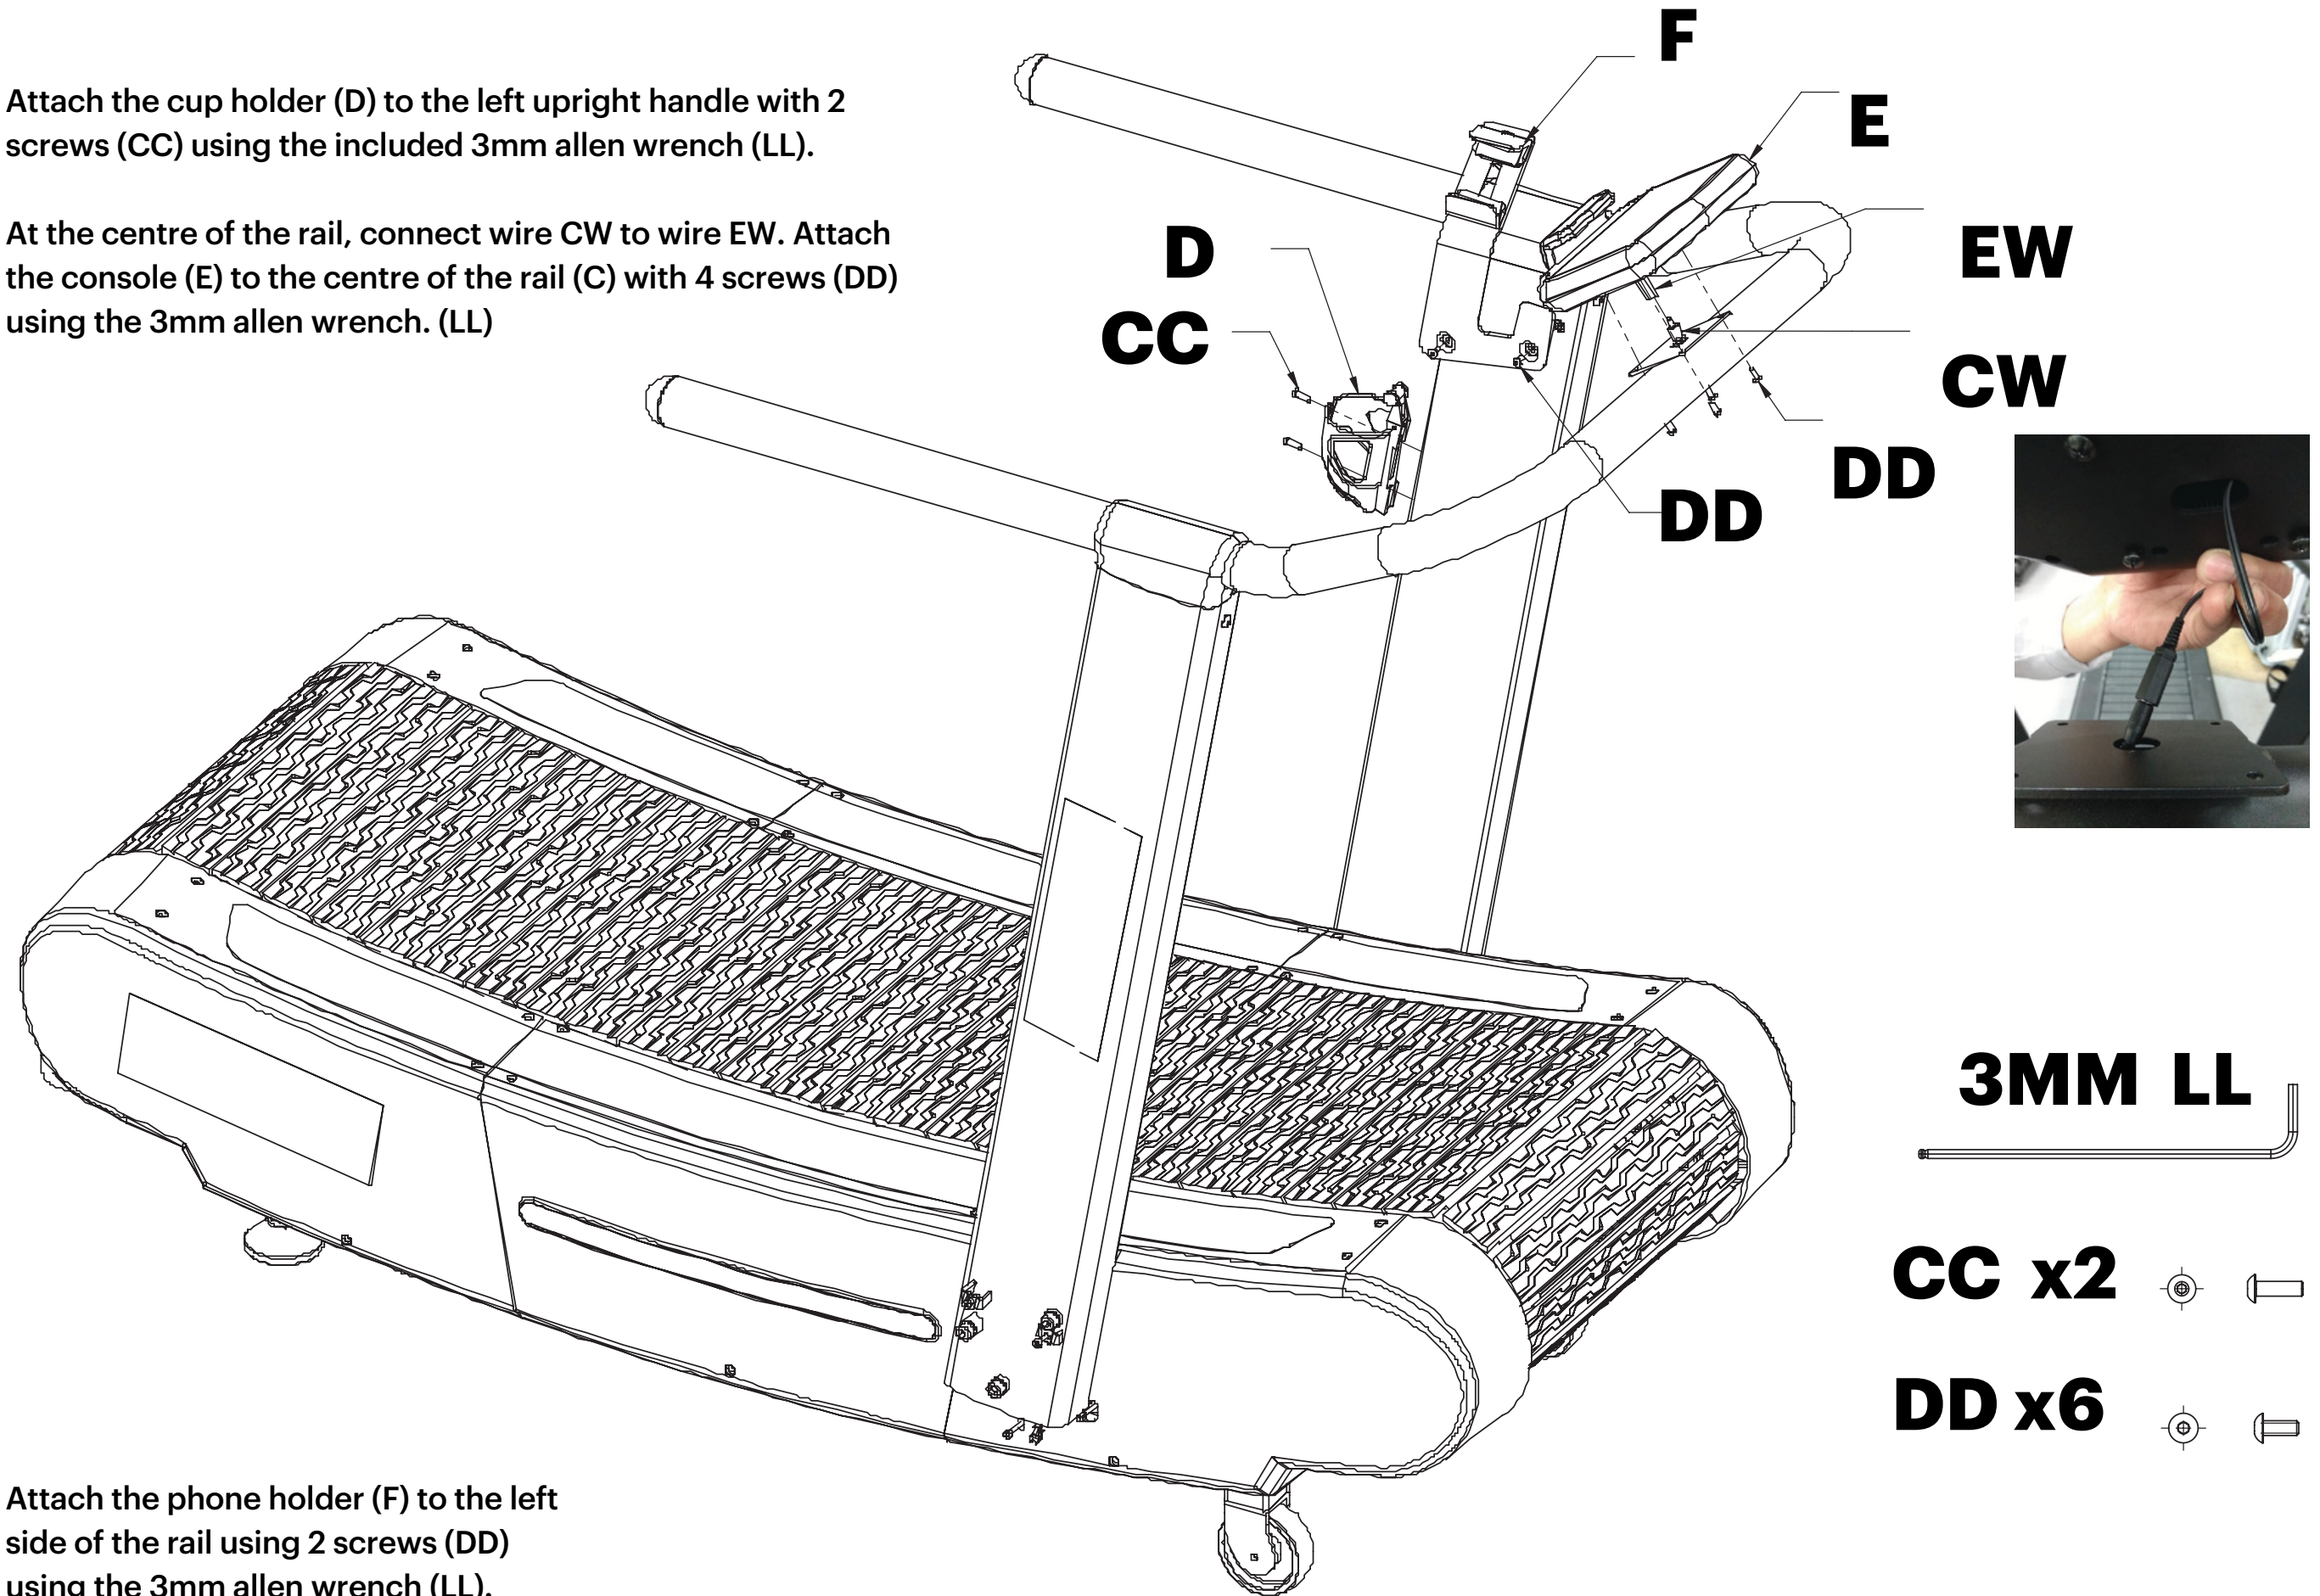


Attach the left upright handle cover (G) to the left upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm allen wrench (KK).

Attach the right upright handle cover (H) to the right upright handle with 1 screw (HH) at the top right corner of the cover, 1 screw (EE) at the left corner, and 1 screw (FF) at the bottom of the cover, using the included 4mm allen wrench (KK).


4MM KK



HH x2



EE x2



FF x2

