


AIR CYCLE PRO

Console Manual

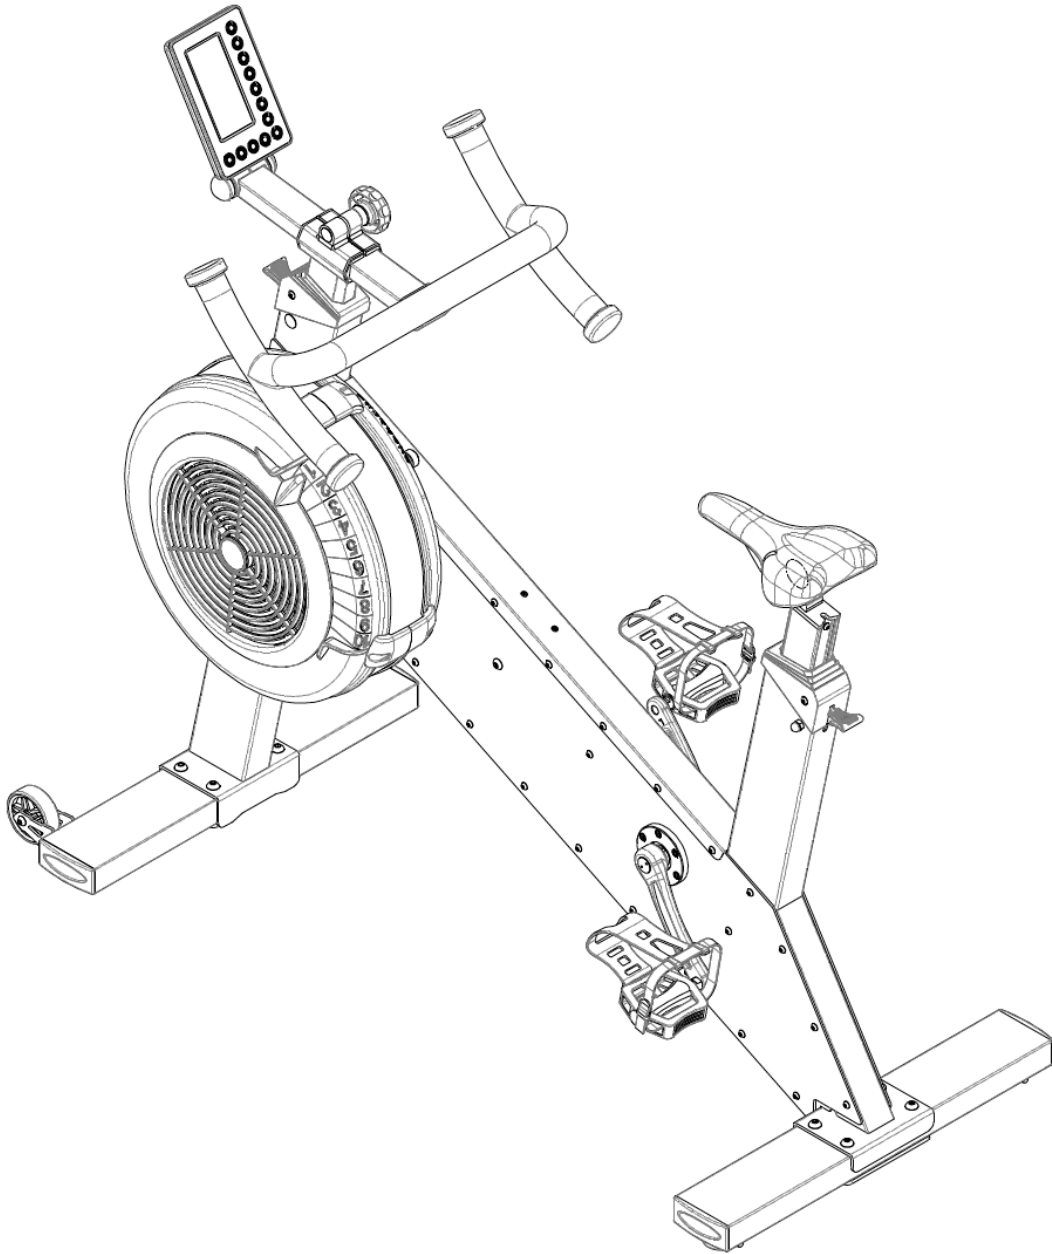

Assembly Instructions / Owner's Manual

IMPORTANT:

READ ALL ASSEMBLY INSTRUCTIONS AND SAFETY PRECAUTIONS BEFORE USING THIS PRODUCT. REFERENCE ALL SAFETY GUIDELINES AND WARNING LABELS. RETAIN PRODUCT LITERATURE FOR FUTURE REFERENCE.

SAFETY:

PROPERLY WARM UP AND STRETCH BEFORE EXERCISING. IF YOU FEEL PAIN OR DIZZINESS AT ANY TIME WHILE EXERCISING, STOP IMMEDIATELY AND CONSULT YOUR PHYSICIAN.

ASSEMBLY PREPARATION

- To ensure ease of product assembly, please take time to verify the size and quantities of all required assembly hardware. Use the itemized parts listing and hardware chart for reference.
- The product assembly process has been documented in easy to follow steps. Please read all assembly instructions carefully. Take time to review the manual and familiarize yourself with the entire assembly process before proceeding.
- Assembly Tip: It is always helpful to pre-stage the items needed for each assembly step.
- Perform product assembly in a 4-ft. x 10-ft. flat area. Note: After assembly is completed, allow a minimal 2-3 feet of space on each side of rower for user access and dismounting.
- Do not dispose of any packaging materials until assembly of the product is completed.
- Assembly tools are included, but you may also use standard household tools to complete assembly of this product.

IMPORTANT PRECAUTIONS


WARNING: To reduce the risk of injury, please read the following precautions before assembling or using your new product.

- It is the responsibility of the owner to ensure that all users of this equipment are adequately informed of stated precautions.
- Read all instructions and enclosed literature carefully. Understand the assembly and operation before using the equipment.
- Use equipment on a flat level surface. Use adjustment levelers on the bottom of equipment to help stabilize unit.
- It's recommended to place an exercise mat beneath the equipment for added protection of floors or carpets.
- Keep children and pets away from equipment at all times.
- Inspect product on a frequent basis. Tighten loose assemblies or hardware as needed. Replace worn or damaged parts.
 - This equipment is intended for indoor use only. Use in non-recommended environment can lead to serious injury and will void all related warranties and liabilities.
- Recommended user weight should not exceed the maximum weight limit.
- Keep equipment clean and properly maintained.
- Observe and adhere to all warning labels posted on equipment.
- Properly warm up and stretch before starting any strength training or cardio exercise routine.
- If you feel pain or dizziness at any time while exercising, stop immediately and consult your physician.


SAFETY WARNING: Before starting an exercise program, consult your physician. This is especially important for individuals over the age of 35 or persons with pre-existing health problems. It's important to read all instructions carefully. We assume no responsibility for personal injury or consequential damages sustained by or through the use of this equipment. Additional terms and conditions are listed in the back of this manual or enclosed owner's manual.

Colors and specifications subject to change without notice.


NOTE: Before assembly please lay out ALL pieces accordingly to ensure you are not missing any items. PLEASE BE CAUTIOUS as some components may be sharp and can cause harm if not handled correctly. Always use safety measurements when assembling any piece of equipment or machinery.

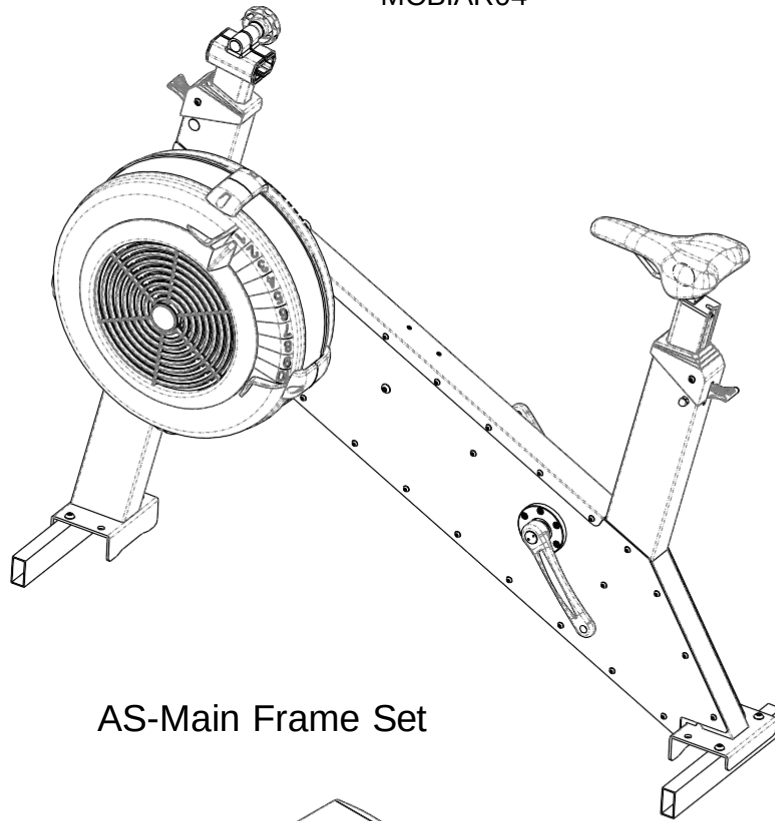


AS-Main Frame Set

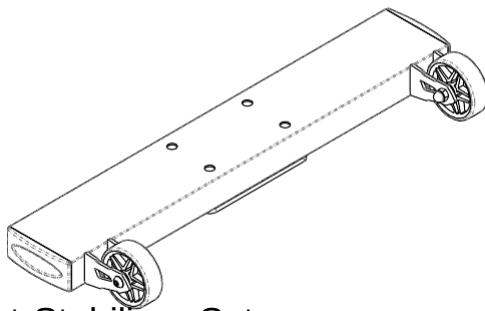


DS-Front Stabilizer Set

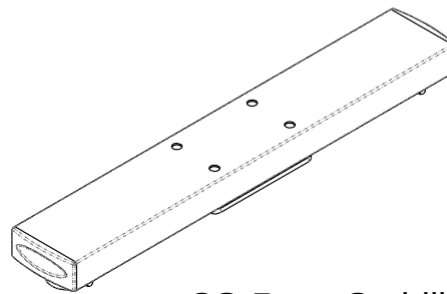

CS-Rear Stabilizer Set

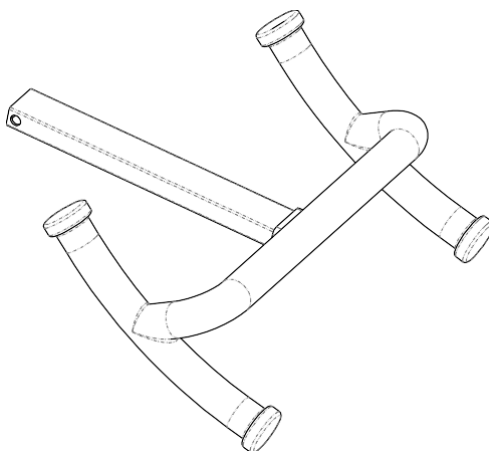


E-Handle Bar

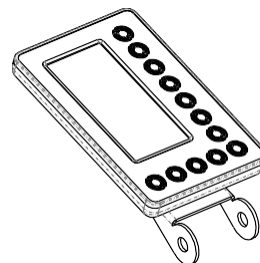


GS-Console Set


G2-Right Pedal

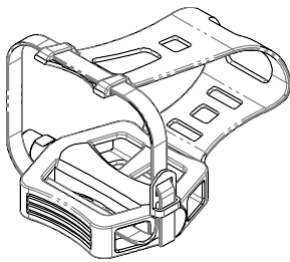


G1-Left Pedal

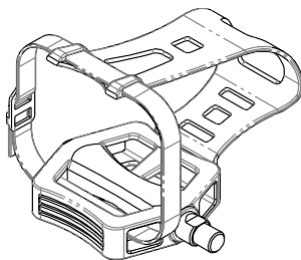


J9-Nut Cap

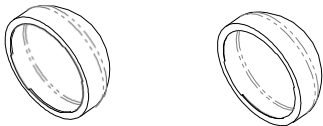

J7-Console Pivot Bushing

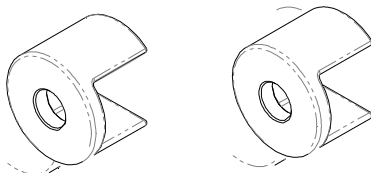


J2-Bolt M10 x 55mm

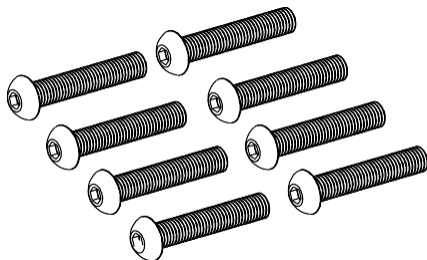

J4-Nut




J8-Hex Head Screw

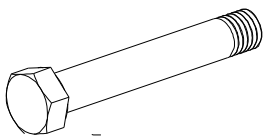



J3-Flat Washer

J6-Flat Washer




J5-Flat Washer

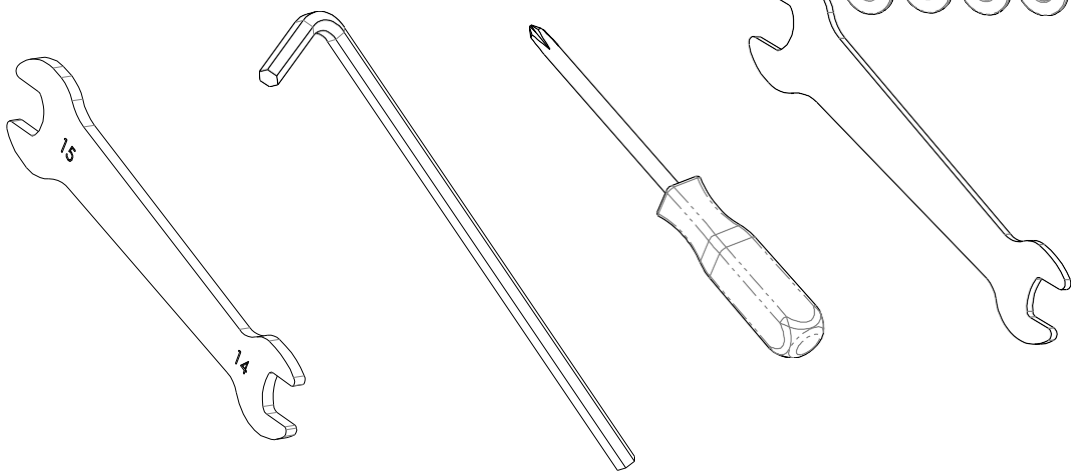


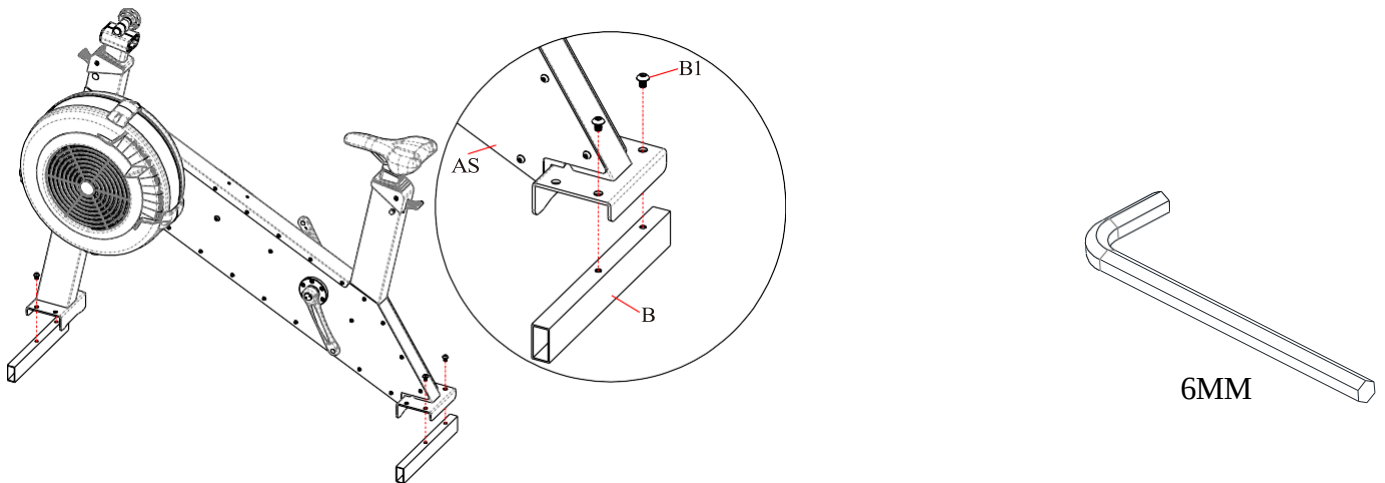Step 1.


Use the 6mm Allen wrench to remove 2x Bolts M8x12mm (B1) and disassemble the Packaging Tube (B) from the Main Frame Set (AS). The Packaging Tube (B) is used for packaging purposes only and won't be needed again during/after the assembly.

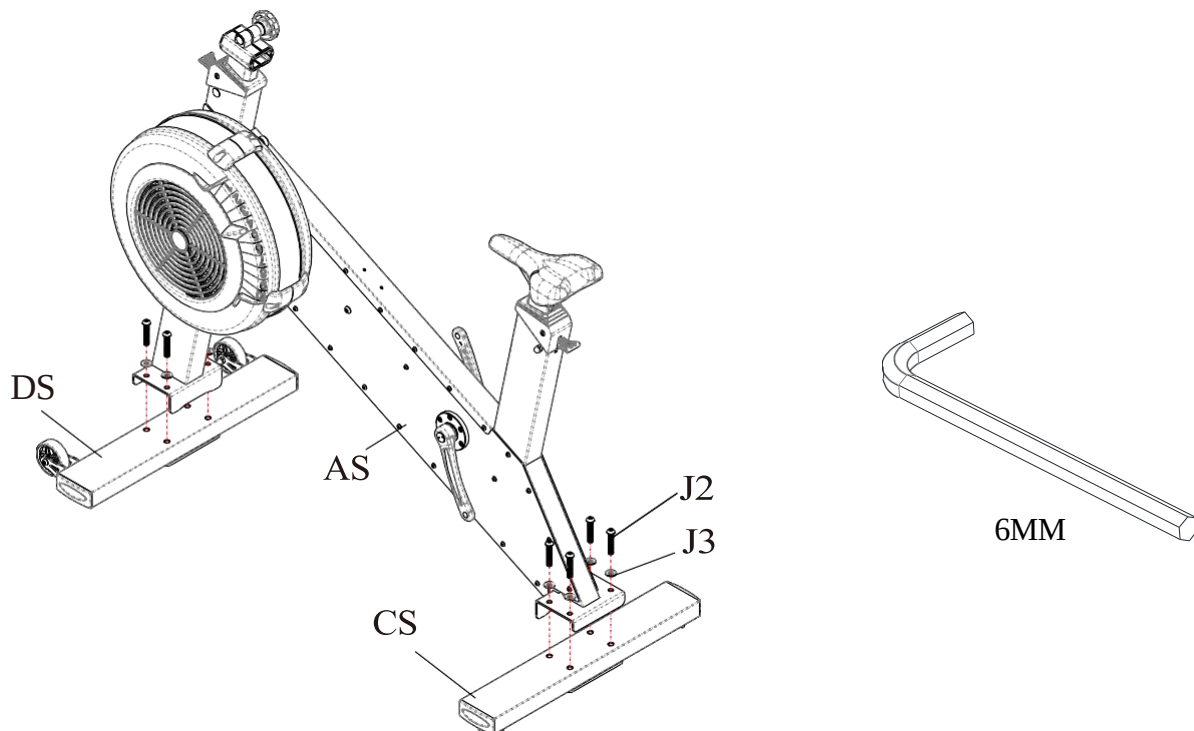Step 2.


Attach the Front Stabilizer Set(DS) & the Rear Stabilizer Set(CS) onto the Main Frame Set(AS) and secure them with 4x Bolt M10x55mm (J2) and 4x Flat Washer (J3).

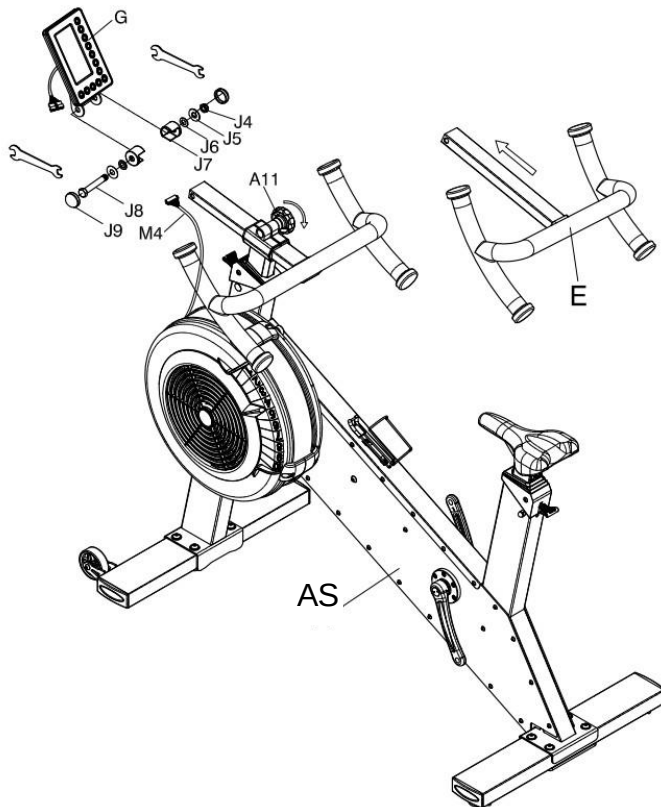Step 3.


Remove 1x hex head screw (J6), 2x Flat Washer (J6), 2x Flat Washer (J5), 1x Nut (J4) and 2x Console Pivot Bushing (J7) from the Handlebar (E). Slightly loosen the Knob (A11) and then insert the Handlebar (E) to the Main Frame Set-(AS). Secure the Console Set(GS) onto the Handle Bar (E) with 1x Hex Head Screw (J8), 2x Flat Washer (J6), 2x Flat Washer (J5), 1x Nut (J4) and 2x Console Pivot Bushing (J7). Finally, put on 2x Nut Cap (J9). Connect the Console Wire (M4) with console wire in Console Set(GS). Then, connect the other end of the Console Wire (M4) together with the Generator Wire (M1), the VR Sensor Wire (M2) and the Resistance Level Wire (M3). Secure the Console Wire (M4) to the Handle Bar (E) with 1 x Screw (M5).

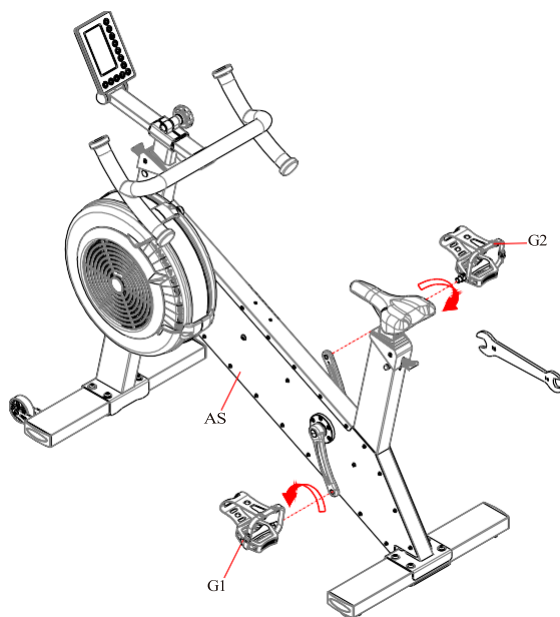Step 4.

Attach the Left Pedal (G1) onto the Main Frame Set(AS) by screwing in Counter-Clockwise; repeat for the Right Pedal (G2) by screwing in Clockwise.

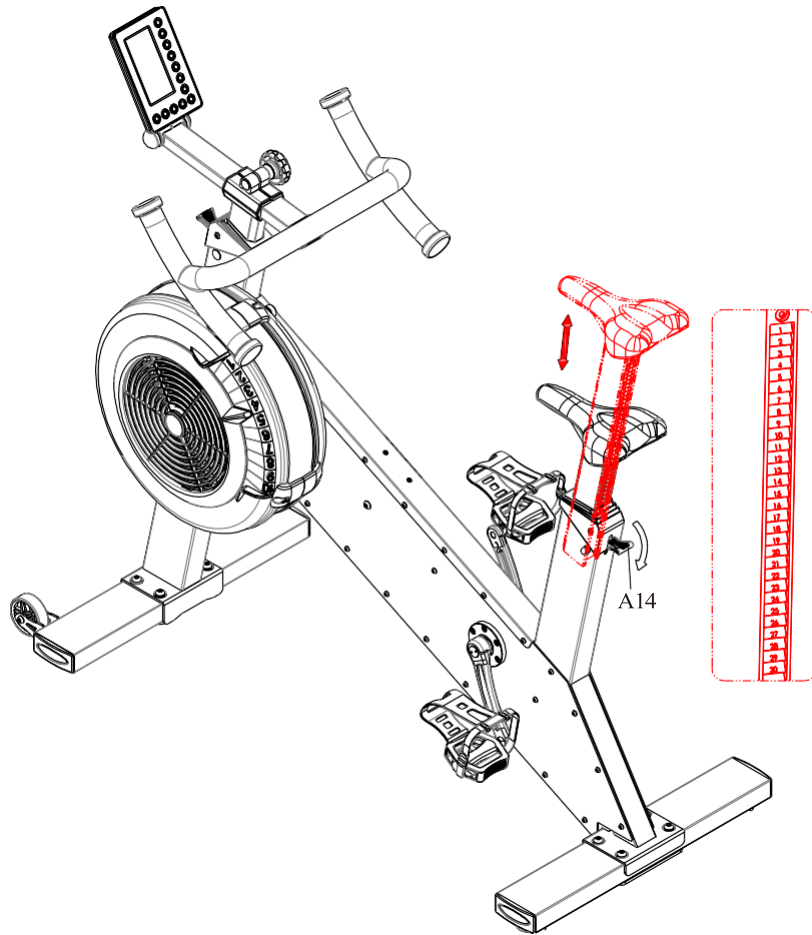Step 5.

Press the Lever (A14) and pull upwards the seat post to desired height.

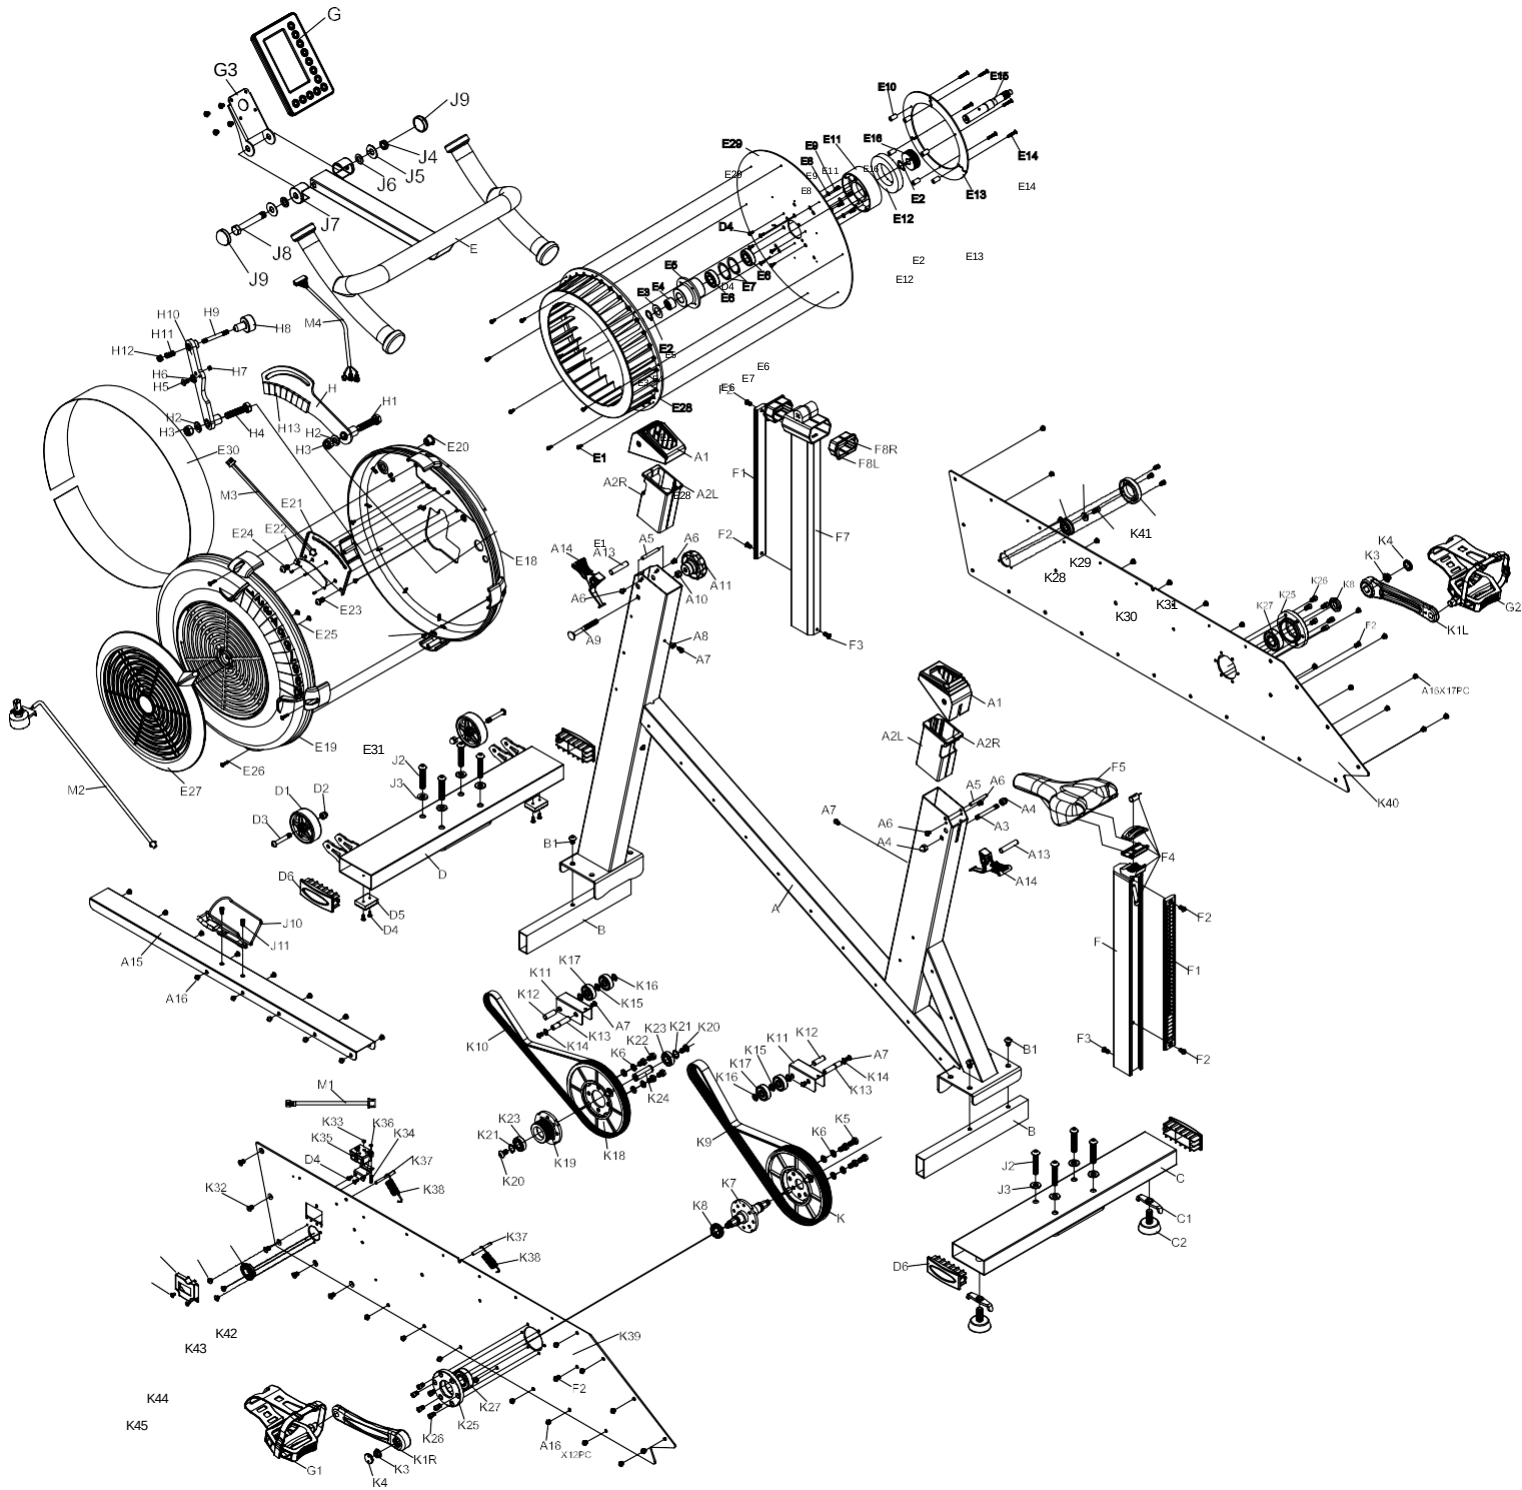

Part List

NO.	NAME	SPECIFICATION	Q'TY	NO.	NAME	SPECIFICATION	Q'TY
A	Main Frame		1	E8	Spring Washer	M5	4
A1	Retractable Sleeve		2	E9	Screw	M5×10mm	4
A2L	Square Inner Sleeve-L		2	E10	Aluminum Sleeve		6
A2R	Square Inner Sleeve-R		2	E11	Magnet Base		1
A3	Double-Head Screw	ø8x65mm	1	E12	Ring Magnet		1
A4	Nut	M8	2	E13	Aluminum Plate		3
A5	Round Steel Rod	ø6x50mm	2	E14	Screw	M4×25mm	6
A6	Screw	M6×10mm	30	E15	Flywheel Shaft		1
A7	Screw	M6×10mm	6	E16	Drive Belt Pulley- PJ		1
A8	Spring Washer	M6	1				
A9	Screw	M8x80mm	2	E18	Inner Main Cover		1
A10	Nut	M8	2	E19	Outer Main Cover		1
A11	Knob	M8	2	E20	Plug	ø17	1
A13	Lever Support Column	ø10x49.5mm	2	E21	Magnetic Resistance Level Shield		1
A14	Lever		2	E22	Reed Switch Board		1
A15	Upper Steel Cover	Stainless Steel 0.8T	1	E23	Screw	M8x16mm	2
A16	Screw	M6x6mm	15	E24	Tapping Screw	M2x6mm	3
B	Packaging Tube		2	E25	Tapping Screw	M4×10mm	2
B1	Screw	M8x12mm	4	E26	Tapping Screw	M4×20mm	4
C	Rear Stabilizer		1	E27	Damper Disc Cover		1
C1	Wing Nut	M12	2	E28	Plastic Flywheel Fan		1
C2	Knob		2	E29	Fan Plate		1
D	Front Stabilizer		1	E30	Mesh		1
D1	Transportation Wheel		2	E31	Tapping Screw	M4×10mm	4
D2	Nut	M8	2	F	Saddle Post		1
D3	Screw	M8x50mm	2	F1	Adjuster Plate		2
D4	Tapping Screw	M4×12mm	12	F2	Screw	M6x12mm	6
D5	Square Pad		2	F3	Screw	M6x10mm	2
D6	Tube End Cap	40×100	4	F4	Saddle Set		1
E	Handle Bar Assembly		1	F5	Saddle		1
E1	Screw	M4	8	F7	Handle Bar Post		1
E2	Clip	S20	2	F8L	Handle Bar Post Sleeve-L		2
E3	Steel Washer		2	F8R	Handle Bar Post Sleeve-R		2
E4	One-Way Bearing	FC2016	1	G	Console		1
E5	Flywheel Bearing Holder		1	G3	Console Base		1
E6	Bearing	6004	2				
E7	Clip	R42	2				

MCBIAR04

NO.	NAME	SPECIFICATION	Q'TY	NO.	NAME	SPECIFICATION	Q'TY
H	Magnet Base		1	K12	Idler Pulley Shaft	Ø10x30mm	2
H1	Screw	M8x40mm	1	K13	Idler Pulley Sleeve	Ø10x50mm	2
H2	Spring Washer	M8	2	K14	Clip	S10	2
H3	Nut	M8	2	K15	Flat Washer	Ø10x1TxØ20	2
H4	Screw		1	K16	Flat Washer	Ø10x1TxØ20	4
H5	Screw	M4x8mm	1	K17	Bearing	6300	4
H6	Powder Metallurgy		1	K18	Drive Belt Disc-PJ	Ø180	1
H7	Magnet	Ø5x3T	1	K19	Drive Belt Pulley-PJ		1
H8	Magnet Control Bar		1	K20	Bolt	M8x16mm	2
H9	Magnet Control Shaft	Ø5x44mm	1	K21	Clip	S15	2
H10	Magnet Control Rod		1	K22	Screw	M8x12mm	4
H11	Spring		1	K23	Bearing	6002	2
H12	Nut	M5	1	K24	Flywheel Bearing Sleeve	Ø15x50mm	1
H13	Magnet	N40	8	K25L	Bearing Holder(L)		1
J2	Bolt	M10x55mm	8	K25R	Bearing Holder(R)		1
J3	Flat Washer	Ø10x2TxØ18	8	K26	Bolt	M6x10mm	12
J4	Nut	½"-13UNC	1	K27	Bearing	6204	2
J5	Flat Washer	½"x1TxØ32	2	K28	Bearing with buckle	6201ZZ	1
J6	Flat Washer	½"x2TxØ23	2	K29	Flat Washer	M6×2T×19	1
J7	Console Pivot Bushing		2	K30	Screw with nylok	M6×12mm	1
J8	Hex Head Screw	½"x3 ¼"	1	K31	Bearing Cap		1
J9	Nut Cap		2	K32	Bolt	M6x12mm	5
J10	Bottle Holder (Optional)		1	K33	Nut	M3	2
J11	Screw	M5x10mm	2	K34	Screw	M3x15mm	2
G1	Left Pedal		1	K35	Electromagnet		1
G2	Right Pedal		1	K36	Electromagnet Base		1
K1L	Left Crank		1	K37	Spring Rod	Ø6x56mm	2
K1R	Right Crank		1	K38	Spring		2
K	Drive Belt Disc- PK	Ø180	1	K39	Iron Side Cover-L		1
K3	Nut		2	K40	Iron Side Cover-R		1
K4	Shaft Cap		2	K41	Screw	M5×8mm	3
K5	Screw	M8x16mm	4	K42	Bearing with buckle	BR-6003ZZ.Z3TPX-1	1
K6	Spring Washer	M8	8	K43	Screw	M5×6mm	3
K7	Shaft		1	K44	Airproof Cover		1
K8	Nut	M20	2	K45	Tapping Screw	M4×10mm	2
K9	Drive Belt	1095PK6	1	M1	Generator Wire		1
K10	Drive Belt	430J6	1	M2	VR sensor wire		1
K11	Idler Pulley Bracket		2	M3	Resistance Level Wire		1
				M4	Console Wire		1