



Ski Trainer Pro
Console Manual

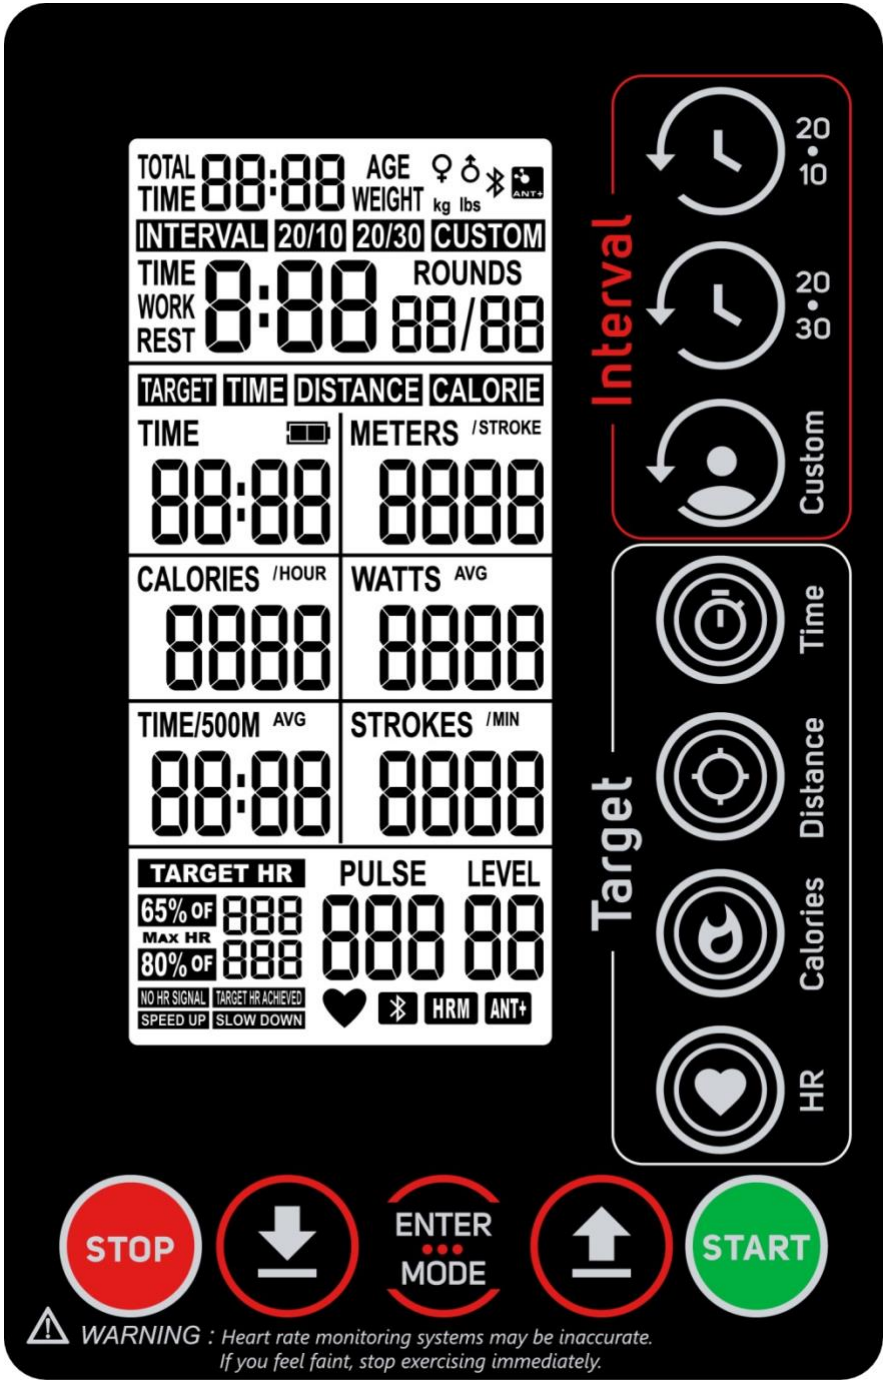

Console Keys

A: Interval 20/10 Key:

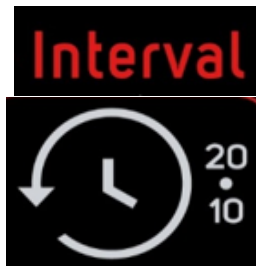

In standby mode, press the Interval 20/10 key to enter the interval 20/10 program setting.

B: Interval 20/30 Key:



In standby mode, press the Interval 20/30 to enter the interval 20/30 program setting.

C: Interval Custom Key:




In standby mode, press the Interval key to enter the interval Custom program setting.

D: Target Time Key:



In standby mode, press the Target Time key to select the Target Time Program desired.

E: Target Distance Key:

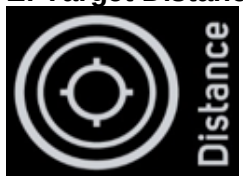

In standby mode, press the Target Distance key to select the Target Distance Program desired.

F: Target Calories Key:



In standby mode, press the Target Calories key to select the Target Calories Program desired.

G: Target HR key:



In standby mode, press the Target HR key to select the Target Heart Rate Program desired.

H: Start Key:




1. In standby mode, press the **START** key to enter the **QUICK START** program setting.
2. After program is selected, press **START** key again to begin the workout.

I: UP key:



During **PROGRAM** setting, press the **UP** key to increase the setting value.

J: Enter /Mode Key:

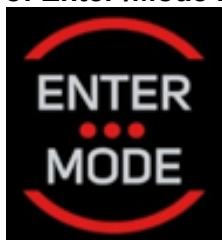

1. During **PROGRAM** setting, press the **Enter/ Mode** key to confirm the setting.
2. During the workout, press the **Enter/ Mode** key to switch display of **STROKES / STROKES min, TIME/500M / TIME/500M avg, WATT/WATTS avg, CALORIES/CALORIES hour.**

K: DOWN Key:



During **PROGRAM** setting, press the **DOWN** key to decrease the setting value.

L: STOP Key:



1. During the workout, press the Stop key to stop the workout.
2. When the workout stops, press Stop key again to clear the previous workout data.

MCSTAR01 Interval Display




- The Interval Display provides details for the Interval 20-10, Interval 20-30 and Custom Interval programs.
- The left side will show you whether the interval is currently a work (GO) or rest period and how much time is left in that interval (8:88).
- The Total Time 88:88 will count up the total program run time.
- The Interval 88/88 display shows the current interval and total intervals in the program.
- The bottom right will indicate which interval program is in use.

Target Time, Distance & Calories and Watts/Speed/SPM Display



- The display will show Time, Calories, Distance, Watts, Speed, and SPM during all programs.
- The banner across the top will indicate if you are running one of the Target programs.
- Time, Calories and Distance will count up during your workout.
- Total distance will be displayed in miles or kilometers depending on how the console was set up.
- Use the Mode button to toggle between average vs. total watts as well as average vs. maximum Speed and SPM

Heart Rate Display

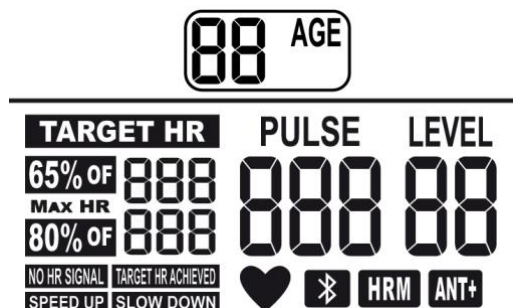

- If a signal is detected from a wireless monitor, user's heart rate will be shown in the large 888 BPM (beats per minute). If not signal is detected, the console will read "No HR signal"
- During the Target Heart Rate Program, the console will show upper and lower values of the target range next to the 65% and 80% of Max HR banners.
- The console will tell you to "**Speed up**" or "**Slow Down**" to reach user's target heart rate. Once target is reached, the "Target HR Achieved" icon will appear.

MCSTAR01 Console Setup

Battery Installation

The console operates on four (4) AA batteries. The battery compartment is on the back side of the console.

Wake Up Function:

1. In sleep mode, press any key to wake up the console.
2. In sleep mode, pull the handlebar to wake up the console.

Programs

I. QUICK START – Default Program

1. Use the **QUICK START** Program to skip programming the workout and begin immediately. Either start pulling or press the **START** key to turn on console. Once the console is on in standby mode, press the **START** key again to begin the Quick Start Program.
2. In **QUICK START** mode, the **STROKES** will display “0000” and flash until receiving the SPM signal to start counting **STROKES**.
3. During workout, “**TIME / METERS / CALORIES /STROKES**” display will increase upward.
4. During workout, “**TIME / METERS / CALORIES /STROKES**” will automatically stop counting if console didn’t receive any SPM signal. Once console is receiving the SPM signal again, then the console will continue to count from the previous operating data.
5. During setting or workout, you can manually adjust the resistance levels.
6. **TOTAL TIME** will record the total workout time of the console.
7. During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode.
8. During the workout, if there is no signal for 240 seconds, the console will automatically turn off to save power.

II. Interval 20/10 Program And Interval 20/30 Program

1. In standby mode, press **INTERVAL 20/10** or **INTERVAL 20/30** program button on the left side of console.
2. To set “**ROUNDS**” of intervals:
 - a. Once user has selected the **INTERVAL 20/10** or **20/30 program**, the “**INTERVAL 0/10**” display will flash.
 - b. Use the **UP** and **DOWN** buttons on the console to increase or decrease the total “**ROUNDS**” of intervals.
 - c. Press **ENTER** to finish setting the “**ROUNDS**” of intervals, the **STROKES** will display “0000” and flash until receiving the SPM signal to start counting **STROKES**.
3. Press **START** to begin the program.
4. During the program:
 - a. During workout, “**TIME / METERS / CALORIES /STROKES**” display will increase upward.
 - b. During workout, “**TIME / METERS / CALORIES /STROKES**” will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
5. During setting or workout, can manually adjust the resistance levels.
6. **TOTAL TIME** will record the total workout time of the console.
7. During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode.
8. During the workout, if there is no signal for 240 seconds, the console will automatically turn off to save power.

II. Interval Custom Program

1. The **INTERVAL CUSTOM** Program is similar to the **INTERVAL 20/10** and **INTERVAL 20/30** Programs, but the user can customize the program by work time, distance, or calories and rest time.
2. In standby mode, press **INTERVAL CUSTOM** program button on the left side of console.

A: Interval Time Setting

- a. Once user has selected the **INTERVAL CUSTOM** program, press **ENTER** key **one time**. The “**ROUNDS**” of setting from 10 will flash.
- b. Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**ROUNDS**” setting. Press **ENTER** to confirm the setting.
- c. Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**REST TIME**” setting from 0:30. Press **ENTER** to confirm the **REST TIME** setting.
- d. Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**WORK TIME**” setting from 1:00. Press **ENTER** to confirm the **WORK TIME** setting.
- e. The “SPM” setting from 000 will flash then the console will begin the program

B: Interval Distance Setting

- a) Once user has selected the **INTERVAL CUSTOM** program, press **ENTER** key **2 times**. The “**ROUNDS**” of setting from 10 will flash.
- b) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**ROUNDS**” setting. Press **ENTER** to confirm the setting.
- c) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**REST TIME**” setting from 0:30. Press **ENTER** to confirm the **REST TIME** setting.
- d) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**WORK DISTANCE**” setting from 2000meters. Press **ENTER** to confirm the **WORK DISTANCE** setting.
- e) The “SPM” setting from 0000 will flash then the console will begin the program after receiving the SPM signal.

C: Interval Calories Setting

- a) Once user has selected the **INTERVAL CUSTOM** program, press **ENTER** key **3 times**. The “**ROUNDS**” of setting from 10 will flash.
- b) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**ROUNDS**” setting. Press **ENTER** to confirm the setting.
- c) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**REST TIME**” setting from 0:30. Press **ENTER** to confirm the **REST TIME** setting.
- d) Use the **UP** and **DOWN** buttons on the console to increase or decrease the “**WORK CALORIES**” setting from 200K. Press **ENTER** to confirm the **WORK CALORIES** setting.
- e) The “SPM” setting from 0000 will flash then the console will begin the program after receiving the SPM signal.

3. During the **INTERVAL** workout, the program will nonstop with or without receiving SPM signal until finish the “**ROUNDS**” setting, unless no receiving any SPM signal for 240 seconds then the console will stop the program and back to the standby mode.
4. During the **INTERVAL** workout, can manually adjust the air resistance levels.
5. Press **STOP** one time to pause the workout or press **STOP** two times to clear the console and back to the standby mode.

6. Target Time, Target Distance, And Target Calories Program

- a) These three programs each work in a similar manner. The user can choose a target value for each program (either time, distance, or calories) and the program will run until that target is reached.
- b) In standby mode, press **TARGET TIME** (from 20:00 minutes), **TARGET DISTANCE** (from 2000 meters) or **TARGET CALORIES** (from 200 K) program button on the left side of console.
- c) Depending which program the user chose, the target parameter will flash. Use the **UP** and **DOWN** buttons to set a target value.
- d) Press **ENTER** to set the target value.

MCSTAR01

- e) Press **START** to begin the program.
- f) During workout, the selected program will display countdown and the rest of the other program will display increase upward.
- g) During workout, " **TIME / DISTANCE (METERS) / CALORIES / STROKES**" will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
- h) Press **STOP** to pause your workout. If you press **STOP** for a second time, the console will reset to standby mode.

7. Target Heart Rate Program

- a) In standby mode, press **TARGET HR Program**.
- b) The Age value will flash. Use the **UP** and **DOWN** buttons to select your age.
- c) Press **ENTER** to confirm.
- d) Press **START** to begin the program.
- e) During the Program:
 - i. If user's heart rate is below the calculated 65% of Max HR, the console will tell the user to "**SPEED UP**".
 - ii. If user's heart rate is above the calculated 80% of Max HR, the console will tell user to "**SLOW DOWN**".
- f) Press **STOP** to pause your workout. If you press **STOP** for a second time, the console will reset to standby mode.
- g) During workout, the console will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.

IV Heart Rate Training Notes

Research has shown that exercise and fitness are beneficial to a person's health. The Surgeon General released a report on physical activity and stated exercise as key component for disease prevention and healthier living. Your heart rate level can help you gauge the intensity of your exercise. The Xebex console has a wireless heart rate receiver that can detect a signal being transmitted from a wireless chest strap.

V Wireless Heart Rate Receiver

Generally, a wireless heart rate chest strap (not included) will provide the most accurate and easiest way to monitor a heart rate. Certain Wi-Fi networks and cordless telephones may disrupt the signal from a chest strap which will show erratic signal results on the console. If this occurs, please move the bike away from potential disturbances. In order for the console to detect and show your heart rate wirelessly, the following four conditions must be met:

1. A compatible heart rate chest strap must be functional and worn correctly
2. Console must be on
3. A workout program must be running
4. Chest strap is worn within 3 feet of the console

VI Maximum Heart Rate and Target Training Zone

Target heart rate is determined based on your age. If the exercise intensity, based on your heart rate, is too high, injuries or fatigue may occur and counteract your fitness goals. If the exercise intensity is too low, you are likely not maximizing your workout. It is generally reported that individuals should target between 65% and 80% of your maximum heart rate to be most effective. Maximum heart rate is determined by subtracting your age from 220 BPM.

MCSTAR01

To calculate your maximum heart rate and determine the most effective target heart rate zone, the following formula is used for a 32 year old:

- $220 - 32 = 188$ BPM (220 BPM less age = calculated maximum heart rate)
- $0.65 \times 188 = 122$ BPM (65% of calculated maximum heart rate)
- $0.80 \times 188 = 150$ BPM (80% of calculated maximum heart rate)

For a 32 year old, the target heart rate zone would be between 122 BPM and 150 BPM.

MasterKraft recommends that you consult with a medical professional before engaging in any form of physical exercise, exercise program, or taking supplements. MasterKraft assumes no responsibility or liability for any injuries sustained or loss of life during the use/misuse of products. The user assumes all risk of injury or loss of life due to use. Improperly maintained equipment and inadequately supervised physical exercise are significant contributing factors. Please note that MasterKraft does not recommend product use outdoors or storage outdoors for any of our products, unless otherwise specified. MasterKraft recommends thorough inspection, maintenance, and testing of all products prior to use.