


MASTERKRAFT

SKI TRAINER ELITE

Console Manual

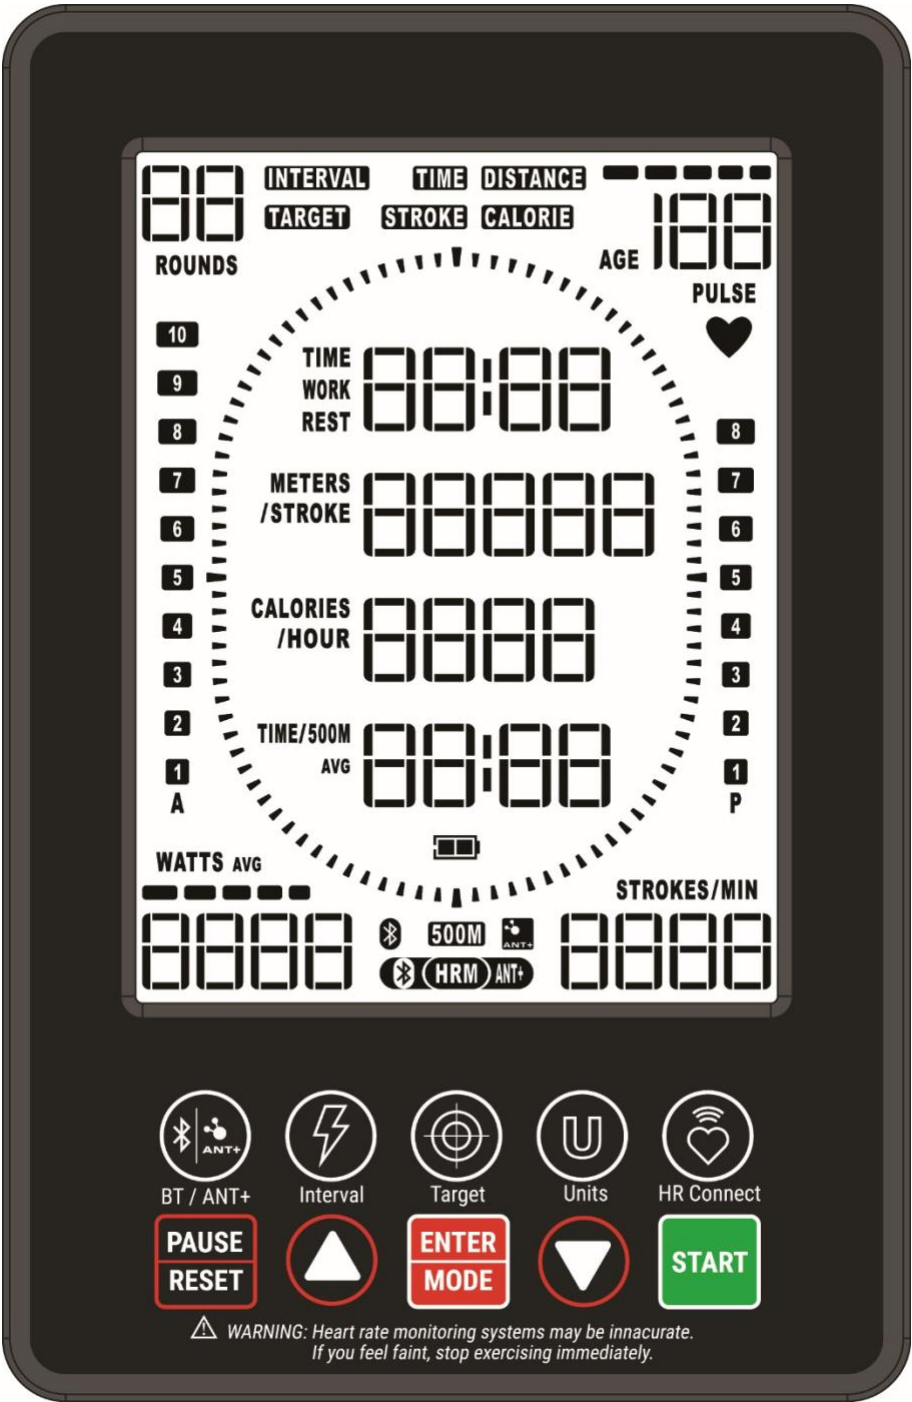

Console Keys:

A. Units key:



OR

ENTER/ MODE key:




In standby mode, press the ENTER/MODE key or **UNITS** key to switch display of **CALORIES/ CALORIES HOUR, TIME/500M** or **TIME/500M AVG.** and **WATTS/ WATTS AVG.**

During **PROGRAM** setting, use the **UP/DOWN** to select the desired program, and press the **ENTER/ MODE** key or **UNITS** one time to confirm the setting or press 2 times to get back to the standby mode.


During the workout, press the **ENTER/ MODE** key or **UNITS** to switch display of **CALORIES/ CALORIES HOUR, TIME/500M** or **TIME/500M AVG.** and **WATTS/ WATTS AVG.**

B. Target key:

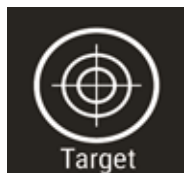

In standby mode, press the Target key to light up **TIME, DISTANCE, CALORIES, HR** in order and select the Target Program desired.

C. Interval key:

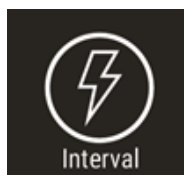

In standby mode, press the Interval key to display **TIME, DISTANCE** or **CALORIES** and select the Interval Program needed.

D. BT/ ANT+ key:



In standby mode, press the **BT/ ANT+** key once to turn on the **BT/ ANT+** display. Press the **BT/ ANT+** key the 2nd time to turn off the **BT/ANT+** display. Repeat the same steps to **ON/OFF** the **BT/ANT+** display.

E. START key:



1. In standby mode, press the **START** key to enter the **QUICK START** program setting.

F. DOWN key:



During **PROGRAM** setting, press the **DOWN** key to decrease the setting

G. UP key:

During **PROGRAM** setting, press the **UP** key to increase the setting

H. PAUSE/ RESET key:


1. During the workout, press the **PAUSE/ RESET** key to stop the workout.
2. When the workout stops, press the **PAUSE/ RESET** key again to **RESET** the console and erase all workout data.

I. HR CONNECT key:

1. In standby mode, press the **HR CONNECT** button to pair the serial number of Bluetooth chest strap or **ANT +** chest strap.
2. It is needed to press the **HR CONNECT** button every time when you turn on the power, if you want to use the Bluetooth chest strap **or** **ANT +** chest strap. If you don't use the Bluetooth chest strap or **ANT +** chest strap, then you don't need to press the **HR CONNECT** button.

HR Connect Program:

1. **Press HR CONNECT KEY** – The LCD display that it is waiting for connection
2. Shows the selected Heart Rate Monitor (HRM) signal

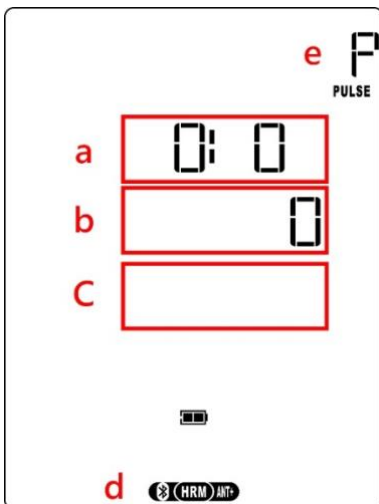


source: number of HRM signals currently received.

3. Displays the selected HRM ID
4. Displays the selected HRM Source as BLE or ANT
5. Display the confirmed HRM Source (BLE or ANT+) after successful connection
6. Displays the Pulse from HRM source.



2. Example:

- Selected Heart Rate Monitor 1: out of 2 HRM signals currently being received
- 12345 is the selected (1) HRM ID
- 12345 is a BLE HRM source
- Display the confirmed HRM Source (BLE or ANT+) after successful connection
- Displays the Pulse from HRM source

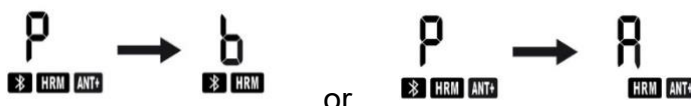

QUICK START:

- In standby mode, when pressing the **START** key or start pulling to begin the **QUICK START** program.
- When console receives the **SPM** signal, **TIME/ DISTANCE (METERS)/ CALORIES/STROKES** will begin to count.
- A** for Air Resistance Level: Level will display on the left side. By adjusting the damper to change the resistance level from Level 1 to Level 10.
- P** for Magnetic Resistance Level: Level will display on the right side. By adjusting the magnetic control knob to change the resistance level from Level 1 to Level 8.
- User can press the **ENTER/ MODE** key to switch display of **CALORIES/ CALORIES HOUR, TIME/500M** or **TIME/500M AVG.** and **WATTS/ WATTS AVG., STROKES/ STROKES MIN.**
- During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
- During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode.
- If user stops workout for a consecutive 30 seconds, the console will automatically to a **SLEEP** mode; if no signal for 240 seconds, the console will automatically turn off to save power.

TARGET PROGRAM:

In standby mode, press the Target key once to light up **TIME**, twice to light up **DISTANCE**, three times to light up **CALORIES**, four times to light up **STROKES** and five times to light up **PULSE**.

(A) TARGET TIME:

- In standby mode, press the Target key once to light up **TIME**. Press the **ENTER/ MODE** key

to confirm the selection. **TIME** will display 20:00 as initial value.

2. Press the **UP** and **DOWN** key to increase or decrease the desired workout time. Press **ENTER/ MODE** key to confirm the setting. When console receives the SPM signal, **TIME** will begin to count.
3. Start workout—
 - During workout, **TIME** display will count **DOWN**, but the other programs will count **UP**.
 - During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
 - During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(B) TARGET DISTANCE:

1. In standby mode, press the Target key twice to light up **DISTANCE**. Press the **ENTER/ MODE** key to confirm the selection. **DISTANCE** will display 2000 M as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the desired workout distance. Press **ENTER/ MODE** key to confirm the setting. When console receives the SPM signal, **DISTANCE** will begin to count.
3. Start workout—
 - During workout, **DISTANCE** display will count **DOWN**, but the other programs will count **UP**.
 - During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
 - During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(C) TARGET CALORIES:

1. In standby mode, press the Target key three times to light up **CALORIES**. Press the **ENTER/ MODE** key to confirm the selection. **CALORIES** will display 200 Cal as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the desired calories burn. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, **CALORIES** will begin to count.
3. Start workout—
 - During workout, **CALORIES** display will count **DOWN**, but the other programs will count **UP**.
 - During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.

- During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(C) TARGET STROKES:

4. In standby mode, press the Target key three times to light up **STROKES**. Press the **ENTER/ MODE** key to confirm the selection. **STROKES** will display 200 times as initial value.
5. Press the **UP** and **DOWN** key to increase or decrease the desired calories burn. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, **CALORIES** will begin to count.
6. Start workout—
 - During workout, **STROKES** display will count **DOWN**, but the other programs will count **UP**.
 - During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
 - During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(D) TARGET PULSE:

1. In standby mode, press the Target key four times to light up **PULSE**. Press the **ENTER/ MODE** key to confirm the selection. AGE will light up and display 30 as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the AGE setting. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, program begins to work.
3. Start workout—
 - During workout, **TIME/ DISTANCE/ CALORIES** will all count **UP**.
 - During the workout, **TIME / DISTANCE (METERS) / CALORIES /STROKES** display will automatically stop counting if no receive SPM signal until receiving the SPM signal again, then the console will continue to count from the previous operating data.
 - During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

INTERVAL PROGRAM:

In standby mode, press the Interval key once to light up **INTERVAL TIME**, **WORK TIME** will flash. Press the Interval key twice to light up **INTERVAL DISTANCE**, **DISTANCE** will flash. Press the Interval key three times to light up **INTERVAL CALORIES**, **CALORIES** will flash. Press the Interval key four times to light up **INTERVAL STROKES**, **STROKES** will flash.

(A) INTERVAL TIME:

In standby mode, press the Interval key once to light up **INTERVAL TIME**, **WORK TIME** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

1. **ROUNDS:**

Press the **UP** and **DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK TIME**.

2. **WORK TIME:**

WORK TIME flash and display 1:00 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired workout time. Press **ENTER/ MODE** key to go next to **REST TIME**.

3. **REST TIME:**

REST TIME flash and display 0:30 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the **SPM** signal, program begins to work.

4. **Start workout:**

- **ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.
- **WORK TIME**, **REST TIME** and **ROUNDS** will count **DOWN**, but the other programs will count **UP**.
- During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(B) **INTERVAL DISTANCE:**

In standby mode, press the Interval key twice to light up **INTERVAL DISTANCE**, **DISTANCE** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

5. **ROUNDS:**

Press the **UP** and **DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK DISTANCE**.

1. **REST TIME:**

REST TIME flash and display 0:30 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the **SPM** signal, program begins to work.

2. **WORK DISTANCE:**

WORK DISTANCE will flash and display 2000 M as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired workout distance. Press **ENTER/ MODE** key to go next to **REST TIME**.

3. **START:**

- **ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.
- **WORK DISTANCE**, **REST TIME** and **ROUNDS** will count **DOWN**, but the other programs will count **UP**.
- During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

(C) INTERVAL CALORIES:

In standby mode, press the Interval key three times to light up **INTERVAL CALORIES**, **CALORIES** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

1. ROUNDS:

Press the **UP and DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK CALORIES**.

2. WORK CALORIES:

WORK CALORIES will flash and display 200 as initial value. Press the **UP and DOWN** key to increase or decrease the desired workout calories. Press **ENTER/ MODE** key to go next to **REST TIME**.

1. REST TIME:

REST TIME flash and display 0:30 as initial value. Press the **UP and DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the SPM signal, program begins to work.

2. START:

- **ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.
- **WORK CALORIES, REST TIME and ROUNDS** will count **DOWN**, but the other programs will count **UP**.
- During workout, press **STOP** to pause your workout. If you press **STOP** for the second time, the console will reset to standby mode

Heart Rate Training Notes

Research has shown that exercise and fitness are beneficial to a person's health. The Surgeon General released a report on physical activity and stated exercise as key component for disease prevention and healthier living. Your heart rate level can help you gauge the intensity of your exercise. The MasterKraft console has a wireless heart rate receiver that can detect a signal being transmitted from a wireless chest strap.

Wireless Heart Rate Receiver

Generally, a wireless heart rate chest strap (not included) will provide the most accurate and easiest way to monitor a heart rate. Certain Wi-Fi networks and cordless telephones may disrupt the signal from a chest strap which will show erratic signal results on the console. If this occurs, please move the bike away from potential disturbances. In order for the console to detect and show your heart rate wirelessly, the following four conditions must be met:

1. A compatible heart rate chest strap must be functional and worn correctly
2. Console must be on
3. A workout program must be running
4. Chest strap is worn within 3 feet of the console

Maximum Heart Rate And Target Training Zone

Target heart rate is determined based on your age. If the exercise intensity, based on your heart rate, is too high, injuries or fatigue may occur and counteract your fitness goals. If the exercise intensity is too low, you are likely not maximizing your workout. It is generally reported that individuals should target between 65% and 80% of your maximum heart rate to be most effective. Maximum heart rate is determined by subtracting your age from 220 BPM.

To calculate your maximum heart rate and determine the most effective target heart rate zone, the following formula is used for a 32 year old:

- $220 - 32 = 188$ BPM (220 BPM less age = calculated maximum heart rate)
- $0.65 \times 188 = 122$ BPM (65% of calculated maximum heart rate)
- $0.80 \times 188 = 150$ BPM (80% of calculated maximum heart rate)

For a 32 year old, the target heart rate zone would be between 122 BPM and 150 BPM.

MasterKraft recommends that you consult with a medical professional before engaging in any form of physical exercise, exercise program, or taking supplements. MasterKraft assumes no responsibility or liability for any injuries sustained or loss of life during the use/misuse of products. The user assumes all risk of injury or loss of life due to use. Improperly maintained equipment and inadequately supervised physical exercise are significant contributing factors. Please note that MasterKraft does not recommend product use outdoors or storage outdoors for any of our products, unless otherwise specified.

MasterKraft recommends thorough inspection, maintenance, and testing of all products prior to use.