




Step 1

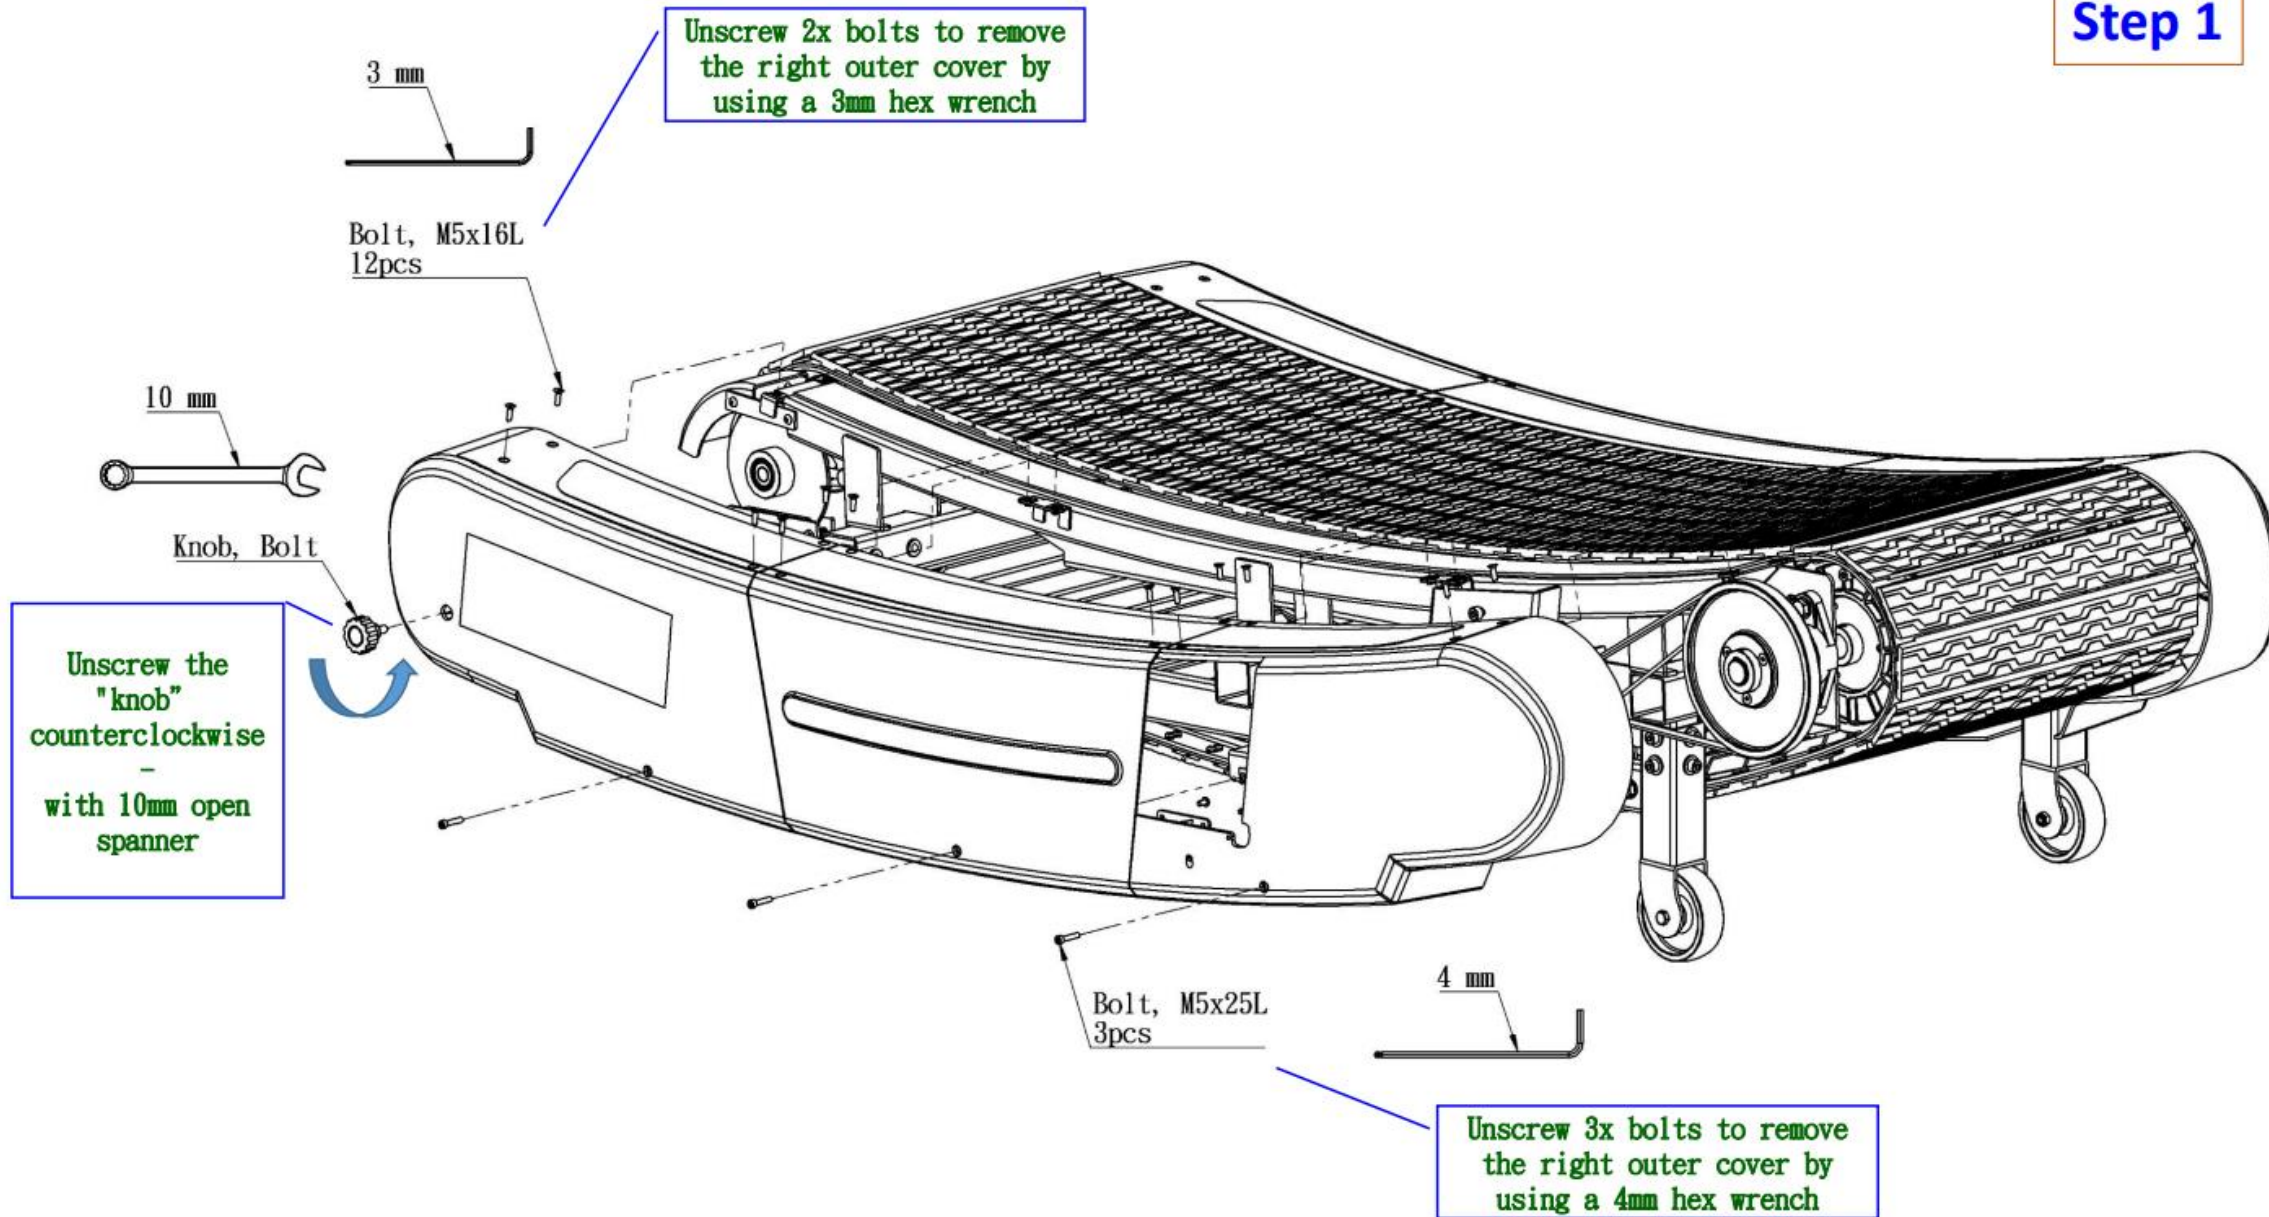

Step 2

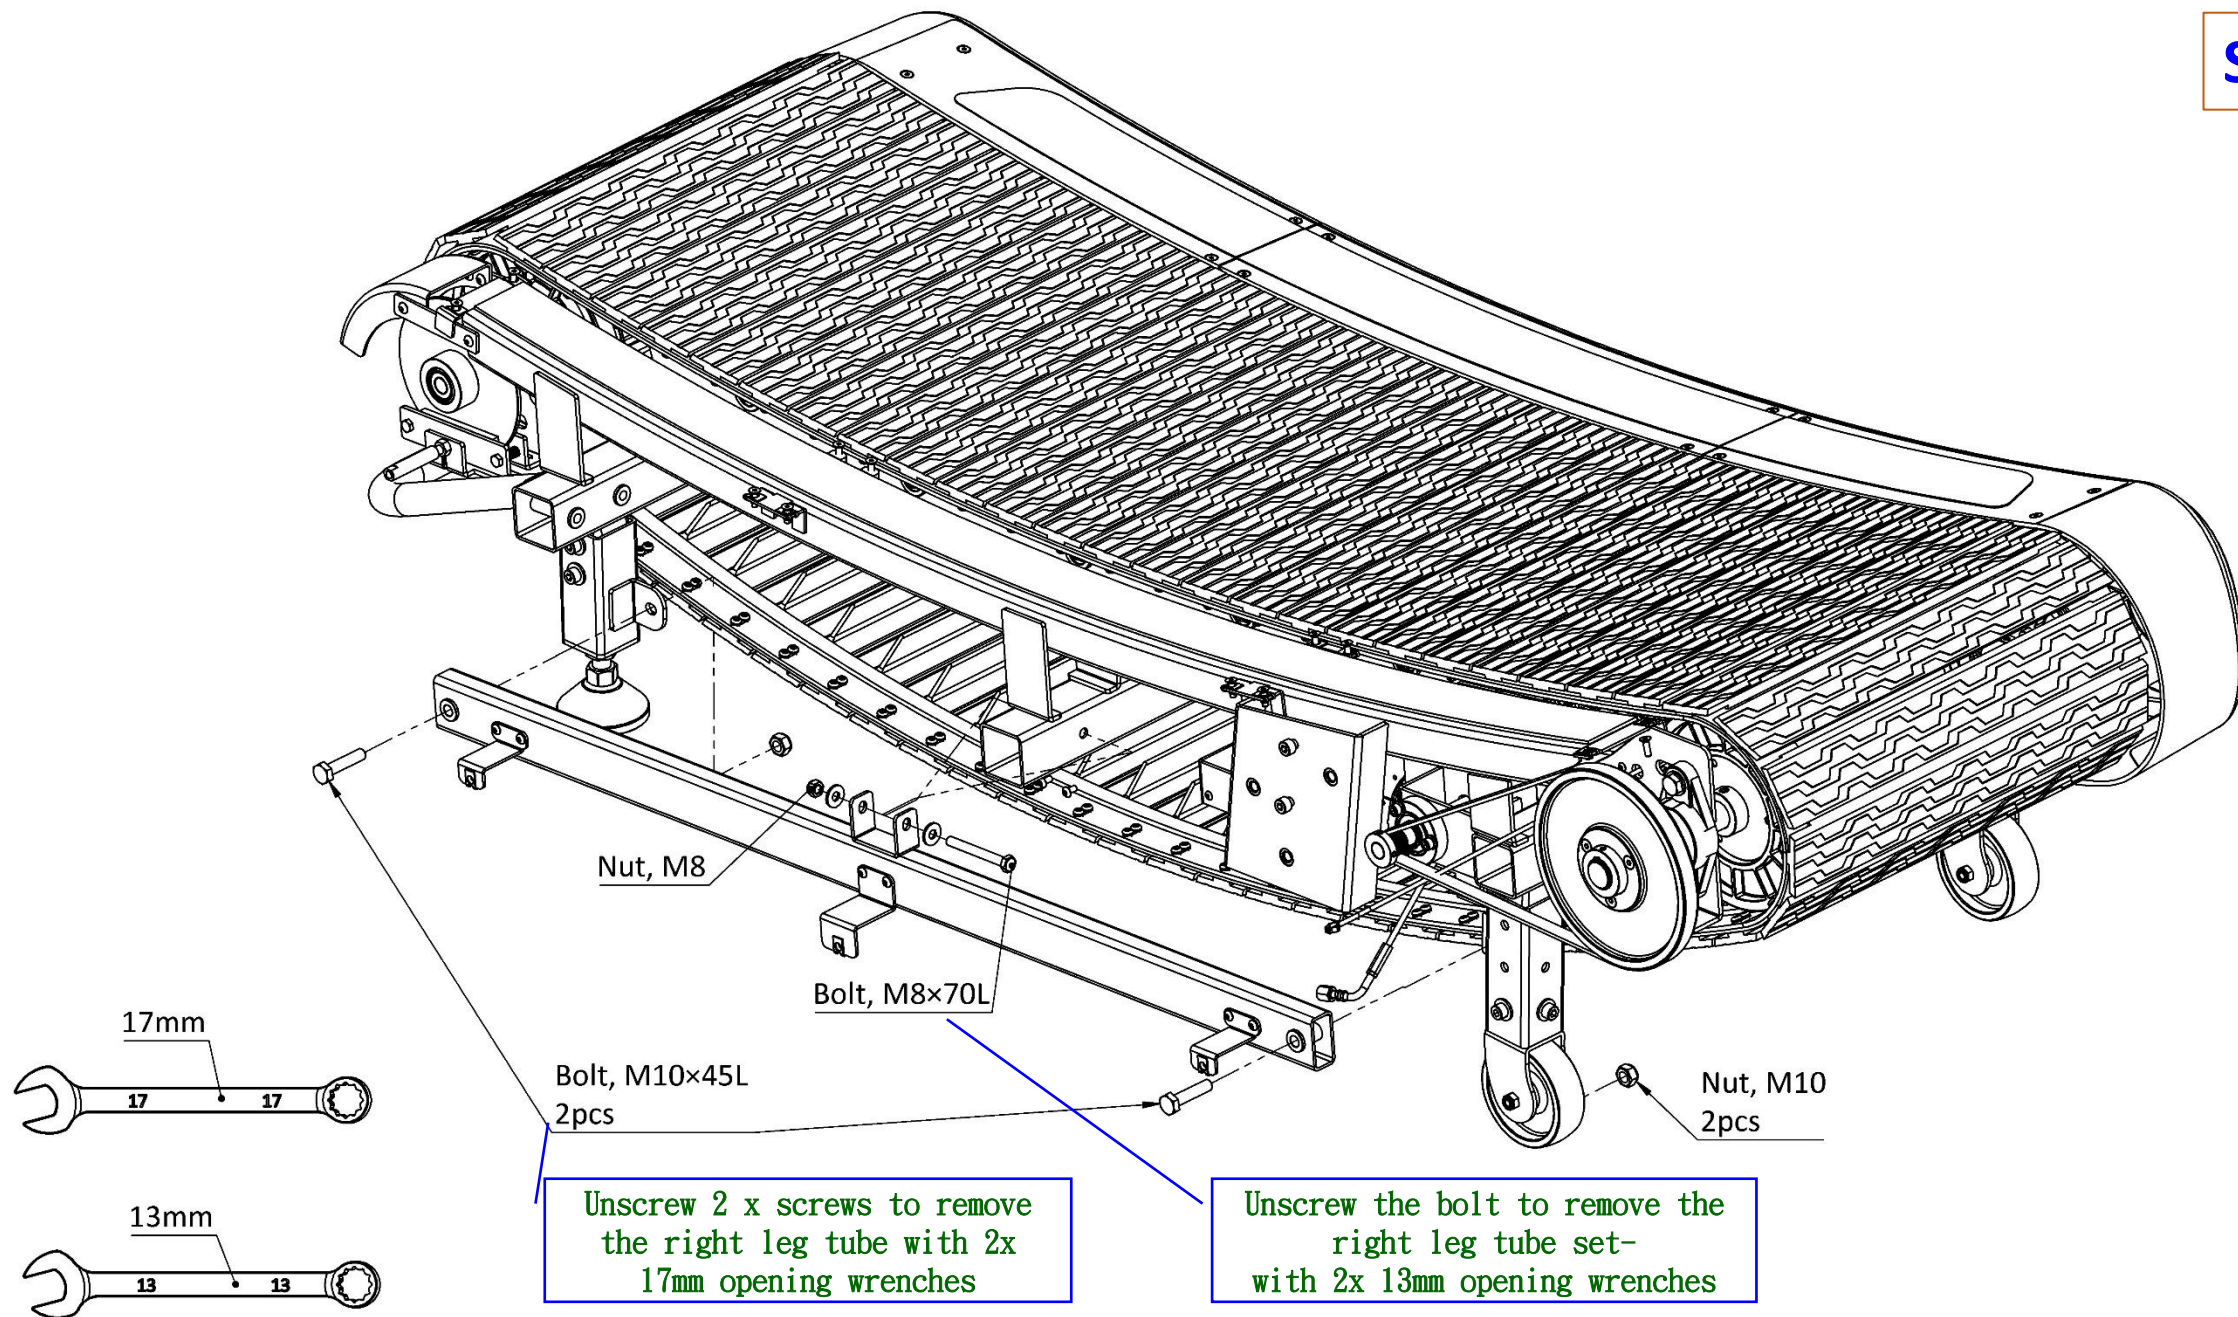

Step 3

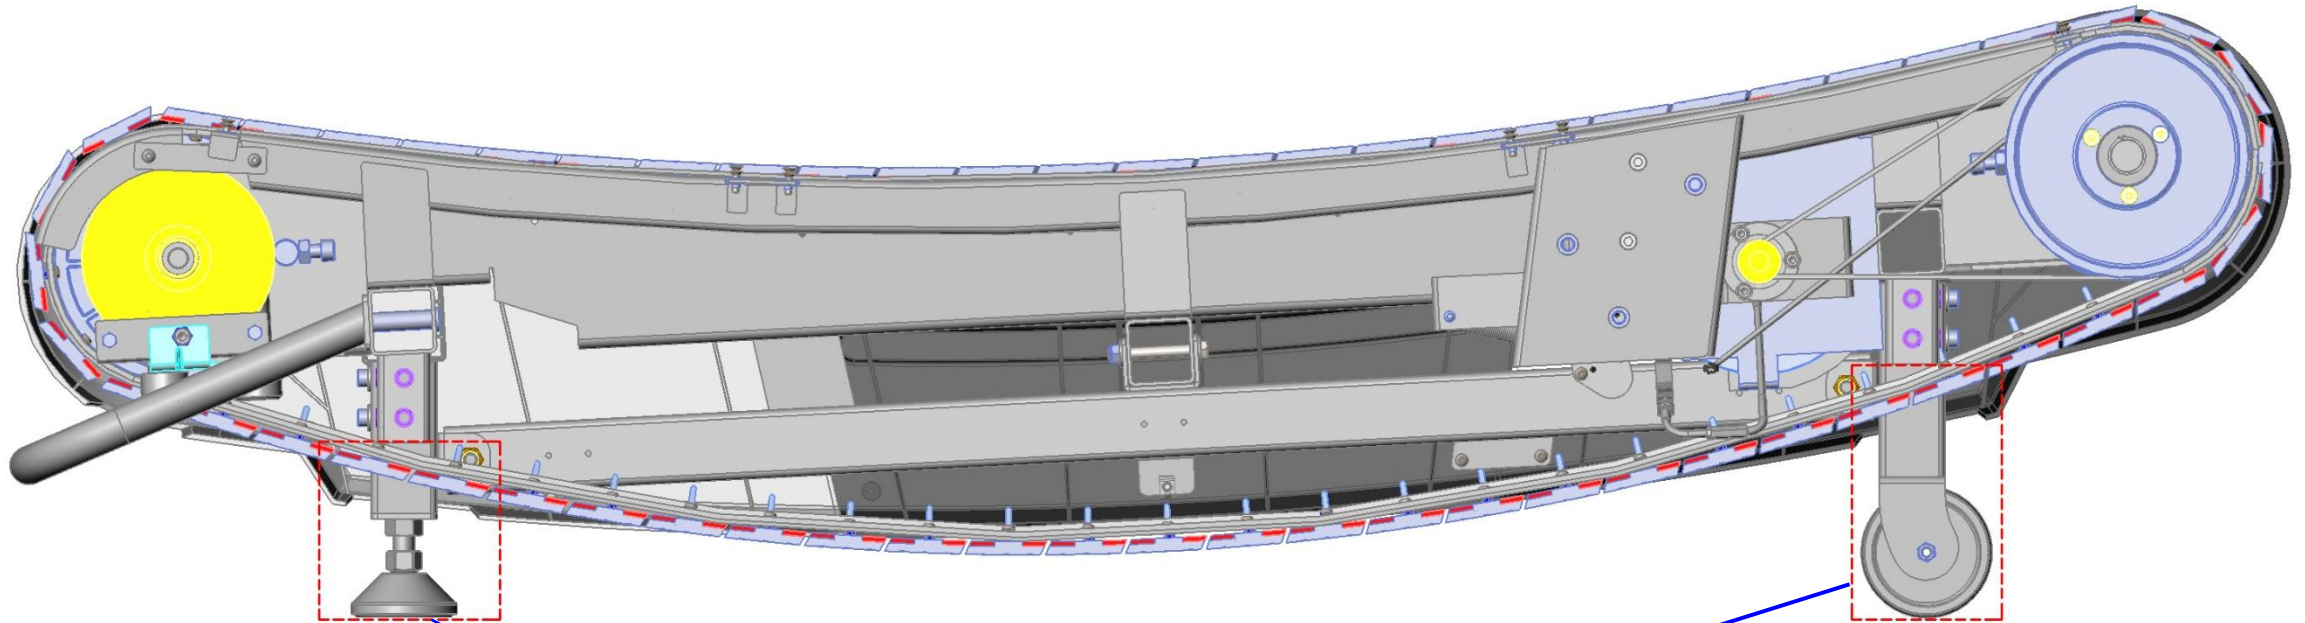


Use suitable items to raise up the right leg support area to tilt the runner

Step 4



Use needle-nose pliers to remove the spring or use your hands to rotate the 6mm notch of the spring to align the "spring lever" to remove the spring.

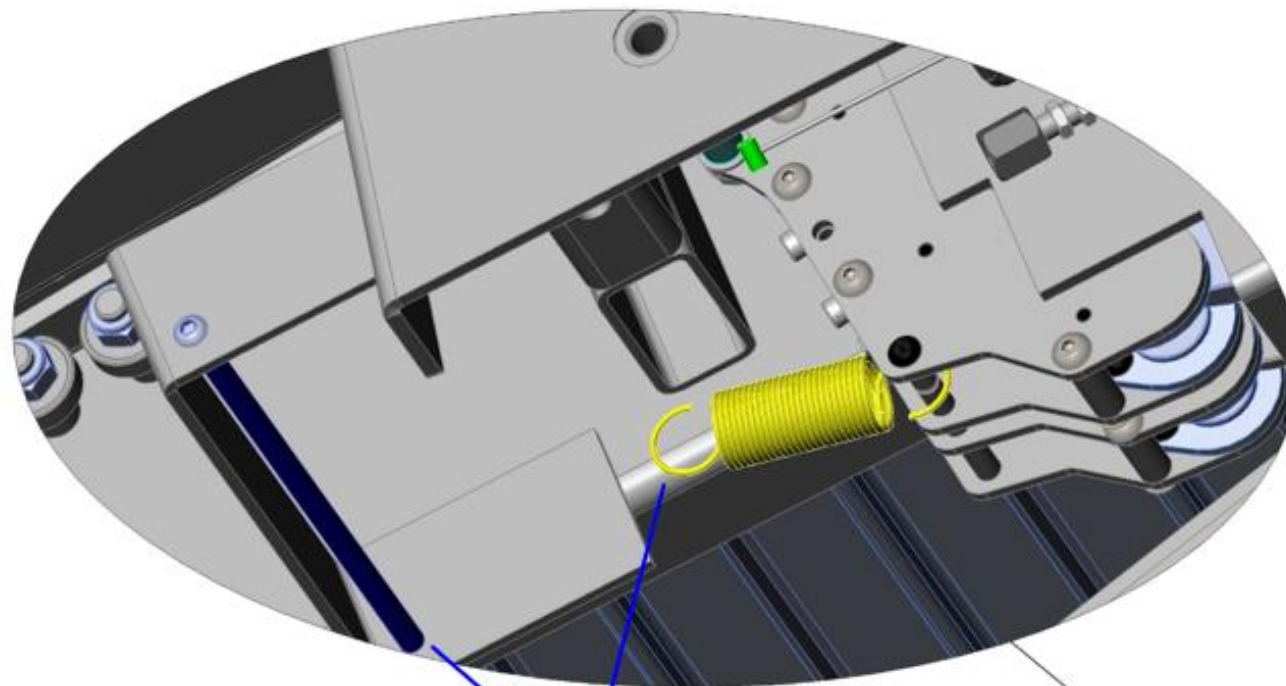

Loosen one side at the spring (marked in yellow) so that the spring rod (marked in blue) can be replaced with a new cable

