Ball Bearing
Straight Sleeve Bushings

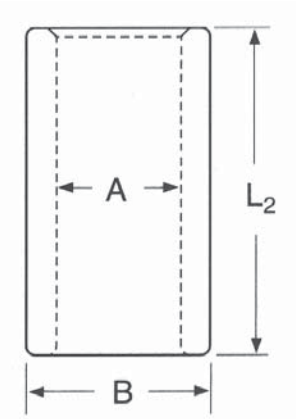

Product Features

Straight sleeve bushings are manufactured from high quality hardened steel and the bushings are finish ground for a press fit. Like all ball bearing components, these straight sleeve bushings are completely interchangeable.

INSTALLATION INSTRUCTIONS

In order to avoid the bushing close-in which occurs as a result of press-fit, these bushings should be retained with Danly Bushing Mount. When so installed, it is not necessary to hone the bushing bore after installation, and the bushing fit will be correct.

APPLICATION OF DANLY BUSHING MOUNT

1. Degrease bushing OD and die shoe bore with alcohol, acetone or other volatile solvent and wipe dry.
2. Apply Bushing Mount sparingly and wring bushing into die shoe.
3. Allow a 4-hour cure at 72° F. Do not disturb bushing until cure is complete.

DANLY BUSHING MOUNT: Part number 9-60-82

Post Diameter (in)	Bushing Diameters		Length L2 (in)	Part Number
	A (in)	B (in)		
1	1 3/8	1 7/8	2 1/2	6-0810-86
			3	6-0812-86
			3 1/2	6-0814-86
			4	6-0816-86
			4 1/2	6-0818-86
			5	6-0820-86
1 1/4	1 5/8	2 1/8	3	6-1012-86
			3 1/2	6-1014-86
			4	6-1016-86
			4 1/2	6-1018-86
			5	6-1020-86
			6	6-1024-86
1 1/2	1 7/8	2 1/2	3	6-1212-86
			3 3/4	6-1215-86
			4 1/2	6-1218-86
			5	6-1220-86
			5 1/2	6-1222-86
			6	6-1224-86
			7	6-1228-86
			8	6-1232-86
1 3/4	2 1/8	2 3/4	3 1/2	6-1414-86
			4 1/4	6-1417-86
			5	6-1420-86
			5 1/2	6-1422-86

Post Diameter (in)	Bushing Diameters		Length L2 (in)	Part Number
	A (in)	B (in)		
1 3/4	2 1/8	2 3/4	6	6-1424-86
			7	6-1428-86
			8	6-1432-86
			9	6-1436-86
2	2 1/2	3 1/4	4	6-1616-86
			4 3/4	6-1619-86
			5 1/2	6-1622-86
			6 1/4	6-1625-86
			7	6-1628-86
			8	6-1632-86
			9	6-1636-86
			10	6-1640-86
2 1/2	3	3 3/4	6	6-2024-86
			6 3/4	6-2027-86
			7 1/2	6-2030-86
			8 1/2	6-2034-86
			9 1/2	6-2038-86
			10 1/2	6-2042-86
3	3 1/2	4 1/4	6	6-2424-86
			6 3/4	6-2427-86
			7 1/2	6-2430-86
			8 1/2	6-2434-86
			9 1/2	6-2438-86
			10 1/2	6-2442-86