







Via Sagittario, 23 40037 Sasso Marconi loc. Pontecchio (BO) – Italy
Phone +39 051 845868 Fax +39 051 6782011



**ALIMENTADOR DOBLE / ACCESORIO PLIEGUE CENTRAL
DOUBLE FEEDER / CENTRE CREASE ATTACHMENT**


TF 235 5/S	04
TIPO M/C M/C TYPE	IND.MODIF.M/C M/C LEVEL

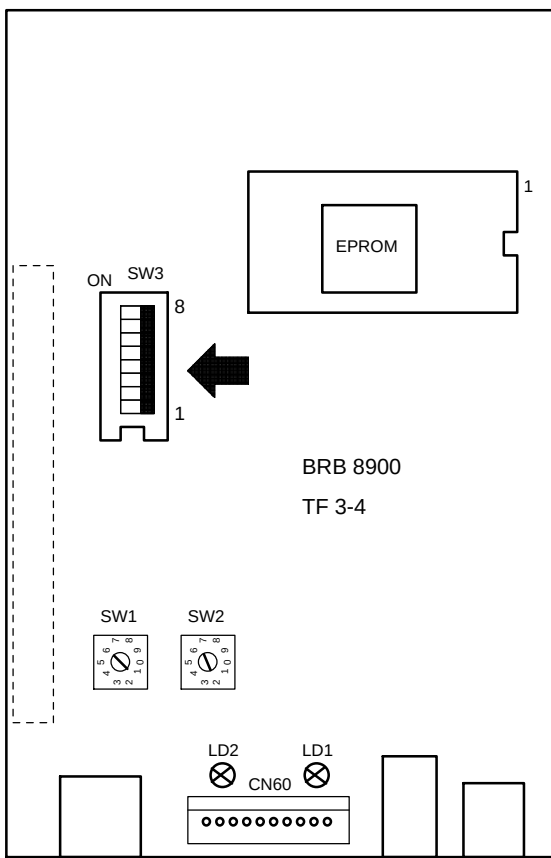

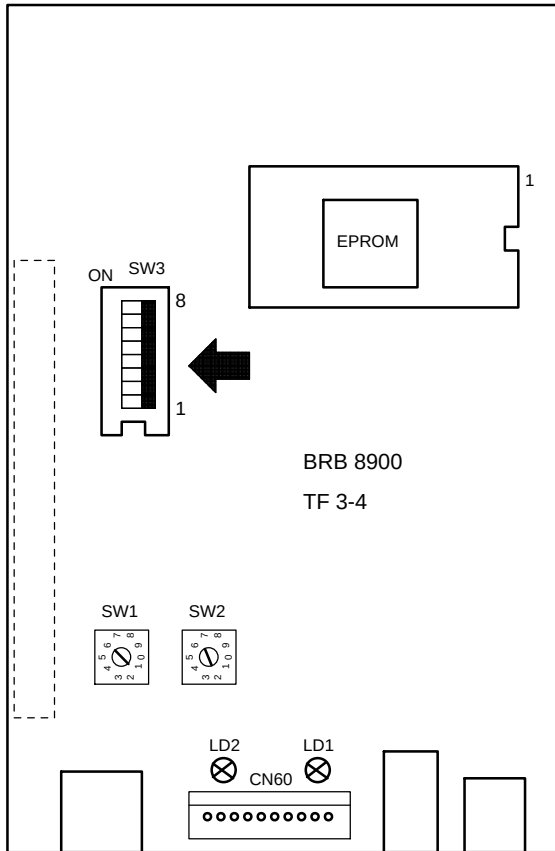

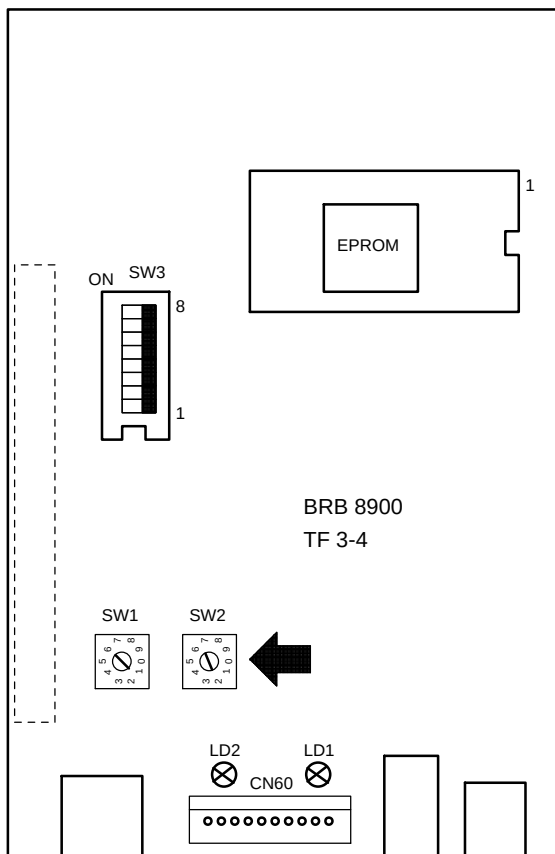

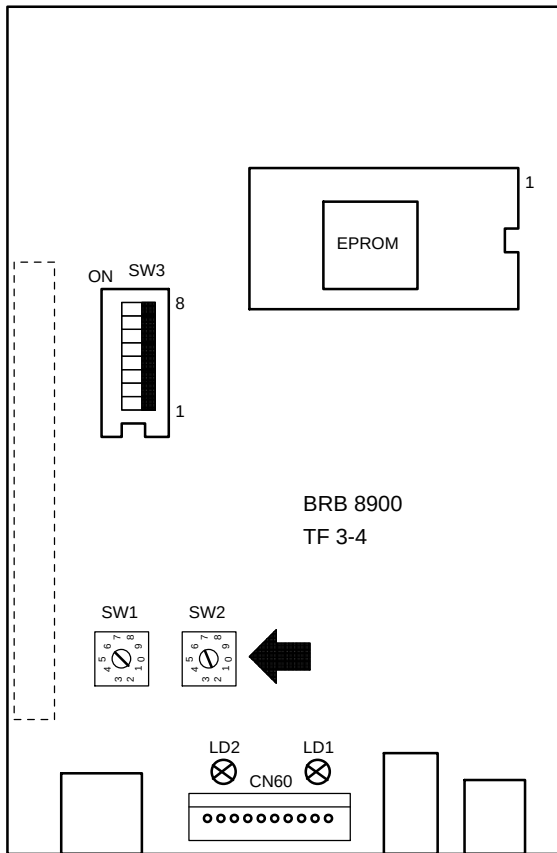

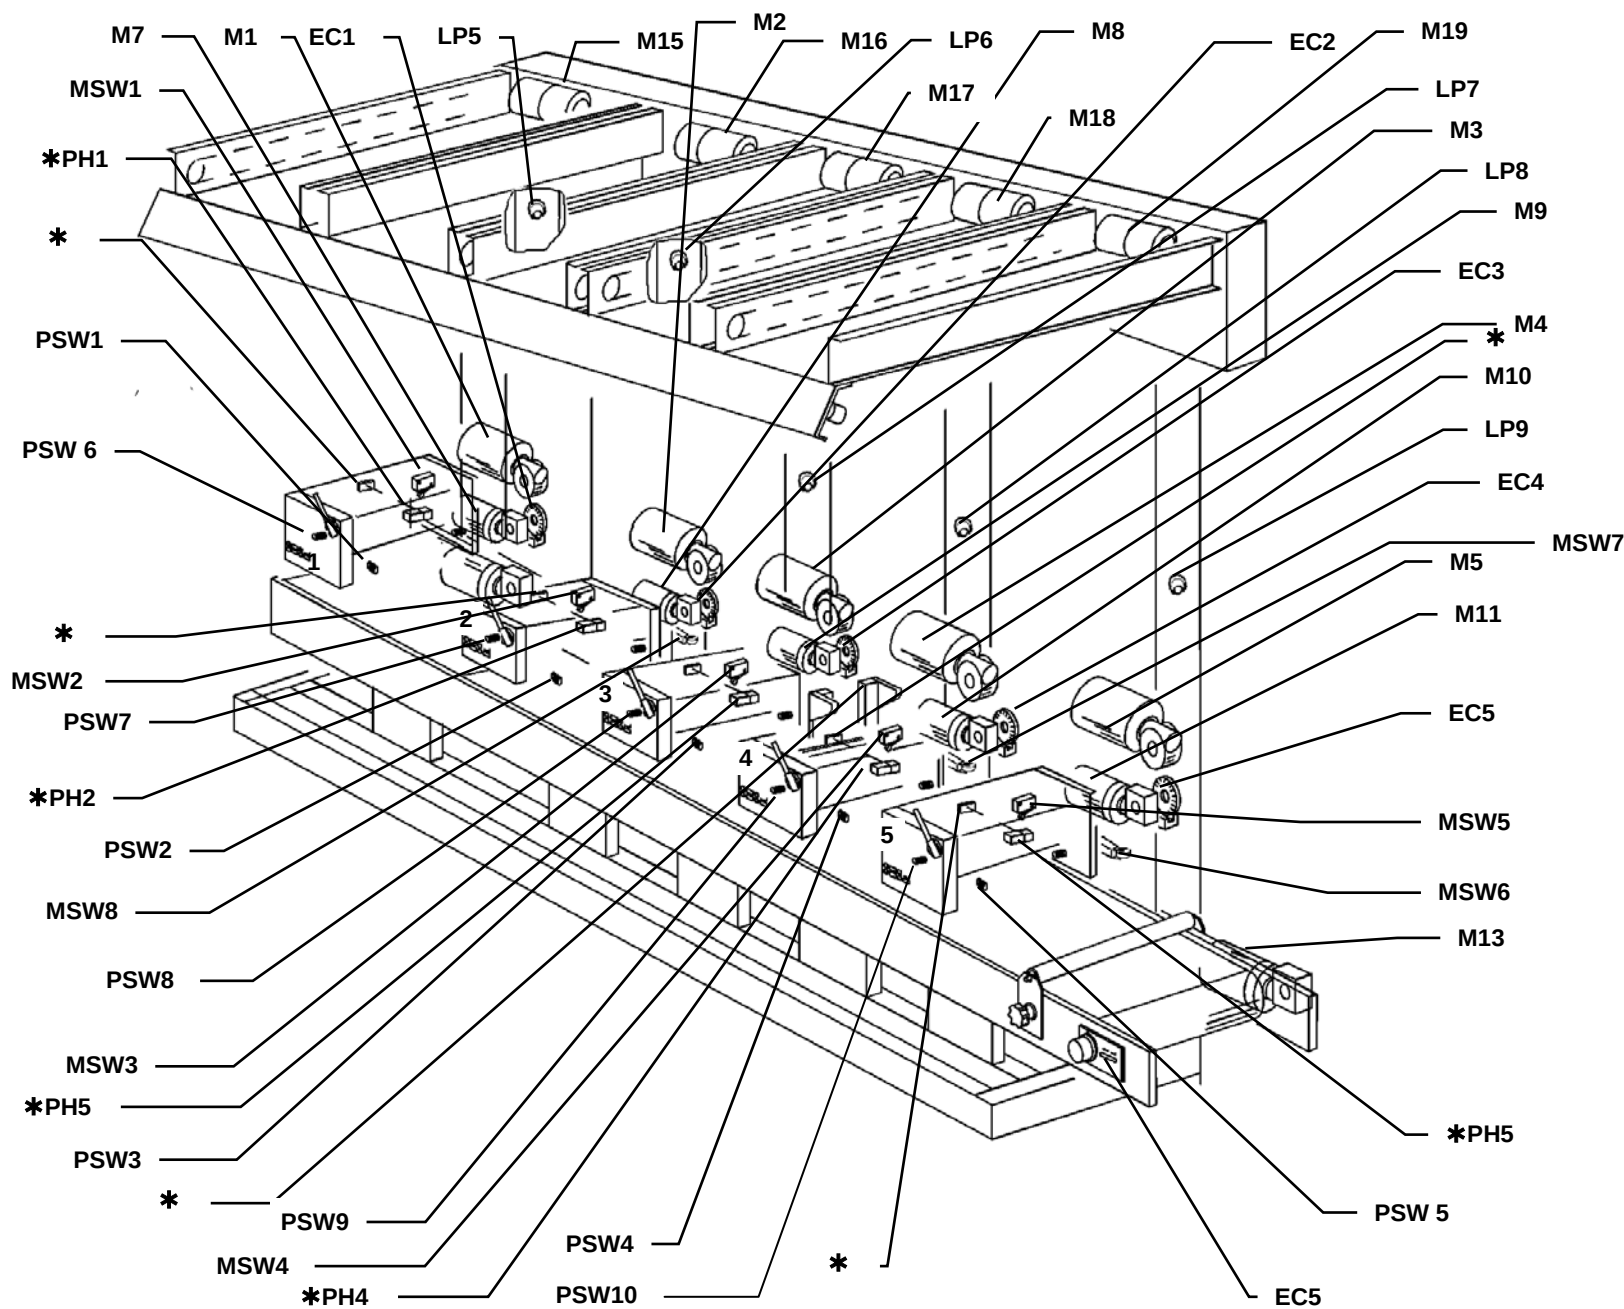

* LIMPIAR DIARIAMENTE
* CLEAN DAILY

M1 MOTOR MANEJO EJE ACALANADO TELA TF 1
TF 1 FABRIC GROOVED SHAFT DRIVING MOTOR

M2 MOTOR MANEJO EJE ACALANADO TELA TF 2
TF 2 FABRIC GROOVED SHAFT DRIVING MOTOR

M3 MOTOR MANEJO EJE ACALANADO TELA TF 3
TF 3 FABRIC GROOVED SHAFT DRIVING MOTOR

M4 MOTOR MANEJO EJE ACALANADO TELA TF 4
TF 4 FABRIC GROOVED SHAFT DRIVING MOTOR

M5 MOTOR MANEJO EJE ACALANADO TELA TF 5
TF 5 FABRIC GROOVED SHAFT DRIVING MOTOR

M7 MOTOR ABIERTO/CERRADO ESPARCIDOR TF 1
TF 1 SPREADER OPENING/CLOSING MOTOR

M8 MOTOR ABIERTO/CERRADO ESPARCIDOR TF 2
TF 2 SPREADER OPENING/CLOSING MOTOR

M9 MOTOR ABIERTO/CERRADO ESPARCIDOR TF 3
TF 3 SPREADER OPENING/CLOSING MOTOR

M10 MOTOR ABIERTO/CERRADO ESPARCIDOR TF 4
TF 4 SPREADER OPENING/CLOSING MOTOR

M11 MOTOR ABIERTO/CERRADO ESPARCIDOR TF 5
TF 5 SPREADER OPENING/CLOSING MOTOR

M13 MOTOR MOVIMIENTO CORREA
BELT MOVEMENT MOTOR

M15 MOTOR DESEENROLLADOR ROLLO TELA TF 1
TF 1 FABRIC ROLLER UNROLLING MOTOR

M16 MOTOR DESEENROLLADOR ROLLO TELA TF 2
TF 2 FABRIC ROLLER UNROLLING MOTOR

M17 MOTOR DESEENROLLADOR ROLLO TELA TF 3
TF 3 FABRIC ROLLER UNROLLING MOTOR

M18 MOTOR DESEENROLLADOR ROLLO TELA TF 4
TF 4 FABRIC ROLLER UNROLLING MOTOR

M19 MOTOR DESEENROLLADOR ROLLO TELA TF 5
TF 5 FABRIC ROLLER UNROLLING MOTOR

EC1 ENCODER ESPARCIDOR TF 1
TF 1 SPREADER ENCODER

EC2 ENCODER ESPARCIDOR TF 2
TF 2 SPREADER ENCODER

EC3 ENCODER ESPARCIDOR TF 3
TF 3 SPREADER ENCODER

EC4 ENCODER ESPARCIDOR TF 4
TF 4 SPREADER ENCODER

EC5 ENCODER ESPARCIDOR TF 5
TF 5 SPREADER ENCODER

EC7 ENCODER AJUSTAR PERILLA MOVIMIENTO DE CORREA
BELTS MOVEMENT ADJUSTMENT KNOB ENCODER

MSW1 STOP DEL ESPARCIDOR Y SINCRONISMO TF 1
TF 1 SPREADER STOP AND SYNCHRONISM MSW

MSW2 STOP DEL ESPARCIDOR Y SINCRONISMO TF 2
TF 2 SPREADER STOP AND SYNCHRONISM MSW

MSW3 STOP DEL ESPARCIDOR Y SINCRONISMO TF 3
TF 3 SPREADER STOP AND SYNCHRONISM MSW

MSW4 STOP DEL ESPARCIDOR Y SINCRONISMO TF 4
TF 4 SPREADER STOP AND SYNCHRONISM MSW

MSW5 STOP DEL ESPARCIDOR Y SINCRONISMO TF 5
TF 5 SPREADER STOP AND SYNCHRONISM MSW

MSW6 MSW TF 1-2 DE BLOQUEA ELECTROVALVULA
TF 1-2 DOOR AIR ELECTRO-VALVE STOP MSW

MSW7 MSW TF 3-4 DE BLOQUEA ELECTROVALVULA
TF 3-4 DOOR AIR ELECTRO-VALVE STOP MSW

MSW8 MSW TF 5 DE BLOQUEA ELECTROVALVULA
TF 5 DOOR AIR ELECTRO-VALVE STOP MSW

PSW1 PROXIMIDAD CONMTROL COVE TELA 1
FABRIC 1 COVE CONTROL PROXIMITY

PSW2 PROXIMIDAD CONMTROL COVE TELA 2
FABRIC 2 COVE CONTROL PROXIMITY

PSW3 PROXIMIDAD CONMTROL COVE TELA 3
FABRIC 3 COVE CONTROL PROXIMITY

PSW4 PROXIMIDAD CONMTROL COVE TELA 4
FABRIC 4 COVE CONTROL PROXIMITY

PSW5 PROXIMIDAD CONMTROL COVE TELA 5
FABRIC 5 COVE CONTROL PROXIMITY

PSW7 PROXIMIDAD EJE ACALANADO ABIERT TF 1
TF 1 GROOVED SHAFT OPENED PROXIMITY

PSW8 PROXIMIDAD EJE ACALANADO ABIERT TF 2
TF 2 GROOVED SHAFT OPENED PROXIMITY

PSW9 PROXIMIDAD EJE ACALANADO ABIERT TF 3
TF 3 GROOVED SHAFT OPENED PROXIMITY

PSW10 PROXIMIDAD EJE ACALANADO ABIERT TF 4
TF 4 GROOVED SHAFT OPENED PROXIMITY

PSW11 PROXIMIDAD EJE ACALANADO ABIERT TF 5
TF 5 GROOVED SHAFT OPENED PROXIMITY


PH1 FOTOCELULA FALTA DE TELA 1
NO FABRIC 1 PHOTOEYE

PH2 FOTOCELULA FALTA DE TELA 2
NO FABRIC 2 PHOTOEYE

PH3 FOTOCELULA FALTA DE TELA 3
NO FABRIC 3 PHOTOEYE

PH4 FOTOCELULA FALTA DE TELA 4
NO FABRIC 4 PHOTOEYE

PH5 FOTOCELULA FALTA DE TELA 5
NO FABRIC 5 PHOTOEYE

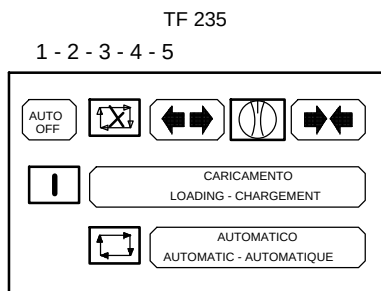

PANEL DE CONTROL
CONTROL PANEL

- INTERRUPTOR APERTURA / CIERRE ESPARCIDOR
SPREADERS OPENING / CLOSING SWITCH
- HACIA LA DERECHA: CIERRE DEL ESPARCIDOR
TOWARDS RIGHT: SPREADER CLOSING
- HACIA LA IZQUIERDA: APERTURA DEL ESPARCIDOR
TOWARDS LEFT: SPREADER OPENING
- BOTON APAGAR CICLO AUTOMATICO OFF DE AC 235 XL:
NO APAGA EL CICLO AUTOMAT DEL TF 235
AC 235 XL AUTOMATIC CYCLE OFF BUTTON:
IT DOESN'T SWITCH OFF THE TF 235 AUTOMATIC CYCLE
- BOTONES MOVIMIENTO MANUAL DE EJE ACALANADO Y MOVIMIENTO
CORREA (CON BOTON CICLO AUTOMATICO DIR PRENDIDO).
BUTTONS FOR MANUAL MOVEMENT OF GROOVED SHAFTS AND FOR
MOVEMENT OF BELT (WHEN DIR AUTOMATIC CYCLE BUTTON IS ON).
- BOTON PARA CICLO AUTOMATICO DE DIR CON LAMPARA
INCORPORADA
DIR AUTOMATIC CYCLE BUTTON, WITH LAMP.

OPERACION DE LAMPARA AUTOMATICA
AUTOMATIC LAMP OPERATION:

APAGAD OFF	UNO O MAS INTERRUPT AUTOMATICO ESTA OFF, O EL CPU NO ESTA OPERANDO ONE OR MORE AUTOMATIC SWITCH IS OFF, OR CPU NON OPERATING.
ACCESO A LUZ FIJA LIT UP	FUNCIONAMIENTO AUTOMATICO DE TF RELATIVO AUTOMATIC OPERATION OF THE RELEVANT TF
PARPADEO DE MODO REGULAR Y VELOZ FAST AND REGULAR BLINKING	FUNCIONAMIENTO MANUAL DEL DIR RELATIVO O EMERGENC PRESIONAD MANUAL OPERATION OF THE RELEVANT DIR OR EMERGENCY PRESSED.
PARPADEO DE MODO REG Y LENTO SLOW AND REGULAR BLINKING	ESPERAR 4 SEG AL ENCENDER WAIT FOR 4 secs. WHEN SWITCH ON
PARPADEO A 3 IMPULSO 3-PULSE BLINKING	INTERRUPTOR AUTOMATICO OFF O INVERSOR EN BLOQUE DEL TF RELATIVO AUTOMATIC SWITCH OFF OR INVERTER BLOCKED OF THE RELEVANT TF

FUNCION DE TARJETAS
FUNCTION OF CARDS

BRB 2080	TARJETA CONTROL 2 MOTORS ESPARCIDORES CONTROL CARD FOR 2 SPREADERS MOTORS
BRB 3013	TARJETA INTERFASE HACIA EJE CORREA INTERFACE CARD TOWARDS BELT AXIS
BRB 3015	TARJETA MADRE E INTERFASE ENTRADA/SALIDA MOTHER BOARD AND INPUTS/OUTPUTS INTERFACE
BRB 3016	TARJETA INTERFASE ESPARCIDOR SPREADERS INTERFACE CARD
BRB 3018	TARJETA SENAL DE CONEXION SIGNAL CONNECTION CARD
BRB 3019	TARJETA CONTROL MOTOR SOBRETORQ ROLLO ALIMENT FEEDING ROLLERS MOTORS OVERTORQUE CONTROL CARD
BRB 3030	TARJETA CNTRL VELOC PARA INVERSOR ROLLO ALIMENT SPEED CONTROL CARD FOR FEEDING ROLLERS INVERTER
BRB 8900	TARJETA CPU DE CONTROL CONTROL CPU CARD
BRB 6032	TARJETA DE CONTROL GENERAL (WATCH DOG) GENERAL CONTROL CARD (WATCH DOG)
BRB 6034	TARJETA DE INVERSION DEL MOVIMIENTO DE RODILLOS FABRIC UNROLLER MOVEMENT REVERSE CARD



INVERSION DEL MOVIMIENTO DE LOS RODILLOS

LA INVERSION DEL MOVIMIENTO DE LOS RODILLOS DEBE LLEVARSE A CABO EN LAS SIGUIENTES CONDICIONES:

- CICLO AUTOMATICO OFF
- RODILLOS STOP
- EJE ACALANADO ABIERT

METODO DE INSERTAR EL MOVIMIENTO INVERSO:

- PULSAR SIMULTANEAMENTE LOS BOTONES "CICLO AUTOMATICO OFF AC 235 XL " Y "AUTOMATICO TF"
- LA LUZ INTERMITENTE ROJA PARPADEA CORRESPONDIENTE A RODILLO
- PULSARE EL BOTON DE MOVIMIENTO MANUAL DE EJE PARA HACER LA INVERSION DEL MOVIMIENTO DEL RODILLO
- AL FINAL DE LA APLICACION DE LA NUEVA PRENSA DE LOS BOTONES "AUTOMATICO OFF AC 235 XL" Y "TF AUTOMATICO" SIMULTANEAMENTE
- LA LUZ ROJA SE APAGA. HACER RETROCEDER DEL FUNCIONAMIENTO NORMAL



PRECAUCION:

CIERRE DE LOS EJE ACANALADOS RETROCEDER A FUNCIONAMIENTO NORMAL AUTOMATICAMENTE



ROLLER MOVEMENT REVERSE

ROLLERS MOVEMENT REVERSE SHOULD BE EXECUTED IN THE FOLLOWING CONDITION:

- AUTOMATIC CYCLE OFF
- ROLLERS STOPPED
- GROOVED SHAFTS OPENED


ROLLER MOVEMENT REVERSE PROCEDURES:

- PRESS CONTEMPORANEOUSLY THE BUTTONS " AC 235 XL AUTOMATIC OFF " AND " TF AUTOMATIC "
- THE RED LAMP CORRESPONDING TO THE ROLLER BLINKS
- PRESS MANUAL BUTTON TO EXECUTE THE REVERSE MOVEMENT OF ROLLER
- AT THE END OF OPERATION PRESS AGAIN THE BUTTONS " AC 235 XL AUTOMATIC OFF " AND " TF AUTOMATIC "
- THE RED LAMP TURNS OFF AND THE ROLLER RETURNS TO THE NORMAL CONDITIONS OF OPERATION




WARNING:

CLOSING THE GROOVED SHAFTS THE ROLLER RETURNS AUTOMATICALLY TO NORMAL CONDITION OF OPERATION

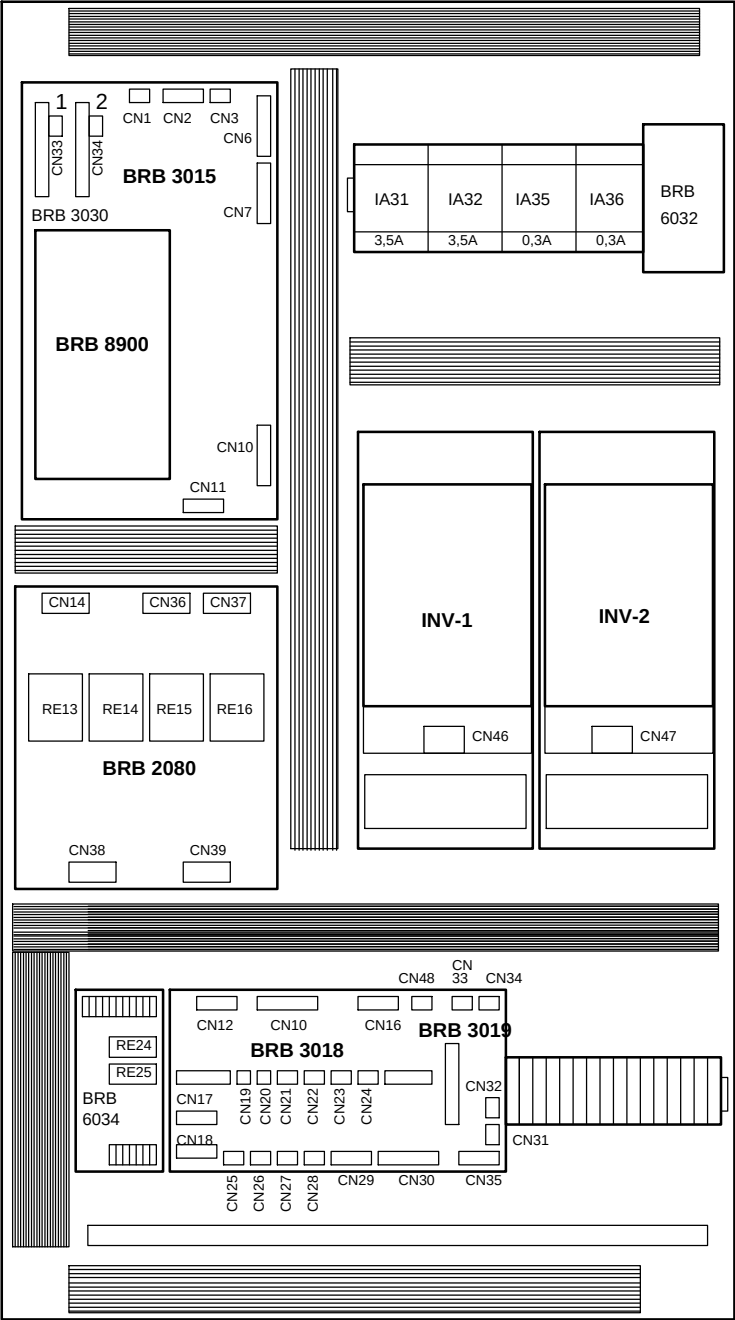

AJUSTE INTERRUPTORES AUTOMATICOS
AUTOMATIC SWITCHES ADJUSTMENT

	GAMA RANGE	CALIBRAC CALIBRATION	
IA31	3,5 - 5 A	3,5A	MOTOR ROLLO ALIMENTADOR DE TELA TF 1 TF 1 FABRIC FEEDING ROLLERS MOTORS
IA32	3,5 - 5 A	3,5A	MOTOR ROLLO ALIMENTADOR DE TELA TF 2 TF 2 FABRIC FEEDING ROLLERS MOTORS
IA35	0,28-0,4A	0,3A	MOTOR ESPARCIDOR TF 1 TF 1 SPREADER MOTOR
IA36	0,28-0,4A	0,3A	MOTOR ESPARCIDOR TF 2 TF 2 SPREADER MOTOR

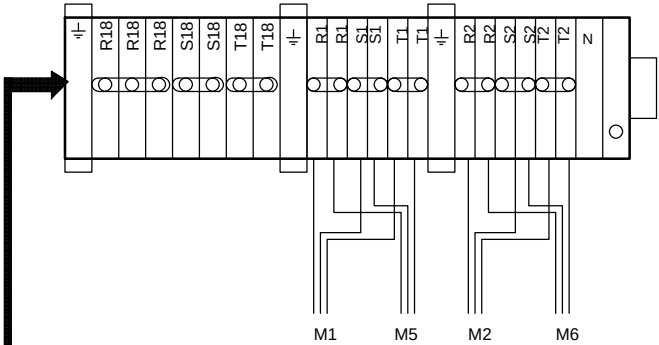


MOTOR MOVIMIENTO EJE ACALANADO TF 1
TF 1 GROOVED SHAFT MOVEMENT MOTOR

MOTOR DESENROLLADOR ROLLO DE TELA TF 1
TF 1 FABRIC ROLLER UNROLLING MOTOR


MOTOR MOVIMIENTO EJE ACALANADO TF 2
TF 2 GROOVED SHAFT MOVEMENT MOTOR


MOTOR DESENROLLADOR ROLLO DE TELA TF 2
TF 2 FABRIC ROLLER UNROLLING MOTOR

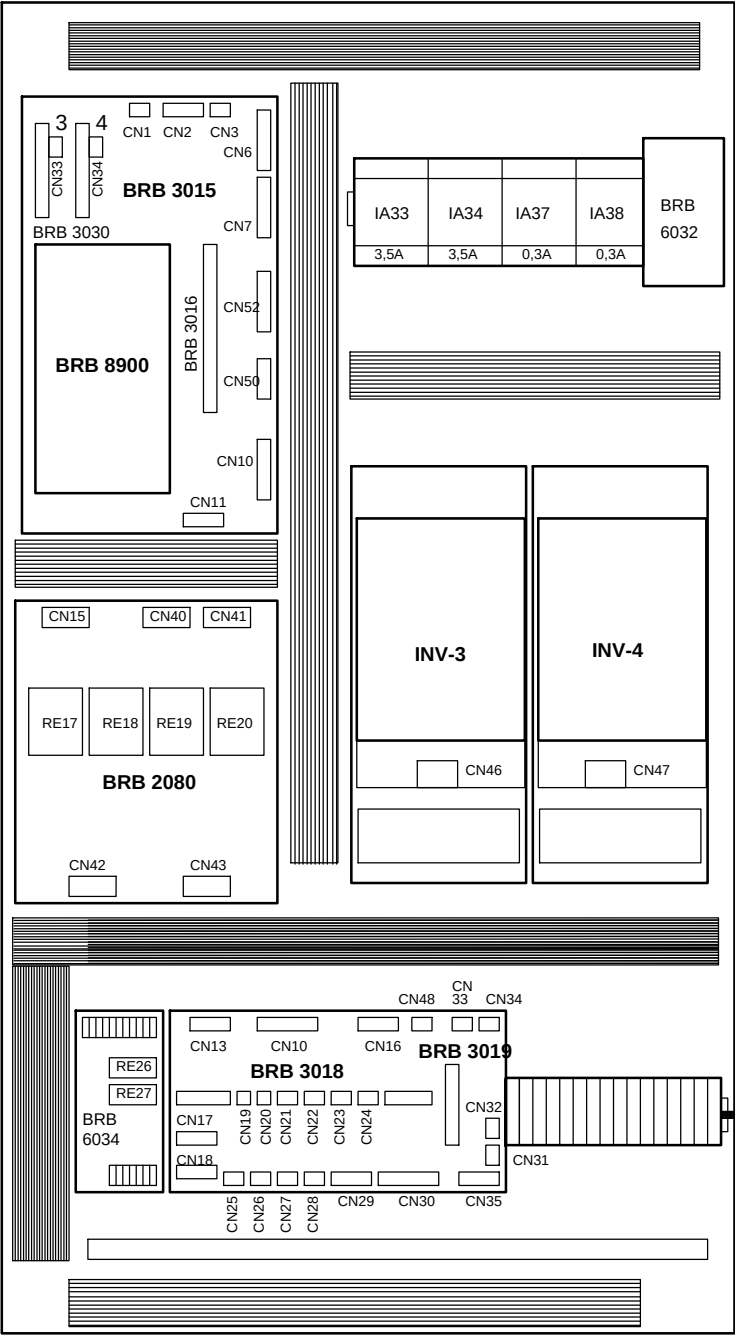

AJUSTE INTERRUPTORES AUTOMATICOS
AUTOMATIC SWITCHES ADJUSTMENT


	GAMA RANGE	CALIBRAC CALIBRATION	
IA33	3,5 - 5 A	3,5A	MOTOR ROLLO ALIMENTADOR DE TELA TF 3 TF 3 FABRIC FEEDING ROLLERS MOTORS
IA34	3,5 - 5 A	3,5A	MOTOR ROLLO ALIMENTADOR DE TELA TF 4 TF 4 FABRIC FEEDING ROLLERS MOTORS
IA37	0,28-0,4A	0,3A	MOTOR ESPARCIDOR TF 3 TF 3 SPREADER MOTOR
IA38	0,28-0,4A	0,3A	MOTOR ESPARCIDOR TF 4 TF 4 SPREADER MOTOR

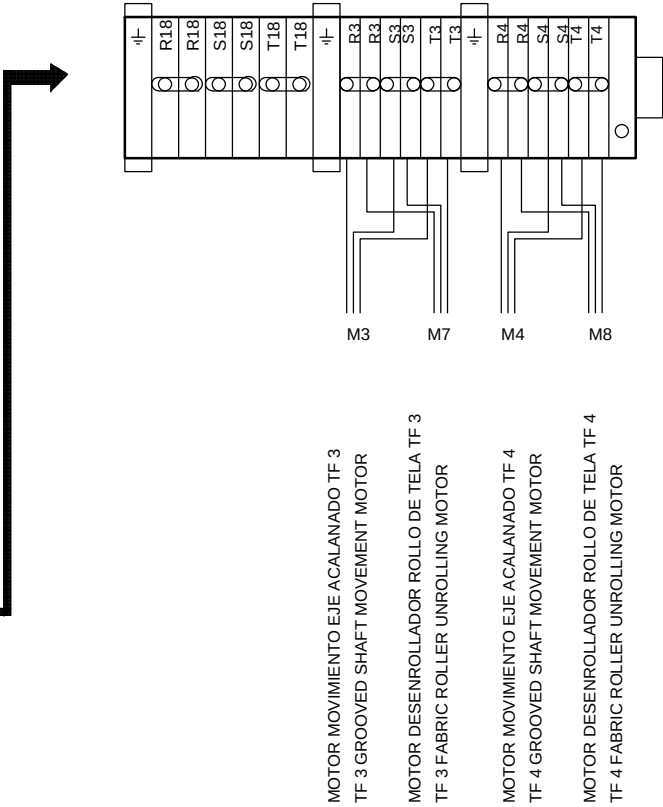


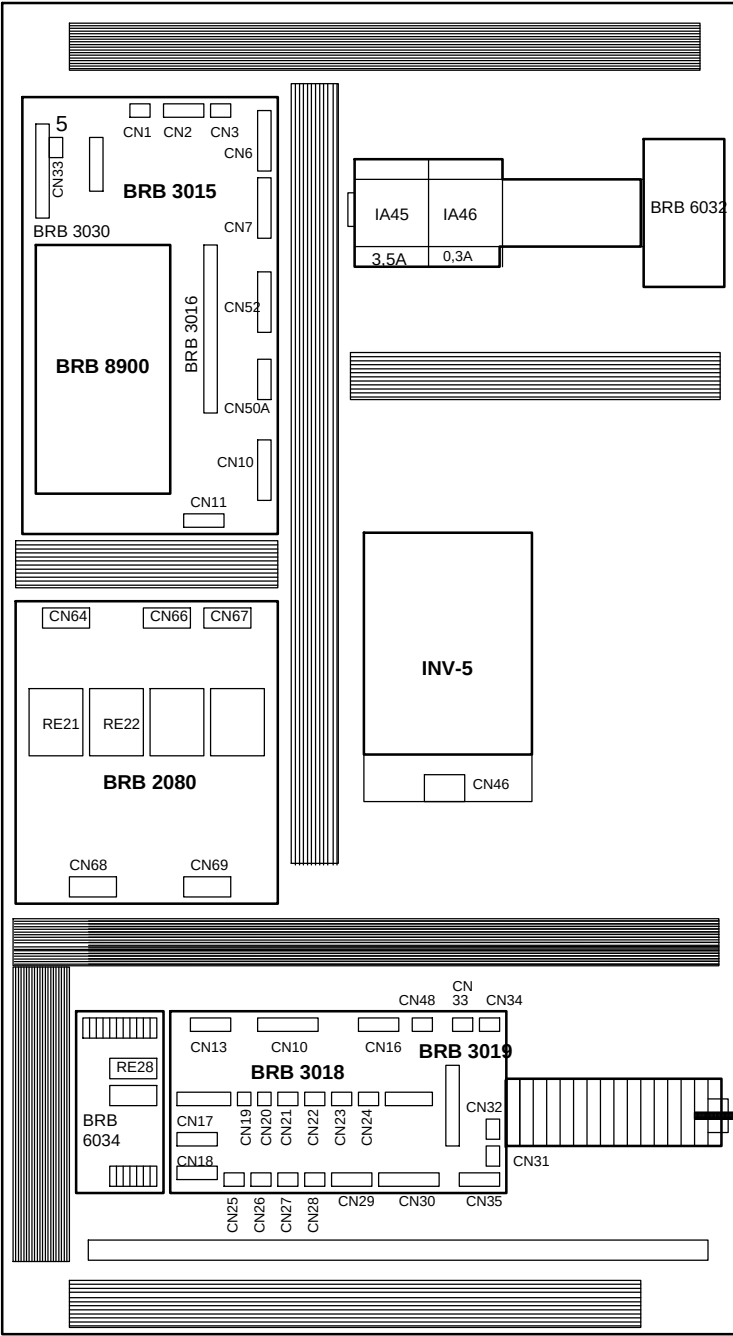

AJUSTE INTERRUPTORES AUTOMATICOS
AUTOMATIC SWITCHES ADJUSTMENT


	GAMA RANGE	CALIBRAC CALIBRATION	
IA45	3,5 - 5 A	3,5A	MOTOR ROLLO ALIMENTADOR DE TELA TF 5 TF 5 FABRIC FEEDING ROLLERS MOTORS
IA46	0,28-0,4A	0,3A	MOTOR ESPARCIDOR TF 5 TF 5 SPREADER MOTOR

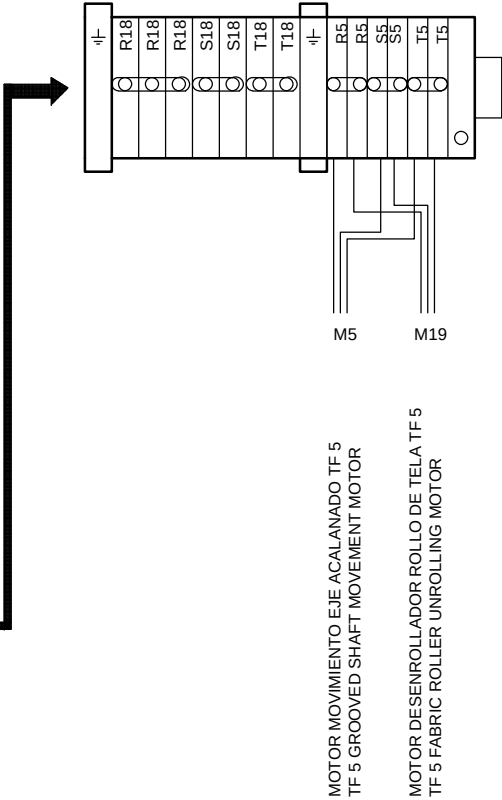


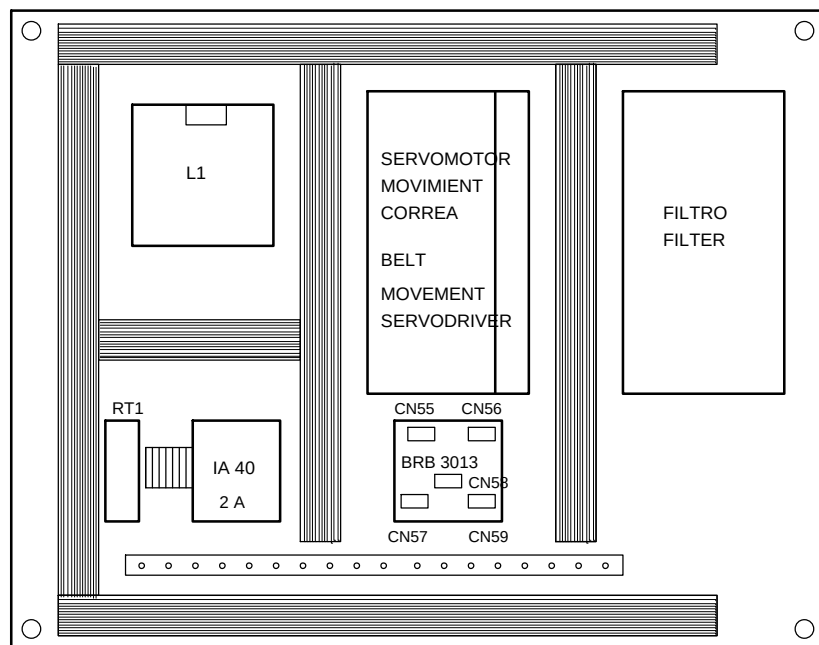

AJUSTE INTERRUPTOR AUTOMATICO AUTOMATIC SWITCH ADJUSTMENT

	GAMA RANGE	CALIBRAC CALIBRATION	
IA40	1,8-2,5A	2 A	MOTOR MOVIMIENTO CORREA BELT MOVEMENT MOTOR

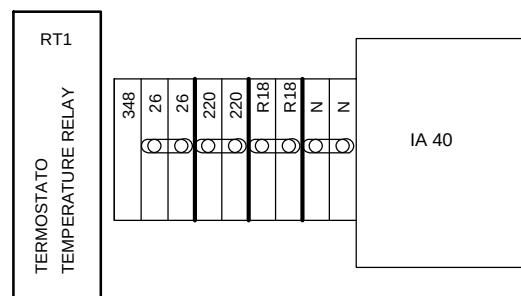

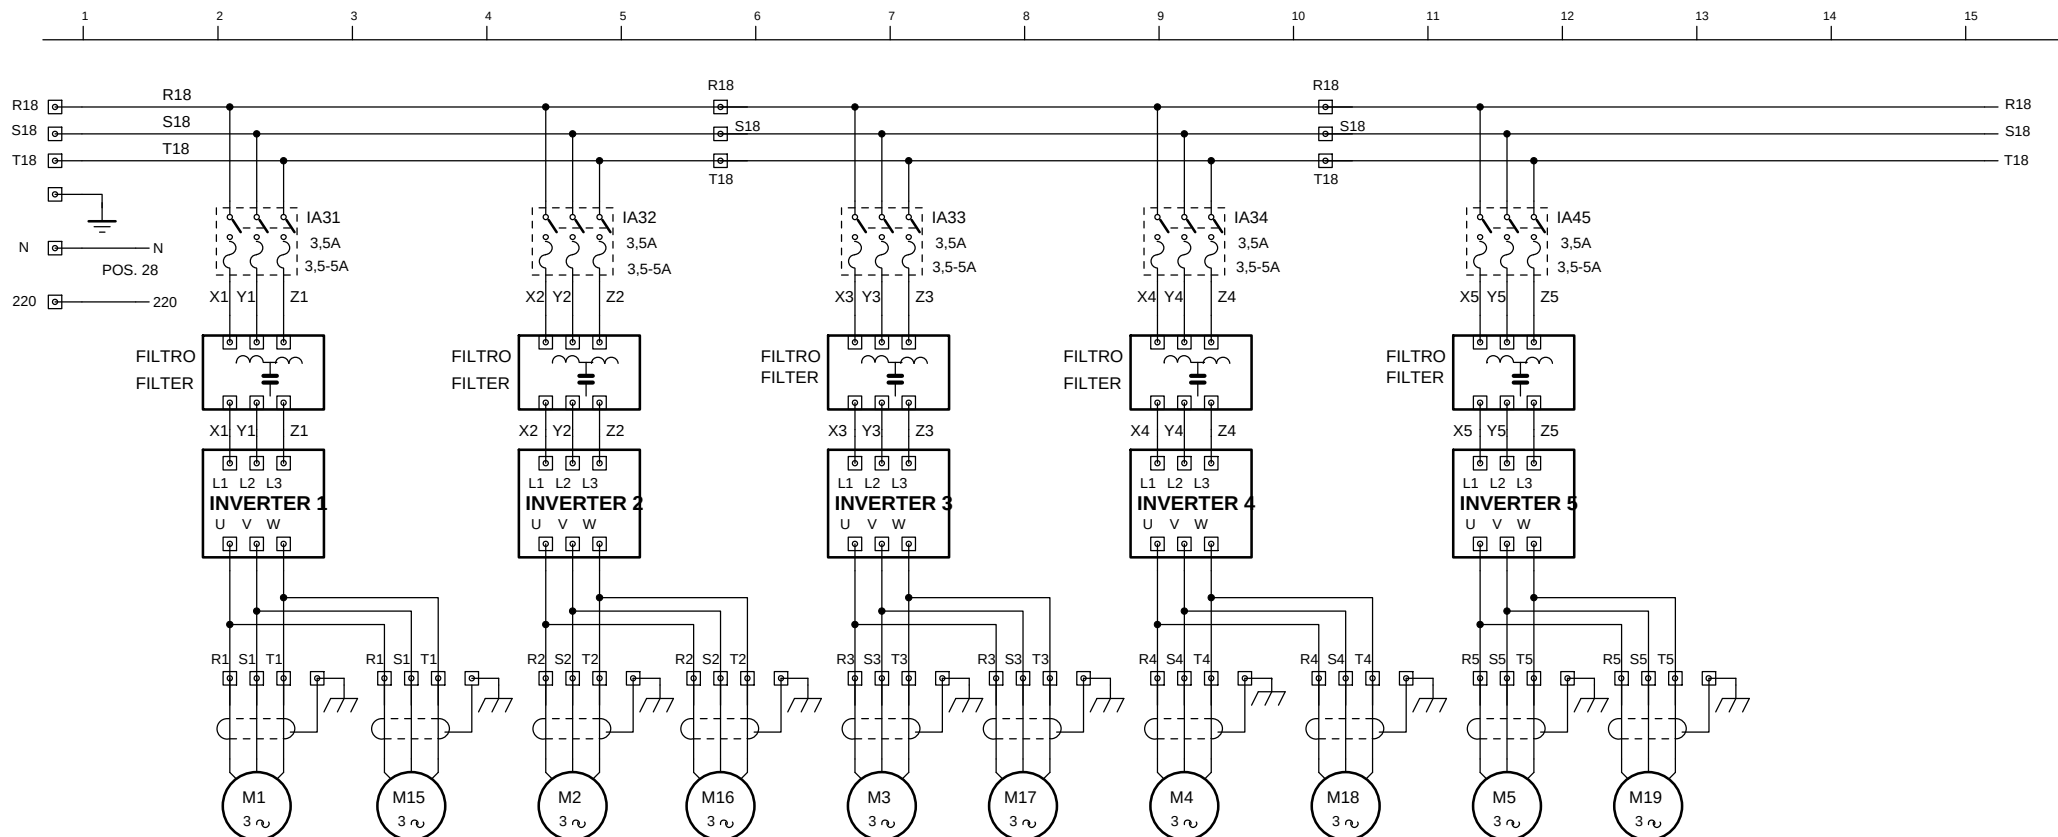

ENTRADA SUPLIDOR ENERGIA TRIFASE DE AC 235 XL
3-PHASE POWER SUPPLY INPUT FROM AC 235 XL

MOTOR MOVIMIENTO EJE ACALANADO TF 1
TF 1 GROOVED SHAFT MOVEMENT MOTOR

MOTOR DESENNOLLADOR ROLLO DE TELA TF 1
TF 1 FABRIC ROLLER UNROLLING MOTOR

MOTOR MOVIMIENTO EJE ACALANADO TF 2
TF 2 GROOVED SHAFT MOVEMENT MOTOR

MOTOR DESENNOLLADOR ROLLO DE TELA TF 2
TF 2 FABRIC ROLLER UNROLLING MOTOR

MOTOR MOVIMIENTO EJE ACALANADO TF 3
TF 3 GROOVED SHAFT MOVEMENT MOTOR


MOTOR DESENNOLLADOR ROLLO DE TELA TF 3
TF 3 FABRIC ROLLER UNROLLING MOTOR

MOTOR MOVIMIENTO EJE ACALANADO TF 4
TF 4 GROOVED SHAFT MOVEMENT MOTOR

MOTOR DESENNOLLADOR ROLLO DE TELA TF 4
TF 4 FABRIC ROLLER UNROLLING MOTOR

MOTOR MOVIMIENTO EJE ACALANADO TF 5
TF 5 GROOVED SHAFT MOVEMENT MOTOR

MOTOR DESENNOLLADOR ROLLO DE TELA TF 5
TF 5 FABRIC ROLLER UNROLLING MOTOR

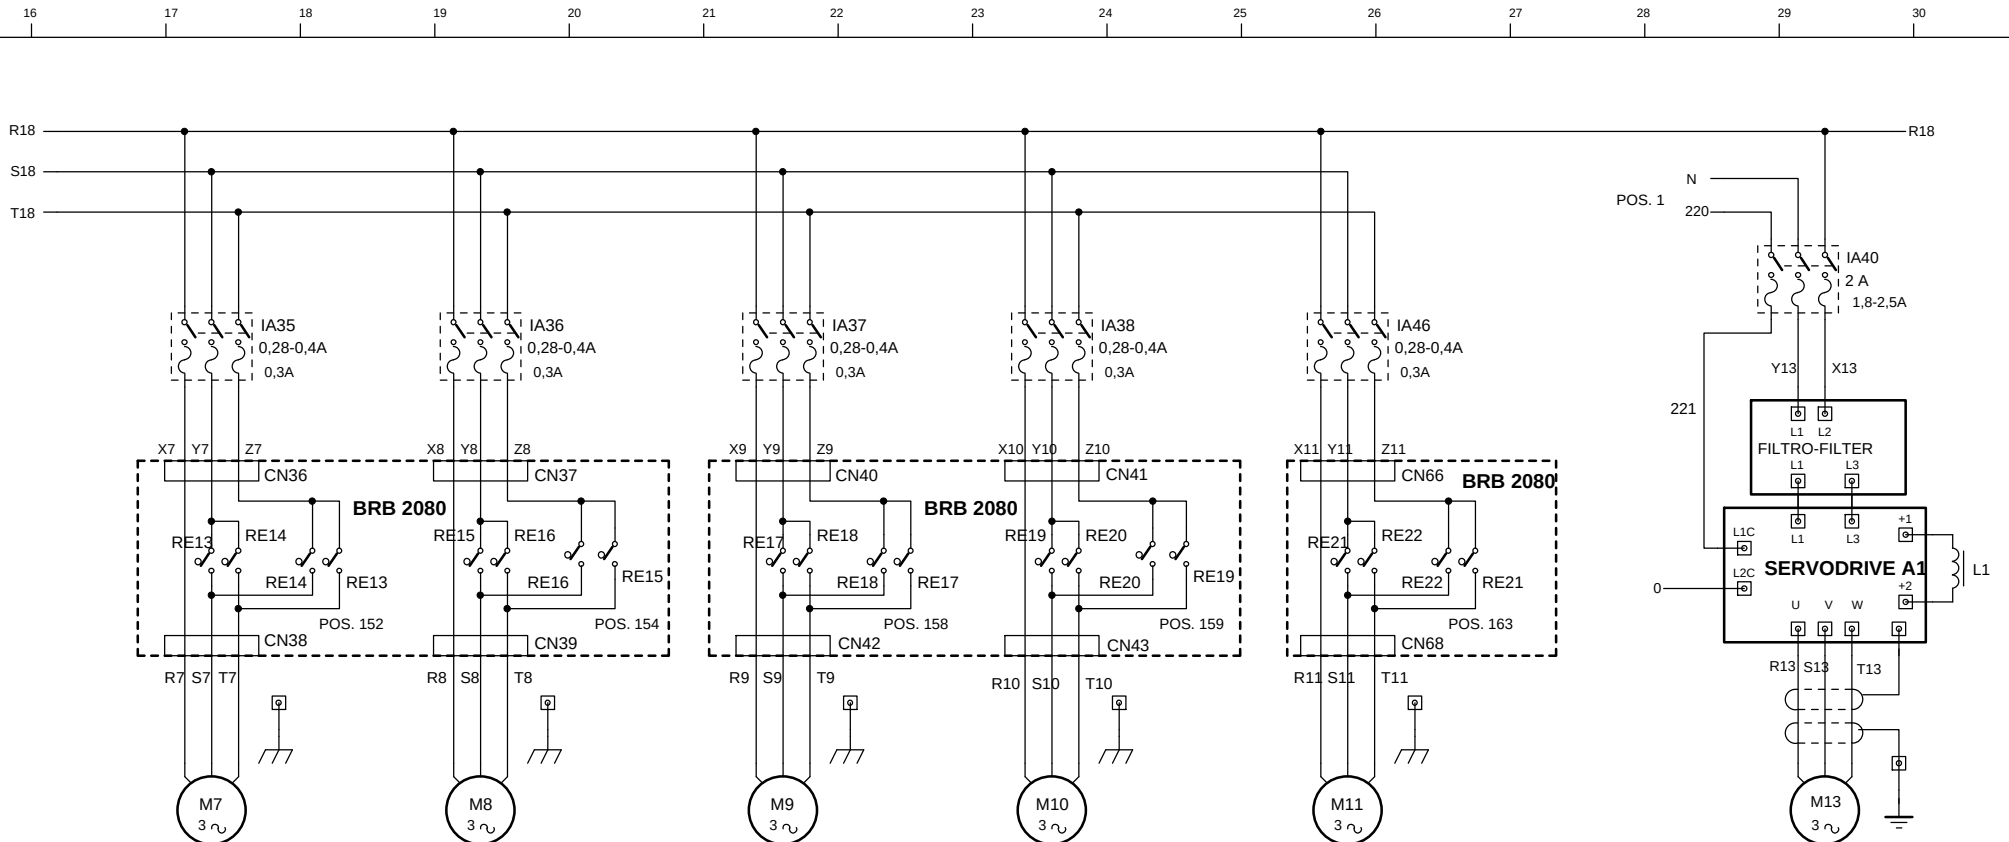

MOTOR ESPARCIDOR TF 1
TF 1 SPREADER MOTOR
RE13 = CIERRA / CLOSES
RE14 = ABRE / OPENS


MOTOR ESPARCIDOR TF 2
TF 2 SPREADER MOTOR
RE15 = CIERRA / CLOSES
RE16 = ABRE / OPENS

MOTOR ESPARCIDOR TF 3
TF 3 SPREADER MOTOR
RE17 = CIERRA / CLOSES
RE18 = ABRE / OPENS


MOTOR ESPARCIDOR TF 4
TF 4 SPREADER MOTOR
RE19 = CIERRA / CLOSES
RE20 = ABRE / OPENS


MOTOR ESPARCIDOR TF 5
TF 5 SPREADER MOTOR
RE21 = CIERRA / CLOSES
RE22 = ABRE / OPENS

M13 - MOTOR MOVIMIENTO CORREA
M13 - BELT MOVEMENT MOTOR

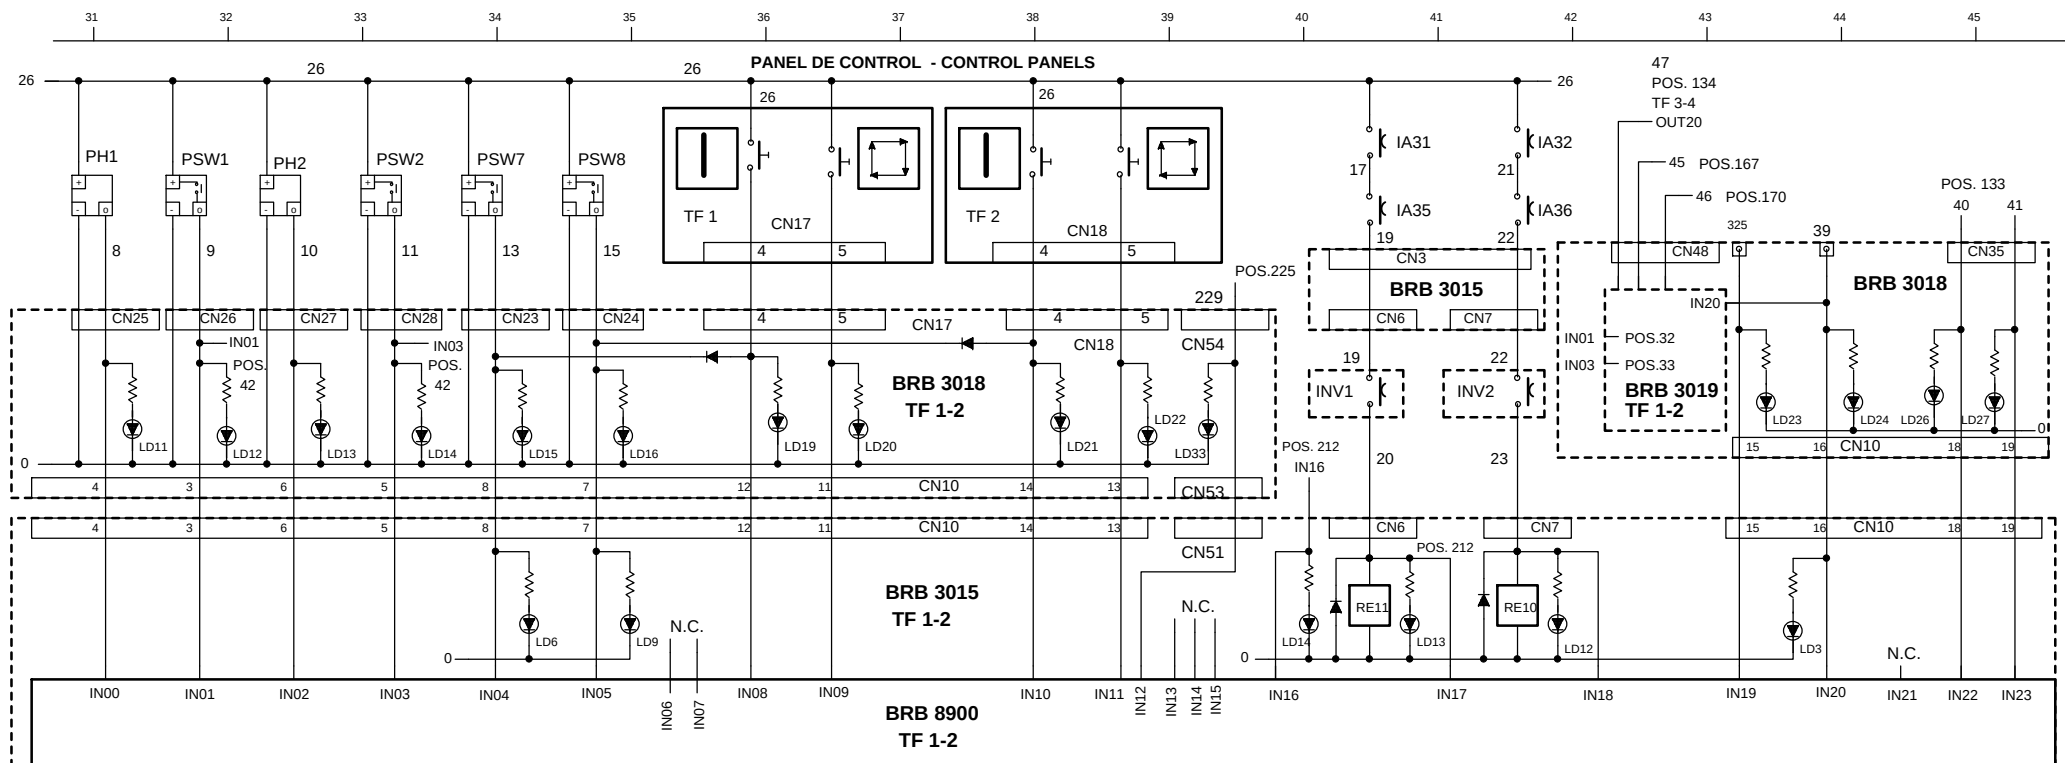

- PH1 - FOTOCELULA PRESENCIA DE TELA 1
PH1 - FABRIC 1 PRESENCE PHOTOEYE
- PSW1 - PROXIMIDAD CONTROL TELA 1
PSW1 - FABRIC 1 COVE CONTROL PROXIMITY
- PH2 - FOTOCELULA PRESENCIA DE TELA 2
PH2 - FABRIC 2 PRESENCE PHOTOEYE
- PSW2 - PROXIMIDAD CONTROL TELA 2
PSW2 - FABRIC 2 COVE CONTROL PROXIMITY
- PSW7 - PROXIMIDAD APERTURA EJE ACALANADO TF 1
PSW7 - TF 1 GROOVED SHAFT OPENED PROXIMITY
- PSW8 - PROXIMIDAD APERTURA EJE ACALANADO TF 2
PSW8 - TF 2 GROOVED SHAFT OPENED PROXIMITY
- IN08 - BOTON MOVIMIENTO MANUAL DEL EJE
ACALANADO TF 1 Y MOVIMIENTO CORREA
IN08 - TF 1 GROOVED SHAFT MANUAL MOVEMENT
BUTTON (AND BELT MOVEMENT)
- IN09 - BOTON CICLO AUTOMATICO TF 1
IN09 - TF 1 AUTOMATIC CYCLE PUSHBUTTON
- IN10 - BOTON MOVIMIENTO MANUAL DEL EJE
ACALANADO TF 2 Y MOVIMIENTO CORREA
IN10 - TF 2 GROOVED SHAFT MANUAL MOVEMENT
BUTTON (AND BELT MOVEMENT)
- IN11 - BOTON CICLO AUTOMATICO TF 2
IN11 - TF 2 AUTOMATIC CYCLE PUSHBUTTON
- IN12 - SENAL APAGAR CICLO AUTOMATICO OFF DE AC 235 XL
IN12 - AC 235 XL AUTOMATIC OFF SIGNAL INPUT
- IN16 - SENAL DE INTERRUPTORES AUTOMATICOS
E INVERSOR
IN16 - AUTOMATIC SWITCHES AND INVERTER SIGNAL
- RE11 - RELAY CONTROL INTERRUPTOR AUTOMATICO OFF
O INVERSOR TF 1 OFF
- RE11 - TF 1 AUTOMATIC SWITCHES OFF OR
INVERTER OFF CONTROL RELAY
- IN17 - SENAL INTERRUPTOR AUTOMATICO E
INVERSOR TF 1
IN17 - TF 1 AUTOMATIC SWITCHES AND
INVERTER SIGNAL
- RE10 - RELAY CONTROL INTERRUPTOR AUTOMATICO OFF
O INVERSOR TF 2 OFF
- RE10 - TF 2 AUTOMATIC SWITCHES OFF OR
INVERTER OFF CONTROL RELAY
- IN18 - SENAL INTERRUPTOR AUTOMATICO E
INVERSOR TF 2
IN18 - TF 2 AUTOMATIC SWITCHES AND
INVERTER SIGNAL
- IN19 - ENTRADA SENAL 325 PROVENIENTE DE AC 235 XL
(LINEA DE EMERGENCIA)
IN19 - INPUT OF SIGNAL 325 COMING FROM AC 235 XL
(EMERGENCY LINE)
- IN20 - SENAL CONTROL MOVIMIENTO ROLLOS DE AC 235 XL
IN20 - ROLLERS MOVEMENT CONTROL SIGNAL FROM AC 235 XL
- IN22/23 - SENAL DE COMUNICACION DE TF 3-4:
IN22 - VALOR DE ADJ DE AC 235 XL
IN23 - AC EN AUTOMATICO
IN22/23 - COMMUNICATION SIGNALS FROM TF 3-4:
IN22 - ADJ VALUE FROM AC 235 XL
IN23 - AC 235 XL AUTOMATIC CYCLE

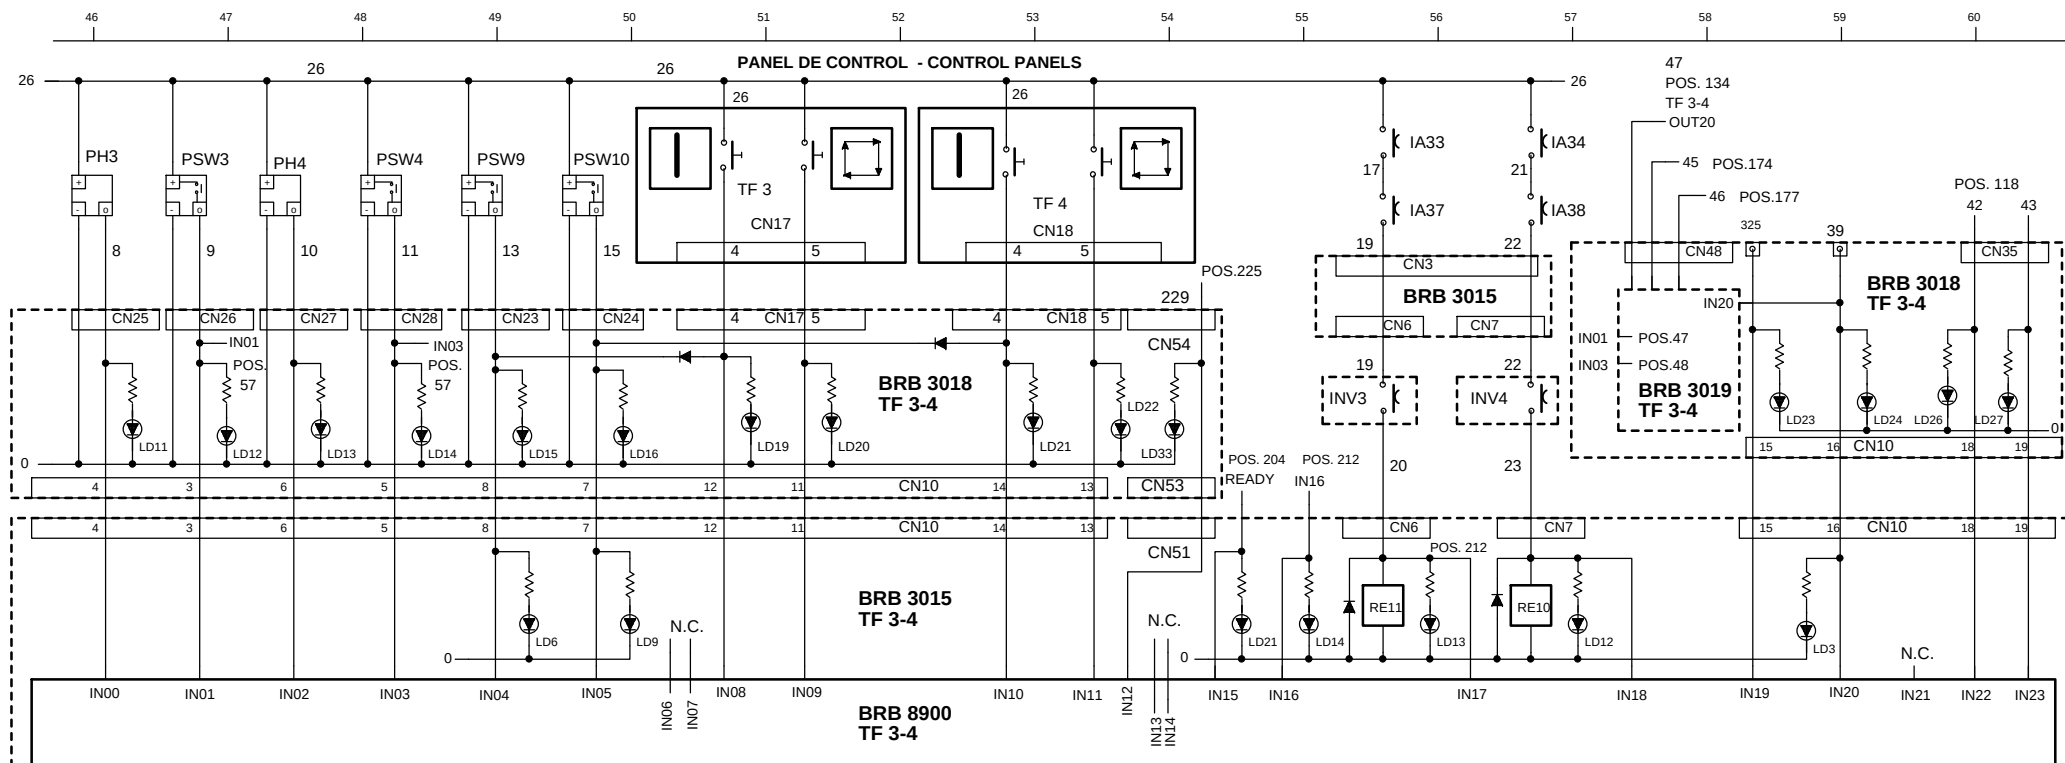


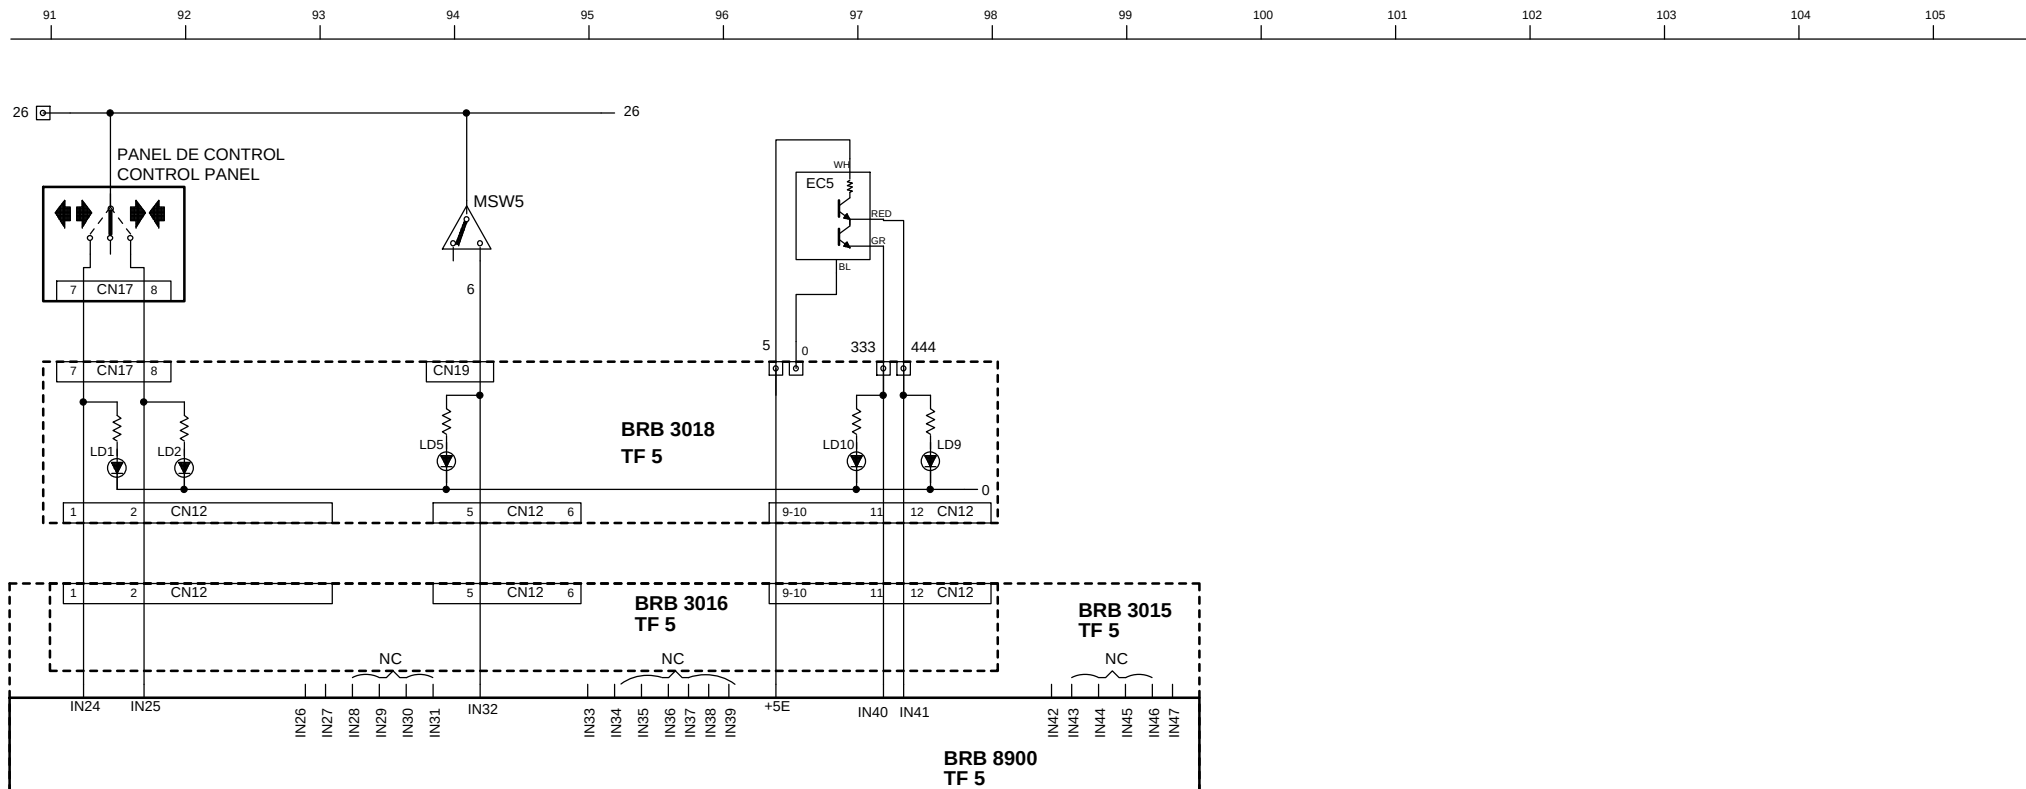

IN24 - SENAL DE APERTURA ESPARCIDOR TF 5
 IN24 - TF 5 SPREADER OPENING SIGNAL
 IN25 - SENAL DE CIERRE ESPARCIDOR TF 5
 IN25 - TF 5 SPREADER CLOSING SIGNAL

MSW5 - STOP DE ESPARCIDOR Y SINCR TF 5
 MSW5 - TF 5 SPREADER STOP AND SINCHR. MSW

EC5 - ENCODER ESPARCIDOR TF 5
 EC5 - TF 5 SPREADER ENCODER

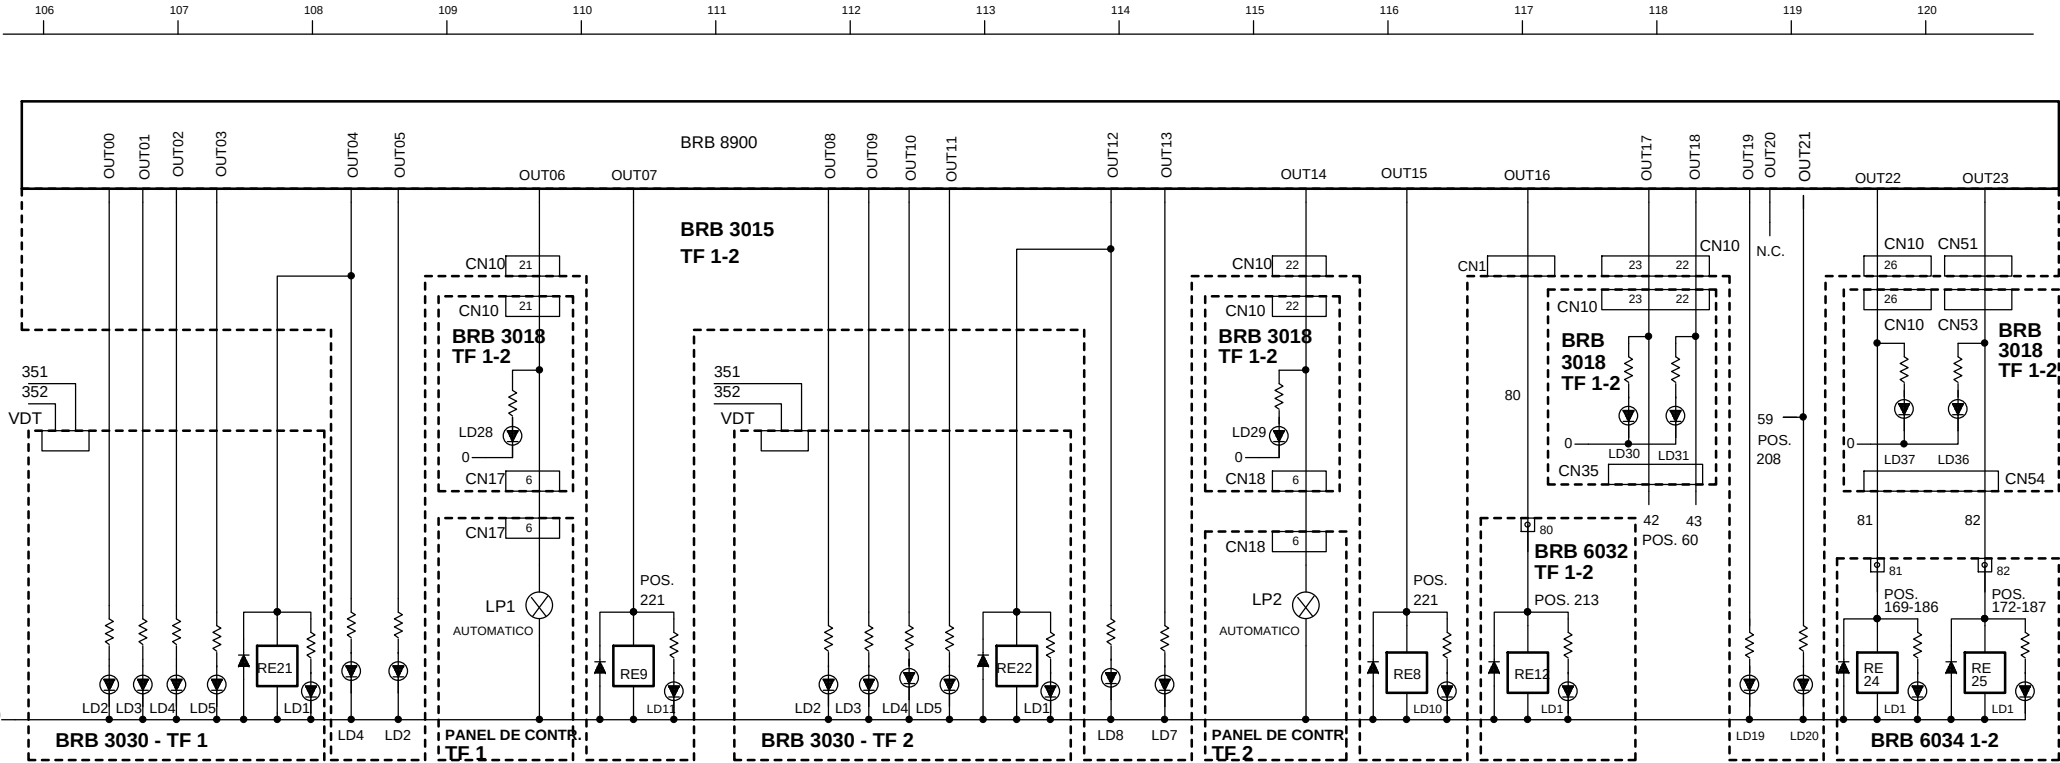

VDT - SENAL PROPORCIONAL A LA VELOCIDAD DE LA CARRETA DE AC 235 XL
VDT - SIGNAL PROPORTIONAL TO TROLLEY SPEED OF AC 235 XL

OUT00-01-02-03 - SENALES DE AJUSTE DE VELOCIDAD DE ROLLOS ALIMENTADORES TF 1
OUT00-01-02-03 - FEEDING ROLLERS TF 1 SPEED ADJUSTMENT SIGNALS

RE21 - RELAY PARA SELECCIONAR LA VELOCIDAD ROLLO 1: INTERNO O DE AC (SENAL VDT)
RE21 - RELAY FOR SELECTION OF ROLLER 1 SPEED REFERENCE: INTERNAL OR FROM AC (VDT SIGNAL)

OUT04 - PERMISO MOVIMIENTO ROLLO 1 DE TF
OUT04 - ROLLER 1 MOVEMENT PERMISSION FROM TF

OUT05 - PERMISO MOVIMIENTO ROLLO 1 DE AC 235 XL
OUT05 - ROLLER 1 MOVEMENT PERMISSION FROM AC 235 XL

LAMPARA PARA SENALAR TF 1 AUTOMATICO
LAMP FOR SIGNALLING AUTOMATIC TF 1

RE9 - RELAY DE CONTROL FALTA DE TELA 1 O EJE ACALANADO ABIERTO
RE9 - NO FABRIC 1 OR OPENED GROOVED SHAFTS CONTROL RELAY

VDT - SENAL PROPORCIONAL A LA VELOCIDAD DE LA CARRETA DEL AC 235 XL
VDT - SIGNAL PROPORTIONAL TO TROLLEY SPEED OF AC 235 XL

OUT08-09-10-11 - SENALES DE AJUSTE DE VELOCIDAD ROLLOS DE ALIMENTACION TF 2
OUT08-09-10-11 - FEEDING ROLLERS TF 2 SPEED ADJUSTMENT SIGNALS

RE22 - RELAY PARA SELECCIONAR LA VELOCIDAD ROLLO 2: INTERNO O DE AC (SENAL VDT)
RE22 - RELAY FOR SELECTION OF ROLLER 2 SPEED REFERENCE: INTERNAL OR FROM AC (VDT SIGNAL)

OUT12 - PERMISO MOVIMIENTO ROLLO 2 DE TF
OUT12 - ROLLER 2 MOVEMENT PERMISSION FROM TF

OUT13 - PERMISO MOVIMIENTO ROLLO 2 DE AC 235 XL
OUT13 - ROLLER 2 MOVEMENT PERMISSION FROM AC 235 XL

LAMPARA PARA SENALAR TF 2 AUTOMATICO
LAMP FOR SIGNALLING AUTOMATIC TF 2

RE8 - RELAY DE CONTROL FALTA DE TELA 2 O EJE ACALANADO ABIERTO
RE8 - NO FABRIC 2 OR OPENED GROOVED SHAFTS CONTROL RELAY

RE12 - RELAY CONTROL GENERAL (WATCH DOG)
RE12 - GENERAL CONTROL RELAY (WATCH DOG)

OUT17 - SALIDA PARA COMUNICACION A TF 3-4
OUT17 - OUTPUT FOR COMMUNICATION TO TF 3-4


OUT18 - SALIDA PARA COMUNICACION A TF 3-4: CICLO AUTOMAT AC OFF
OUT18 - OUTPUT FOR COMMUNICATION TO TF 3-4: AC AUTOMATIC CYCLE OFF

OUT19 - RESET INVERSOR ROLLO 1-2
OUT19 - RESET FOR ROLLERS 1-2 INVERTERS

OUT21 - CONTROL MOVIMIENTO MANUAL CORREA
OUT21 - BELT MANUAL MOVEMENT CONTROL

RE24 - RELAY INVERSION MOVIMIENTO ROLLO TF 1
RE24 - TF 1 ROLLER MOVEMENT REVERSE RELAY

RE25 - RELAY INVERSION MOVIMIENTO ROLLO TF 2
RE25 - TF 2 ROLLER MOVEMENT REVERSE RELAY

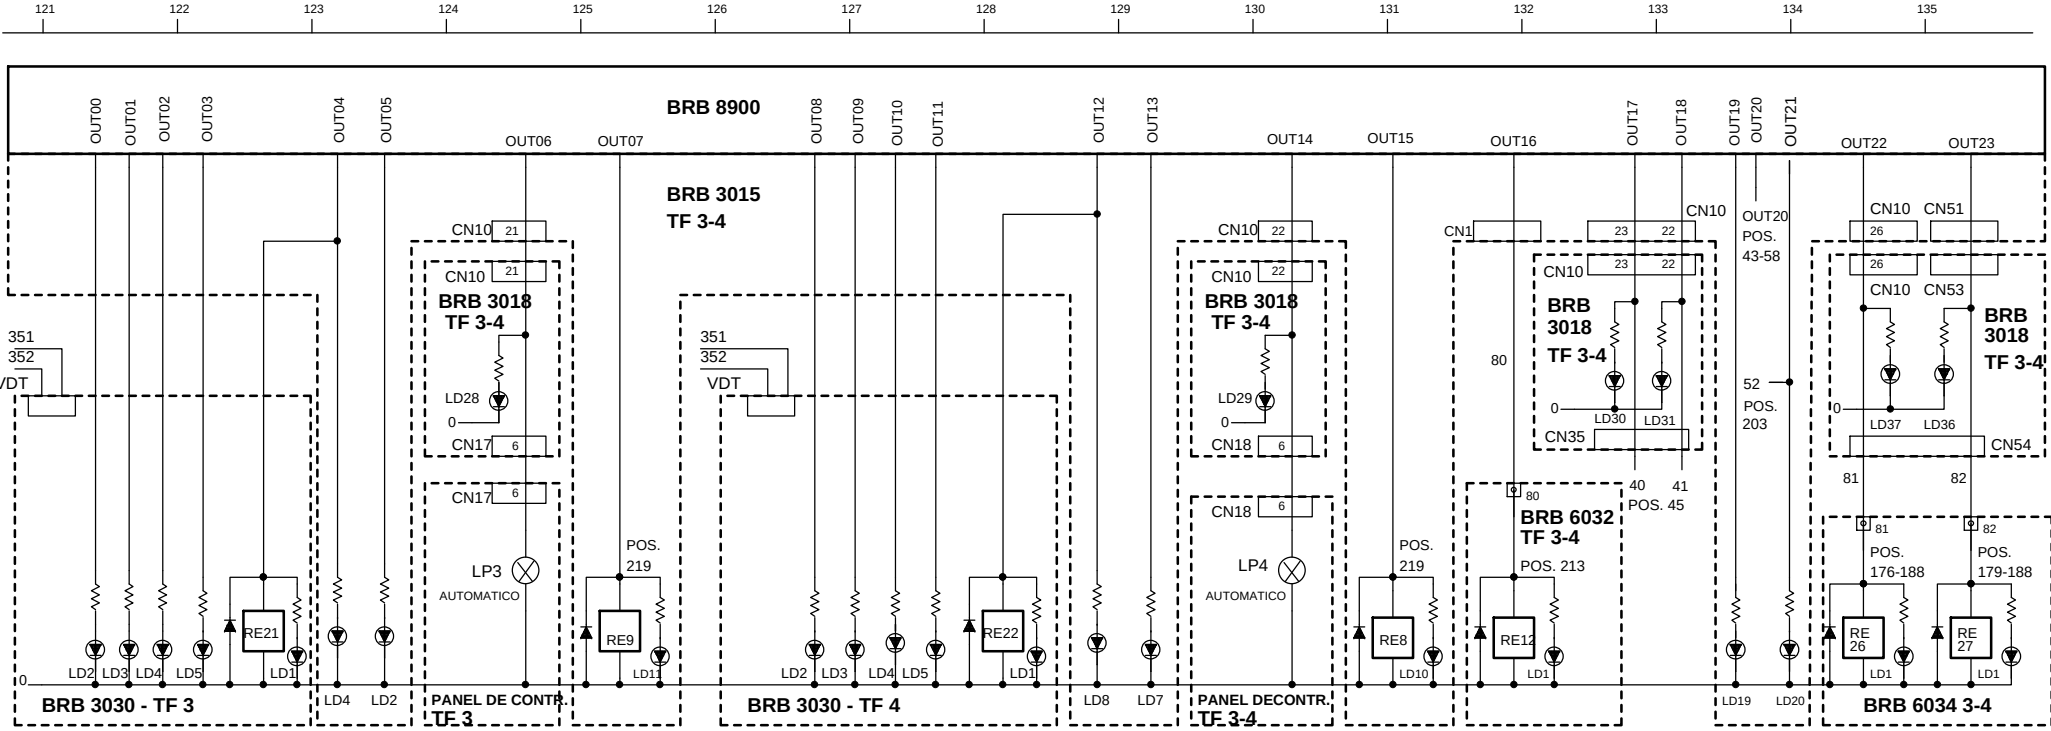

- SENAL PROPORCIONAL A LA VELOCIDAD DE LA CARRETA DEL AC 235 XL
SIGNAL PROPORTIONAL TO TROLLEY SPEED OF AC 235 XL

OUT00-01-02-03 - SENAL CONTROL VELOCIDAD ROLLO ALIMENTACION TF 3
OUT00-01-02-03 - FEEDING ROLLERS TF 3 SPEED CONTROL SIGNALS

RE21 - RELAY PARA SELECCION DE VELOCIDAD ROLLO 3: INTERNO O DE AC (SENAL VDT
RE21 - RELAY FOR SELECTION OF ROLLER 3 SPEED REFERENCE: INTERNAL OR FROM AC (VDT SIGNAL)

OUT04 - PERMISO MOVIMIENTO ROLLO 3 DE TF
OUT04 - ROLLER 3 MOVEMENT PERMISSION FROM TF

OUT05 - PERMISO MOVIMIENTO ROLLO 3 DE AC 235 XL
OUT05 - ROLLER 3 MOVEMENT PERMISSION FROM AC 235 XL

LAMPARA PARA SENALAR TF 3 AUTOMATICO
LAMP FOR SIGNALLING AUTOMATIC TF 3

RE9 - RELAY SENALADOR FALTA DE TELA 3 O EJE ACALANADO ABIERTO
RE9 - NO FABRIC 3 OR OPENED GROOVED SHAFTS CONTROL RELAY

SENAL PROPORCIONAL A LA VELOCIDAD DE LA CARRETA DEL AC 235 XL
SIGNAL PROPORTIONAL TO TROLLEY SPEED OF AC 235 XL

OUT08-09-10-11 - SENAL CONTROL VELOCIDAD ROLLO ALIMENTACION TF 4
OUT08-09-10-11 - FEEDING ROLLERS TF 4 SPEED CONTROL SIGNALS

RE22 - RELAY PARA SELECCION DE VELOCIDAD ROLLO 4: INTERNO O DE AC (SENAL VDT
RE22 - RELAY FOR SELECTION OF ROLLER 4 SPEED REFERENCE: INTERNAL OR FROM AC (VDT SIGNAL)

OUT12 - PERMISO MOVIMIENTO ROLLO 4 DE TF
OUT12 - ROLLER 4 MOVEMENT PERMISSION FROM TF

OUT13 - PERMISO MOVIMIENTO ROLLO 4 DE AC 235 XL
OUT13 - ROLLER 4 MOVEMENT PERMISSION FROM AC 235 XL

LAMPARA PARA SENALAR TF 4 AUTOMATICO
LAMP FOR SIGNALLING AUTOMATIC TF 4

RE8 - RELAY SENALADOR FALTA DE TELA 4 O EJE ACALANADO ABIERTO
RE8 - NO FABRIC 4 OR OPENED GROOVED SHAFT CONTROL RELAY

RE12 - RELAY CONTROL GENERAL (WATCH DOG)
RE12 - GENERAL CONTROL RELAY (WATCH DOG)

OUT17/18 - SALIDA PARA COMUNICACION A TF 1-2:
OUT17 - VALOR ADJ DE AC 235 XL
OUT18 - AC EN AUTOMATICO

OUT17/18 - OUTPUTS FOR COMMUNICATION TO TF 1-2:
OUT17 - ADJ VALUE FROM AC 235 XL
OUT18 - AC 235 XL AUTOMATIC CYCLE


OUT19 - RESET INVERSOR ROLLO 3-4
OUT19 - RESET FOR ROLLERS 3-4 INVERTERS

OUT20 - FRECUENCIA REFEREN DE SOBRETORQUE
OUT20 - OVERTORQUE REFERENCE FREQUENCY

OUT21 - CONTROL MANUAL MOVIMIENTO CORREA
OUT21 - BELT MOVEMENT MANUAL CONTROL

RE26 - RELAY INVERSION MOVIMIENTO ROLLO TF 3
RE26 - TF 3 ROLLER MOVEMENT REVERSE RELAY

RE27 - RELAY INVERSION MOVIMIENTO ROLLO TF 4
RE27 - TF 4 ROLLER MOVEMENT REVERSE RELAY

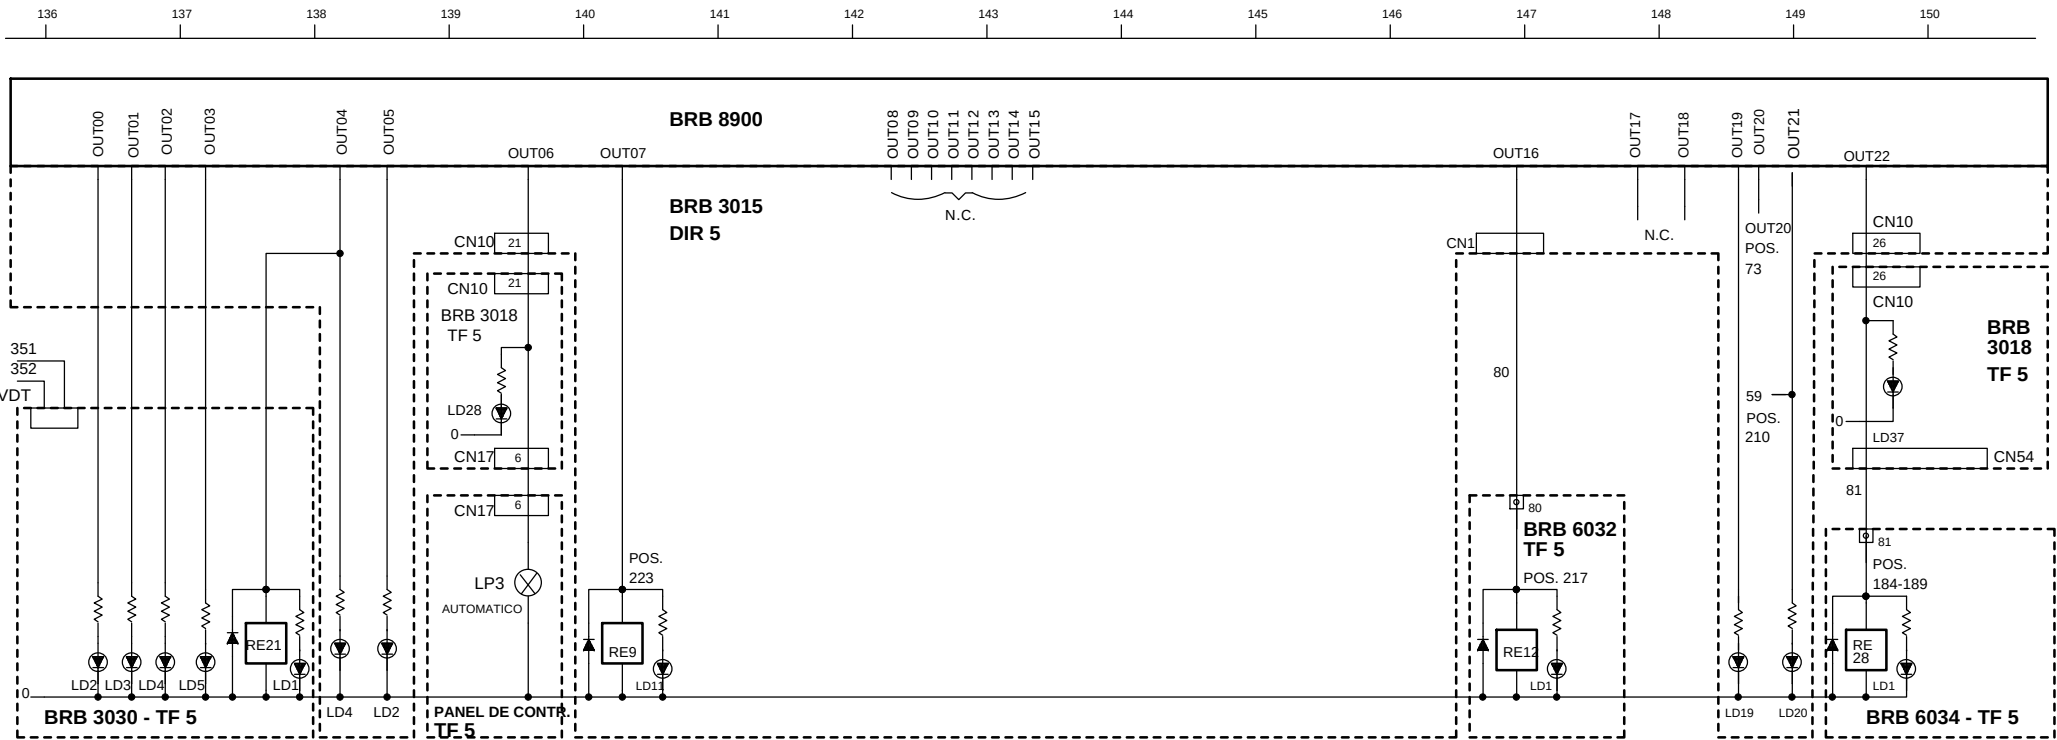

- SEÑAL PROPORCIONAL A LA VELOCIDAD DE LA CARRERA DEL AC 235 XL
 SIGNAL PROPORTIONAL TO TROLLEY SPEED OF AC 235 XL

OUT00-01-02-03 - SEÑAL CONTROL VELOCIDAD ROLLO ALIMENTACION TF 5
 OUT00-01-02-03 - FEEDING ROLLERS TF 5 SPEED CONTROL SIGNALS

RE21 - RELAY PARA SELECCION DE VELOCIDAD ROLLO 5; INTERNO O DE AC (SEÑAL VDT)
 RE21 - RELAY FOR SELECTION OF ROLLER 5 SPEED REFERENCE: INTERNAL OR FROM AC (VDT SIGNAL)

OUT04 - PERMISO MOVIMIENTO ROLLO 5 DE TF
 OUT04 - ROLLER 5 MOVEMENT PERMISSION FROM TF

OUT05 - PERMISO MOVIMIENTO ROLLO 5 DE AC 235 XL
 OUT05 - ROLLER 5 MOVEMENT PERMISSION FROM AC 235 XL

LAMPARA PARA SENALAR TF 5 AUTOMATICO
 LAMP FOR SIGNALLING AUTOMATIC TF 5

RE9 - RELAY SENALADOR FALTA DE TELA 5 O EJE ACALANADO ABIERTO
 RE9 - NO FABRIC 5 OR OPENED GROOVED SHAFTS CONTROL RELAY


RE12 - RELAY CONTROL GENERAL (WATCH DOG)
 RE12 - GENERAL CONTROL RELAY (WATCH DOG)

OUT19 - RESET INVERSOR ROLLO 5
 OUT19 - RESET FOR ROLLER 5 INVERTERS

OUT20 - FRECUENCIA REFEREN DE SOBRETORQUE
 OUT20 - OVERTORQUE REFERENCE FREQUENCY

OUT21 - CONTROL MANUAL MOVIMIENTO CORREA
 OUT21 - BELT MOVEMENT MANUAL CONTROL

RE28 - RELAY INVERSION MOVIMIENTO ROLLO TF 5
 RE28 - DIR 5 ROLLER MOVEMENT REVERSE RELAY

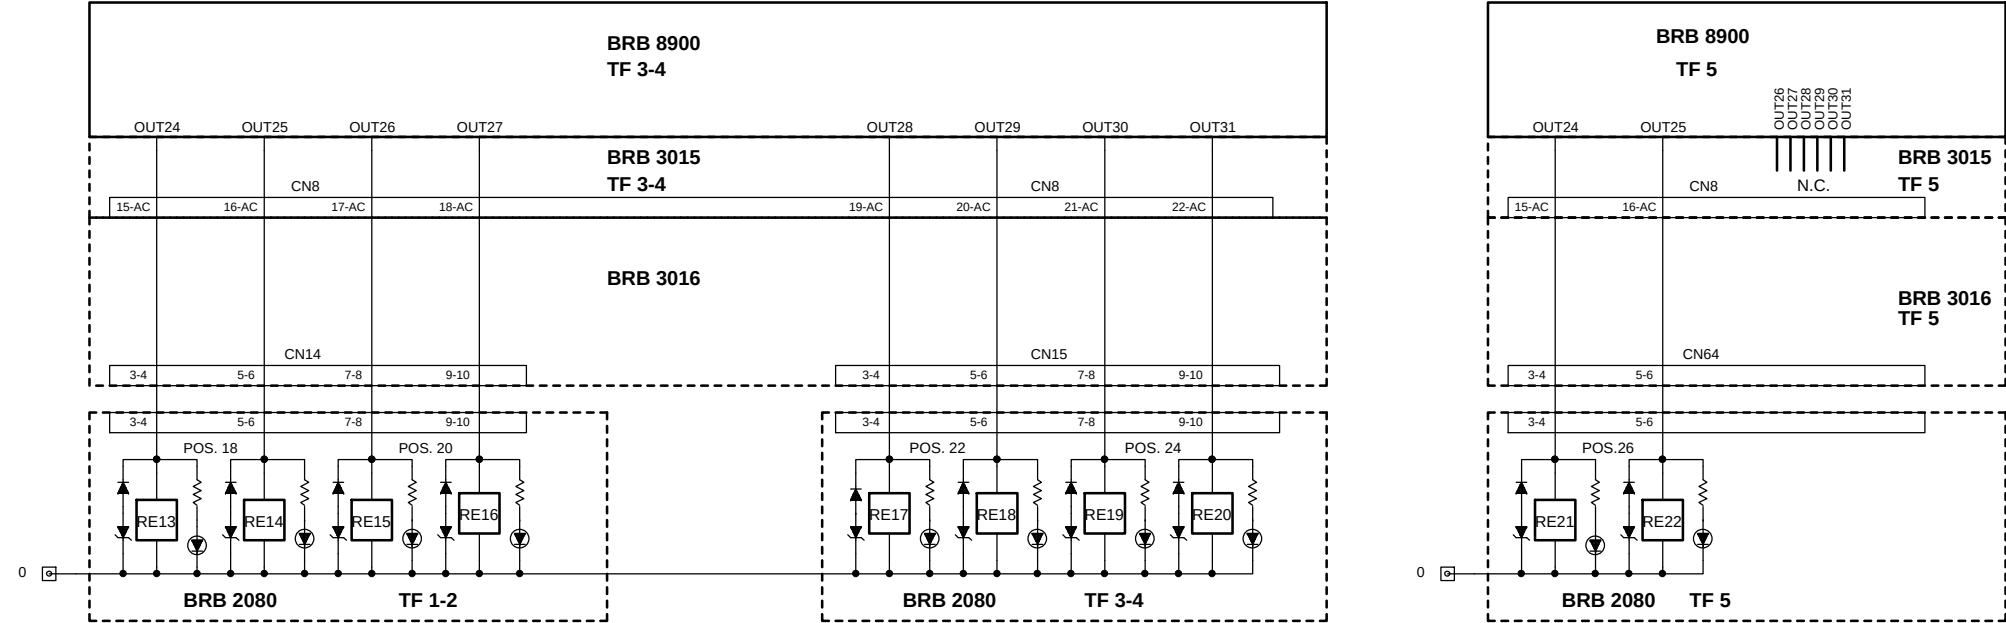

RE13 - RELAY CIERRE ESPERCIDOR TF 1
RE13 - TF 1 SPREADER CLOSING RELAY

RE14 - RELAY APERTURA ESPARCIDOR TF 1
RE14 - TF 1 SPREADER OPENING RELAY

RE15 - RELAY CIERRE ESPERCIDOR TF 2
RE15 - TF 2 SPREADER CLOSING RELAY

RE16 - RELAY APERTURA ESPARCIDOR TF 2
RE16 - TF 2 SPREADER OPENING RELAY

RE17 - RELAY CIERRE ESPERCIDOR TF 3
RE17 - TF 3 SPREADER CLOSING RELAY



RE18 - RELAY APERTURA ESPARCIDOR TF 3
RE18 - TF 3 SPREADER OPENING RELAY

RE19 - RELAY CIERRE ESPERCIDOR TF 4
RE19 - TF 4 SPREADER CLOSING RELAY

RE20 - RELAY APERTURA ESPARCIDOR TF 4
RE20 - TF 4 SPREADER OPENING RELAY

RE21 - RELAY CIERRE ESPERCIDOR TF 5
RE21 - TF 5 SPREADER CLOSING RELAY

RE22 - RELAY APERTURA ESPARCIDOR TF 5
RE22 - TF 5 SPREADER OPENING RELAY

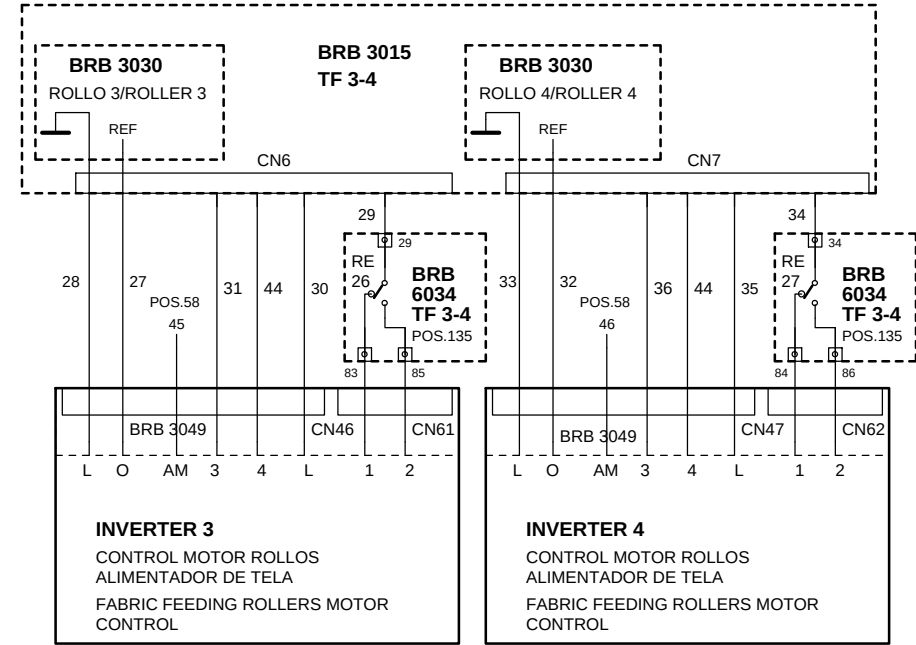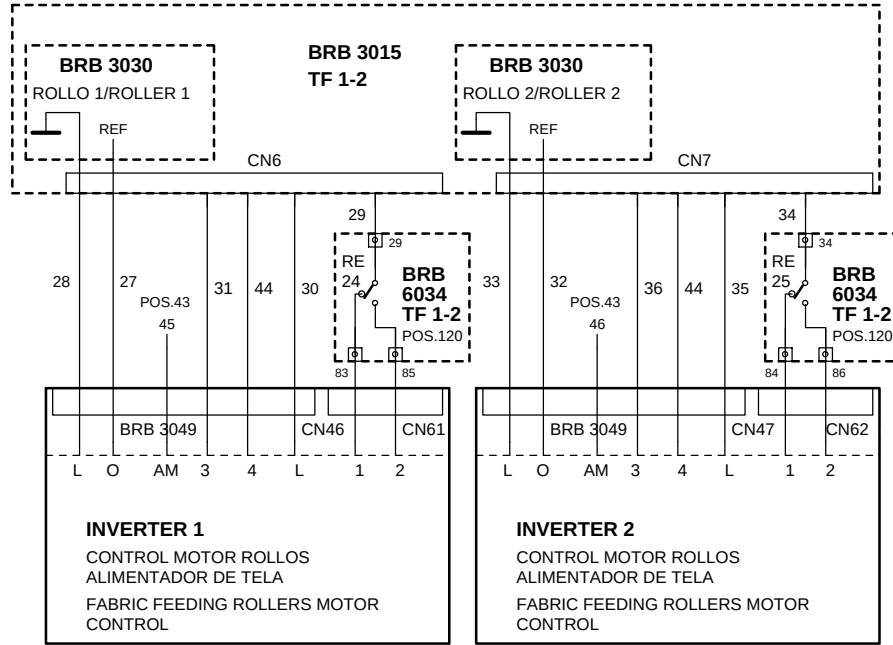

SEÑAL REFERENCIA VELOCIDAD ROLLO DE ALIMENTADOR DE TELA
FABRIC FEEDING ROLLERS SPEED REFERENCE SIGNAL
AM - SALIDA SEÑAL TORQUE MOTOR 1
AM - TORQUE MOTOR 1 SIGNAL OUTPUT
3 - SEÑAL PERMISO MOVIMIENTO INVERSOR
3 - INVERTER MOVEMENT PERMISSION SIGNAL
4 - SEÑAL DE RESET INVERSOR
4 - INVERTER RESET SIGNAL
L - REFERENCIA PARA SEÑALES
L - REFERENCE FOR SIGNALS

1 - SEÑAL DE CONTROL MOVIMIENTO FORWARD
1 - FORWARD MOVEMENT CONTROL SIGNAL
2 - SEÑAL DE CONTROL MOVIMIENTO BACK
2 - REVERSE MOVEMENT CONTROL SIGNAL

SEÑAL REFERENCIA VELOCIDAD ROLLO DE ALIMENTADOR DE TELA
FABRIC FEEDING ROLLERS SPEED REFERENCE SIGNAL
AM - TORQUE MOTOR 2 SIGNAL OUTPUT
3 - SEÑAL PERMISO MOVIMIENTO INVERSOR
3 - INVERTER MOVEMENT PERMISSION SIGNAL
4 - SEÑAL DE RESET INVERSOR
4 - INVERTER RESET SIGNAL
L - REFERENCIA PARA SEÑALES
L - REFERENCE FOR SIGNALS

1 - SEÑAL DE CONTROL MOVIMIENTO FORWARD
1 - FORWARD MOVEMENT CONTROL SIGNAL
2 - SEÑAL DE CONTROL MOVIMIENTO BACK
2 - REVERSE MOVEMENT CONTROL SIGNAL

SEÑAL REFERENCIA VELOCIDAD ROLLO DE ALIMENTADOR DE TELA
FABRIC FEEDING ROLLERS SPEED REFERENCE SIGNAL
AM - SALIDA SEÑAL TORQUE MOTOR 3
AM - TORQUE MOTOR 3 SIGNAL OUTPUT
3 - SEÑAL PERMISO MOVIMIENTO INVERSOR
3 - INVERTER MOVEMENT PERMISSION SIGNAL
4 - SEÑAL DE RESET INVERSOR
4 - INVERTER RESET SIGNAL
L - REFERENCIA PARA SEÑALES
L - REFERENCE FOR SIGNALS


1 - SEÑAL DE CONTROL MOVIMIENTO FORWARD
1 - FORWARD MOVEMENT CONTROL SIGNAL
2 - SEÑAL DE CONTROL MOVIMIENTO BACK
2 - REVERSE MOVEMENT CONTROL SIGNAL

SEÑAL REFERENCIA VELOCIDAD ROLLO DE ALIMENTADOR DE TELA
FABRIC FEEDING ROLLERS SPEED REFERENCE SIGNAL
AM - SALIDA SEÑAL TORQUE MOTOR 4
AM - TORQUE MOTOR 4 SIGNAL OUTPUT
3 - SEÑAL PERMISO MOVIMIENTO INVERSOR
3 - INVERTER MOVEMENT PERMISSION SIGNAL
4 - SEÑAL DE RESET INVERSOR
4 - INVERTER RESET SIGNAL
L - REFERENCIA PARA SEÑALES
L - REFERENCE FOR SIGNALS

1 - SEÑAL DE CONTROL MOVIMIENTO FORWARD
1 - FORWARD MOVEMENT CONTROL SIGNAL
2 - SEÑAL DE CONTROL MOVIMIENTO BACK
2 - REVERSE MOVEMENT CONTROL SIGNAL

The schematic diagram illustrates the power distribution system for the test cell. It features three parallel branches, each containing a resistor (RE24, RE26, RE28), a switch (BRB 6034 1-2, BRB 6034 3-4, BRB 6034 5), and a lamp (LP5, LP6, LP7, LP8, LP9). A transformer (RT1) is connected to the main power line, and a series of components (EV1, MSW6, MSW7, MSW8) are connected in series to the ground line.

Sonda de Temperature
 Temperature Measurement Probe
 RT1 - Termostato de Control de Valvula
 Eléctrica de Control de Aire
 RT1 - Air Electro-Valve Control
 Thermostat
 EV1 - Valvula Eléctrica de Control Aire
 EV1 - Air Electro-Valve
 MSW6 - MSW TF 1-2 de Bloquea ElectroValvula
 MSW6 - TF 1-2 Door Air Electro-Valve Stop MSW
 MSW7 - MSW TF 3-4 de Bloquea ElectroValvula
 MSW7 - TF 3-4 Door Air Electro-Valve Stop MSW
 MSW8 - MSW TF 3-4 de Bloquea ElectroValvula
 MSW8 - TF 5 Door Air Electro-Valve Stop MSW

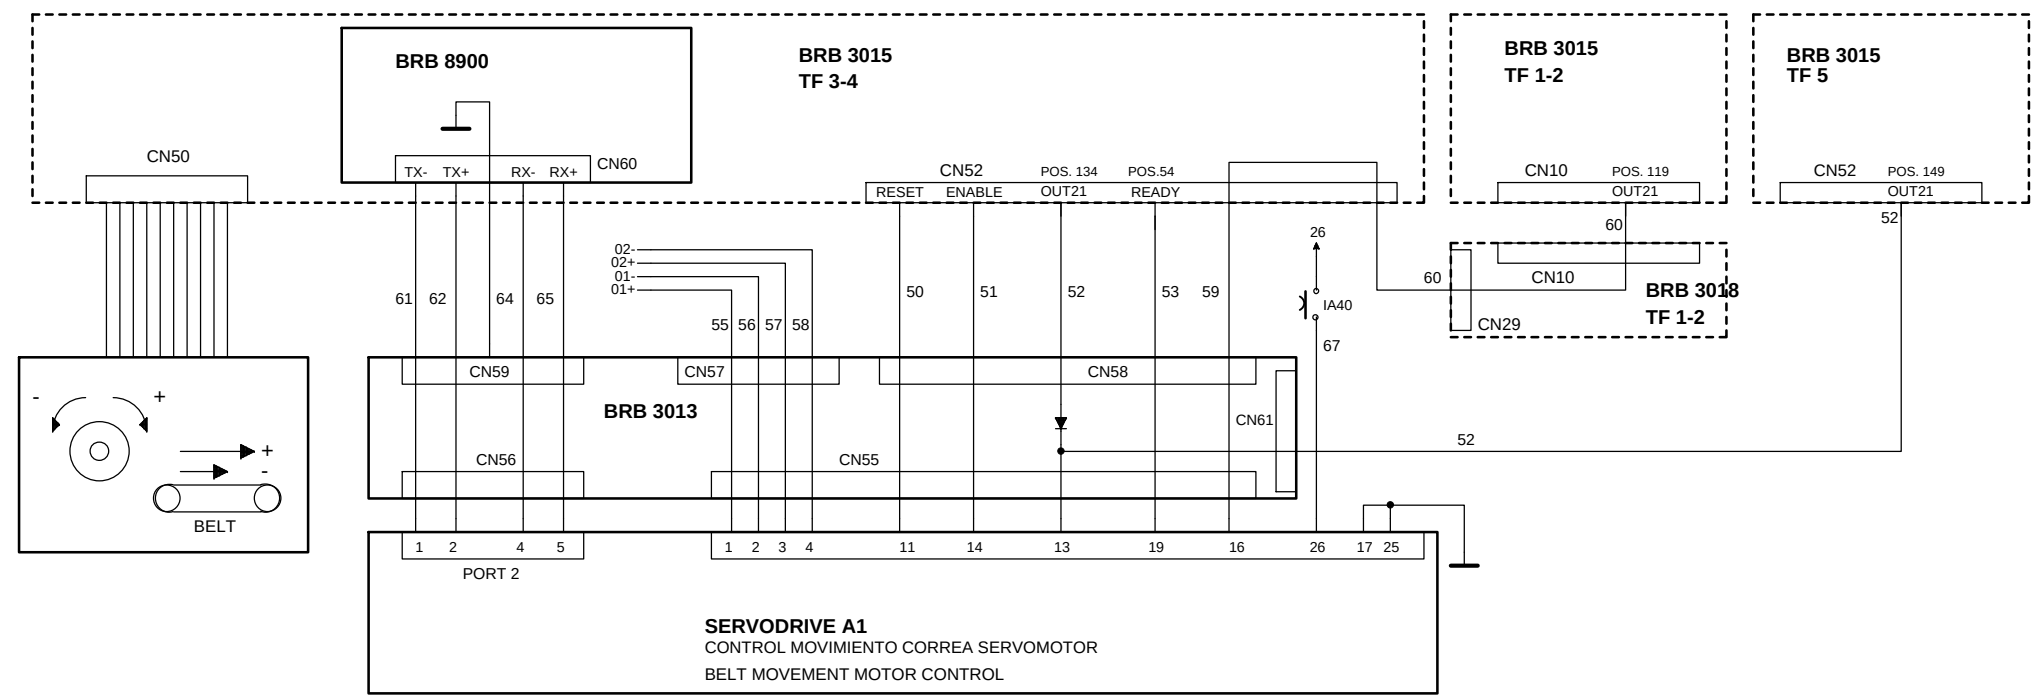

PANEL CONTROL AJUSTE CURSO CORREA
BELT TRAVEL ADJUSTMENT CONTROL PANEL

SEÑAL COMUNICAC TRANSMISION SERIE ENTRE
BRB 8900 Y TARJETA EJE
SERIAL TRANSMISSION COMMUNICATION SIGNALS
BETWEEN CPU BRB 8900 AND AXIS CARD

SENALES ENCODER CARRETA HORIZONTAL
PROVENIENTE DEL LTE
HORIZONTAL TROLLEY ENCODER SIGNALS
COMING FROM LTE

RESET - CONTROL DE RESET SERVODRIVE
RESET - SERVODRIVE RESET CONTROL


ENABLE - CONTROL DE MOVIMIENT CORREA
DURANTE EL CICLO MAQUINA
ENABLE - BELT MOVING CONTROL DURING
MACHINE CYCLE

OUT21 - CONTROL DE MOVIMIENTO MANUAL CORREA
DE TF 3-4 Y TF 5
OUT21 - BELT MANUAL MOVING CONTROL FROM
TF 3-4 AND TF 5

READY - SENAL SALIDA SERVODRIVE LISTO
READY - SERVODRIVE READY OUTPUT SIGNAL

OUT21 - CONTROL DE MOVIMIENTO MANUAL CORREA
DE TF 1-2
OUT21 - BELT MANUAL MOVING CONTROL FROM
TF 1-2

26 - ENTRADA SUMINIST ENERG PARA SALIDAS
26 - POWER SUPPLY INPUT FOR OUTPUTS

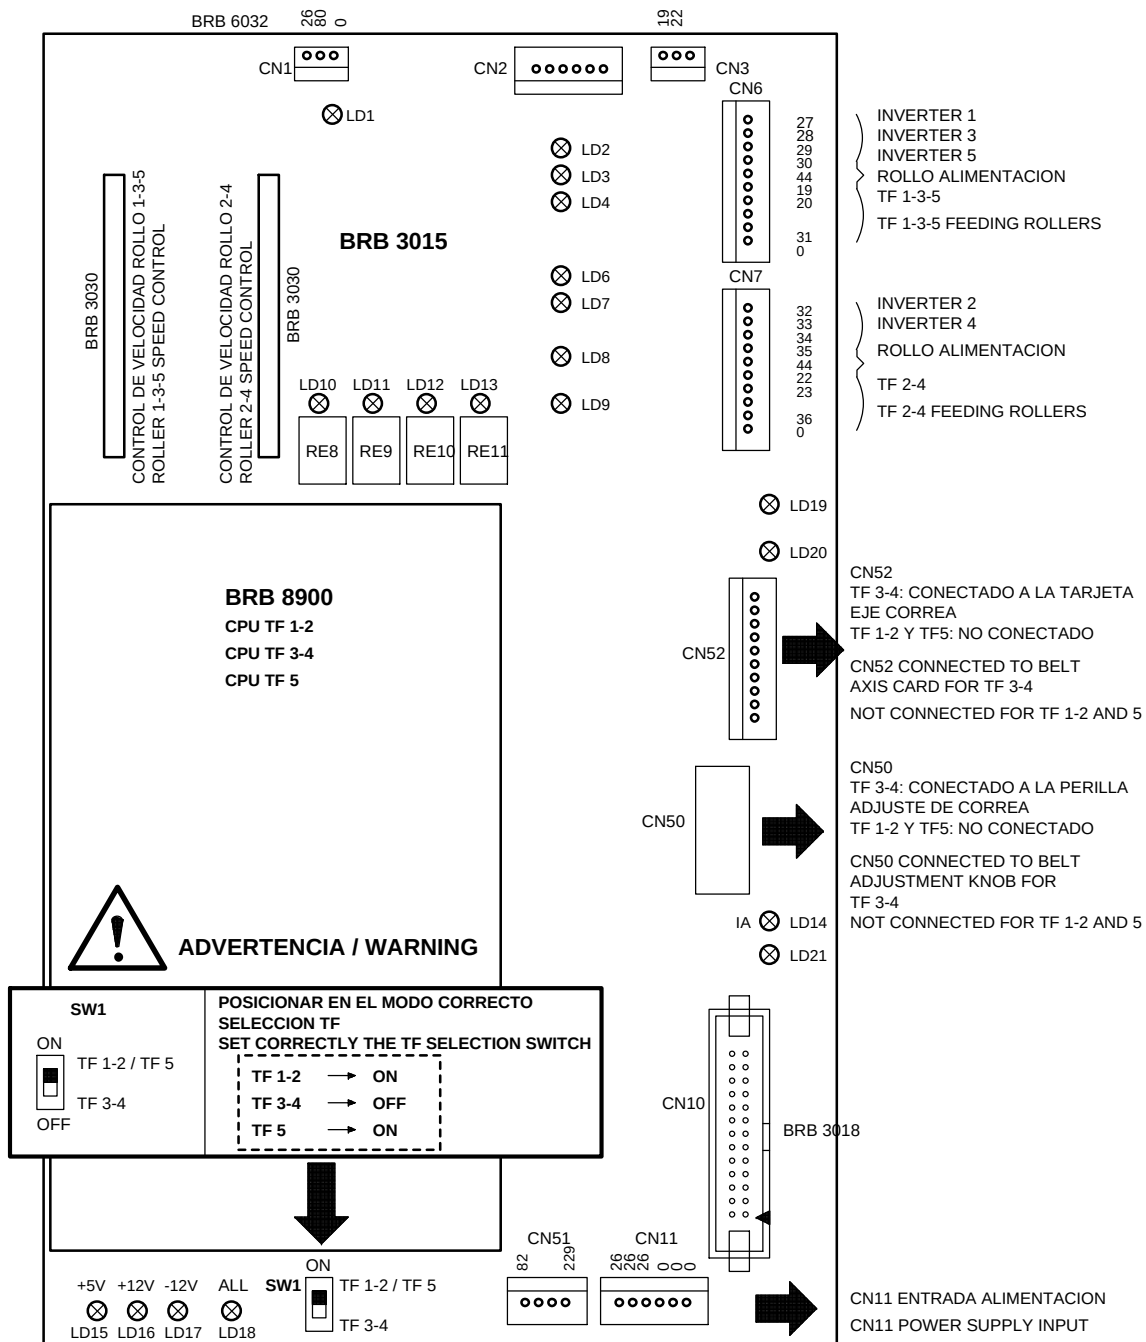

SENALIZACIONES DE LED Y FUNCION DE RELAYS DE TARJETA BRB 3015 :
LED SIGNALISATIONS AND RELAYS FUNTION ON BRB 3015 CARD :

LED	SENAL SIGNAL	RELAY RELAY	CONEXION CONNECTION	TF 1-2	TF 3-4	TF 5
LD1	OUT16	-	SENAL DE CONTROL GENERAL (WATCH DOG) GENERAL CONTROL SIGNAL (WATCH DOG)			
LD2	OUT05	-	SENAL PERMISO MOVIMIENTO ROLLOS DEL AC 235 XL ROLLERS MOVEMENT PERMISSION SIGNAL FROM AC 235 XL	TF 1	TF 3	TF 5
LD3	IN20	-	SENAL CARRETA HORIZONTAL EN MOVIMIENTO DE AC 235 XL HORIZONTAL TROLLEY MOVEMENT SIGNAL FROM AC 235 XL			
LD4	OUT04	-	SENAL PERMISO MOVIMIENTO ROLLO DEL TF ROLLERS MOVEMENT PERMISSION SIGNAL FROM TF	TF 1	TF 3	TF 5
LD6	IN04	-	PROXIMIDAD EJE ACANALADO ABIERTO GROOVED SHAFT OPENED PROXIMITY	PSW7 TF 1	PSW9 TF 3	PSW11 TF 5
LD7	OUT13	-	SENAL PERMISO MOVIMIENTO ROLLOS DE AC 235 XL ROLLERS MOVEMENT PERMISSION SIGNAL FROM AC 235 XL	TF 2	TF 4	
LD8	OUT12	-	SENAL PERMISO MOVIMIENTO ROLLOS DE TF ROLLERS MOVEMENT PERMISSION SIGNAL FROM TF	TF 2	TF 4	
LD9	IN05	-	PROXIMIDAD EJE ACANALADO ABIERTO GROOVED SHAFT OPENED PROXIMITY	PSW8 TF 2	PSW10 TF 4	
LD10	OUT15	RE8	SENAL CONTROL FALTA DE TELA 2 O EJE ACANALADO ABIERTO NO FABRIC. OR OPENED GROOVED SHAFTS CONTROL SIGNAL	TF 2	TF 4	
LD11	OUT07	RE9	SENAL CONTROL FALTA DE TELA 2 O EJE ACANALADO ABIERTO NO FABRIC. OR OPENED GROOVED SHAFTS CONTROL SIGNAL	TF 1	TF 3	TF 5
LD12	IN18	RE10	SENAL INTERRUPTOR AUTOMATICO E INVERSOR ROLLO AUTOMATIC SWITCHES AND ROLLER INVERTER SIGNAL	TF 2	TF 4	
LD13	IN17	RE11	SENAL INTERRUPTOR AUTOMATICO E INVERSOR ROLLO AUTOMATIC SWITCHES AND ROLLER INVERTER SIGNAL	TF 1	TF 3	TF 5
LD14	IN16	-	SENAL INTERRUPTOR AUTOMATICO E INVERSOR ROLLOS AUTOMATIC SWITCHES AND ROLLER INVERTER SIGNAL	TF 1-2	TF 3-4	TF 5
LD15	+5V	-	PRESENCIA VOLTAJE +5V +5V VOLTAGE PRESENCE			
LD16	+12V	-	PRESENCIA VOLTAJE +12V +12V VOLTAGE PRESENCE			
LD17	-12V	-	PRESENCIA VOLTAJE -12V -12V VOLTAGE PRESENCE			
LD18	ALL	-	SENALACION ALARMA DE TARJETA CPU BRB 8900 ALARM SIGNAL FROM BRB 8900 CPU CARD			
LD19	OUT19	-	SENAL DE RESET PARA INVERSOR ROLLOS RESET SIGNAL FOR ROLLER INVERTERS	TF 1-2	TF 3-4	TF 5
LD20	OUT21	-	CONTROL DE MOVIMIENTO MANUAL CORREA BELT MANUAL MOVEMENT CONTROL			
LD21	IN15	-	NO UTILIZADO NOT USED			

NOTA:

TARJETA CPU BRB 8900 TF 1-2 TIENE EL CONTROL DE LOS ROLLOS 1-2.

TARJETA CPU BRB 8900 TF 3-4 TIENE EL CONTROL DE LOS ROLLOS 3-4 Y DE LOS ESPARCIDORES 1-2-3-4 Y DEL EJE CORREA.

TARJETA CPU BRB 8900 TF 5 TIENE EL CONTROL DE ROLLO 5 Y DE ESPARCIDOR 5.

NOTE:

BRB 8900 CPU CARD OF TF 1-2 CONTROLS ROLLERS 1-2.

BRB 8900 CPU CARD OF TF 3-4 CONTROLS ROLLERS 3-4, SPREADERS 1-2-3-4 AND BELT


BRB 8900 CPU CARD OF TF 5 CONTROLS ROLLER 5 AND SPREADER 5.



ADVERTENCIA / WARNING


POSICIONAR EN EL MODO CORRECTO SWITCH SW3:

SWITCH 3 / 1-2-3-4: AJUSTE DE VELOCIDAD DEL MOVIMIENTO CORREA- VEDERE CAPITULO RELATIVO
SWITCH 3 / 5-6-7: NO UTILIZADO

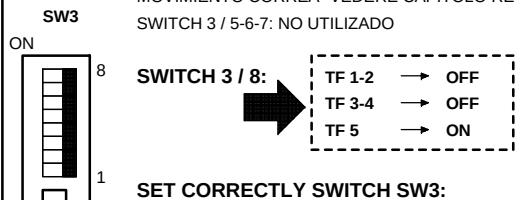


SWITCH 3 / 1-2-3-4: BELT SPEED ADJUSTMENT - SEE THE RELEVANT CHAPTER:

SWITCH 3 / 5-6-7: NOT USED




REGULACION SWITCH SW1 - SW2 :

SWITCHES SW1 - SW2 ADJUSTMENT:




TEST POINT SUMINSTR ENERG +5V
+5V POWER SUPPLY TEST POINT

TEST POINT SUELO - REFERENCE ALIMENTACION
GROUND TEST POINT

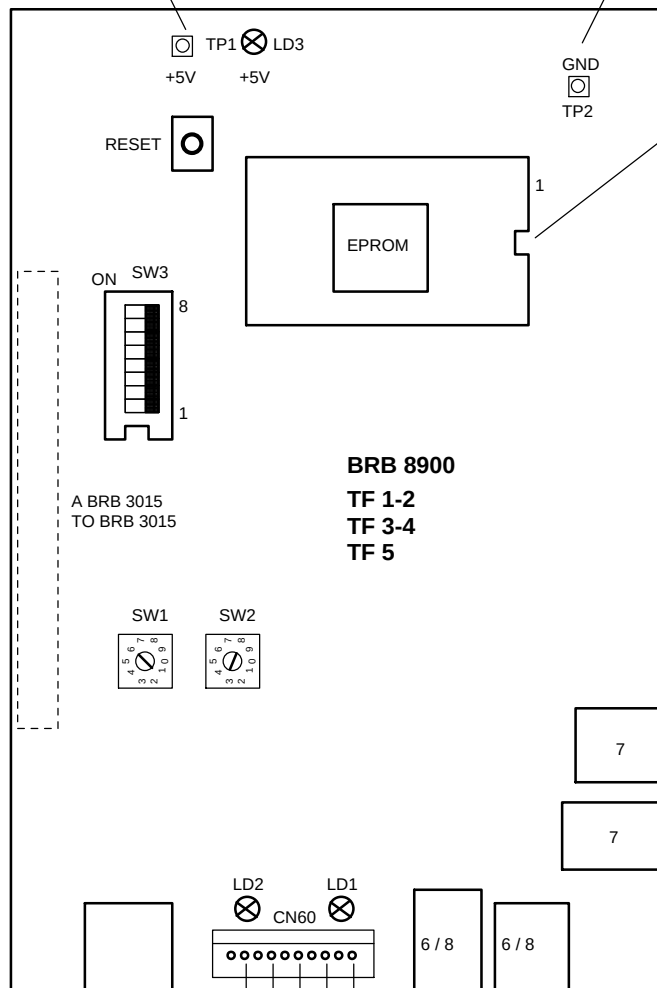

A BRB 3015
TO BRB 3015



TF 3-4 - TARJETA EJE CORREA
TF 3-4 - BELT AXIS CARD
TF 1-2 YD TF 5 - NO CONECTADO / NOT CONNECTED

EPROM CON PROGRAMA TF 235 (PROGRAMA IGUAL POR TODOS LOS DIR / TF)


EPROM WITH PROGRAM TF 235 (THE PROGRAM IS THE SAME FOR ALL DIR / TF)

SEÑALIZACION LEDS:
LEDS SIGNALIZATION:

LD1	TF 3-4: COMUNICACION HACIA TARJETA EJE CORREA: TRANSMISION TF 1-2 Y TF 5: NO UTILIZADO TF 3-4: COMMUNICATION TOWARDS BELT AXIS CARD: TRANSMISSION TF 1-2 AND TF 5: NOT USED
LD2	TF 3-4: COMUNICACION HACIA TARJETA EJE CORREA: RECEPCION TF 1-2 Y TF 5: NO UTILIZADO TF 3-4: COMMUNICATION TOWARDS BELT AXIS CARD: RECEPTION TF 1-2 AND TF 5: NOT USED
LD3	PRESENCIA VOLTAJE +5V +5V VOLTAGE PRESENCE

CONEXION FIBRA OPTICA
OPTICAL FIBER CONNECTION

6-8	TF 1-2 : NO CONECTADO TF 3-4: CONECTADO A LA FIBRA OPTICA DEL TF5 TF 5: CONECTADO A LA FIBRA OPTICA DE LA MAQUINA TF 1-2: NOT CONNECTED TF 3-4: CONNECTION OF FIBER OPTICAL COMING FROM TF 5 TF 5: CONNECTION OF OPTICAL FIBER COMING FROM AC 235 XL
7	TF 1-2: NO CONECTADO TF 3-4: NO CONECTADO TF 5: CONECTADO A LA FIBRA OPTICA DEL TF 3-4 TF 1-2: NOT CONNECTED TF 3-4: NOT CONNECTED TF 5: CONNECTION OF OPTICAL FIBER TOWARDS TF 3-4

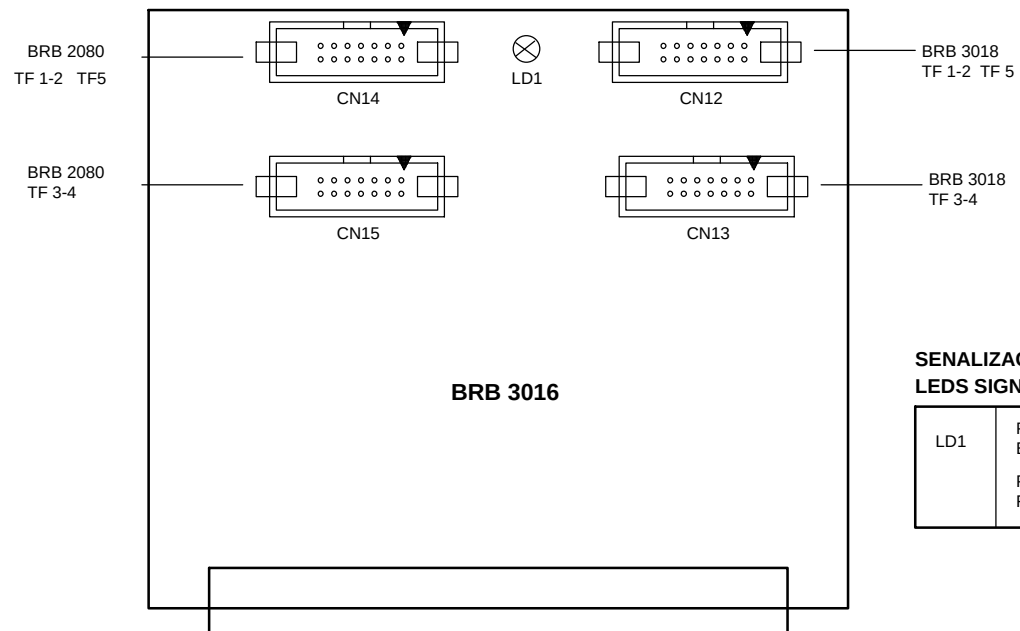


SENALIZACION DE LEDS:
LEDS SIGNALIZATION:

LD1	PRESENCIA VOLTAJE +5V PARA ENCODER ESPARCIDOR PRESENCE OF +5V POWER SUPPLY FOR SPREADER ENCODER
-----	--


SENAL PROPORCIONAL A LA VELOCIDAD
DE LA CARRETA DEL AC 235 XL

SIGNAL PROPORTIONAL TO TROLLEY SPEED
OF MACHINE

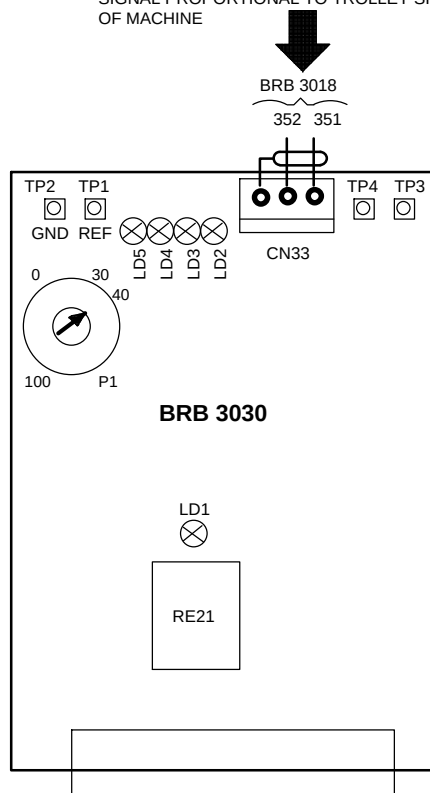


SENALACIONES DE LEDS:
LEDS SIGNALIZATION:


LD1	RELE' RE21 ACTIVADO RE21 RELAY EXCITED
LD2	SENALES AJUSTE DE VELOCIDAD
LD3	ROLLO ALIMENTADOR TELA
LD4	FABRIC FEEDING ROLLERS SPEED
LD5	ADJUSTMENT SIGNALS
RE21	RELAY SELECCN REFERENCIA VELOCID ROLLO INTERNO O DEL AC 235 XL (SENAL VDT) RELAY FOR SELECTION OF ROLLER SPEED REFERENCE: INTERNAL OR FROM AC 235 XL (VDT SIGNAL).
P1	TRIMMER AJUSTE REFERENCIA DE VELOCIDA INTERNA POSICION CALIBRACION TRIMMER P1 : 30 - 40% INTERNAL SPEED REFERENCE ADJUSTMENT TRIMMER. CALIBRATION POSITION OF P1 TRIMMER: 30 - 40 %

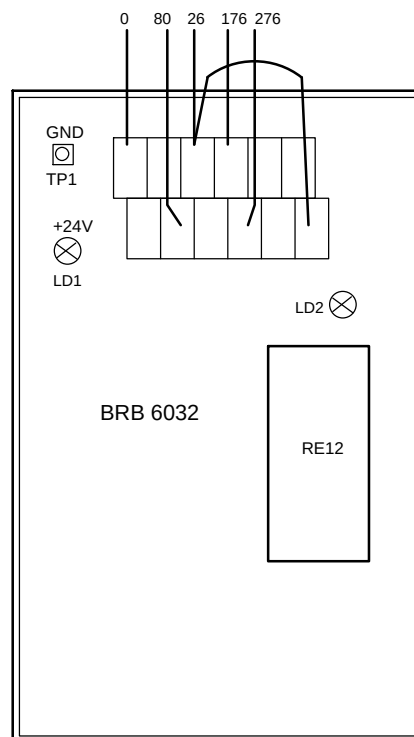

RE12	RELAY CONTROL GENERAL (WATCH DOG) GENERAL CONTROL RELAY (WATCH DOG)
LD1	PRESENCIA SUMINS ENERG +24V +24V POWER SUPPLY PRESENCE
LD2	LED SENALACION RELAY RE12 ACTIVADO LED FOR SIGNALLING RE12 EXCITED ON = OK

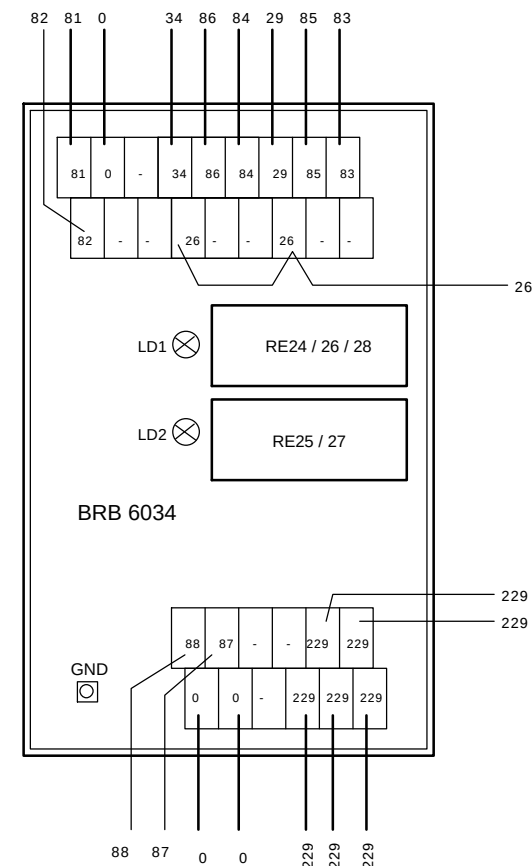


RE24 / 26 / 28	RELAY INVERSION MOVIMIENTO ROLLO 1-3-5 ROLLER 1-3-5 REVERSE MOVEMENT RELAY
RE25 / 27	RELAY INVERSION MOVIMIENTO ROLLO 2-4 ROLLER 2-4 REVERSE MOVEMENT RELAY
LD1	LED SENALACION RELAY RE24 ACTIVADO LED FOR SIGNALLING RE24 EXCITED
LD2	LED SENALACION RELAY RE25 ACTIVADO LED FOR SIGNALLING RE25 EXCITED

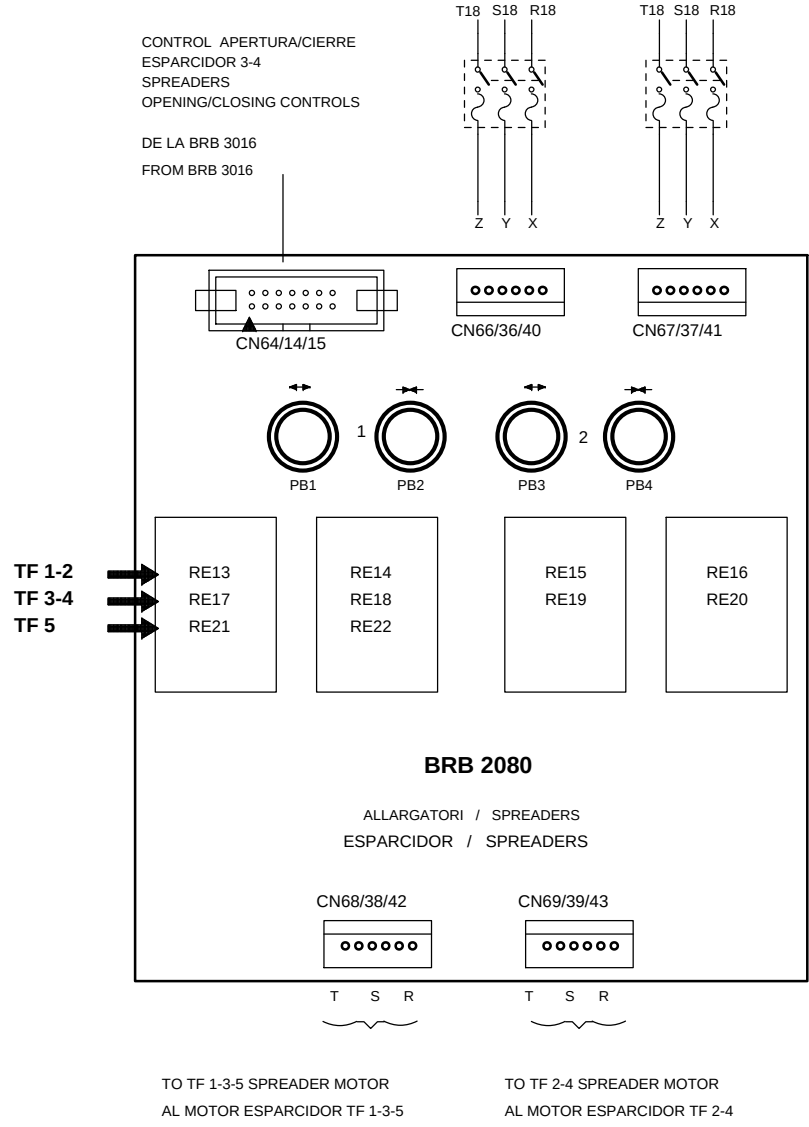

BOTONES / PUSHBUTTONS		TF 1-2	TF 3-4	TF 5
PB1	APERTURA ESPARCIDOR SPREADER OPENING	TF 1	TF 3	TF 5
PB2	CIERRE ESPARCIDOR SPREADER CLOSING	TF 1	TF 3	TF 5
PB3	APERTURA ESPARCIDOR SPREADER OPENING	TF 2	TF 4	
PB4	CIERRE ESPARCIDOR SPREADER CLOSING	TF 2	TF 4	

	RELAY / RELAYS	TF 1-2	TF 3-4	TF 5
RE13 RE17 RE21	CONTROL APERTURA ESPARCIDOR SPREADER OPENING RELAY	TF 1	TF 3	TF 5
RE14 RE18 RE22	CONTROL CIERRE ESPARCIDOR SPREADER CLOSING RELAY	TF 1	TF 3	TF 5
RE15 RE19	CONTROL APERTURA ESPARCIDOR SPREADER OPENING RELAY	TF 2	TF 4	
RE16 RE20	CONTROL CIERRE ESPARCIDOR SPREADER CLOSING RELAY	TF 2	TF 4	

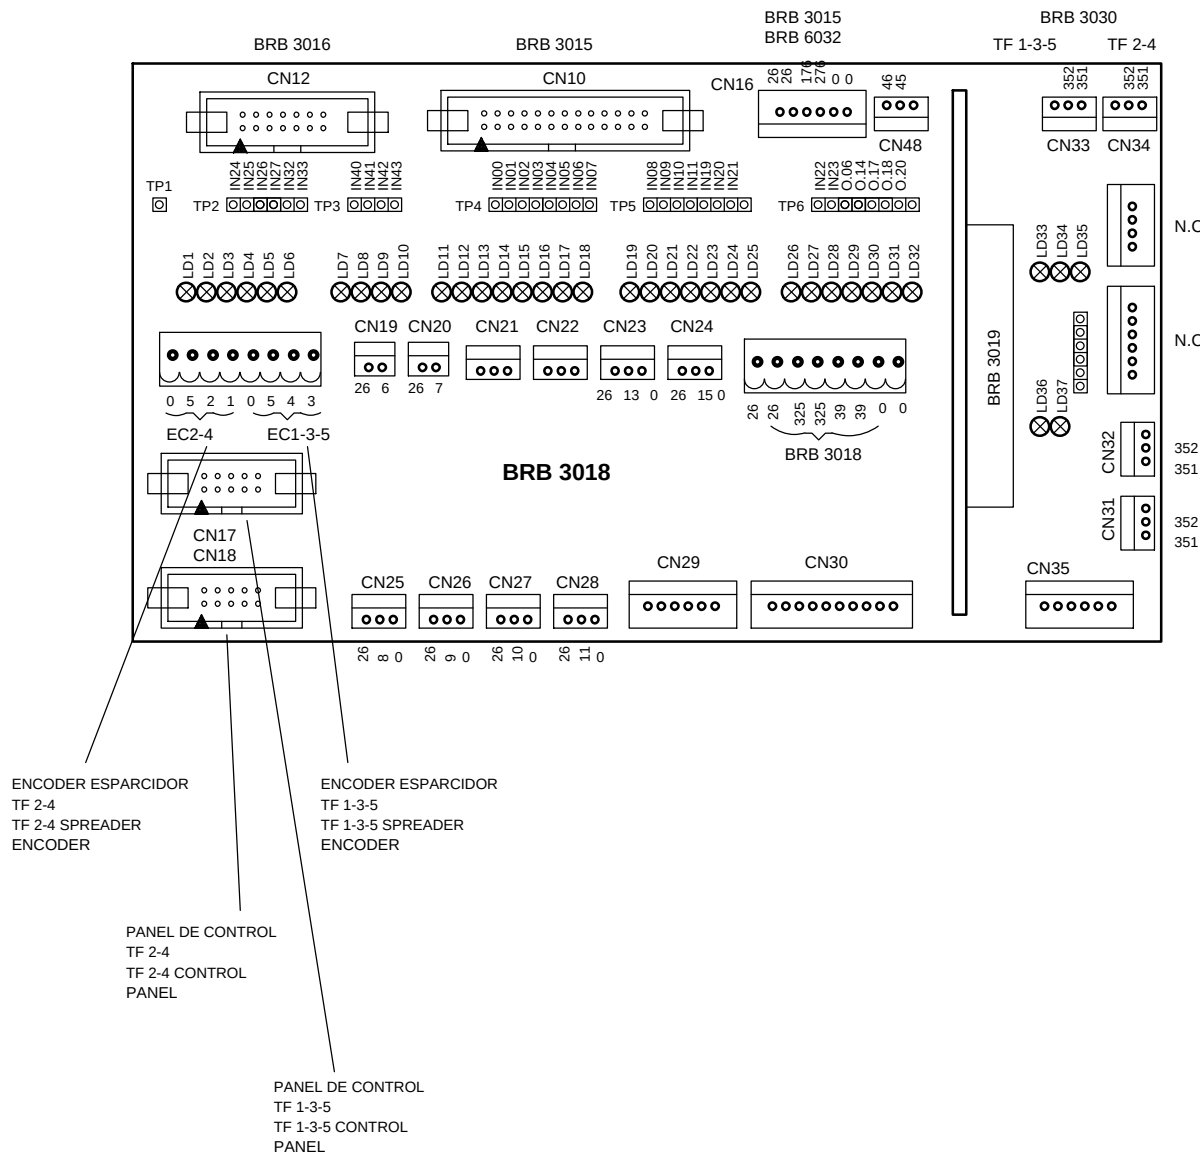


		TF 1-2	TF 3-4	TF 5
CN19	STOP Y SINCRONISMO ESPARCIDOR MSW SPREADER STOP AND SYNCHRONISM MSW	MSW1 TF 1	MSW3 TF 3	MSW5 TF 5
CN20	STOP Y SINCRONISMO ESPARCIDOR MSW SPREADER STOP AND SYNCHRONISM MSW	MSW2 TF 2	MSW4 TF 4	
CN23	PROXIMIDAD EJE ACANALDO ABIERTO SPLINED SHAFT OPENED PROXIMITY	PSW7 TF 1	PSW9 TF 3	PSW11 TF 5
CN24	PROXIMIDAD EJE ACANALDO ABIERTO SPLINED SHAFT OPENED PROXIMITY	PSW8 TF 2	PSW10 TF 4	
CN25	FOTOCELULA PRESENCIA DE TELA FABRIC PRESENCE PHOTOEYE	PH1 TF 1	PH3 TF 3	PH5 TF 5
CN26	PROXIMIDAD CONTROL COVE TELA FABRIC COVE CONTROL PROXIMITY	PSW1 TF 1	PSW3 TF 3	PSW5 TF 5
CN27	FOTOCELULA PRESENCIA DE TELA FABRIC PRESENCE PHOTOEYE	PH2 TF 2	PH4 TF 4	
CN28	PROXIMIDAD CONTROL COVE TELA FABRIC COVE CONTROL PROXIMITY	PSW2 TF 2	PSW4 TF 4	

	TF 1-2	TF 3-4	TF 5
CN29	NO CONECTADO NOT CONNECTED	CONECTADO A LTE/AC235XL CONNECTED TO LTE/AC	CONECTADO A LTE/AC235XL CONNECTED TO LTE/AC
CN30	CONECTADO A BRB 3018 TF 3-4 CONNECTED TO BRB 3018 TF 3-4	CONECTADO A BRB 3018 TF 1-2 CONNECTED TO BRB 3018 TF 1-2	CONECTADO A BRB 3018 TF 3-4 CONNECTED TO BRB 3018 TF 3-4
CN31	CONECTADO A BRB 3018 TF 3-4 CONNECTED TO BRB 3018 TF 3-4	CONECTADO A BRB 3018 TF 1-2 CONNECTED TO BRB 3018 TF 1-2	CONECTADO A BRB 3020 SU LTE/AC235 CONNECTED TO BRB 3020 OF LTE/AC235
CN32	NO CONECTADO NOT CONNECTED	CONECTADO A BRB 3018 TF 5-6 CONNECTED TO BRB 3018 TF 5-6	CONECTADO A BRB 3018 TF 3-4 CONNECTED TO BRB 3018 TF 3-4
CN35	CONECTADO A BRB 3018 TF 3-4 CONNECTED TO BRB 3018 TF 3-4	CONECTADO A BRB 3018 TF 1-2 CONNECTED TO BRB 3018 TF 1-2	NO CONECTADO NOT CONNECTED

TEST POINT Y SENALACION DE LED EN LA TARJETA BRB 3018 PARA DIR 3-4TEST POINTS AND LED SIGNALISATIONS ON BRB 3018 CARD :

SENAL SIGNAL TEST POINT	LED	CONEXION	CONNECTION	TF 1-2	TF 3-4	TF 5	
TP1 - GND	-	REFERENCIA SENALES Y SUMINIS ENERG +24V	+24V POWER SUPPLY AND SIGNALS REFERENCE				
TP2 {	IN24/28	LD1	BOTON APERTURA DE ESPARCIDOR	SPREADER OPENING SWITCH	TF 1	TF 3	TF 5
	IN25/29	LD2	BOTON CIERRRE DE ESPARCIDOR	SPREADER CLOSING SWITCH	TF 1	TF 3	TF 5
	IN26/30	LD3	BOTON APERTURA DE ESPARCIDOR	SPREADER OPENING SWITCH	TF 2	TF 4	-
	IN27/31	LD4	BOTON CIERRRE DE ESPARCIDOR	SPREADER CLOSING SWITCH	TF 2	TF 4	-
	IN32/34	LD5	MSW STOP Y SINCRONISMO DE ESPARCIDOR	SPREADER STOP AND SYNCHRONISM MSW	MSW1 - TF 1	MSW3 - TF 3	MSW5 - TF 5
	IN33/35	LD6	MSW STOP Y SINCRONISMO DE ESPARCIDOR	SPREADER STOP AND SYNCHRONISM MSW	MSW2 - TF 2	MSW4 - TF 4	-
TP3 {	IN40/44	LD10	ENCODER ESPARCIDOR - FASE A	SPREADER ENCODER - PHASE " A "	EC1 - TF 1	EC3 - TF 3	EC5 - TF 5
	IN41/45	LD9	ENCODER ESPARCIDOR - FASE B	SPREADER ENCODER - PHASE " B "	EC1 - TF 1	EC3 - TF 3	EC5 - TF 5
	IN42/46	LD8	ENCODER ESPARCIDOR - FASE A	SPREADER ENCODER - PHASE " A "	EC2 - TF 2	EC4 - TF 4	-
	IN43/47	LD7	ENCODER ESPARCIDOR - FASE B	SPREADER ENCODER - PHASE " B "	EC2 - TF 2	EC4 - TF 4	-
TP4 {	IN00	LD11	FOTOCELULA PRESENCIA DE TELA	FABRIC PRESENCE PHOTOEYE	PH1 - TF 1	PH3 - TF 3	PH5 - TF 5
	IN01	LD12	PROXIMIDAD CONTROL COVE TELA	FABRIC COVE CONTROL PROXIMITY	PSW1 - TF 1	PSW3 - TF 3	PSW5 - TF 5
	IN02	LD13	FOTOCELULA PRESENCIA DE TELA	FABRIC PRESENCE PHOTOEYE	PH2 - TF 2	PH4 - TF 4	-
	IN03	LD14	PROXIMIDAD CONTROL COVE TELA	FABRIC COVE CONTROL PROXIMITY	PSW2 - TF 2	PSW4 - TF 4	-
	IN04	LD15	PROXIMIDAD EJE ACANALADO ABIERT	GROOVED SHAFT OPENED PROXIMITY	PSW7 - TF 1	PSW9 - TF 3	PSW11 - TF 5
	IN05	LD16	PROXIMIDAD EJE ACANALADO ABIERT	GROOVED SHAFT OPENED PROXIMITY	PSW8 - TF 2	PSW10 - TF 4	-
	IN06	LD17	N.C.	N.C.	-	-	-
	IN07	LD18	N.C.	N.C.	-	-	-
TP5 {	IN08	LD19	BOTON MOVIMIENTO MANUAL ROLLO	FEEDING ROLLERS MANUAL MOVEMENT BUTTON	TF 1	TF 3	TF 5
	IN09	LD20	BOTON CICLO AUTOMATICO	AUTOMATIC CYCLE BUTTON	TF 1	TF 3	TF 5
	IN10	LD21	BOTON MOVIMIENTO MANUAL ROLLO	FEEDING ROLLERS MANUAL MOVEMENT BUTTON	TF 2	TF 4	-
	IN11	LD22	BOTON CICLO AUTOMATICO	AUTOMATIC CYCLE BUTTON	TF 2	TF 4	-
	IN19	LD23	SENAL 325 - LINEA DE EMERGENCIA	SIGNAL 325 FROM LTE (EMERGENCY LINE)			
	IN20	LD24	SENAL 39 - CONTROL MOVIMIENTO ROLLO DEL LTE	SIGNAL 39 - ROLLERS MOVEMENT SIGNAL FROM LTE			
	IN21	LD25	N.C.	N.C.	-	-	-
	-	-	N.C.	N.C.	-	-	-
{	IN22	LD26			SENAL COMUNICACION DE TF 3-4: VALOR ADJ DEL AC 235 XL SIGNAL FROM TF 3-4: ADJ VALUE FROM LTE/AC	SENAL COMUNICACION DE TF 1-2 SIGNAL FROM TF 1-2: COMMUNICATION	N.C.
	IN23	LD27			SENAL COMUNICACION DE TF 3-4: AC 235 XL EN AUTOMATICO SIGNAL FROM TF 3-4: LTE/AC AUTOMATIC CYCLE	SENAL COMUNICACION DE TF 1-2: AC 235 XL AUTOMATICO OFF SIGNAL FROM TF 1-2: AUTO OFF AC 235 XL	N.C.
TP6 {	OUT06	LD28	LAMPARA PARA SENALAR TF AUTOMATICO	LAMP FOR SIGNALLING AUTOMATIC TF	LP1 - TF 1	LP3 - TF 3	LP5 - TF 5
	OUT14	LD29	LAMPARA PARA SENALAR TF AUTOMATICO	LAMP FOR SIGNALLING AUTOMATIC DTF	LP2 - TF 2	LP4 - TF 4	-
	OUT17	LD30			SENAL COMUNICACION A TF 3-4 SIGNAL TO TF 3-4: COMMUNICATION	SENAL COMUNICACION A TF 1-2: VALOR ADJ DEL AC 235 XL SIGNAL TO TF 1-2: ADJ VALUE FROM LTE/AC	N.C.
	OUT18	LD31			SENAL COMUNICACION A TF 3-4: AC 235 XL AUTOMATICO OFF SIGNAL TO TF 3-4: AUTO OFF AC 235 XL	SENAL COMUNICACION A TF 1-2: AC 235 XL EN AUTOMATICO SIGNAL TO TF 1-2: AC AUTOMATIC CYCLE	N.C.
	OUT20	LD32			N.C.	SENAL REFERENCIA PARA MEDIDA DE OVERTORQUE. PARA TF 1-2-3-4 OVERTORQUE REFERENCE SIGNAL FOR	SENAL REFERENCIA PARA MEDIDA DE PARA TF 5 OVERTORQUE REFERENCE SIGNAL FOR TF 5
TP7 = IN12 - IN13 - IN14 - OUT22 - OUT23 (LD33-34-35-36-37) = TUTTI N.C. / ALL N.C.							




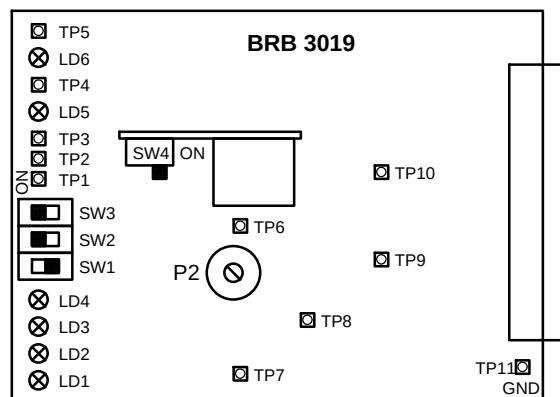


SENALACIONES LED EN LA TARJETA BRB 3019:

LED SIGNALISATIONS ON BRB 3019 CARD:

LD1	ON = AMBAS SENALES DE TORQUE OK OFF= ALARMA DE SOBRETORQUE	ON = BOTH TORQUE SIGNALS ARE OK OFF = OVERTORQUE ALARM
LD2	ON = SOBRE UMBRAL PARA MTR SOBRE TORQ AL INICIO CURSO ALIMENT	ON = OVER-THRESHOLD FOR MOTOR OVERTORQUE AT FEEDING TRAVEL BEGINNING
LD3	RELAY ALARMA SOBRETORQUE SENALIZACION ON = OK (RELAY EXCITADO = NO ALARMA) OFF= ALARMA DE SOBRETORQUE	OVERTORQUE ALARM SIGNALLING RELAY ON = OK (RELAY EXCITED = NO ALARM) OFF = OVERTORQUE ALARM
LD4	ON = CONTROL SOBRETORQ DESHABILITAD OFF = CONTROL SOBRETORQ HABILITAD	ON = OVERTORQUE CONTROL DISABLED OFF = OVERTORQUE CONTROL ENABLED
LD5	ON = PRESENCIA VOLTAJE +12 VDC	ON = +12V DC VOLTAGE PRESENCE
LD6	ON = PRESENCIA VOLTAJE -5 VDC	ON = -5V DC VOLTAGE PRESENCE


SW1	SWITCH PARA DESACTIVAR LA TARJET ON = ALARMA SOBRETORQ DESHABILITADA	SWITCH TO DISABLE THE CARD ON = OVERTORQUE ALARM DISABLED
SW2	ON = DEMORA DE ALARMA 1	ON = ALARM DELAY 1
SW3	ON = DEMORA DE ALARMA 2	ON = ALARM DELAY 2
SW4	ON = ALARMA SONORA HABILITAD	ON = SOUND ALARM ENABLED

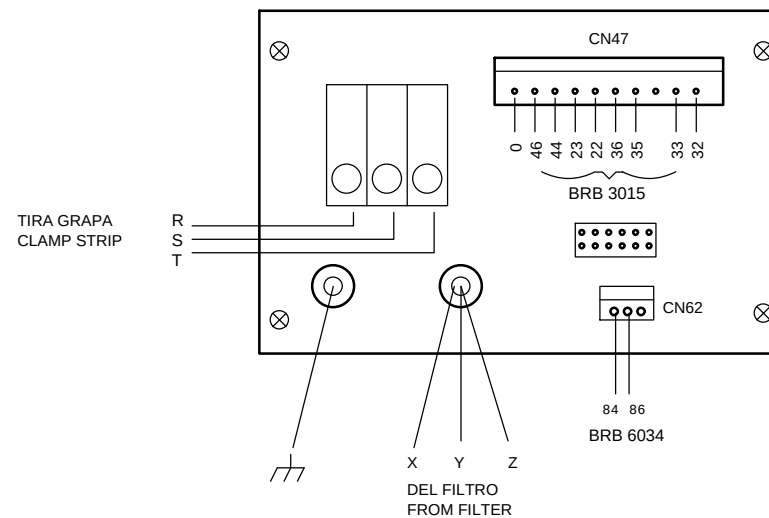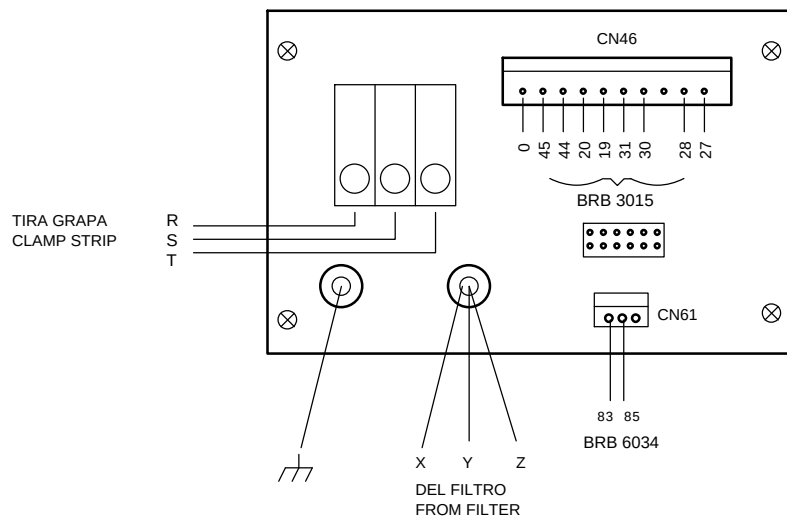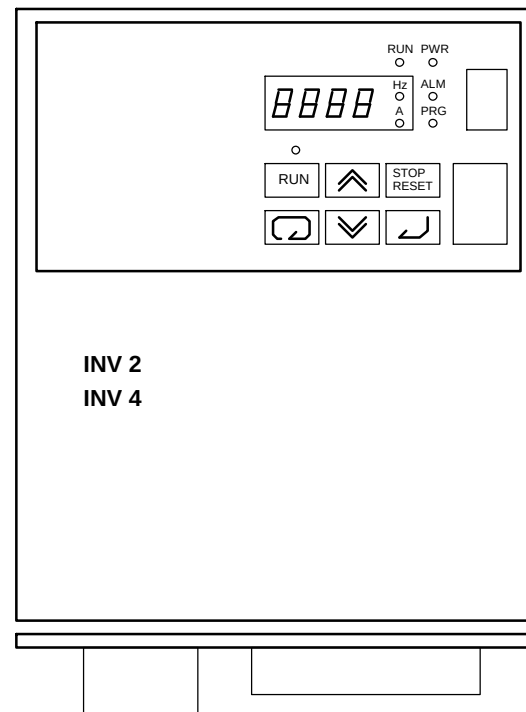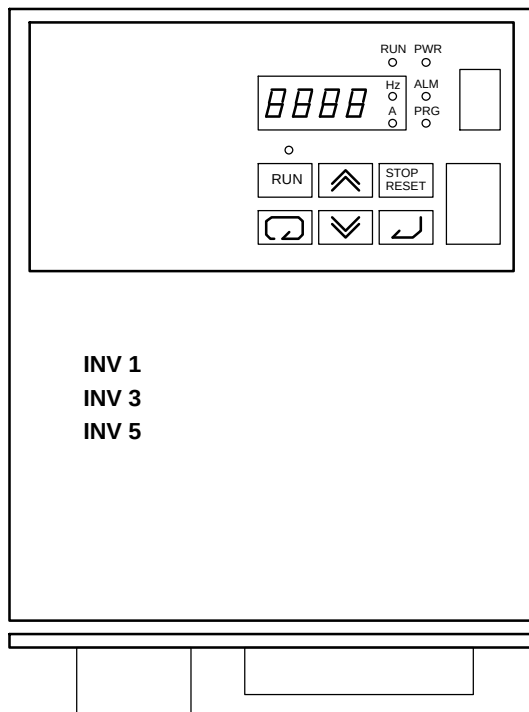


SENAIZACIONES LED:
LED SIGNALISATIONS:

RUN VERDE GREEN	ON	LA TARJETA ESTA OPERANDO CORRECTAMENTE THE CARD IS OPERATING NORMALLY
	OFF	LA TARJETA NO FUE ACTIVADA CORRECTAMENTE O NO ESTA ENCENDIDA THE CARD DID NOT START PROPERLY OR IS NOT POWERED ON
	DESTELLAR CON STS FLASHING WITH STS	DESTELLANDO JUNTO CON LED STS OCURRIO UN ERROR EN LA COMUNICACION CON EL SERVOMOTOR FLASHING TOGETHER WITH STS LED: AN ERROR OCCURRED IN THE COMMUNICATION WITH THE SERVODRIVER
STS ROJO RED	ON	EL SERVOMOTOR FUE DESHABILITADO THE SERVODRIVER HAS BEEN DISABLED
	OFF	SERVOMOTOR ES HABILITADO THE SERVODRIVER IS ENABLED
	DESTELLAR SOLO FLASHING ALONE	DESTELLAR SOLO: OCURRIO UN ERROR DE MOVIMIENTO Y EL SERVOMOTOR HA SIDO DESHABILITADO FLASHING ALONE: A MOTION ERROR HAS OCCURRED AND THE SERVODRIVER HAS BEEN DISABLED
SD VERDE GREEN	ON	DESTELLANDO JUNTO CON LED RUN: OCURRIO UN ERROR EN LA COMUNICACION CON EL SERVOMOTOR FLASHING TOGETHER WITH RUN LED: AN ERROR OCCURRED IN THE COMMUNICATION WITH THE SERVODRIVER
	OFF	NO COMUNICACION NO COMMUNICATION
	DESTELLAR CON RUN FLASHING WITH RUN	DESTELLANDO JUNTO CON LED RUN: OCURRIO UN ERROR EN LA COMUNICACION CON EL SERVOMOTOR FLASHING TOGETHER WITH RUN LED: AN ERROR OCCURRED IN THE COMMUNICATION WITH THE SERVODRIVER
RD VERDE GREEN	ON	TRANSMISION DATO TRANSMITTING DATA
	OFF	NO COMUNICACION NO COMMUNICATION
RD VERDE GREEN	ON	RECIBIR DATO RECEIVING DATA
	OFF	NO COMUNICACION NO COMMUNICATION


CUANDO EL GRUPO ESTA OPERANDO NORMAL, CUANDO
LA MAQUINA ES ENCENDIDA, PARADA, ANTES DE RESET,
CHEQUEAR QUE:
LED CHARGE Y POWER DE SMTR ESTAN ON
LED RUN DE EJE TARJ ESTAN ON
EL DISPLAY VISUALIZA:




MOTOR CORREA SERVOMOTOR
BELT MOTOR SERVODRIVER

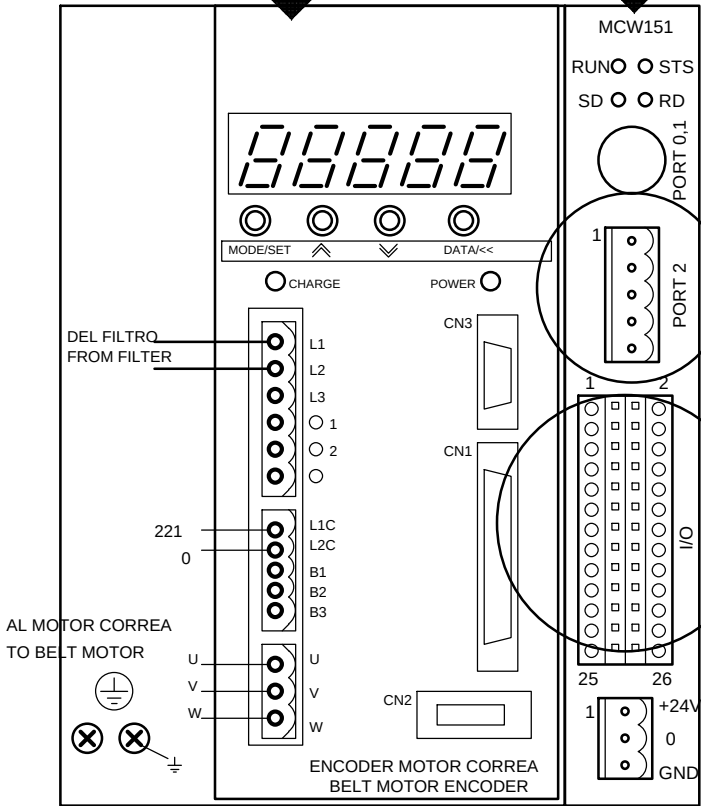


TARJETA EJE MOVIMIENTO CORREA
BELT MOVEMENT AXIS CARD

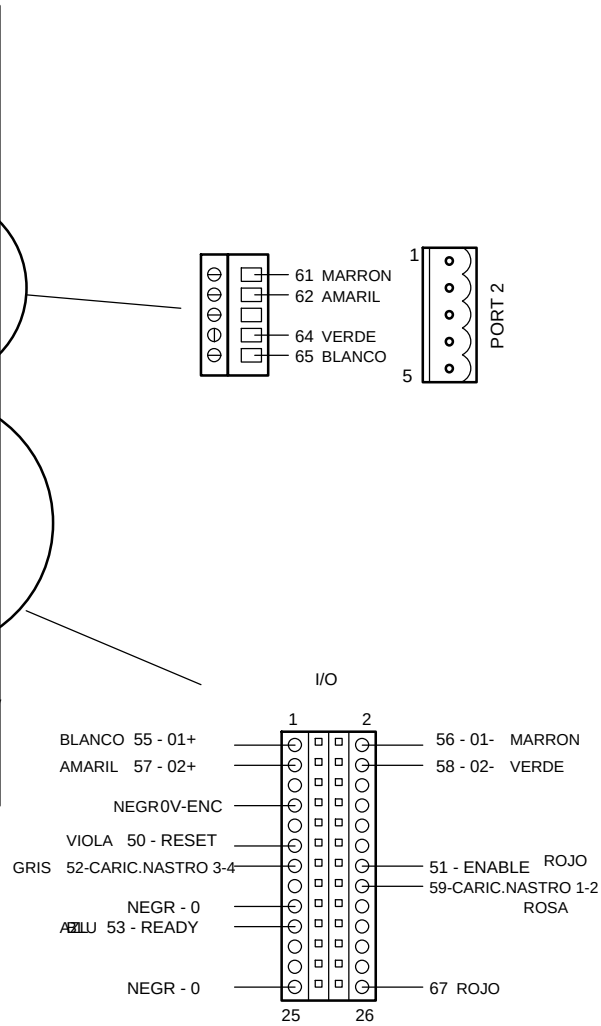

WHEN THE GROUP IS OPERATING NORMALLY, WHEN
MACHINE IS SWITCHED ON, STOPPED, BEFORE RESET,
CHECK THAT:
THE LEDS CHARGE AND POWER OF SERVODRIVER ARE ON
THE LED RUN OF AXIS CARD IS ON
THE DISPLAY VISUALIZES:



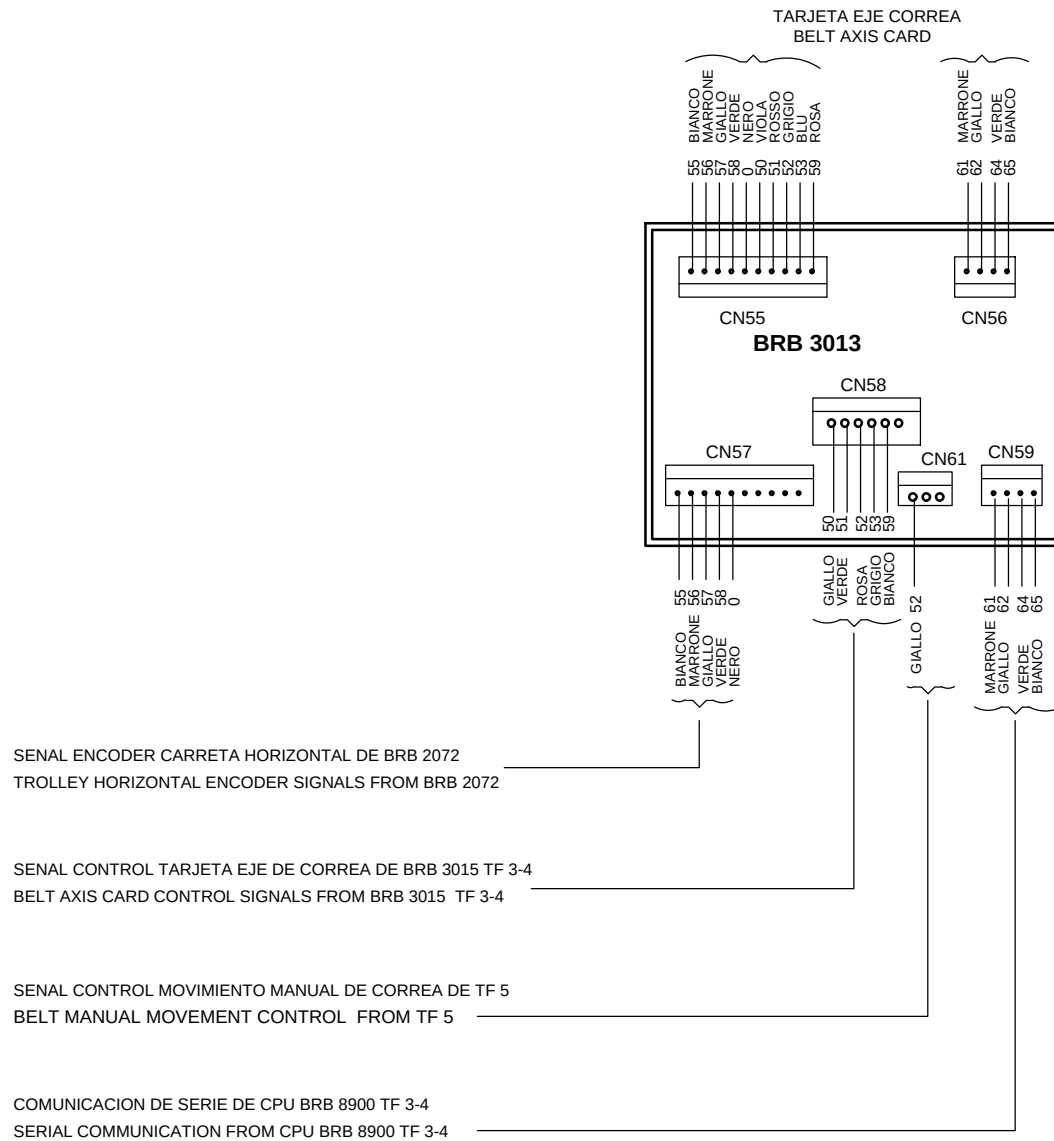




TF 235


The diagram illustrates the wiring for the BRB 3018 TF 5 unit. It shows the internal components, including the main unit (BRB 3018 TF 5) and the terminal block (BRB 6034 - TF 5). The main unit has several connectors: CN17, CN18, CN19, CN20, CN21, CN22, CN23, CN24, CN25, CN26, CN27, CN28, CN29, CN30, CN31, CN32, and CN35. The terminal block has terminals for R18, R18, R18, S18, S18, T18, T18, R5, R5, S5, S5, T5, T5, and a common terminal (0). The diagram shows the following connections:

- BRB 3018 TF 5 to BRB 6034 - TF 5:**
 - Terminal 229 connects to CN17.
 - Terminal 76 connects to CN18.
 - Terminal 183 connects to CN29.
 - Terminal 26 connects to CN30.
 - Terminal 325 connects to CN31.
 - Terminal 39 connects to CN32.
 - Terminal 0 connects to CN35.
- BRB 3018 TF 5 to Terminal Block:**
 - Terminal 216 connects to R18.
 - Terminal 217 connects to R18.
 - Terminal 218 connects to S18.
 - Terminal 219 connects to S18.
 - Terminal 220 connects to T18.
 - Terminal N connects to T18.
- BRB 3018 TF 5 to Common Terminal:**
 - Terminal 220 connects to the common terminal (0).
 - Terminal N connects to the common terminal (0).

The diagram also shows the connection of the terminal block to the main unit (BRB 3018 TF 5) and the connection of the terminal block to the common terminal (0).

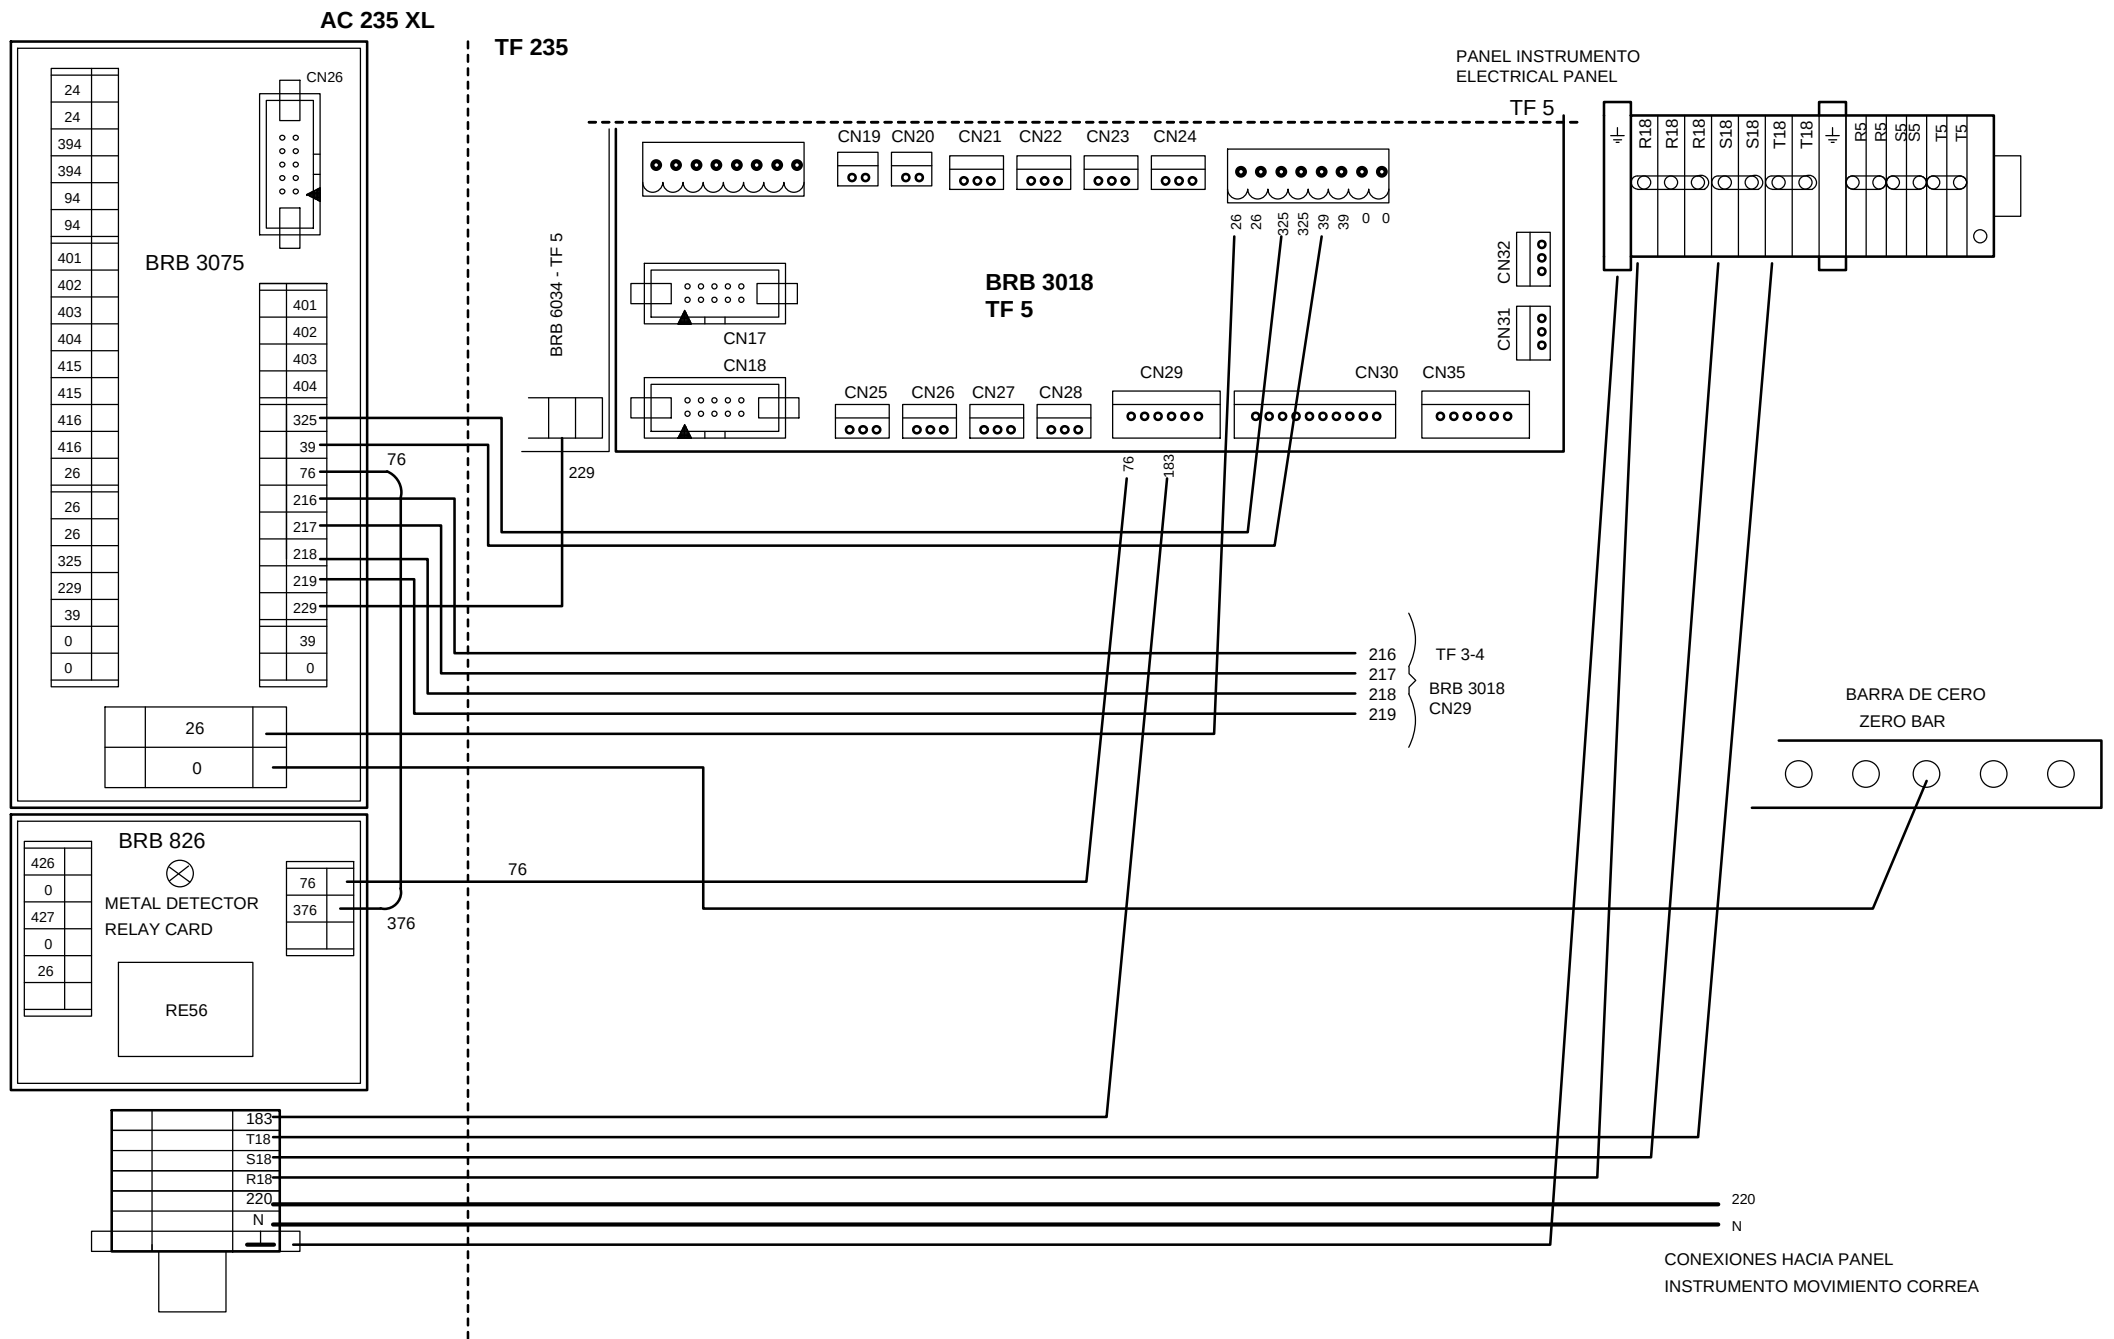

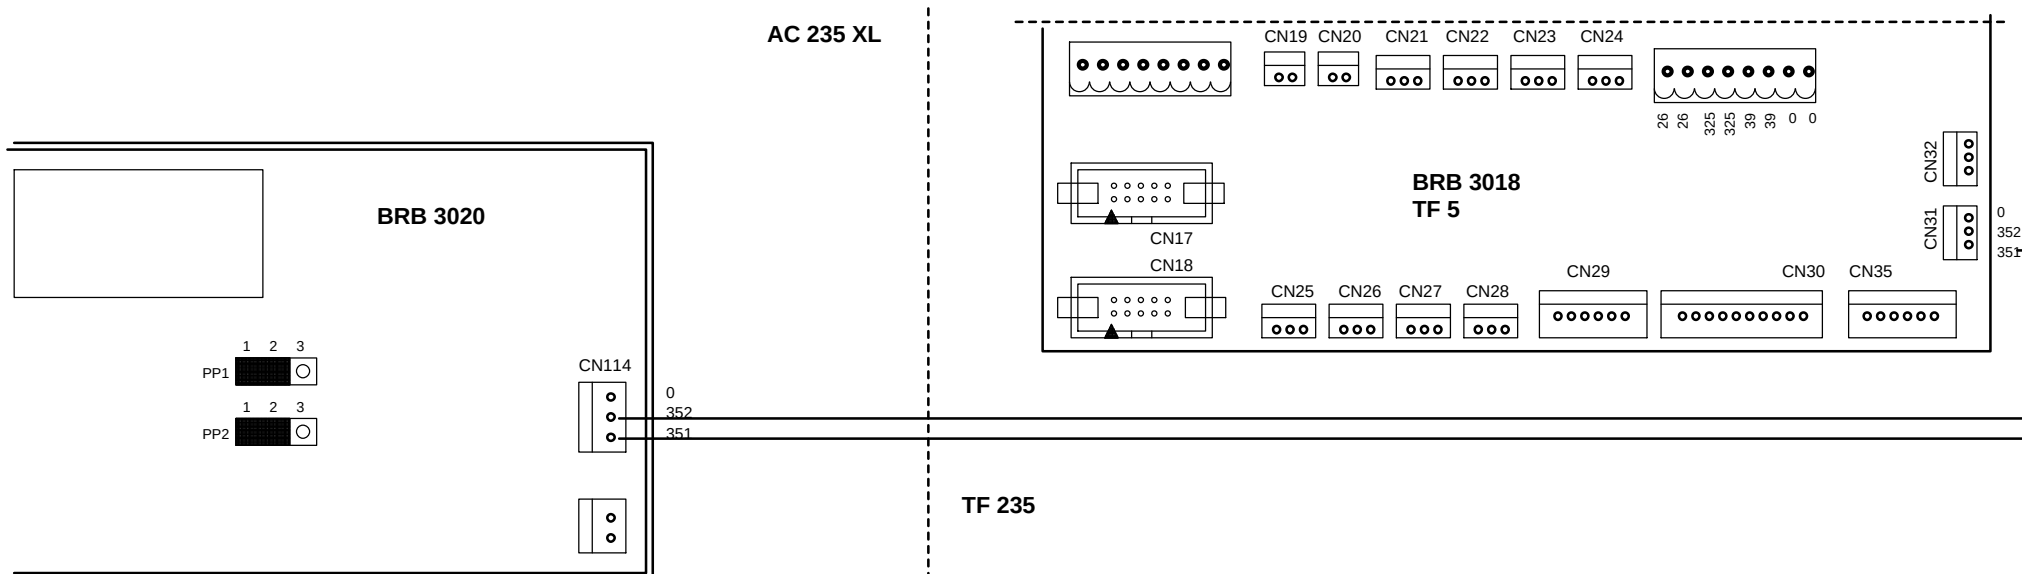
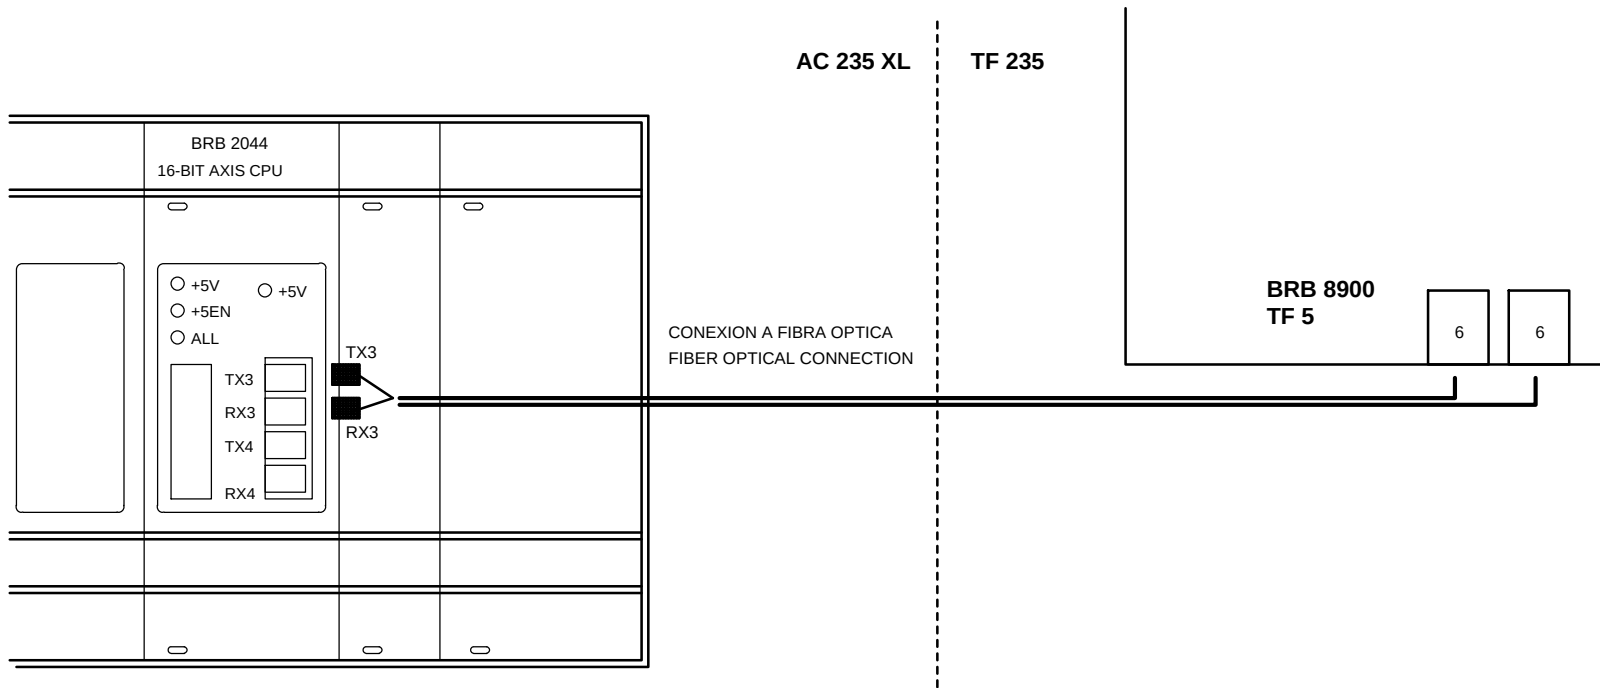


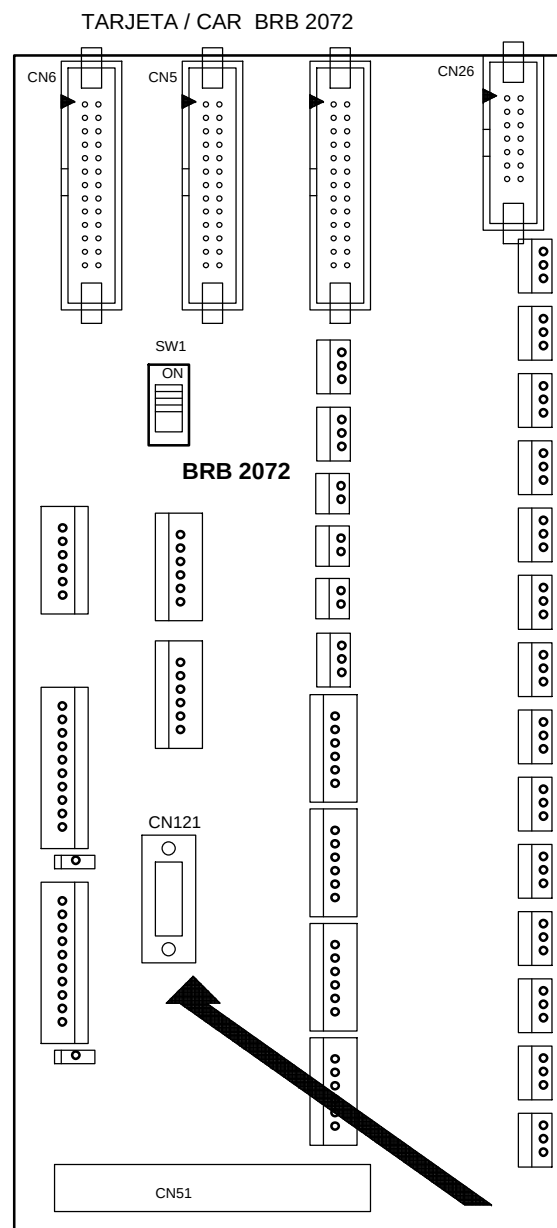


AC 235 XL


TF 235


PANEL INSTRUMENTO
BELT ELECTRICAL PANEL

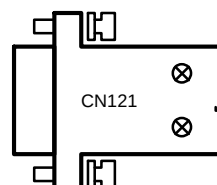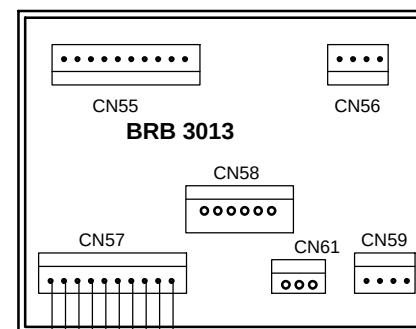

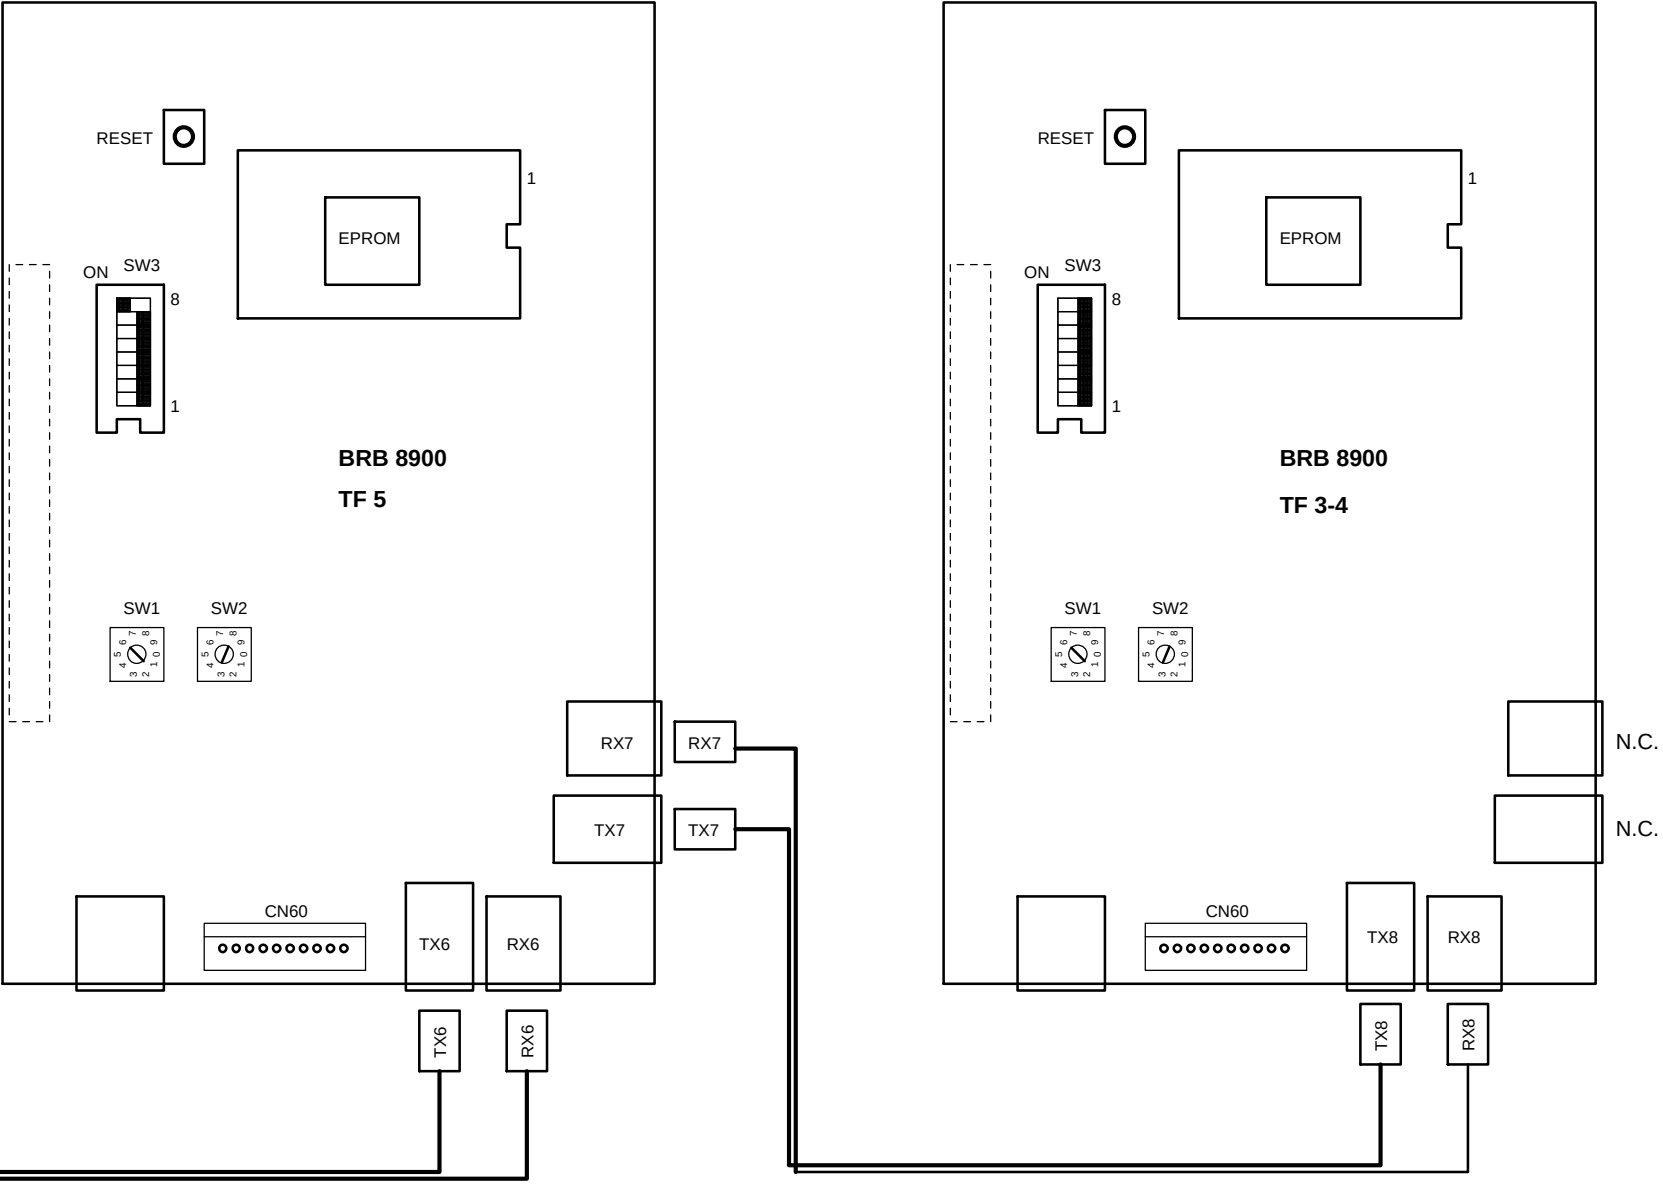

DE AC 235 XL
FROM AC 235 XL

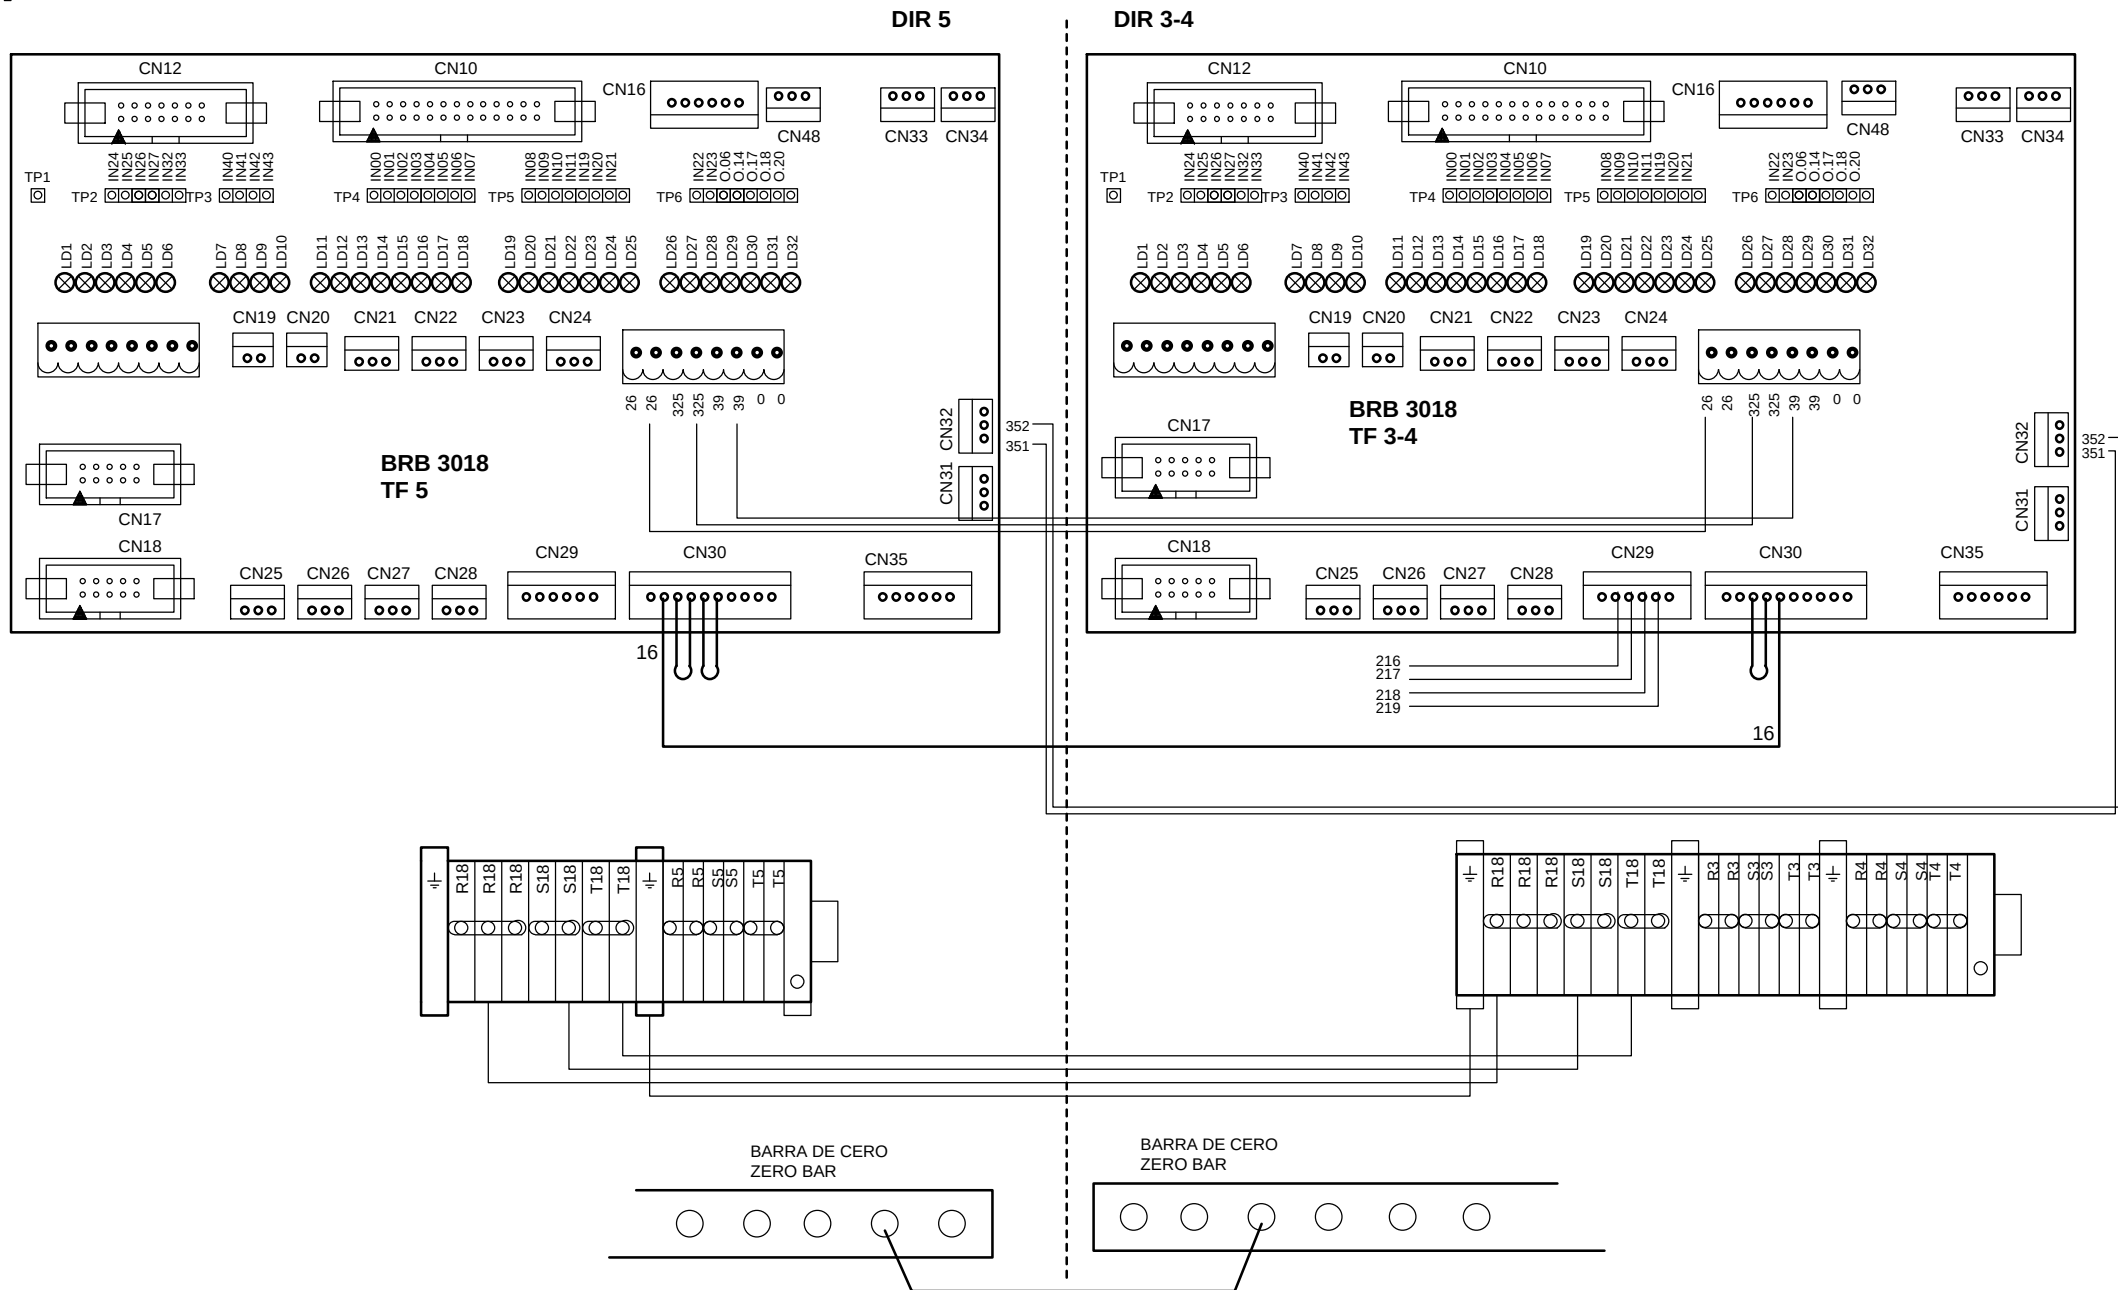

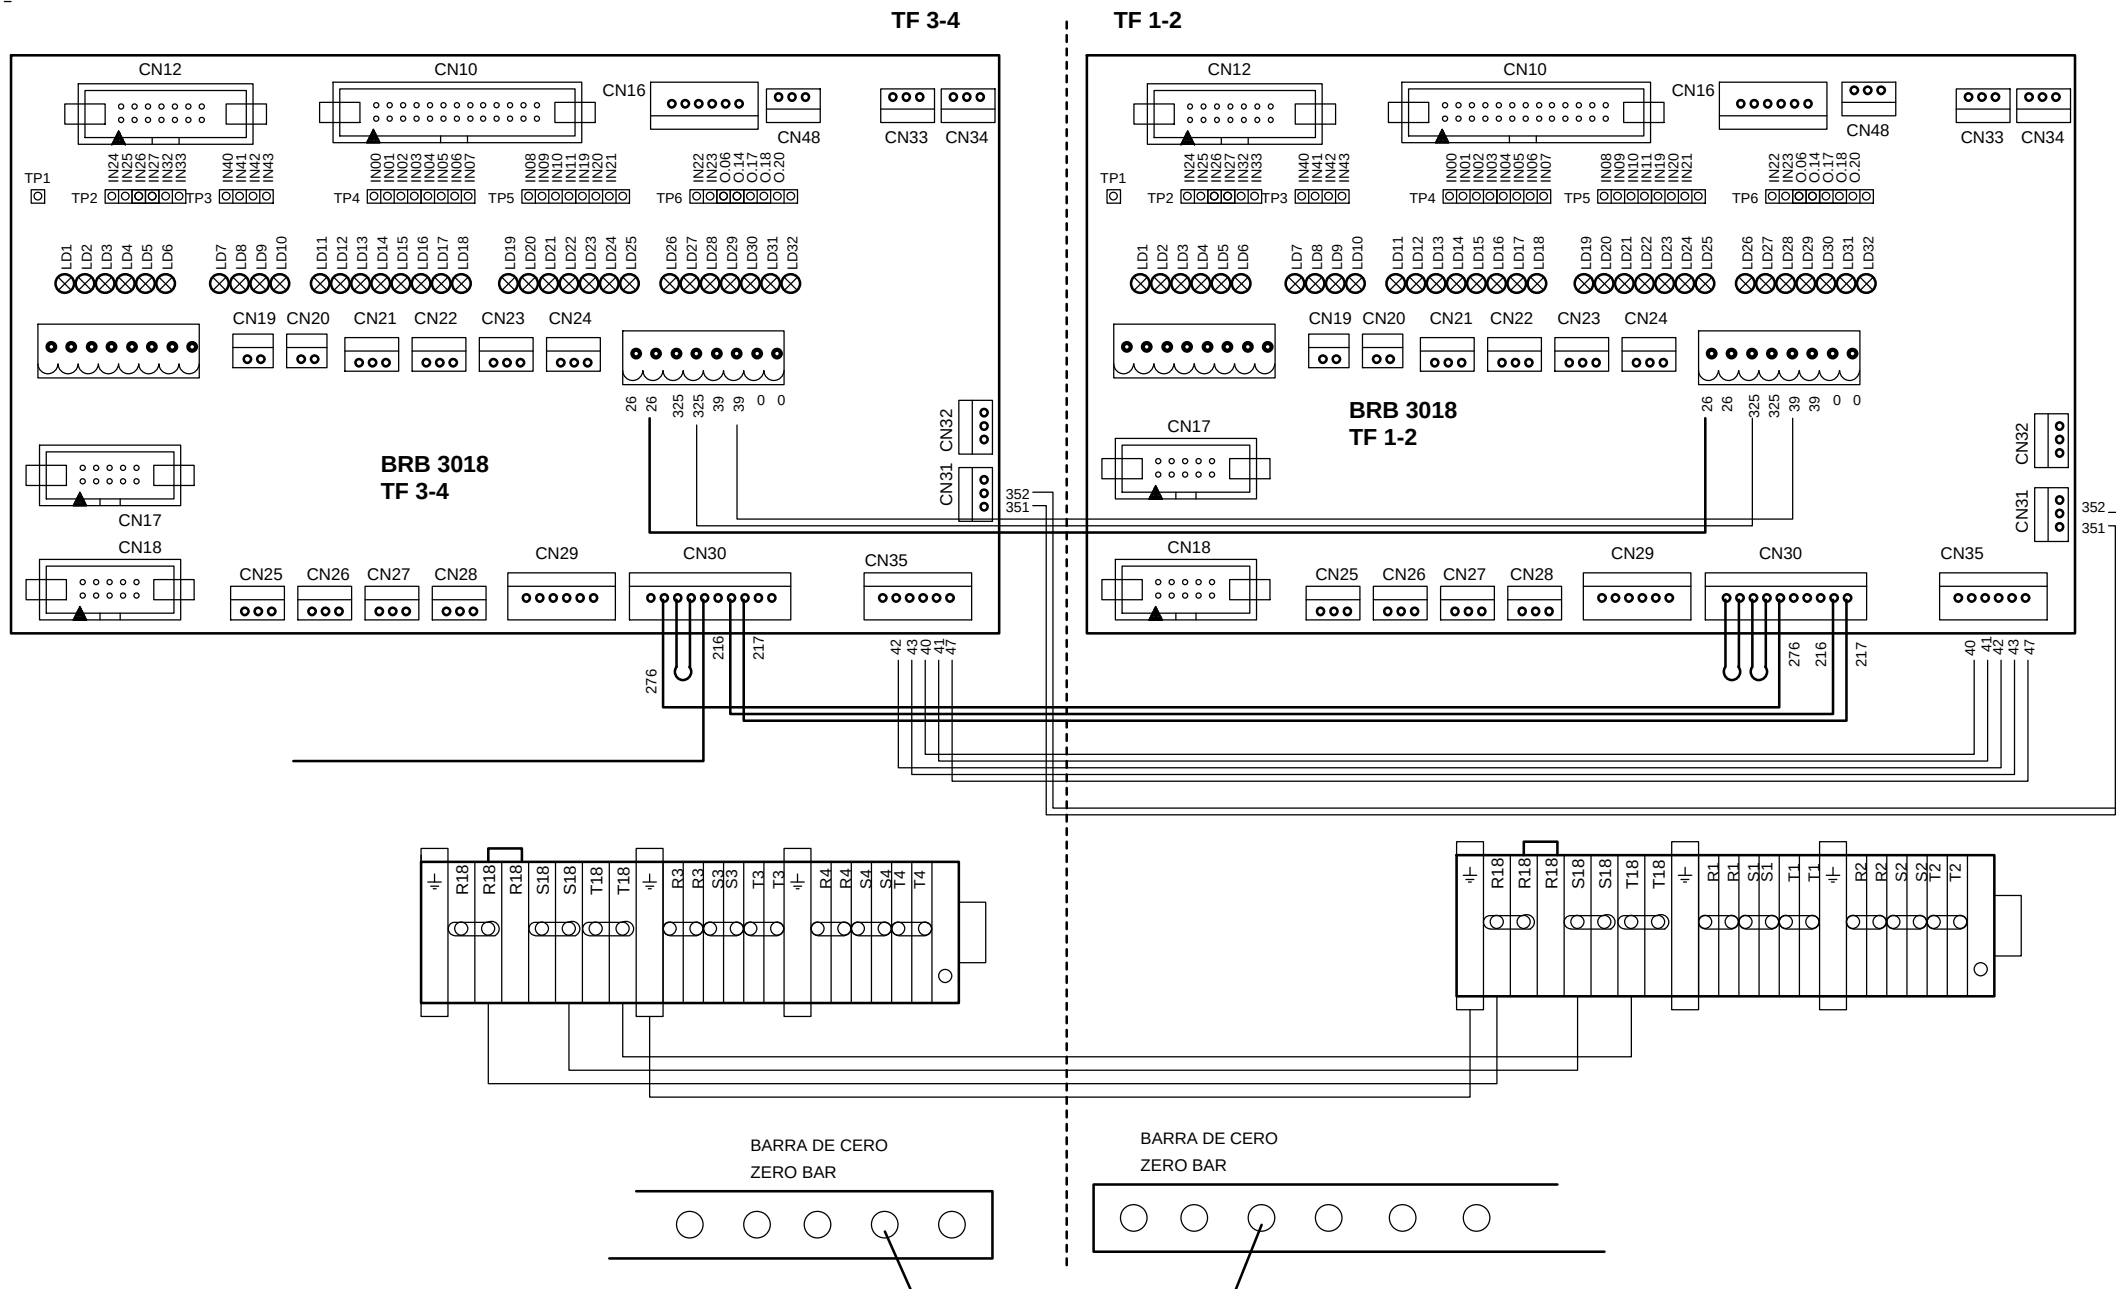

PANEL INSTRUMENTO MOVIMIENTO CORREA
BELT ELECTRICAL PANEL

PANEL INSTRUMENTO TF 1-2
TF 1-2 ELECTRICAL PANEL

