

3.4 Replacement/changing activities

3.4.1 Replacing the battery pack

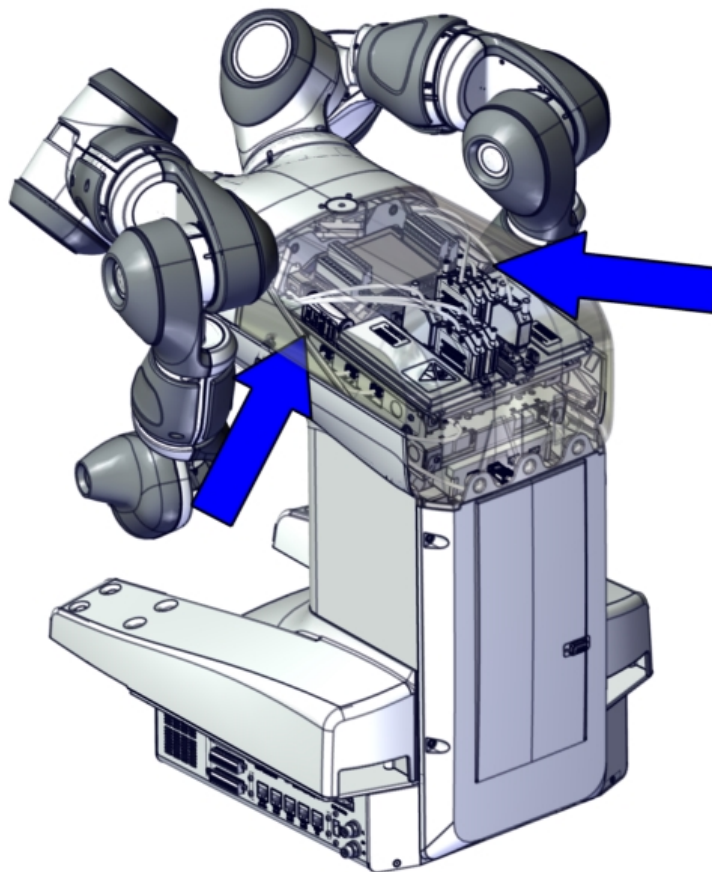


Note

The battery low alert (38213 **Battery charge low**) is displayed when the battery needs to be replaced. The recommendation to avoid an un-synchronized robot is to keep the power to the controller turned on until the battery is to be replaced.

Location of battery pack

The battery pack is located as shown in the figure.



xx1500000504

Required spare parts



Note

The spare part numbers that are listed in the table can be out of date. See the latest spare parts of the IRB 14000 via myABB Business Portal, www.abb.com/myABB.

Continues on next page

3 Maintenance

3.4.1 Replacing the battery pack

Continued

Spare part	Article number	Note
Battery pack	3HAC044075-001	Battery includes protection circuits. Only replace with a specified spare part or an ABB-approved equivalent.

Required tools and equipment

Equipment, etc.	Article number	Note
Standard toolkit	-	Content is defined in section Standard toolkit on page 440 .

Consumables

Consumable	Article number	Note
Cable ties	-	-

Removing the battery pack

Use this procedure to remove the battery pack.

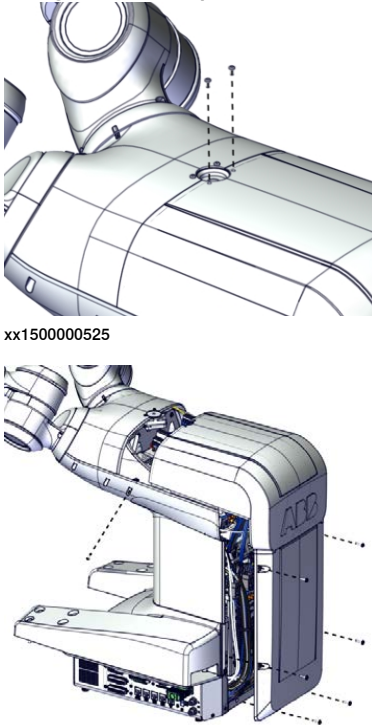
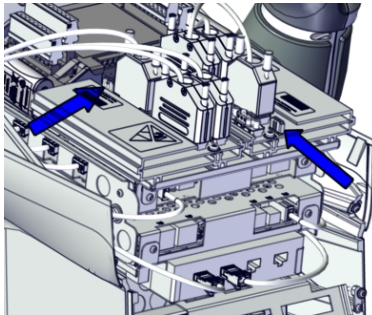
Preparations before removing the battery pack

	Action	Note
1	Move the robot to its calibration position.	This is done in order to facilitate updating of the revolution counter.
2	 DANGER Turn off all electric power supply to the robot, before entering the safeguarded space.	

Removing the battery pack

	Action	Note
1	 DANGER Turn off all electric power supply to the robot, before entering the safeguarded space.	
2	 WARNING The unit is sensitive to ESD. Before handling the unit, see The unit is sensitive to ESD on page 58 .	

Continues on next page

	Action	Note
3	Remove the body cover.	Flange screw (10 pcs)  xx1500000525 xx1500000303
4	Disconnect the battery connector (X3).	 xx1500000505
5	Cut the cable tie that secures the battery and remove the battery.	

Refitting the battery pack

Use these procedures to refit the battery pack.

Refitting the battery pack

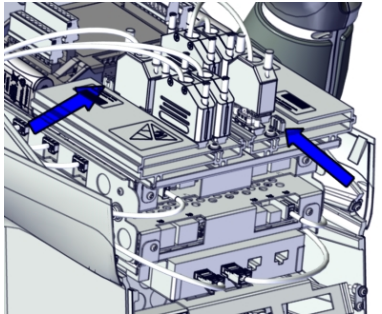
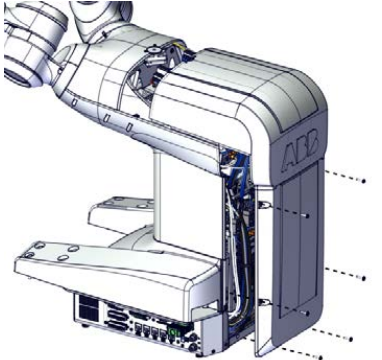
	Action	Note
1	 WARNING The unit is sensitive to ESD. Before handling the unit, see The unit is sensitive to ESD on page 58 .	

Continues on next page

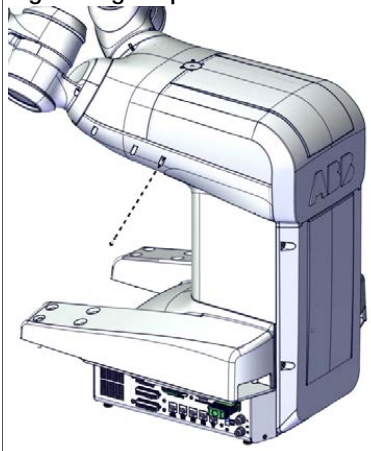
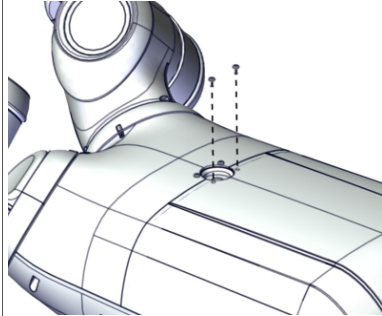
3 Maintenance

3.4.1 Replacing the battery pack

Continued

	Action	Note
2	Fit the battery and secure it with a cable tie.  Note Battery includes protection circuits. Only replace with a specified spare part or with an ABB-approved equivalent.	 xx1500000506
3	Connect the battery connector (X3).	 xx1500000505
4	Refit the body cover.	Tightening torque: 0.9 Nm.  xx1500000697

Continues on next page

	Action	Note
5	Refit the two remaining screws of the body cover.	Tightening torque: 0.2 Nm.  xx1500000696
6	Refit the attachment screws.	Flange screw (2 pcs) Tightening torque: 0.2 Nm.  xx1500000525

Concluding procedure

	Action	Note
1	Update the revolution counters.	See Updating revolution counters on page 415 .
2	 CAUTION Make sure all safety requirements are met when performing the first test run. See Test run after installation, maintenance, or repair on page 116.	