


Project_running_flow

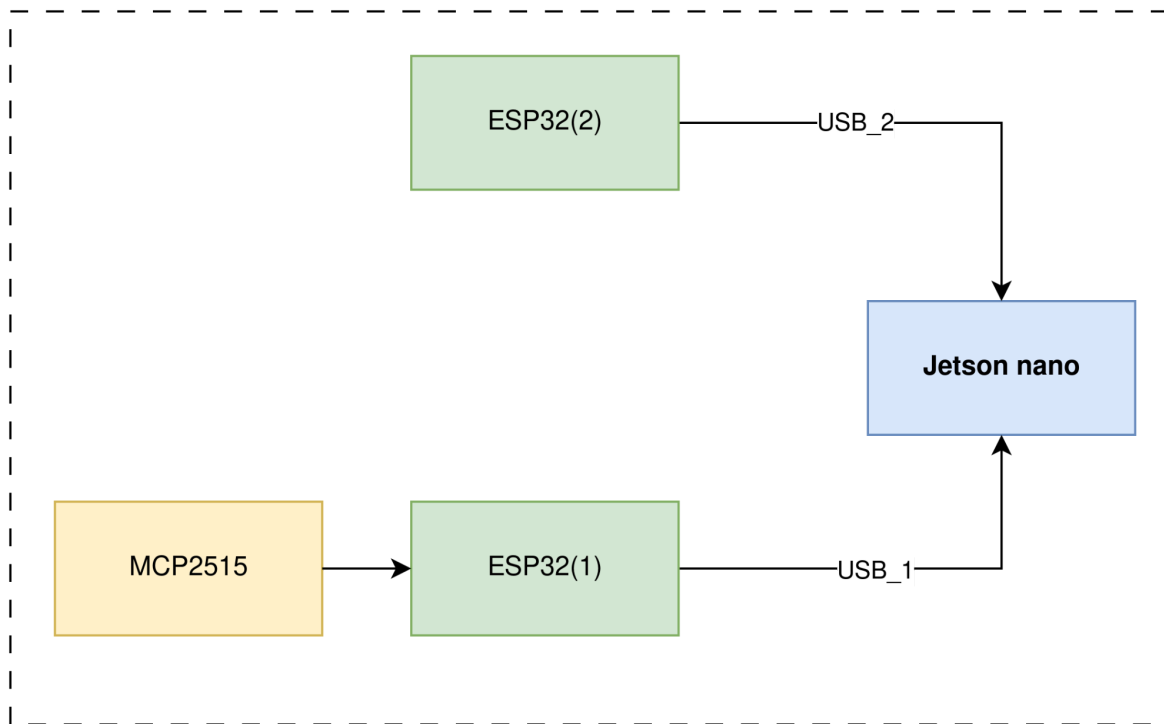

first check the usb serials used to connect the ESP32s to the jetson using this command on an other terminal:

```
sudo dmesg -w | grep tty*
```

Note : *you can remove the usb cables (those used to connect the jetson to the ESP32s) then plug them again and you will know which usb connected to which esp32.*

```
./CAN_J_output_060825 /dev/ttyUSBx
```

Note : *The /dev/ttyUSBx must be replaced by the USB port to which the ESP32(1) (the one connected to the mcp2525 and responsible for the CAN bus) is connected on the jetson.*

```
./ESPnow_v2v_v2g_out28082025 /dev/ttyUSBx
```

Note : *The /dev/ttyUSBx must be replaced by the USB port to which the ESP32(2) (the one responsible for ESPnow communication) is connected on the jetson.*