


Once connected, you can view the VR2C's device properties by choosing the desired VR2C serial number from the serial number drop down box and clicking the "Properties" button. Within the Device Properties window, you can configure the receiver, start or stop studies, and offload data. Offloaded data will be saved in the working directory indicated in the status bar located at the bottom of the Main Window.

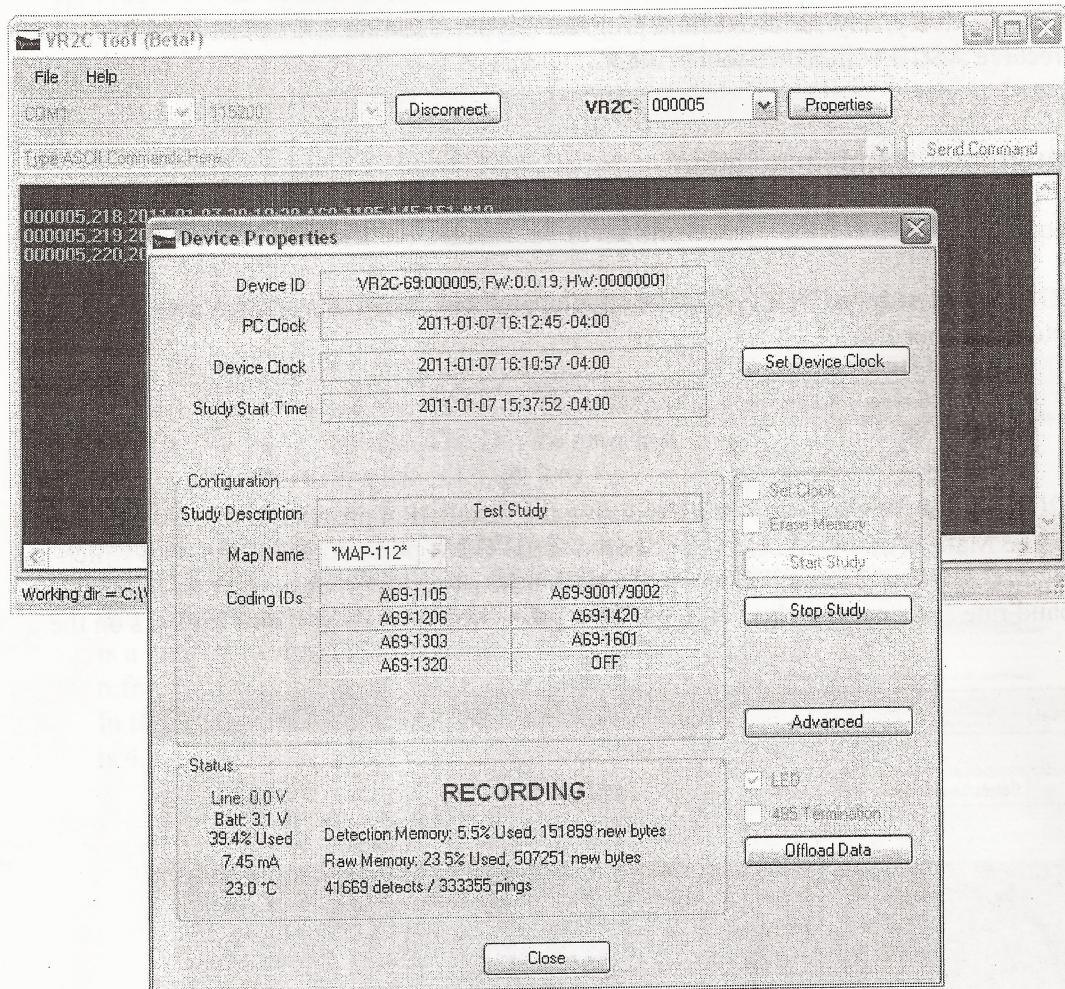

VR2CTool - Device Properties Window