



VR2CTool, in addition to accessing a VR2C using the Device Properties window, can also be used to facilitate communicate with a VR2C using ASCII commands. These commands can be issued within the Main Window by typing them in the command area and clicking the “Send Command” button or hitting Enter on the keyboard. ASCII command responses and Real-Time Mode (RTM) output from the VR2C will be shown in the terminal window section of the Main Window.

Note that VR2CTool will automatically enable the attached VR2C’s serial drivers when you send a command. Also, if the address portion of the command is omitted, VR2CTool will fill it in with the current serial number showing in the serial number drop down box.

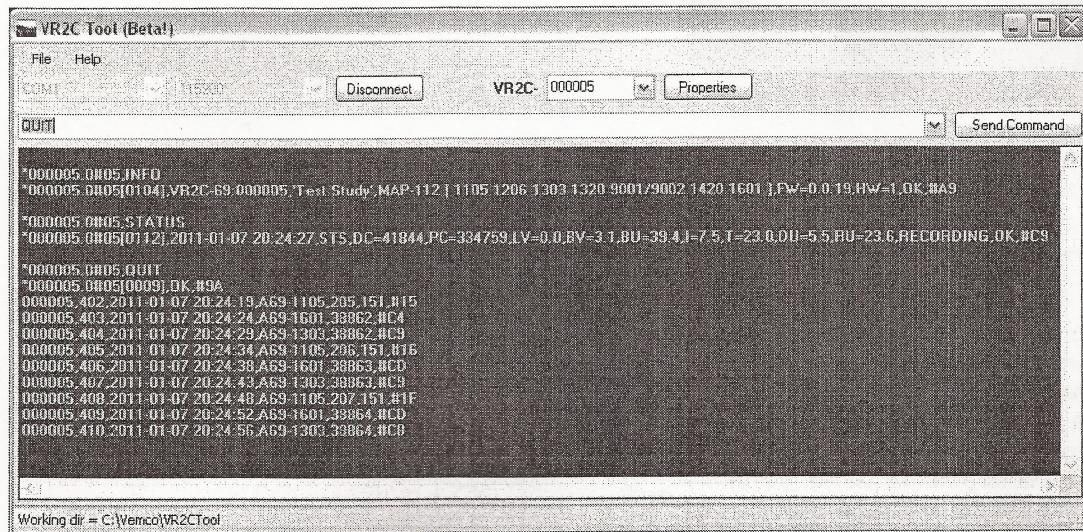

VR2CTool - Terminal Window

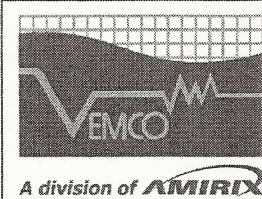

**VEMCO Division, AMIRIX Systems Inc.**  
211 Horseshoe Lake Drive, Halifax, Nova Scotia, Canada B3S 0B9  
Tel: (902) 450-1700; Fax: (902) 450-1704

[www.vemco.com](http://www.vemco.com)

DOC-5080-02