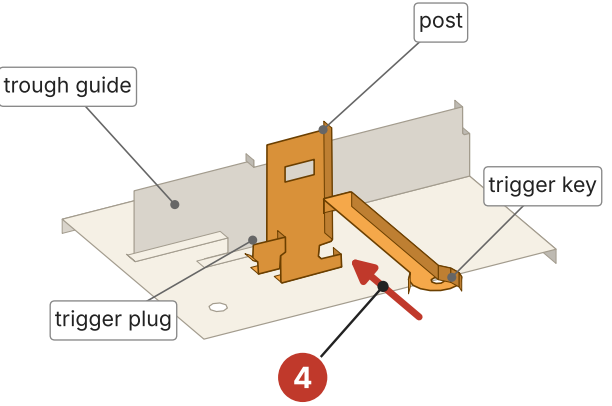


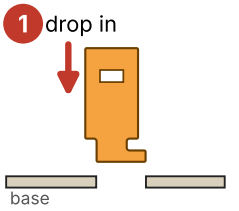


side view of the post: BACK ← → FRONT

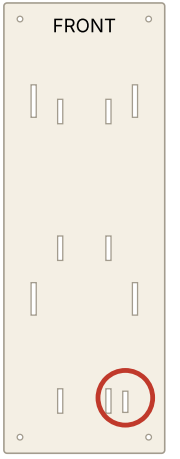


trigger slot:
at the BACK,
beside the trough