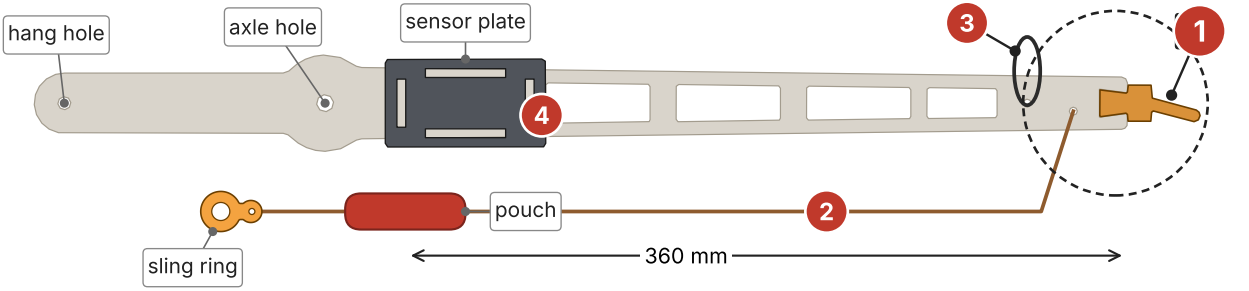

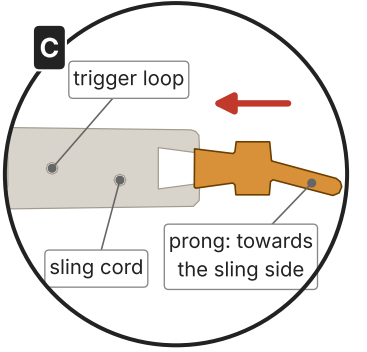

The three release tips are engraved 0, 15 and 30. Start with 15. Its dovetail slides into the end of the arm.

The sling side of the arm is the side nearest the engraved word "sling".