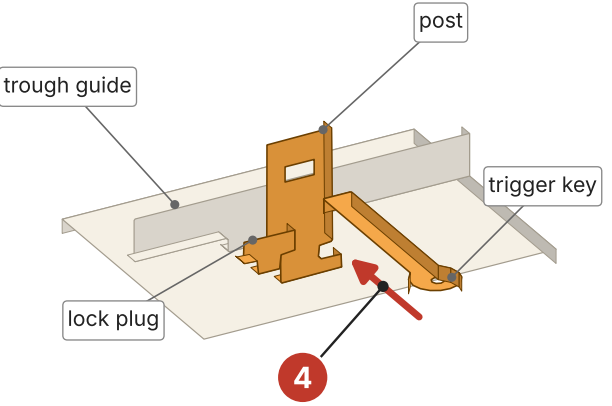

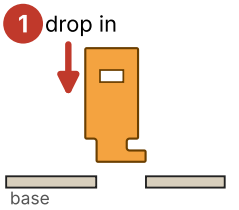

side view of the post: BACK ← → FRONT

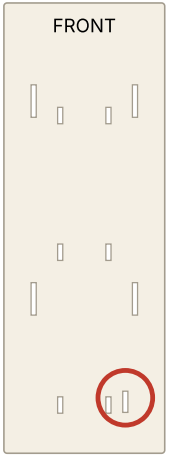

trigger slot:
at the BACK,
beside the trough