

Solid Edge

Installation and Licensing

Proprietary and Restricted Rights Notices

This software and related documentation are proprietary to UGS Corporation.

©2007 UGS Corp. All Rights Reserved.

All trademarks belong to their respective holders.

Contents

System Requirements	1-1
Minimum System Configuration	1- 1
Recommended System Configuration	1- 1
Graphics Cards	1- 2
Installing and Uninstalling the Application	2-1
Installing with Setup	2- 1
Installing Silently	2- 2
Uninstalling	2- 3
Licensing Options	3-1
Node-Locked (Standalone) Configuration	3- 1
Floating Configuration	3- 2
Dongles	3- 2
License File	3- 3
Emergency Licensing	3- 3
Evaluation Licensing	3- 3
Web Retrieval	3- 4
Configuring Node-Locked Licensing	4-1
Loading a Node-Locked License	4- 1
Configuring Floating Licensing	5-1
Identifying a License Server	5- 1
Installing and Configuring the License Manager	5- 1
Installing the Sentinel Driver	5- 3
Loading the Application for Floating Licenses	5- 3
Configuring Academic Licensing	6-1
Entering the Solid Edge Academic License Key	6- 1
License Borrowing	7-1
Contact UGS	8-1

Chapter

1 System Requirements

Minimum System Configuration

Windows XP operating system

- 32-bit (x86) or 64-bit (x64) processor
- Windows XP Professional
- 512 MB RAM
- 1.4 GB of disk space for installation
- Screen Resolution: 1024x768, 65K colors
- DVD-ROM (local or network) for installation

Windows Vista operating system

- 32-bit (x86) or 64-bit (x64) processor
- Windows Vista Business or Enterprise
- 1 GB RAM
- 1.4 GB of disk space for installation
- Screen Resolution: 1024x768, 65K colors
- DVD-ROM (local or network) for installation

Recommended System Configuration

Windows XP operating system

- 32-bit (x86) or 64-bit (x64) processor
- Windows XP Professional with Service Pack 2
- At least 1GB RAM
- 1.4 GB of disk space for installation
- Screen Resolution: 1280x1024, True Color (32-bit) or 16 million colors (24-bit)

- DVD-ROM (local or network) for installation

Windows Vista operating system

- 32-bit (x86) or 64-bit (x64) processor
- Windows Vista Business or Enterprise
- At least 2 GB RAM
- Screen Resolution: 1280x1024, True Color (32-bit) or 16 million colors (24-bit)
- DVD-ROM (local or network) for installation

Windows Vista Aero requires a DirectX 9-class graphics processor that supports the following:

- WDDM driver
- Pixel Shader 2.0
- 32 bits per pixel
- Adequate graphics memory
 - 64 MB of graphics memory to support a single monitor at a resolution lower than 1,310,720 pixels.
 - 128 MB of graphics memory to support a single monitor at resolutions from 1,310,720 to 2,304,000 pixels.
 - 256 MB of graphics memory to support a single monitor at a resolution higher than 2,304,000 pixels.

Graphics Cards

Solid Edge and Insight are compatible with any graphic card that supports Windows XP or Windows Vista. Contact your card manufacturer to determine whether their graphics adapter or driver supports these operating systems.

You can find a list of graphics cards and associated drivers specifically tested with Solid Edge and Insight at the request of the manufacturers at <http://www.solidedge.com/graphics/default.htm>. This list should not be interpreted as the only cards that are compatible. The graphic card information is provided solely as a service to our customers. No warranties or commitments are expressed or implied. Inquiries regarding specific graphics card features should be directed to the respective vendors.

Chapter

2 *Installing and Uninstalling the Application*

To install Solid Edge, use any of the following methods:

- Insert the Solid Edge DVD in the DVD-ROM drive. If autorun is enabled, Solid Edge setup begins.
- In Windows Explorer, double-click the file (DVD/CD-ROM drive):\setup.exe.
- Use the Run command on the Start menu to run (DVD/CD-ROM drive):\setup.exe.

Keep these things in mind when installing Solid Edge:


- For information on addressing error messages you may encounter while installing, contact the Global Technical Access Center (GTAC) for product support at 800-955-0000.
- You must load and remove the application from an account that has Administrator privileges. The application will run under User, Administrator, or Guest privileges.
- Installation always delivers system files to the drive that contains the Windows operating system, regardless of the drive you specify for the installation.
- License Manager (FLEXlm) must be installed from the application DVD to manage floating license seats.



License Manager will not install on a 64-bit operation system. Floating client systems can be 64-bit operating systems, but floating servers must be 32-bit operating systems.

Installing with Setup

Use the setup window to define installation settings. You can specify if Insight will be used on the system, select template files for default measurement units, and determine the installation directory. You can also specify a license file and options file.

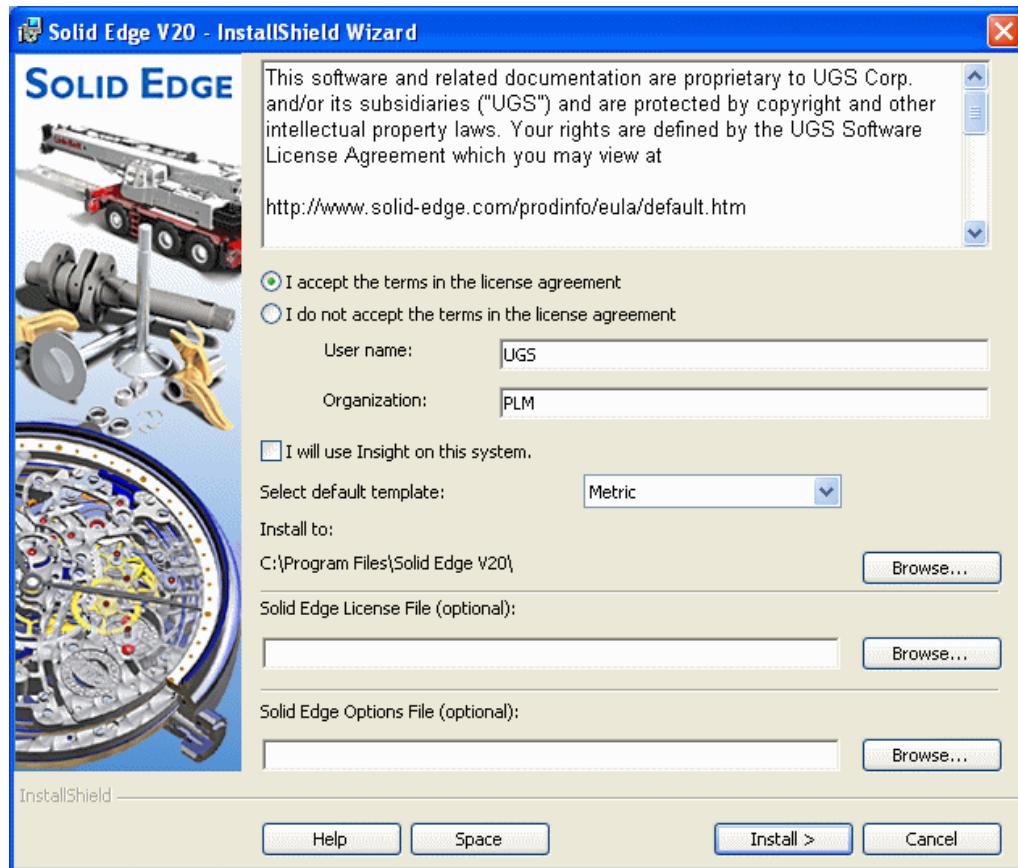

If you select the check box **I will use Insight on this system**, the Update Searchscope utility is automatically run as part of the installation of Solid Edge. You can use the Add or Remove Links dialog box to maintain entries in the Searchscope list used by Insight to define managed sites or document libraries utilized by your company. If you need to run the utility after installation is complete, you can choose Start® Programs® Solid Edge V20® Insight® Update Searchscope. Additional information regarding Update Searchscope is available in Solid Edge on-line Help.

Running the Solid Edge setup program when the product is already installed results in three options. You can:

- Modify the existing installation. Choose this option to install or uninstall template files or add-ins.
- Repair the existing installation. Choose this option to repair problems like missing files and invalid shortcuts.
- Remove the existing installation. Choose this option to remove the application from the computer.

Installing Silently

You can silently install Solid Edge with the following command:



Enclose path names in quotes if they contain spaces.


```
C:\>msiexec /i "D:\Solid Edge\Solid Edge V20.msi" MYTEMPLATE=2
USERFILESPECXML="K:\temp\My Docs\Options.xml"
USERFILESPEC="K:\temp\My Docs\selicense.dat" KERNELTYPE="P4"
INSTALLDIR="C:\Program Files\Silent Solid Edge\" /qn+ /l*v
k:\temp\mysilentsetup.log
```

- The string "D:\Solid Edge\Solid Edge V20.msi" represents the fully qualified path to the Solid Edge MSI file. The drive letter D is only an example of the drive letter for the DVD ROM. Your drive letter may be different.
- The MSI Property MYTEMPLATE indicates which type template files are to be installed. The integer 1 is for Metric and the integer 2 is for English. Ignoring this property defaults the installation to Metric template files.
- The MSI Property USERFILESPECXML allows the user to provide the optional installation of an SEAdmin file. The user should supply a fully qualified path and filename. This file will be copied to the Solid Edge Program folder and processed at the end of the setup.
- The MSI Property USERFILESPEC allows the user to optionally provide a license file that setup will copy to the Solid Edge Program folder at the end of the setup.
- The MSI Property KERNELTYPE is used to install either the P3 or P4 Parasolid Kernel.
- The MSI Property INSTALLDIR is used to specify the installation folder for Solid Edge.
- The argument "/qn+" instructs the windows installer to provide NO user interface and alert the user at the completion of the setup with a dialog box. Refer to the Windows help system for further information about Windows Installer arguments. Leaving this argument off the command line will display the setup user interface with selections made and fields provided.
- The argument "/l*v" tells the Windows installer to create a log file of important messages, warnings and errors and write it to the location provided, in this example, k:\temp\mysilentsetup.log.

Do not silently install Solid Edge if you use Standard Parts or Web Parts. These components require the .NET framework, and the .NET framework is installed only when you run *setup.exe*.

Uninstalling

Use the Add/Remove Programs utility (located in the operating system Control Panel) to remove the application.

Select Solid Edge from the list of installed products, and click Remove.



Always reboot your machine after uninstalling an application, prior to initiating the installation of another version of the product.

For more information on product enhancements, installation and removal, see the *readme.htm* file in the product folder.

Chapter

3 *Licensing Options*

When you purchase Solid Edge, you can choose between two licensing options: node-locked (standalone) or floating (server managed).

With node-locked licensing, the license is locked to serial number of the system disk drive (C:). With floating licensing, the FLEXlm software manages licenses for use on a network. A system administrator typically configures the license server.

Node-Locked (Standalone) Configuration

Node-locked or Standalone license configuration refers to each machine running the application having its own license file. The license file is locked to the serial number of the system disk drive of a machine.

A web-based procedure, Product Activation, is used to activate or register a node-locked license for each machine at your site.

Product activation for all machines is a one-time activity for node-locked configurations. A new license file containing all previously activated machines will be provided by email for each new release of the application. You only need to activate new licenses or unregistered machines with new releases of the application.

While you are provided a temporary license by email for new or unregistered node-locked (standalone) licenses, you should activate your license immediately by visiting the UGS License Management web site at <http://www2.ugs.com/Support/LicenseManagement>. You will need a WebKey account and password to access the web site. Once you are logged in, click Product Activation to activate your products. You will need the disk serial numbers of the machines you wish to activate and a unique description of each machine such as the network name of the machine.



The name of a machine is limited to 20 characters.

You are not required to activate your products from the machines being licensed. You can remotely activate licenses by collecting the disk serial numbers and machine descriptions of the machines to be licensed. Then you can access the License Management web site, create the machines and assign licenses to them. After activating all the machines, you can generate and download your license file. Once you have an electronic copy of your license file (SELicense.dat), save the electronic file to a location either on your local system or on your network. Start the License Utility (located in the Solid Edge program group), then click Browse in the dialog box, and navigate to the file.

The License Utility will automatically copy the file to the Solid Edge V20 \ Program folder. Alternately, you can copy the file (SELicense.dat) to the Solid Edge V20 \

Program folder, replacing the file automatically delivered with your product. Repeat this procedure for all of the machines you activated.



If you do not have access to the Web, you can contact your UGS Channel Partner for assistance in activating your licenses.

Floating Configuration

Floating licensing represents the ability to have multiple clients accessing the software through a license server. With a floating configuration, you can install the application on as many computers as needed on your network, and then have users check out licenses from a pool, not to exceed the total number of purchased seats.

The license server can be any computer on your network that is running a 32-bit Windows operating system. The only limitation is that the machine selected as the license server must be highly available for the users to access whenever needed and the license server must have a server dongle installed.



Client machines using floating licenses can be 64-bit operating systems. Only the floating server is limited to a 32-bit operating system.

The license file used in a floating configuration establishes the location of the license server and the number of available licenses. The FLEXlm utilities that are necessary to simplify the process and to make full use of your license are delivered on your product CD/DVD.


Floating licenses should not be shared across country borders. It is strongly recommended that the floating licenses only be shared across a single LAN to minimize any additional points of network interruption.

Dongles

With floating licensing, the license server must have a server dongle installed. A hardware key, or dongle, is a small device that plugs into your computer and works with the software to provide licensing in a floating license configuration. The dongle plugs into the USB port of your computer.



Parallel server dongles are available upon request from GTAC for 32-bit operating systems.

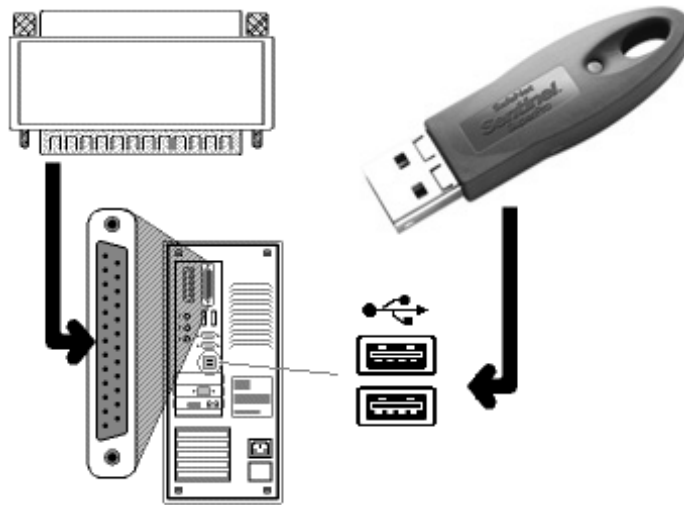

License Manager installs the Sentinel driver for you, but should you need to install it separately, the Sentinel driver can be installed from the Solid Edge DVD. The Sentinel driver is located in the Sentinel folder on the Solid Edge DVD. Double-click *sentinel.exe* and follow the installation instructions to complete the installation of the driver.

License File

Both the node-locked and floating options require a license file that is customized to your installation. You will not be able to run your Solid Edge product without completing the licensing phase of the product installation.

An electronic copy of your license file (SELicense.dat) has been emailed to the point of contact on record for your company.

If you cannot locate this file, you can download it from the UGS Support web page at <http://www.ugs.com/Support/LicenseManagement>. Log in using your WebKey account, and then enter the Sold-To/Install ID number you want to download a license for.

Emergency Licensing

Emergency standalone licensing is available in a situation where the product will not run because of problems with the current license file or hardware key. An emergency license file is valid for 7 days. To retrieve an emergency license, go to <http://www.ugs.com/Support/LicenseManagement>, log in using your WebKey account, and then enter the Sold-To/Install ID number you want to create an emergency license for.

Evaluation Licensing

For a Solid Edge evaluation license, please contact your Solid Edge UGS Channel Partner.

Web Retrieval

Licenses may be retrieved via the web by accessing the web site <http://www.ugs.com/Support/LicenseManagement>. You are required to log in using your WebKey account, and then enter the Sold-To / Install ID number you want to download a license for.

Chapter

4 *Configuring Node-Locked Licensing*

To use a node-locked license, you must install the product and complete the licensing phase after installation.

Loading a Node-Locked License

Install Solid Edge from the product DVD. After installation, Solid Edge must be licensed in one of following ways:


- Use the License File dialog box Browse option in the License Utility dialog box to navigate to an electronic copy of the Solid Edge license file (SELicense.dat) saved to disk.
- Download an archived *SELicense.dat* file and save it to the Solid Edge V20 \Program folder.
- Print the electronic copy of your license file (SELicense.dat) that was emailed to the point of contact on record for your company, and then use the License Utility to enter the 12-character license key(s) to generate a *SELicense.dat* file.

After installation, if you start the application with the delivered license file, licensing help is displayed. However, if you have altered or replaced the delivered license file, license validation occurs automatically.

To use the License Utility to locate and install your SELicense.dat file:

1. Start the License Utility.
 - ☐ From the Start menu, choose Programs® Solid Edge V20® Licensing, and click License Utility.

2. In the License Utility dialog box, click Browse to locate your license file.

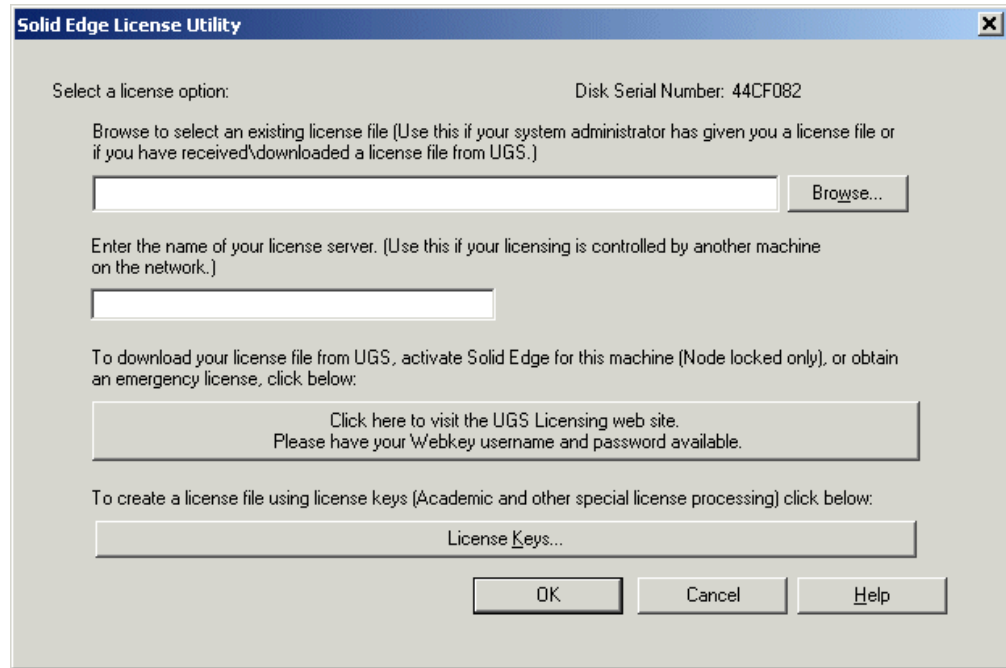

3. In the Open dialog box, navigate to the location where you saved the *SELICENSE.dat* file, and then click Open.




If you do not have a copy of your Solid Edge license file (*SELICENSE.dat*) saved to disk, cancel the Open dialog box, follow the instructions for downloading a *SELICENSE.dat* described in the previous procedure, and resume this procedure at the beginning of this step.

4. In the License Utility dialog box, click OK to complete licensing.

To download a *SELICENSE.dat* file from UGS:


1. In the Solid Edge License Utility dialog box, click in the area labeled, **Click Here to Visit the UGS Licensing Web Site.**

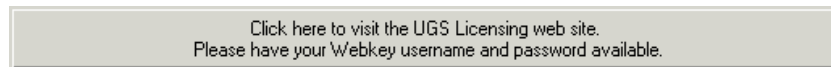

2. Log in using your WebKey username and password.
3. Select the Sold-To ID for which to retrieve licenses, and then click Retrieve License Information.
4. Select the Solid Edge license you want to download. If you are given a choice, choose to save the file to disk.
5. Save the Solid Edge license file, *SELICENSE.dat*, to a location on disk for use with License Utility, or save it directly to the Solid Edge V20/Program folder.

To use License Utility to generate a valid SELicense.dat:

1. In the License Utility dialog box, click License Keys.



2. In the License Key Entry dialog box, enter your Customer Sold-To ID, WebKey Access Code, and **Disk Serial Number (DSN)**. Then enter the license key(s) for your purchased products.




The disk serial number can be copied from the License Utility dialog and pasted into the License Key Entry dialog.

- ☐ Click OK to finish the licensing process.



The Disk Serial Number is not required when entering a license key for Solid Edge Academic licenses.

If you need assistance with finding the disk serial number, instructions are available at http://www.solidedge.com/freetrial/register/find_volume.cfm.

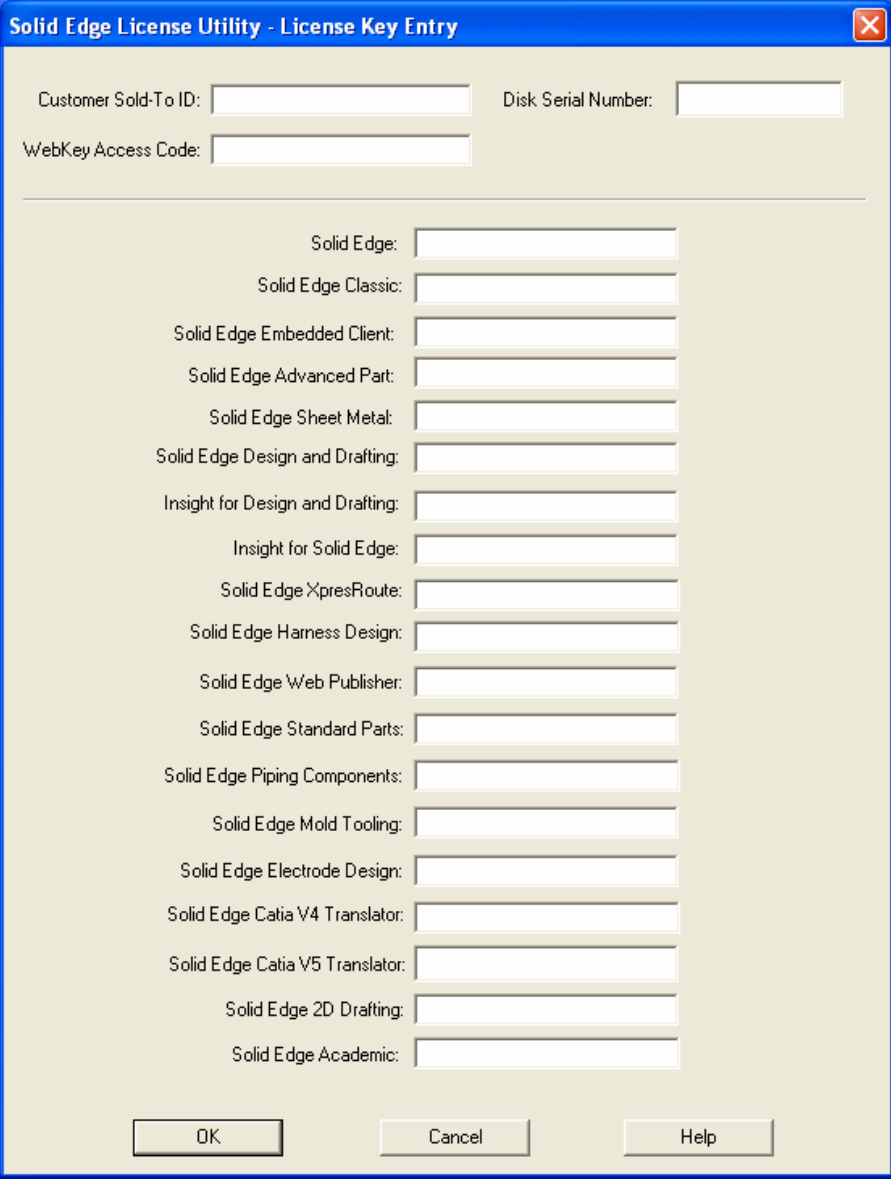

The image shows a Windows-style dialog box titled "Solid Edge License Utility - License Key Entry". It has a blue title bar with a close button (X) in the top right corner. The dialog contains several input fields for license information:

- Customer Sold-To ID: [text box]
- Disk Serial Number: [text box]
- WebKey Access Code: [text box]

Below a horizontal separator line, there is a list of Solid Edge features, each with a corresponding text box for its license key:

- Solid Edge: [text box]
- Solid Edge Classic: [text box]
- Solid Edge Embedded Client: [text box]
- Solid Edge Advanced Part: [text box]
- Solid Edge Sheet Metal: [text box]
- Solid Edge Design and Drafting: [text box]
- Insight for Design and Drafting: [text box]
- Insight for Solid Edge: [text box]
- Solid Edge XpresRoute: [text box]
- Solid Edge Harness Design: [text box]
- Solid Edge Web Publisher: [text box]
- Solid Edge Standard Parts: [text box]
- Solid Edge Piping Components: [text box]
- Solid Edge Mold Tooling: [text box]
- Solid Edge Electrode Design: [text box]
- Solid Edge Catia V4 Translator: [text box]
- Solid Edge Catia V5 Translator: [text box]
- Solid Edge 2D Drafting: [text box]
- Solid Edge Academic: [text box]

At the bottom of the dialog, there are three buttons: "OK", "Cancel", and "Help".

Assume the license data you receive in your license file is as follows:

**FEATURE solidedgeclassic sedemon 20.0 permanent uncounted
33D4CF23D9A8 \ HOSTID=DISK_SERIAL_NUM=6cbf6ad1**

For this example, the node-locked license key is 33D4CF23D9A8 and the Disk Serial Number is 6cbf6ad1. Once you have provided the license key(s), click OK.



Both the Customer Sold-To ID and WebKey Access Code fields are optional. The Customer Sold-To ID is a unique customer identification number used to track products, maintenance, etc. The WebKey Access Code is a unique encrypted password. The information captured in these two fields are the unique identifiers required to create a WebKey Account. A WebKey Account is the single point of account authentication into the tools available on support.ugs.com.

Both the WebKey Access Code and the Customer Sold-To ID can be found in the *SELICENSE.dat* file received via e-mail or downloaded from <http://www.ugs.com/Support/LicenseManagement>. If you have further questions regarding WebKey Accounts, please call 714-952-5444 (US and Canada residents may use 800-955-0000) and select option 2, then option 6. A representative from the GTAC organization will be available to assist you.

Chapter

5 *Configuring Floating Licensing*

Configuring floating licenses involves identifying a license server, installing and configuring FLEXlm, and installing Solid Edge.

Identifying a License Server

The license server is the computer on your network on which the FLEXlm software will reside. The license server can be any computer on your network that is running a 32-bit Windows operating system. The server and the client machines must be running the TCP/IP protocol and must be able to communicate with the server over the network. The license server must have the provided server dongle installed for floating licensing to work.

Installing and Configuring the License Manager

When you install License Manager, FLEXlm and the Sentinel driver are installed for you.

If you need to install the FLEXlm software, it is included on your product installation disk. To install FLEXlm, log in with administrative privileges and run *<DVD-ROM>:\ResKit\License Manager\setup.exe*, where *<DVD-ROM>* is the drive letter of the DVD-ROM drive. Follow the installation prompts. If Insight Connect is not installed on the licensing server, install the drivers from the ResKit folder.




If you did not select your license file during License Manager installation, you will need to follow the steps below to configure FLEXlm.


To configure FLEXlm, log in with administrative privileges and follow these steps:

1. Copy your license file (SElicense.dat) to the *<DRIVE>:\SEFlex\program* folder, where *<DRIVE>* is the drive letter of the hard drive where you installed FLEXlm.
2. Double-click *lmtools.exe* in the *<DRIVE>:\SEFlex\program* folder to display the LMTOOLS dialog box.


- On the Service/License File page, click Configuration Using Services. Ensure that FLEXlm License Manager is highlighted in the list.

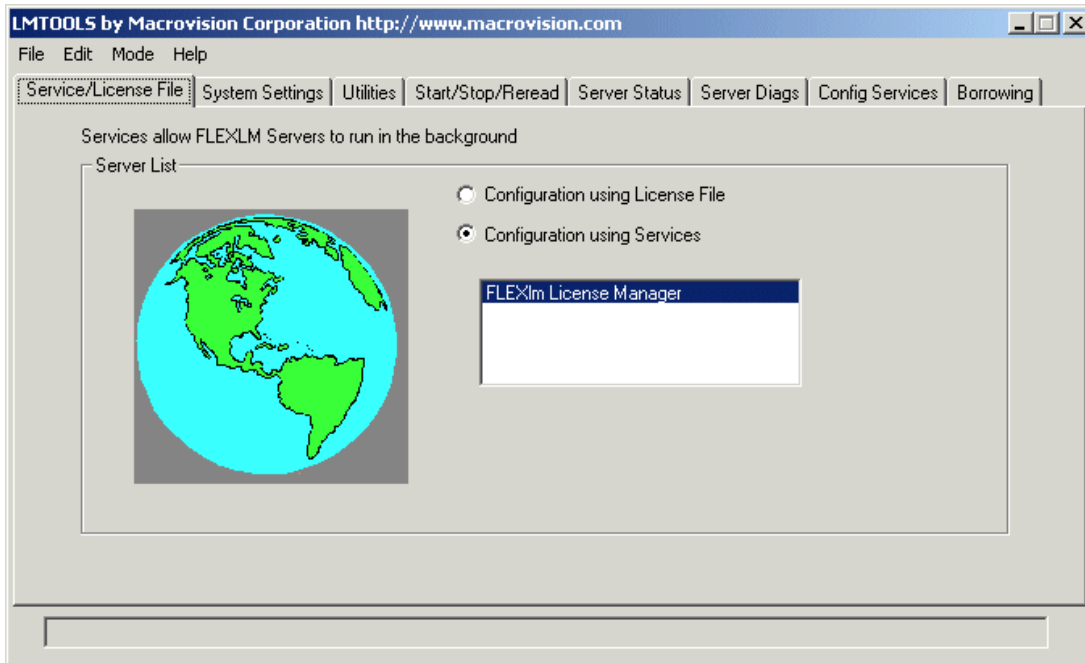

- On the Configure Services page, specify the location of the License Manager daemon *lmgrd.exe*, and the product license file, *SElicense.dat*. Also specify a location for the debug log file.
- Select the Use Services and Start Server at Power Up options.

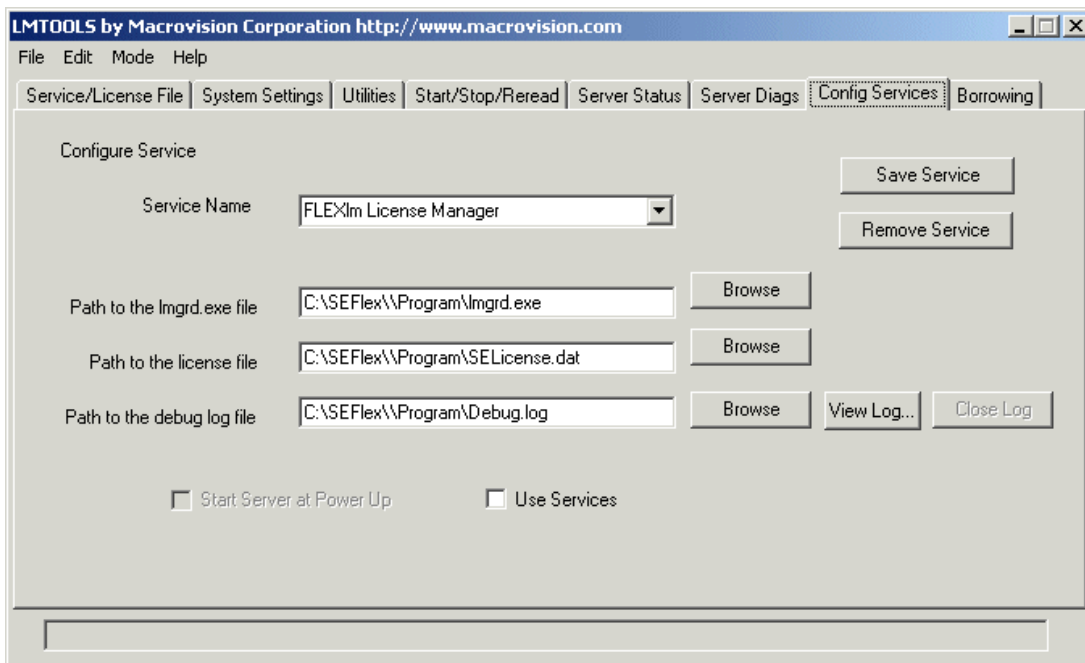

6. Click Save Service. If prompted to save the FLEXlm settings, click Yes.

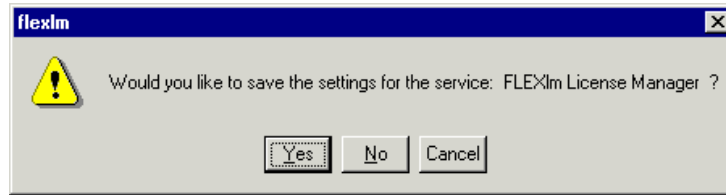

7. On the Start/Stop/Reread page, click Start Server to start licensing.

Installing the Sentinel Driver

The FLEXlm floating license configuration requires the use of a dongle (hardware key). The dongle plugs into the USB or parallel ports on your license server and requires the installation of Rainbow's Sentinel driver.




Parallel server dongles are available upon request from GTAC for 32-bit operating systems.


If you did not install License Manager, you will need to install the Sentinel driver manually. The Sentinel driver is located in the Sentinel folder on the product DVD. Double-click *sentinel.exe* and follow the installation instructions to complete the installation of the driver.

Loading the Application for Floating Licenses

- Step 1:** When installing a floating seat of Solid Edge on a client machine, use the Solid Edge License File Browse option to locate your Solid Edge license file on disk or shared folder.

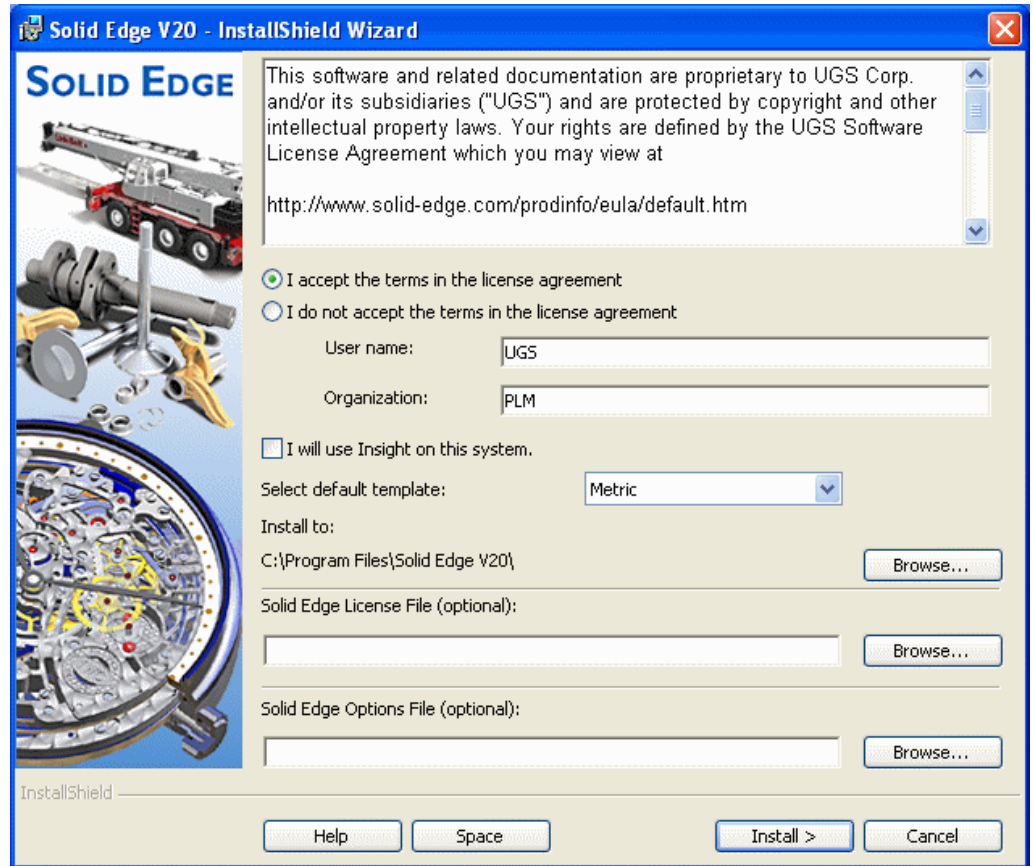

Step 2: Using the Open dialog box, navigate to the *SELICENSE.dat* file saved to disk, and click Open.

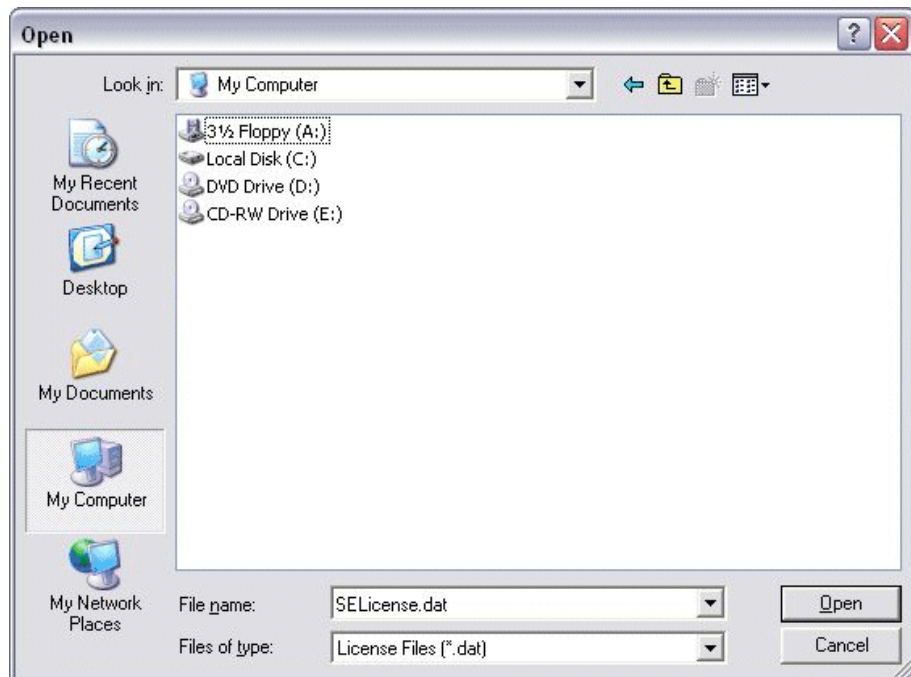



If you do not have a copy of your license file (SELicense.dat) saved to disk, please follow the instructions for downloading a *SELicense.dat* or contact the person responsible for managing FLEXlm at your company to determine the license file location.

Step 3: Once you return to the Install Shield Wizard, click Install. When the installation is complete you are ready to use the product.

Install the application on each client that will be running it. Copy the *SELicense.dat* file from the server to each client.

Place it in the Solid Edge V20\Program folder.



- If you do not have a copy of your license file (SELicense.dat) saved to disk, please follow the instructions for downloading *SELicense.dat* or contact the person responsible for managing FLEXlm at your company to determine the license file location.
- A simpler option for identifying your license file is available. On the Solid Edge License Utility dialog box, you can enter the name of your license server and a local license file will be created that points to your license server.

Chapter

6 *Configuring Academic Licensing*

There are two types of Solid Edge Academic licenses:

- Academic license
- AcademicU license.

Academic licenses are available for student use. The AcademicU licenses are available for university or classroom use. Regardless of the type of Academic license you have, the method for obtaining, configuring and using a Solid Edge Academic license is the same. Using a Solid Edge Academic license involves installing Solid Edge and completing the licensing phase after installation.

You do not need a dongle or a license server to set up a Solid Edge Academic license. The 12-character License Key required to complete licensing is printed inside the DVD cover. The Academic version of Solid Edge works identically to other versions with the following exceptions:


- Whenever a drawing is printed from the Academic version of Solid Edge, it includes the watermark Solid Edge Academic Copy.
- Files saved with an Academic version of Solid Edge can only be opened with an Academic version of Solid Edge. Academic files will not open in other versions.

Entering the Solid Edge Academic License Key

After installing the product, make sure you have the 12-character License Key that is printed inside the DVD cover, and then follow the steps below to enter the License Key.

Step 1: Start the license utility.

- ☐ From the Start menu, choose Programs® Solid Edge V20® Licensing, and then click License Utility.

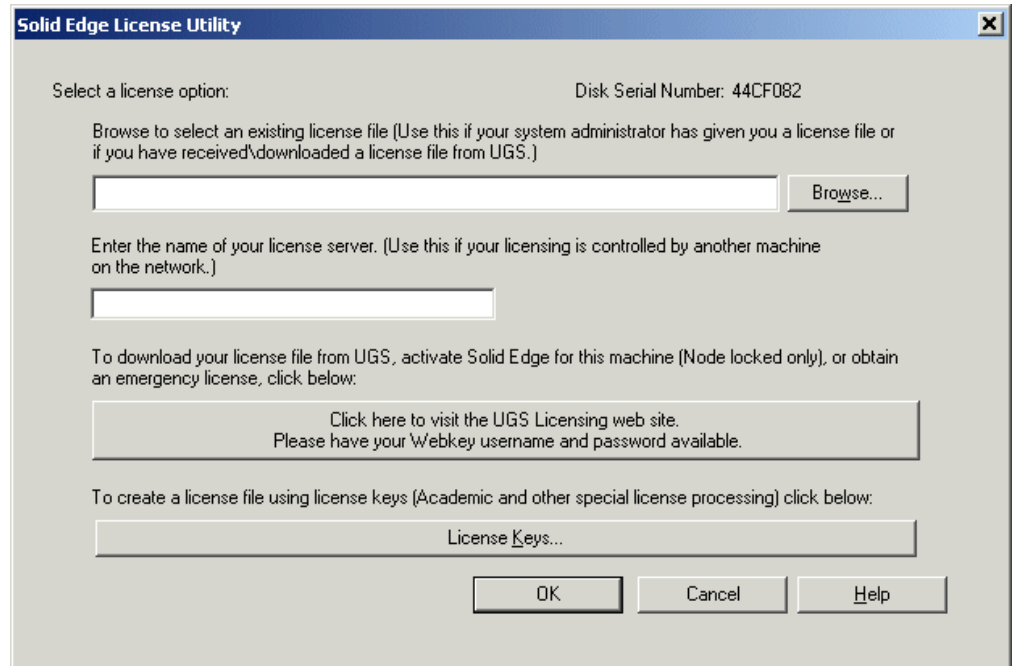


Step 2: In the License Utility dialog box, click License Keys.



Step 3: In the Solid Edge Academic field, enter the license key number printed inside the cover of the DVD and click OK.

The appropriate license file is generated for you.

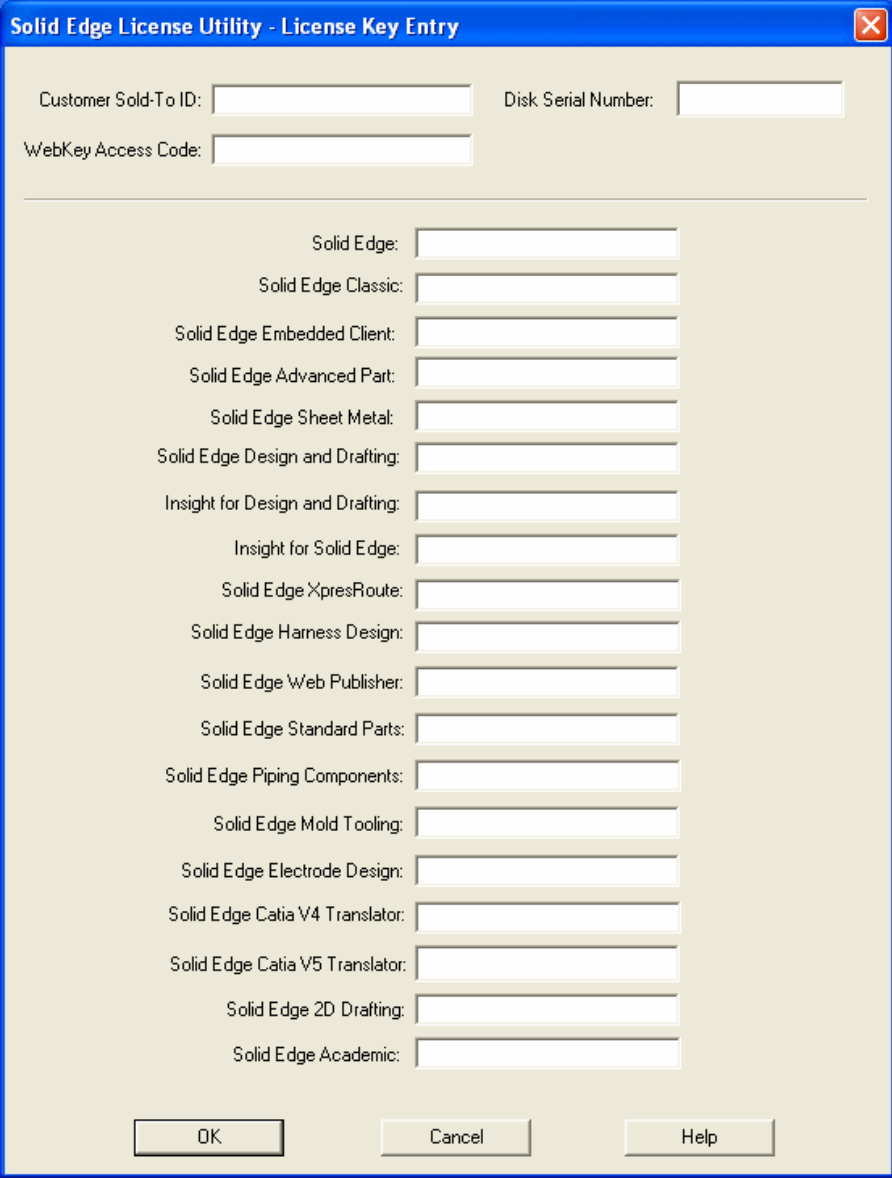

The dialog box is titled "Solid Edge License Utility - License Key Entry". It contains three input fields at the top: "Customer Sold-To ID:", "Disk Serial Number:", and "WebKey Access Code:". Below these is a list of Solid Edge products, each with an adjacent input field for a license key. The products listed are: Solid Edge, Solid Edge Classic, Solid Edge Embedded Client, Solid Edge Advanced Part, Solid Edge Sheet Metal, Solid Edge Design and Drafting, Insight for Design and Drafting, Insight for Solid Edge, Solid Edge XpresRoute, Solid Edge Harness Design, Solid Edge Web Publisher, Solid Edge Standard Parts, Solid Edge Piping Components, Solid Edge Mold Tooling, Solid Edge Electrode Design, Solid Edge Catia V4 Translator, Solid Edge Catia V5 Translator, Solid Edge 2D Drafting, and Solid Edge Academic. At the bottom of the dialog are three buttons: "OK", "Cancel", and "Help".

Product	License Key Entry Field
Customer Sold-To ID:	[Input Field]
Disk Serial Number:	[Input Field]
WebKey Access Code:	[Input Field]
Solid Edge:	[Input Field]
Solid Edge Classic:	[Input Field]
Solid Edge Embedded Client:	[Input Field]
Solid Edge Advanced Part:	[Input Field]
Solid Edge Sheet Metal:	[Input Field]
Solid Edge Design and Drafting:	[Input Field]
Insight for Design and Drafting:	[Input Field]
Insight for Solid Edge:	[Input Field]
Solid Edge XpresRoute:	[Input Field]
Solid Edge Harness Design:	[Input Field]
Solid Edge Web Publisher:	[Input Field]
Solid Edge Standard Parts:	[Input Field]
Solid Edge Piping Components:	[Input Field]
Solid Edge Mold Tooling:	[Input Field]
Solid Edge Electrode Design:	[Input Field]
Solid Edge Catia V4 Translator:	[Input Field]
Solid Edge Catia V5 Translator:	[Input Field]
Solid Edge 2D Drafting:	[Input Field]
Solid Edge Academic:	[Input Field]

Buttons: OK, Cancel, Help

Step 4: In the License Utility dialog box, click OK to complete licensing.

Chapter

7 *License Borrowing*

License borrowing makes management of your floating licenses more versatile. You can check out a license from the server, disconnect from the network, and run the application offline. This is helpful when working off-site.



License Borrowing is not available for the 64-bit version of Solid Edge.

To access License Borrowing, from the Start menu, choose Programs® Solid Edge V20® Licensing, and then click License Borrowing. This displays the License Borrowing dialog box.

License Borrowing

To borrow a license for remote use, select from available licenses and click Borrow Licenses.

Note: On-demand licenses must be borrowed in advance. Make sure to select all licenses that will be needed during the borrow period.

Borrowing period (14 day maximum):
Friday, March 04, 2005

Available Licenses	Quantity Available	Expiration Date
Solid Edge Classic		Wed Mar 16 08:54:34 2005

Borrow Licenses


Licenses in Use	User	Computer	Start Time
Solid Edge Classic	williamw	hsvnt113	Thu Mar 03 08:56:33 2005

Return All Licenses Refresh Close Help

The dialog box displays information about the available licenses and the licenses that are currently being used. It controls the length of time you want to borrow the license and enables you to return the license early.

To borrow a license, click the application in the Available Licenses list, select a borrowing period from the drop-down list, and then click Borrow Licenses.

If a license is available, a message indicates that license borrowing is enabled and you can disconnect from the server. When you click OK on the message box, the License Borrowing dialog box is updated to display information about the licenses being borrowed. If you review the *debug.log* or perform a status on the server, the license is displayed as being checked out on the server.

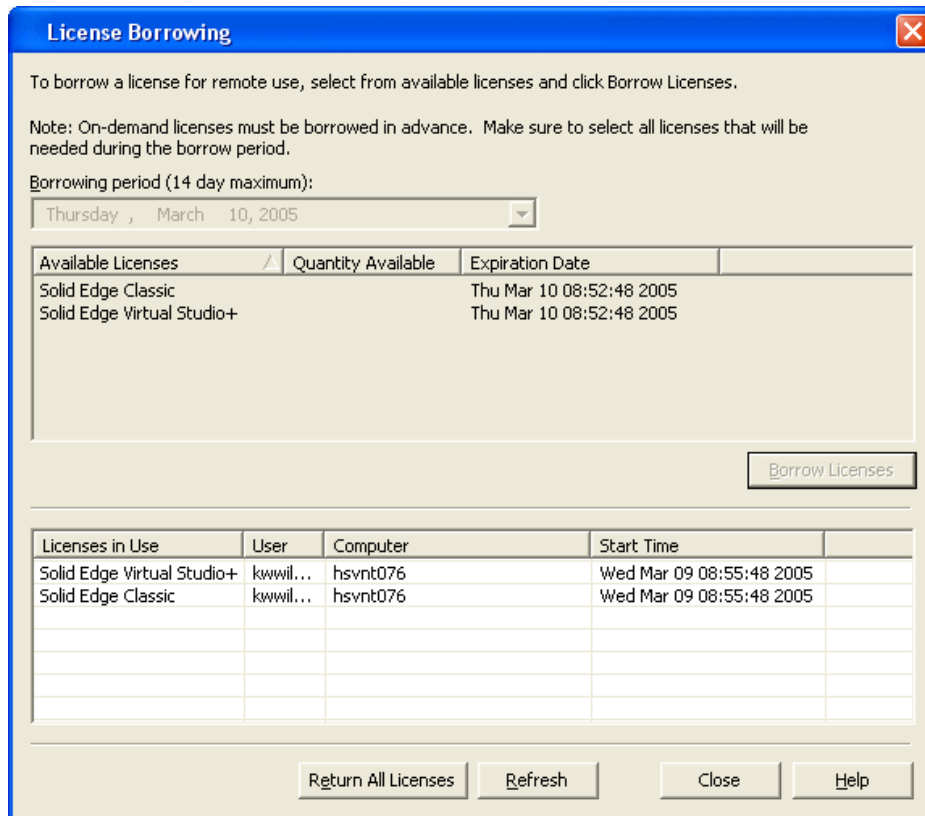

The License Borrowing dialog box has a blue title bar with the text "License Borrowing" and a close button. The main area is light beige and contains the following elements:

- Instructions: "To borrow a license for remote use, select from available licenses and click Borrow Licenses."
- Note: "Note: On-demand licenses must be borrowed in advance. Make sure to select all licenses that will be needed during the borrow period."
- Borrowing period (14 day maximum): A dropdown menu showing "Thursday , March 10, 2005".
- Available Licenses table:

Available Licenses	Quantity Available	Expiration Date
Solid Edge Classic		Thu Mar 10 08:52:48 2005
Solid Edge Virtual Studio+		Thu Mar 10 08:52:48 2005
- Borrow Licenses button.
- Licenses in Use table:

Licenses in Use	User	Computer	Start Time
Solid Edge Virtual Studio+	kwwil...	hsvnt076	Wed Mar 09 08:55:48 2005
Solid Edge Classic	kwwil...	hsvnt076	Wed Mar 09 08:55:48 2005
- Buttons at the bottom: Return All Licenses, Refresh, Close, and Help.

To return borrowed licenses, click Return All Licenses.



If you realize that you need to borrow licenses for additional products, click Return All Licenses to synchronize the borrow time, select all of the appropriate licenses, select a borrowing period, and then click Borrow Licenses.

The *SELICENSE.dat* file has a Borrow=nnn entry to indicate that your license file is compatible with license borrowing. The value nnn is the maximum number of hours a license can be borrowed, with a minimum of 24 hours.



Any user that has a valid license file can borrow a license file. However, an administrator can use the FLEXlm option file to exclude specific users or groups of users from being able to borrow a license.

Chapter

8 *Contact UGS*

In the United States or Canada, call the Global Technical Access Center (GTAC):

1. Dial 1-800-955-0000.
2. Press 2 for technical software support.
3. Enter your Sold-to/Server ID, followed by the # sign.
4. Press 2 for Solid Edge.
5. Press 1 for Solid Edge application issues.

Outside the United States or Canada, contact your local UGS Channel Partner.