

OPERATION MANUAL


air Home 400

ROOM AIR CONDITIONER

SPLIT TYPE
DH SERIES




HITACHI

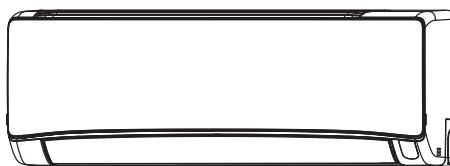


INDOOR UNIT
RAK-DH18PCAST
RAK-DH24PCAST



OUTDOOR UNIT

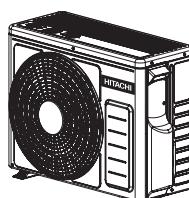

RAC-DH18PCAST

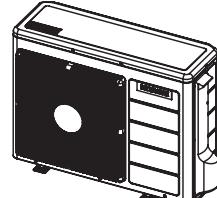

RAC-DH24PCAST

MODELS

RAK-DH18PCAST/RAC-DH18PCAST
RAK-DH24PCAST/RAC-DH24PCAST

Access the full version
of the User Operation Manual by
scanning the code.



[https://docs.hitachiaircon.com/
RAK-DH-PCAST-RAC-DH-PCAST](https://docs.hitachiaircon.com/RAK-DH-PCAST-RAC-DH-PCAST)

EN INSTRUCTION MANUAL
TH ក្រសួងការពីចំណាត់

Cooling & Heating

<H1167: A>



SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "⚠ Warning" and "⚠ Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.



Make sure to connect earth line.



The sign in the figure indicates prohibition.



Indicates the instructions that must be followed.

	WARNING	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Operation Instructions should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual

- Please keep this manual after reading.

PRECAUTIONS DURING INSTALLATION

	WARNING	<ul style="list-style-type: none">● Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself.● Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself.● Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock.● Be sure to use the specified piping set for R32. Otherwise, this may result in broken copper pipes or faults.● Do not use refrigerant other than the one indicated on the outdoor unit (R32) when installing, moving or repairing. Using other refrigerants may cause trouble or damage to the unit, and personal injury.
	CAUTION	<ul style="list-style-type: none">● A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.● Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it.● Please ensure smooth flow of water when installing the drain hose.● Do not install the indoor unit in a machine shop or kitchen where vapor from oil or its mist flows to the indoor unit. The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance and may deform and in the worst case, break the plastic parts of the indoor unit.

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

	WARNING	<ul style="list-style-type: none">● Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation.● Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire.● Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.● If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.● If the air conditioner is not cool, one possible cause could be due to refrigerant leakage, so consult your dealer. The refrigerant gas used in the air conditioner is harmless. But if refrigerant gas leaks into the room, harmful products are generated when in contact with fire from appliances such as a stove heater. When there is refrigerant gas accumulation in the room, immediately stop the air conditioner. Open the windows for ventilation and contact your agent.
--	----------------	---

PRECAUTIONS DURING OPERATION


	WARNING	<ul style="list-style-type: none">● Avoid an extended period of direct air flow for your health.
		<ul style="list-style-type: none">● Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.
		<ul style="list-style-type: none">● Do not use any conductor as fuse wire, this could cause fatal accident.
		<ul style="list-style-type: none">● During thunder storm, disconnect and turn off the circuit breaker.
		<ul style="list-style-type: none">● Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result.

PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.




- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

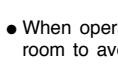

- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.




- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

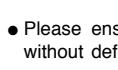

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.




- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

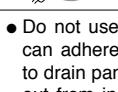

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.




- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

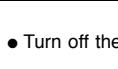

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

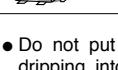

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.



- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.


- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

- This appliance is not intended for use by persons (including children) who are physically handicapped sensory or mental or lack of experience and knowledge. Unless supervised or instructed on the use of electrical appliances by persons responsible for their safety.


C
A
U
T
I
O
N

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

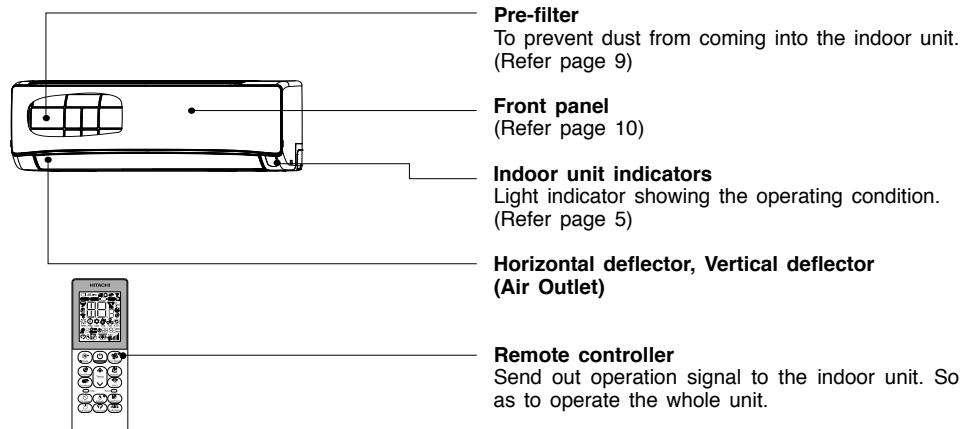

OUTDOOR UNIT

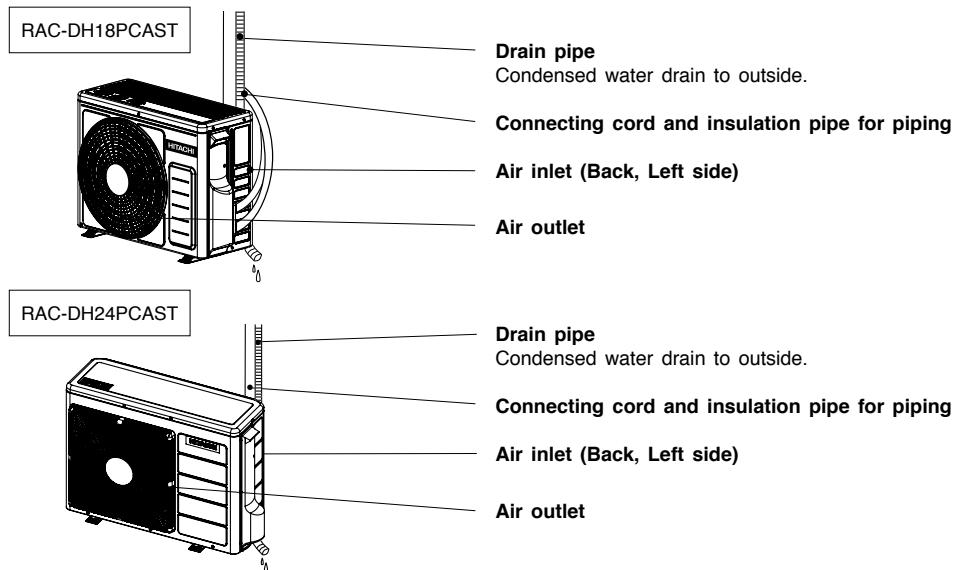

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAK-DH18PCAST, RAK-DH24PCAST	950	294	235
RAC-DH18PCAST	658	530	275
RAC-DH24PCAST	850	650	298

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT INDICATIONS

Operation Lamp (Yellow)
This lamp lights during operation.

Timer Lamp (Orange)
This lamp lights when the timer is working.

Wi-Fi Lamp (Blue)
Optional

Clean Function Lamp (Green)
This lamp uses for FrostWash, Mold Guard, Filter Sign.

Temporary Switch

Use this switch to start and stop when the remote controller does not work.

- By pressing the temporary switch, the operation is done in automatic mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

☆ If the power stays on and the unit is not operated, power is slightly consumed in the control circuit. The power is saved by turning off the power switch (or the circuit breaker when the power is supplied from the outdoor unit).

NAMES AND FUNCTIONS OF REMOTE CONTROLLER

■ This remote controller controls the operation and timer setting of the room air conditioner. The operating range of the remote controller from the indoor unit is 7m. If indoor lighting is used, the range may be shorter.

Off Mode Sign

Mode Selector Button
Use this button to select the operation mode. Every time you press this button, the mode will change from (Cool) → (Dry) → (Fan) → (A.Cir) cyclically.

GoodSleep Button

FrostWash Button

Filter Sign Reset Button

Refresh Button

On Timer Button


Select the turn ON time.

Off Timer Button

Select the turn OFF time.

Power SAFE Button

Signal Transmission

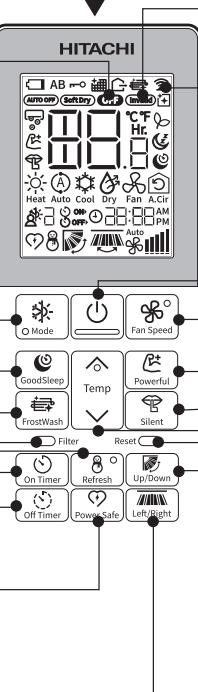

Invalid Operation Sign

Shown at invalid setting or operation

Transmission Sign

The transmission sign blinks when a signal has been sent.

On/Off Button

Press this button to start operation.
Press it again to stop operation.

FAN SPEED Button

Select the fan speed.

Powerful Button

SILENT Button

TEMPERATURE Button

Room temperature setting.
Value will change quicker when you keep pressing.

RESET Button

UP/DOWN Button
Controls the angle of the horizontal air deflector.

Left/Right Button

Precautions for Use

- Do not put the remote controller under direct sunlight and high temperature.
- Do not drop it on the floor, and protect it from water.
- If you press the FUNCTION button during operation, the air conditioner may stop for about 3 minutes for protection before you can start it again.

INFORMATION

Capabilities

CAUTION

Do not use a stove or any other high temperature devices in proximity to the indoor unit.



Cooling and Dehumidifying Capabilities

- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

Refrigerant Information

- For the refrigerant charge information, please refer to the outdoor unit installation manual or specification label.

THE IDEAL WAYS OF OPERATION

Suitable Room Temperature



⚠ Warning

Freezing temperature is bad for health and a waste of electric power.

Ventilation



⚠ Caution

Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.

Effective Usage Of Timer

At night, please use the "OFF or ON timer or SLEEP timer operation mode", together with your wake up time in the morning.

This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



Install curtain or blinds



It is possible to reduce heat entering the room through windows.

Do Not Forget To Clean The Pre-Filter



Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

Please Adjust Suitable Temperature For Baby And Children




Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room

⚠ Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

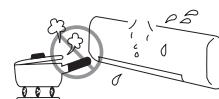

Not Operating For A Long Time

When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 3W in the operation control circuit even if it is in "OFF" mode.



When Lightning Occurs

⚠ Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.



Interference From Electrical Products

⚠ Caution


To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

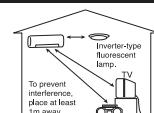

ATTACHING THE AIR PURIFYING FILTERS


1 Open the front panel

- Pull up the front panel by holding it at both sides with both hands.

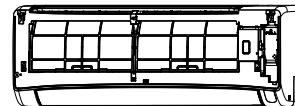


2 Remove the Pre-filter

- Push upward to release the claws and pull out the Pre-filter.

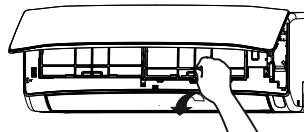



3 Attaching the air purifying filters (Accessories) to the filter frame.

- Attach the air purifying filters to the C-case to the designated position.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used.
- The air purifying filters are not washable. It is recommended to use vacuum to clean. It can be used for 1 year. When you want to renew it, please ask your sales agent.

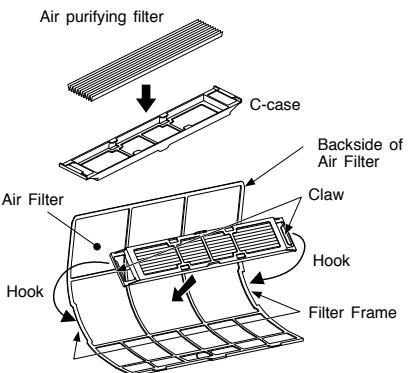

4 Attach the Pre-filters

- Attach the Pre-filters by ensuring that the surface written "FRONT" is facing front.
- After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

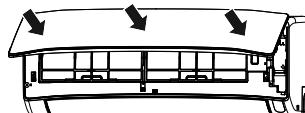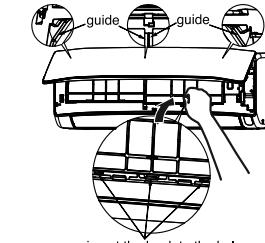

NOTE

- In case of removing the air purifying filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air purifying filters are not washable. It is recommended to use vacuum to clean it. It can be used for 1 year time. Type number for this air purifying filter is <SPX-CFH22PM10VR>. Please use this number for ordering when you want to renew it.
- Do not use detergent on the air purifying filter as some detergent may deteriorate the air purifying filter electrostatic performance.



MAINTENANCE

▲ CAUTION

Before cleaning, stop operation and switch off the power supply.

1. PRE-FILTER

Clean the Pre-filter, as it removes dust inside the room. In case the Pre-filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the Pre-filter following the procedure below.

PROCEDURE

1

- Open the front panel and remove the Pre-filter
• Gently lift and remove the air purifying filters from the air purifying filter frame.




2

- Vacuum dust from the Pre-filter and air purifying filter using vacuum cleaner. If there is too much dust, rinse under running tap water and gently brush it with soft bristle brush. Allow filters to dry in shade.




3

- Re-insert the air purifying filter to the filter frame. Set the Pre-filter with "FRONT" mark facing front, and slot them into the original state.
• After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

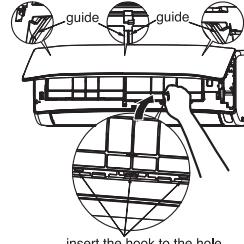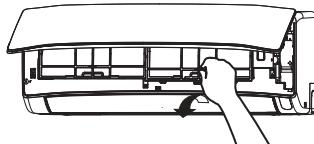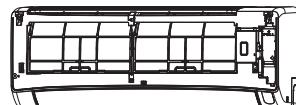

insert the hook to the hole

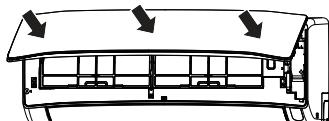


▲ CAUTION

- Do not wash with hot water at more than 40°C. The Pre-filters may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The Pre-filters may shrink.
- Do not use detergent on the Pre-filter as some detergent may deteriorate the Pre-filter electrostatic performance.


2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water.
Wash it with a soft sponge.
After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth.
Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly.
If water remains at indicators or signal receiver of indoor unit,
it causes trouble.

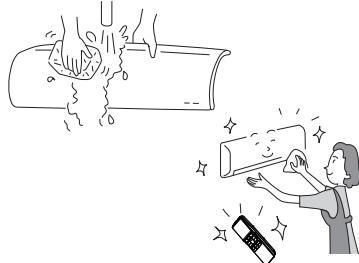


Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel

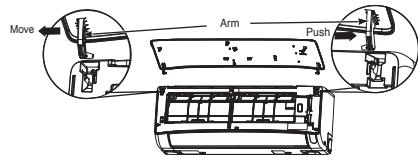

Attaching the Front Panel

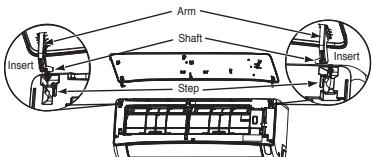

- When the front panel is fully opened with both hands, push the right arm to the outside to release it, and while closing the front panel slightly, pull it out forward.
- Move the projections of the left and right arms into the Flanges in the unit and securely insert them into the holes.

▲ CAUTION

- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



WIRING ARRANGEMENT

▲ CAUTION

- Please use earth line.
Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock
- A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.



IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	:	Earth
Blue	:	Neutral
Brown	:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol (⏚) or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

NOTE

If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/part centers.

▲ CAUTION

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

FROSTWASH OPERATION

FrostWash Operation does not start	<p>It does not wash when outside temperature is less than about 21°C or more than 43°C.</p> <p>When "FrostWash" is done by operating a remote controller, it does not wash when the room temperature is less than about 21°C or more than about 32°C.</p> <p>When 60 minutes after the end of "FrostWash", "FrostWash" is not operated for product protection.</p>
Noise occurred during FrostWash operation	<p>It is the sound that the internal machine is inflated and contracted by the temperature change and the fin of the heat exchanger is frozen and thawed</p>
 (Clean Function Lamp) blinks	<p>Repeat for 1 second on and 1 second off for 10 seconds Because "FrostWash" can not work when operating the "FrostWash" with remote controller.</p> <ul style="list-style-type: none"> ● The air conditioner is operating ● Outside air temperature, room temperature and room humidity are not suitable for "FrostWash" ● It has not been over 60 minutes since the end of "FrostWash" <p>Repeat for 4 seconds on and 1 second off for 15 seconds Because FrostWash has not been done for a long time. → Operate the remote controller to operate "FrostWash".</p>

■ The following phenomena do not indicate unit failure.

Hissing or fizzy sounds	Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.
Squeaking noise	Noise generated when the unit expands or contracts due to temperature changes.
Rustling noise	Noise generated with the indoor unit fan's rpm changing such as operation start times.
Clicking noise	Noise of the motorized valve when the unit is switched on.
Perking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Odors	Caused as the smells and particles of smoke, food, cosmetics, etc. present in room air become attached the unit and blown off into the room again.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

Mold Guard Operation

Mold Guard operation does not start	If the air conditioner has operated in cooling and drying mode, including auto mode, for less than 10 minutes, the Mold Guard operation will not start even if the air conditioner is in off mode. If operation of the air conditioner is stop by OFF Timer or GoodSleep Timer, the Mold Guard will not operate. If ON Timer is set and on time is within about 2 hours, the Mold-Guard will not operate.
During Mold Guard	 (Clean Function Lamp) on the indoor unit lights up during Mold Guard operation. If Mold Guard operation stop at middle point, FrostWash and Filter sign indicator will turn off.
Notes	The horizontal deflector remain open. Room temperature or humidity may rise. Depending on situation, Mold Guard will operate with Fan Mode. When there would be the window near indoor unit, the water might condense on the window during Mold Guard. If necessary, to cancel Mold Guard. When after FrostWash operation, the water inside the indoor unit evaporates and depending on the room conditions, may emitted as steam. But this is not a malfunction. If necessary, to cancel Mold-Guard.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONNEL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

If the unit still fails to operate normally after performing the above inspections, turn the circuit breaker off and contact your sales agent immediately.

Contact your sales agent immediately if the following phenomena should occur

- The circuit breaker switches off or the fuse blows frequently.
- The switch operation is not stable.
- Foreign matter or water accidentally enters the unit interior.
- The power cord gets excessively hot or its insulation is torn or stripped.
- TIMER lamp on the indoor unit display blinks. (As the nature of the failure can be identified by the blinking cycle, check the blinking cycle before turning off the circuit breaker.)



Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent for the model of your unit, serial number, date of installation. Please also inform him regarding the fault.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence. The conditions of the local Power Supply Companies are to be observed.

Note

- Avoid to use the room air conditioner for cooling operation when the outside temperature is below 21°C (70°F). The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Minimum	Maximum
Indoor	Dry bulb °C	21	32
	Wet bulb °C	15	23
Outdoor	Dry bulb °C	21	46
	Wet bulb °C	15	26

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. Remote controller display is dim or blank.)	<ul style="list-style-type: none">• Do the batteries need replacement?• Is the polarity of the inserted batteries correct?
When it does not cool well	<ul style="list-style-type: none">• Is the fuse all right?• Is the voltage extremely high or low?• Is the circuit breaker "ON"?• Is the setting of operation mode different from other indoor units?• Is the pre-filter blocked with dust?• Does sunlight fall directly on the outdoor unit?• Is the air flow of the outdoor unit obstructed?• Are the doors or windows opened, or is there any source of heat in the room?• Is the set temperature suitable?• Are the air inlets or air outlets of indoor and outdoor units blocked?• Is the fan speed "LOW" or "SILENT"?

คู่มือ
การใช้งาน


air Home 400

เครื่องปรับอากาศสำหรับห้อง
แบบแบ็กส์วัน
รุ่น DH




ซึ่งรุ่น
RAK-DH18PCAST/RAC-DH18PCAST
RAK-DH24PCAST/RAC-DH24PCAST

HITACHI

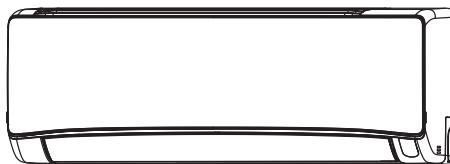

เครื่องภายใน

RAK-DH18PCAST
RAK-DH24PCAST

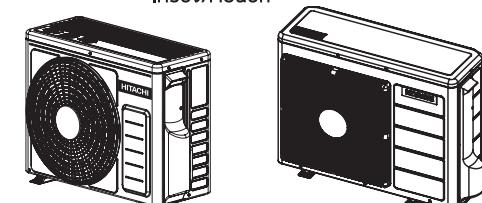

RAC-DH18PCAST

RAC-DH24PCAST



โปรดสแกนคิวอาร์โค้ดนี้ เพื่อดูคู่มือการใช้งาน
ฉบับสมบูรณ์

[https://docs.hitachiaircon.com/
RAK-DH-PCAST-RAC-DH-PCAST](https://docs.hitachiaircon.com/RAK-DH-PCAST-RAC-DH-PCAST)

EN INSTRUCTION MANUAL
TH คู่มือการใช้งาน

Cooling & Heating

<H1167:Ⓐ>

air



ข้อควรระวังเพื่อความปลอดภัย

- โปรดอ่าน “ข้อควรระวังเพื่อความปลอดภัย” โดยละเอียดก่อนการใช้งานเครื่องซึ่งรวมถึงวิธีการใช้งานเครื่องซึ่งบังคับต้อง
 - โปรดอ่านเงื่อนไขพิเศษกับสัญลักษณ์ “▲ คำเตือน” และ “▲ ข้อควรระวัง” ล่วง “คำเตือน” ประกอบด้วยเพื่อการใช้งานที่หากไม่ปฏิบัติตามอย่างเคร่งครัดหรืออาจเป็นสาเหตุให้เกิดอันตรายได้รับมาตรฐานแรงได้ ส่วน “ข้อควรระวัง” ประกอบด้วยเพื่อการใช้งานที่หากไม่ปฏิบัติตามอย่างเหมาะสมอาจเป็นสาเหตุให้เกิดผลลัพธ์แย่ลงได้ โปรดปฏิบัติตามคำแนะนำนี้อย่างเคร่งครัดเพื่อความปลอดภัย
 - สัญลักษณ์ด้านล่าง แสดงความหมายดังนี้

<input checked="" type="checkbox"/> ตรวจสอบให้แน่ใจว่ามีการซื้อต่อส่วนตัว	<input checked="" type="checkbox"/> สัญลักษณ์ในรูปแสดงถึงข้อห้ามค้าง
<input checked="" type="checkbox"/> แสดงถึงคำแนะนำที่ต้องปฏิบัติตาม	

 คำเตือน	สัญลักษณ์นี้แสดงความอุปกรณ์ที่ใช้สำหรับความเย็นที่ติดไฟได้ หากสารทำความเย็นรั่ว อาจเกิดการระเบิดได้หากมีแหล่งจุดประกาย nok
 ข้อควรระวัง	สัญลักษณ์นี้แสดงความค้านแย้งนาในการใช้งานโดยละเอียด
 ข้อควรระวัง	สัญลักษณ์นี้แสดงความถ่วงบริการควรดัดกับกบอุปกรณ์นี้โดยอ้างอิงข้อมูลในคู่มือการติดตั้ง
 ข้อควรระวัง	สัญลักษณ์นี้แสดงความข้อห้ามอยู่ในคู่มือการใช้งานและ/หรือคู่มือการติดตั้ง

- #### ● โปรดเก็บค่ามือนิ่วไว้หลังจากการอ่าน

អ៊ូគារនៃវង្វេរវង់ទាំងទីបិត្ត

ข้อควรระวังระหว่างการเปลี่ยนเครื่องหรือบำรุงรักษา

ค่าเตือน

- หากมีสถานการณ์ไฟไม่ปกติเกิดขึ้น (เป็น กลิ่นไหน) โปรดหยุดการทำงานของเครื่องและปิดตัวเครื่องไว้ ติดต่อศูนย์บริการของคุณ อาจทำให้เกิดการชำรุดเสียหาย หรือเสี่ยงไฟไหม้ หากคุณยังคงใช้งาน แม้จะรับรู้ว่าอาการภัยในสถานการณ์ไม่ปกติดีๆ ไป
- โปรดติดต่อศูนย์บริการของคุณสำหรับการรักษา การบำรุงรักษาด้วยตนเองที่ไม่เหมาะสม อาจทำให้เกิดไฟฟ้าช็อตและเพลิงไหม้
- โปรดติดต่อศูนย์บริการของคุณสำหรับการรักษา การบำรุงรักษาด้วยตนเองที่ไม่เหมาะสม อาจทำให้ไฟฟ้าช็อตและเพลิงไหม้ หากคุณรีบอ่อนและติดต่อวงศ์รัชท์วิภาวดีรังสิตด่วนและขอเวลาอย่างน้อย 24 ชั่วโมง
- หากสามารถไฟฟ้ารัชท์ ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับมาตรฐานยังบริการ/อุปกรณ์ที่ได้รับอนุญาตเท่านั้น
- หากเครื่องเริ่มร้อนจากความร้อนที่ไม่ได้ถูกห้องที่ต้องการทารุณเย็น เช่น โปรดติดต่อศูนย์บริการของคุณ ก็จะทำให้ความเสี่ยงที่ไข้ในเครื่องปรับอากาศไม่เป็นอันตราย แต่หากกําหนดความเย็นรุ่นเข้ามาในห้อง จะทำให้เกิดสารที่เป็นอันตรายเมื่อสัมผัส สกปรกกับผิวหนัง เช่น เม็ดกริตตี้ที่กําหนดความเย็นรุ่นเข้ามาในห้อง ให้ห้องโดยไฟฟ้าเครื่องปรับอากาศทันที เปิดหน้ากากเพื่อรักษาความสะอาด และติดต่อศูนย์บริการของคุณ

ข้อควรระวังในการใช้งาน

ค่าเตือน

- เพื่อสุขภาพของคุณ ควรหลีกเลี่ยงการรับลมโดยตรงเป็นระยะเวลาหนาน
-  **ห้ามเหยียบปู** หอนไม่นิ่นหรือดูถูกอื่นๆ เข้าไปในช่องระบบภูมิคุ้มกัน เช่น จมูกน้ำทึบ จมูกอื้อ ให้แก้ไขด้วยการพักผ่อน ดื่มน้ำ หรือรับประทานยาที่แพทย์แนะนำ
-  **ห้ามใช้ตัวนาไฟฟ้าได้** แทนสายพาวเวอร์ ก่อให้เกิดอุบัติเหตุร้ายแรงถึงขั้นเสียชีวิต
-  **ในขณะที่มีพายุฝนฟ้าคะนอง ให้สตัดการเชื่อมต่อและปิดส่วนควบคุม**
- ไม่ควรทางกระเบื้องสเปรย์แล้วกดไฟก้านๆ ภายในระยะ 1 เมตรจากช่องลมออกของทิ้งเครื่อง ปล่อยควันชาไฟได้แรงหนักภายในช่องลมสเปรย์เพิ่มขึ้นจนอาจระเบิดได้

ข้อควรระวังระหว่างการใช้งาน


- ควรใช้งานผลิตภัณฑ์ภายใต้ข้อกำหนดของผู้ผลิต และต้องไม่ใช้งานเพื่อจุดประสงค์อื่นๆ



- ห้ามใช้งานเครื่องปรับอากาศขณะมือปิยก การทำเช่นนี้อาจก่อให้เกิดอุบัติเหตุร้ายแรง ถึงชีวิต




- อย่าให้ล้มเย็นที่ออกอากาศเพื่อปรับอากาศหันเข้าหาอุปกรณ์ท่าความร้อน ในครัวเรือน เนื่องจากอาจส่งผลกระทบต่อการทำงานของอุปกรณ์นั้นๆ ได้ เช่น กัดมน้ำด้วยไฟฟ้า เดาอบ เป็นต้น

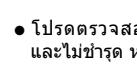

- โปรดตรวจสอบให้แน่ใจว่าโครงของชาติภายนอกมีความมั่นคง ไม่ยืนเบี้ยว และไม่ชำรุด หากไม่เป็นดังนี้ ตัวเครื่องภายนอกอาจล้มและทำให้เกิดอันตรายได้



- อย่าสักน้ำหรือฉีดน้ำใส่ตัวเครื่องปรับอากาศโดยตรง เมื่อทำความสะอาด เนื่องจากอาจทำให้เกิดไฟฟ้าลัดวงจร

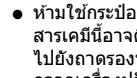

- ห้ามใช้กระป๋องน้ำหรือสเปรย์น้ำในลักษณะใดก็ตามที่สเปรย์น้ำสเปรย์น้ำลงบนตัวเครื่องปรับอากาศในห้อง สารเคมีน้ำอาจติดบนตัวเครื่องและปิดกั้นทางระบายของน้ำที่จะหายไปบังคับร่องน้ำทึบ น้ำจะหยดลงบนพัดลมกรรราชะและทำให้น้ำกระเด็นออกจากการเครื่องปรับอากาศภายในห้อง




- โปรดปิดสวิตช์ตัวเครื่องและปิดตัวตัวควบคุมระหว่างการทำความสะอาด พัดลมความเร็วสูงภายในตัวเครื่องอาจทำให้เกิดอันตรายได้



- ปิดตัวตัวควบคุม หากไม่มีการใช้งานเครื่องปรับอากาศเป็นระยะเวลานาน



- ห้ามเป็นตัวเครื่องภายนอกอาคาร หรือวางสิ่งของไว้ด้านบนตัวเครื่อง

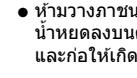

- ห้ามวางภาชนะใส่น้ำ (เช่น แจกัน) บนตัวเครื่องภายนอกอาคารเพื่อหลีกเลี่ยงไม่ให้น้ำหยดลงบนตัวเครื่อง น้ำที่หยดลงบนเครื่องอาจทำให้จนวนภายในเครื่องชำรุด และก่อให้เกิดไฟฟ้าลัดวงจร



- ห้ามวางต้นไม้ไว้ติดทางลมโดยตรง เนื่องจากอาจเป็นอันตรายต่อต้นไม้ได้




- เมื่อใช้งานเครื่องปรับอากาศโดยที่เปิดประตูและหน้าต่างทิ้งไว้ (ความชื้นภายในห้องจะสูงกว่า 80% ตลอดเวลา) และโดยที่แผ่นเนื้นทางลมคำว่าม้วน หรือเคลื่อนที่โดยอัตโนมัติเป็นระยะเวลานาน น้ำจะควบแน่นบนแผ่นเนื้นทางลมและขยายตัวเป็นครั้งคราว ซึ่งจะทำให้เฟอร์นิเจอร์ของคุณเปียกชื้น ดังนั้น อย่าใช้งานเครื่องภายนอกเวลานาน

- หากปริมาณความชื้นในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่อง (ดูอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความชื้น เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ล่วงหน้า


- เครื่องใช้ไฟฟ้าที่ไม่มีเจดนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ต้องความสามารถทางร่างกายทางประสาทสัมผัสหรือจิตใจ หรือขาดประสาทสัมผัสร้ายแรง แล้วแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น

ชื่อและฟังก์ชันของแต่ละส่วน

ตัวเครื่องปรับอากาศ

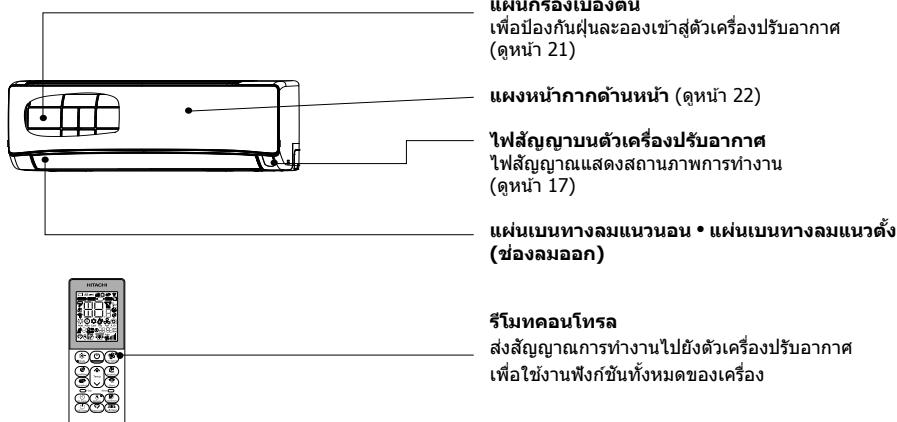

ตัวเครื่องภายนอกอาคาร

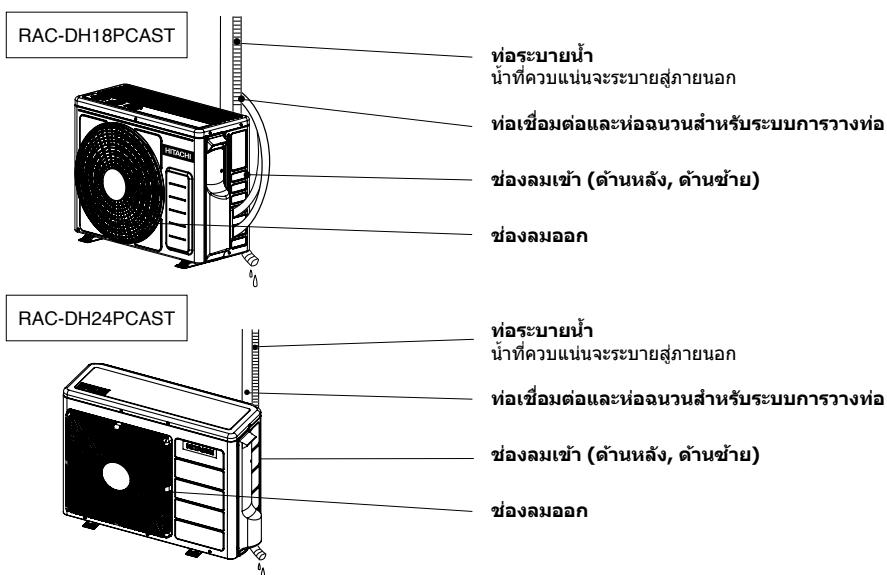


ชื่อรุ่นและขนาด

รุ่น	ความกว้าง (มม.)	ความสูง (มม.)	ความหนา (มม.)
RAK-DH18PCAST, RAK-DH24PCAST	950	294	235
RAC-DH18PCAST	658	530	275
RAC-DH24PCAST	850	650	298

ชื่อและหน้าที่ของแต่ละชิ้นส่วน

สัญลักษณ์แสดงตัวเครื่องภายใน

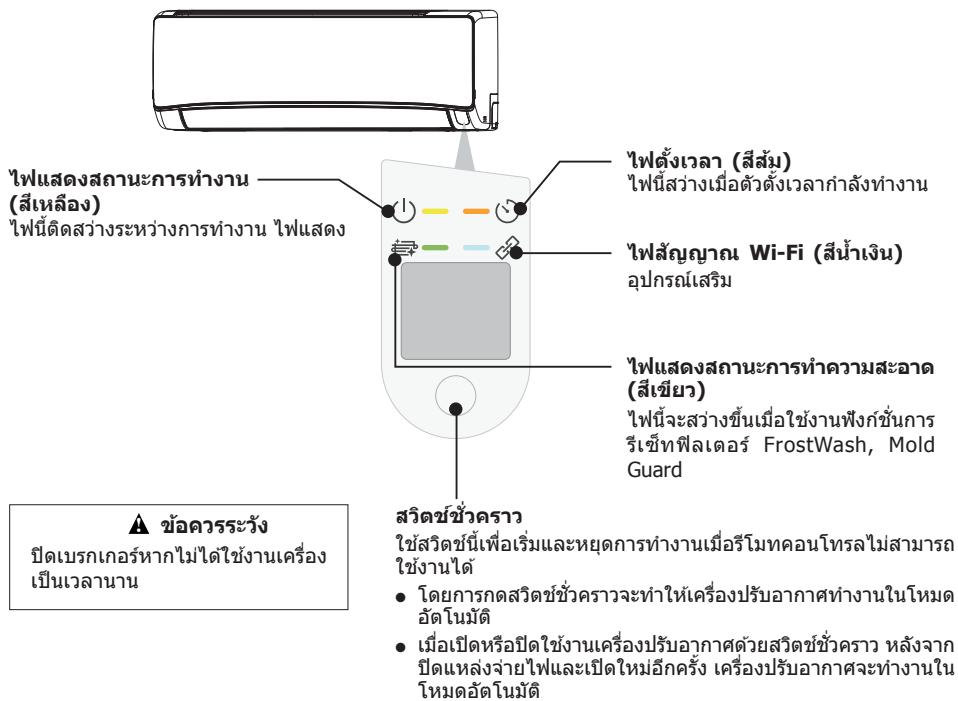

☆ หากเปิดแหล่งจ่ายไฟแต่ไม่ได้ใช้งานเครื่องปรับอากาศ วงจรควบคุมจะทำให้สัมภาระทำงานเล็กน้อย สามารถประยุกต์แหล่งจ่ายไฟได้โดยการปิดแหล่งจ่ายไฟ (หรือเบรกเกอร์จะเรียกว่าไฟจากตัวเครื่องภายนอก)

ชื่อและฟังก์ชันของรีโมตคอนโทรล

■ รีโมตคอนโทรลนี้ใช้ควบคุมการทำงานและการตั้งเวลาของเครื่องปรับอากาศในห้อง รีโมตคอนโทรลมีระยะเวลาการทำงาน 7 แม่ตระ จำกัดครึ่งในอาคาร หากมีการใช้แสงภายในอาคาร ระยะอาจสั้นกว่านี้

สัญลักษณ์โน้มดปิด

ปุ่มเลือกโหมด

ใช้ปุ่มนี้เพื่อเลือกโหมดการทำงาน ทุกครั้งที่คุณกดปุ่มนี้ โน้มจะเปลี่ยนจาก

Cool (ทำความเย็น) → Dry
(ลดความชื้น) → Fan (พัดลม) →
A.Cir (หมุนเรียบอากาศ) หมุนวนกันไป

ปุ่ม GoodSleep

ปุ่มละลาน้ำเงิน

ปุ่มรีเซ็ตสัญลักษณ์แผ่นกรอง


ปุ่มรีเฟรช

ปุ่มตั้งเวลาปิดเครื่อง

ปุ่มตั้งเวลาปิดเครื่อง

ปุ่มประหนัดพลังงาน

การส่งสัญญาณ

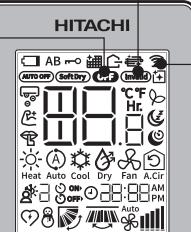

สัญลักษณ์การทำงานไม่ถูกต้อง แสดงเมื่อการตั้งค่าหรือการทำงานไม่ถูกต้อง

สัญลักษณ์การส่งสัญญาณ สัญลักษณ์การส่งสัญญาณจะหาย เมื่อมีการส่งสัญญาณ

ปุ่มเปิด/ปิด

กดปุ่มนี้เพื่อเริ่มการทำงาน กดอีกครั้งเพื่อหยุดการทำงาน

ปุ่มความเร็วพัดลม

เลือกความเร็วพัดลม

ปุ่มการทำงานเต็มประสิทธิภาพ

ปุ่มเย็น

ปุ่มอุ่นหรูมี

การตั้งค่าอุณหภูมิห้อง เมื่อคุณกด ค้างไว้ ค้างไว้ ค้างไว้เปลี่ยนเรื่องซึ่น

ปุ่มรีเซ็ต

ปุ่มขึ้น/ลง ควบคุมองศาของแผ่นเบนท่างลง แนวโน้ม

ปุ่มข้ายาก

ข้อควรระวังเมื่อตั้งในการใช้งาน

- อย่าวางรีโมตคอนโทรลให้โดนแสงแดดโดยตรงและมีอุณหภูมิสูง
- อย่าทิ้งกันไว้ให้เปียกน้ำ
- หากคุณกดปุ่มฟังก์ชันระหว่างการทำงาน เครื่องปรับอากาศอาจหยุดการทำงานประมาณ 3 นาทีเพื่อเป็นการป้องกัน ก่อนที่คุณจะสามารถเริ่มต้นได้อีกครั้ง

ข้อมูล

ความสามารถ

ข้อควรระวัง
อย่าใช้เดาหรืออุปกรณ์ที่มีอุณหภูมิสูงอื่นๆ ใกล้กับตัว เครื่องภายใน



ความสามารถในการทำความเย็นและลดความชื้น

- หากความร้อนในห้องมีมากกว่าความสามารถในการ ห้ามความเย็นของเครื่องปรับอากาศ (เช่น หากมีคนจำนวนมาก มากอยู่ในห้องหรือใช้เครื่องทำความร้อนอื่นๆ) อุณหภูมิ ภายในห้องอาจจะไม่ถึงอุณหภูมิที่ตั้งไว้

ข้อมูลสารทำความสะอาด

- สำหรับข้อมูลการเติมสารทำความสะอาด โปรดดูคู่มือการติดตั้ง เครื่องภายในนอกหรือลากข้อมูลจำเพาะ

วิธีการใช้งานที่ถูกต้อง

อุณหภูมิห้องที่เหมาะสม



คำเตือน

อุณหภูมิเย็นจัดน้ำไม่ดีต่อสุขภาพ และเสียพลังงานไฟฟ้าโดยใช้เหตุ

การระบายอากาศ



ข้อควรระวัง


อย่าปิดห้องเป็นเวลานาน ให้เปิดประตูและหน้าต่างเป็นครั้งคราวเพื่อให้อากาศถ่ายเทเข้ามาในห้อง

การใช้งานตัวตั้งเวลาอย่างมีประสิทธิภาพ

ในตอนกลางคืน โปรดใช้ "โหมดการทำงานของตัวตั้งเวลาปิดปิด" หรือตัวตั้งเวลาบนหน้าจอ "ให้สอดคล้องกับเวลาเด่นของคุณในแต่ละชั่วโมง" การตั้งเวลาจะช่วยให้คุณผ่อนคลายไปกับอุณหภูมิห้องที่แสนสบาย โปรดใช้ตัวตั้งเวลาให้เป็นประโยชน์



ติดตั้งผ้าม่านหรือม่านบังตา

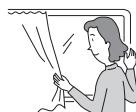

อย่าลืมล้างแผ่นกรองเบื้องต้น



แผ่นกรองอากาศที่มีฝุ่นรบกวนจะลดความแรงของลมและประสิทธิภาพการท่าความเย็น เพื่อป้องกันไม่ให้เส้นเปลืองพลังงานไฟฟ้า โปรดทำความสะอาดแผ่นกรองทุกๆ 2 สัปดาห์

โปรดปรับอุณหภูมิให้เหมาะสม กับเด็กเล็กและเด็กโต



โปรดให้ความสำคัญกับอุณหภูมิห้องและที่ศพหากาดในห้องของอากาศเมื่อใช้งานเครื่องปรับอากาศสำหรับเด็กเล็ก เด็กโต และผู้สูงอายุที่เคลื่อนไหวไม่สะดวก

ข้อมูลสำหรับผู้ใช้

เครื่องปรับอากาศและแหล่งความร้อนภายในห้อง

ข้อควรระวัง

หากปรับอุณหภูมิห้องในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่องปรับอากาศ (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ลงหน้า



ไม่ได้ใช้งานเป็นเวลานาน

เมื่อไม่ได้ใช้งานเครื่องปรับอากาศเป็นเวลานาน โปรดปิดสวิตซ์จากแหล่งจ่ายไฟหลัก หากยัง "ปิด" แหล่งจ่ายไฟหลักอยู่ 3 วัตต์ในวงจรควบคุมการทำงาน แม้ว่าเครื่องจะอยู่ในโหมด "ปิด" แล้วก็ตาม



เมื่อเกิดไฟไหม้

คำเตือน

เพื่อป้องกันไม่ให้เครื่องเสียหายในระหว่างไฟไหม้ โปรดหยุดใช้งานตัวเครื่องและดับไฟลอกออกจากเด็กเสีย



คลื่นรบกวนจากเครื่องใช้ไฟฟ้า


ข้อควรระวัง

เพื่อลดเสียงเสียงแทรกบกวน โปรดติดตั้งเครื่องปรับอากาศและวางรีโมทคอนโทรลให้ห่างจากเครื่องใช้ไฟฟ้าอย่างน้อย 1 เมตร




การใช้แผ่นกรองสำหรับฟอกอากาศในบริสุทธิ์

- 1** เปิดແພດ້ານໜ້າ
● ຍກແພດ້ານໜ້າຂຶ້ນໂດຍການໃຫ້ທັງສອງມືອຈັນທັງສອງຜົ່ງ

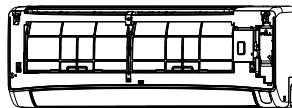


- 2** ตอนแผ่นกรองเมืองต้นอุอก
● ต้นขึ้นเพื่อปลดล็อค แล้วดึงแผ่นกรองเมืองต้นอุอกมา

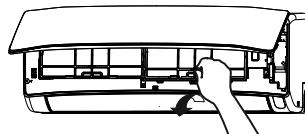

- 3** การติดແຜນຟອກວາກສ (ອຸປະກຣເສຣີມ) ເຂົ້າກັນ
ກອບຂອງແຜນກອງວາກສ

 - ຕິດແຜນຟອກວາກສເຫັນກັບຂອງຮູບຕົວ C ໃນຕ່າແທນທີ່
ກໍາທັດ
 - ຄວາມສາມາດໃນກາරທ່າຄວາມເຢືນຈະລົດລົງລົກນ້ອຍ
ແລະຄວາມເວົ້າໃນກາրທ່າຄວາມເຢືນຈະໜ້າງເນື່ອໃຫ້ແຜນ
ຟອກວາກສ
 - ແຜນຟອກວາກສໄມ້ສາມາດຮັດງານທ່າຄວາມສະວັດໄດ້
ຂອງແນວໃຫ້ໃຫ້ຊື່ເຈັ້ງດູດິນໃນການທ່າຄວາມສະວັດ
ແຜນຟອກວາກສນີ້ມີຢາງໃໝ່ໄດ້ 1 ປີ ເນື້ອດຸ
ຕ່ອງການໃໝ່ງານແຜນຟອກວາກສທີ່ລົງຈາກ 1 ປີ ໂປຣ
ສອນຄວາມຕ້າວເຫັນຂາຍຂອງຄົມ


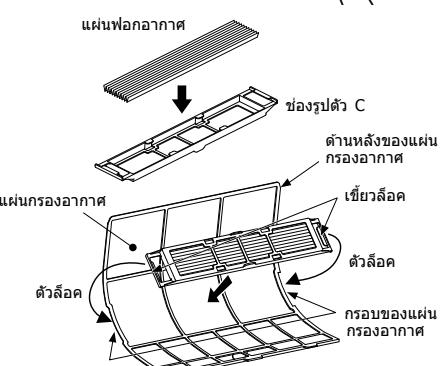


อย่างแพร่กระจายทั่วโลก อาทิ
ให้มีสิทธิ์ เก็บเงินจากอาชญากรรม
ของผู้ต้องหาได้



- 4 ใส่ແຜ່ນກຮອງເນື້ອງດັນ

 - ໃສ່ແຜ່ນກຮອງເນື້ອງດັນໂດຍຈະຈຸໃຫ້ແນ່ໃຈວ່າທ່ານຢູ່
ເຢືນວ່າ “FRONT” ຊື້ນ
 - ນັ້ນຈະໄສ່ແຜ່ນກຮອງເນື້ອງດັນແລ້ວ ໄກສັດແຜ່ງໜ້າກາກ
ດັນໜ້າທີ່ຕໍ່າແທນເລຸກສອນທັງສນາວັນ ດາມທີ່ແສດງໃນກາພ
ແລ້ວປຶກແຜ່ງໜ້າກາກດັນໜ້າ

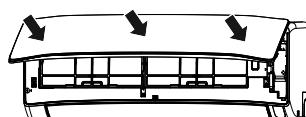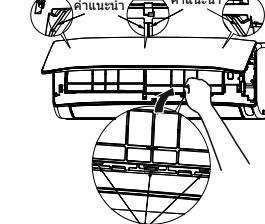

ໜ້າຍເຫດ

- กรณีที่ออกผลการสำรวจสำหรับฟอกอากาศให้บริสุทธิ์ โปรดท่าตามขั้นตอนด้านบน
 - ความสามารถในการท่าความเย็นจะลดลงเล็กน้อย และความเร็วในการท่าความเย็นจะช้าลง เมื่อมีการใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ ดังนั้น ในตั้งค่าความเร็วพัดลมไว้ที่ "HIGH" (สูง) ในกรณีที่ใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์
 - หัวแม่เหล็กเน้นกรองสำหรับฟอกอากาศให้บริสุทธิ์ ขอแนะนำให้ใช้เครื่องดัดผุนในการท่าค่า สะอาด อาจใช้งานได้ถึง 1 ปี หากยังใช้รุ่นของแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ซึ่ง <SPX-CFH22PM10VR> โปรดใช้หมายเลขอื่นสำหรับรุ่นล่าชี้มือต่อรองการเปลี่ยนใหม่
 - อย่าใช้น้ำยาท่าความสะอาดบนแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ เนื่องจากน้ำยาทำความสะอาดบางชนิดอาจทำให้ประสิทธิภาพในการยึดหยุ่นของแผ่นกรองเสื่อมสภาพ



การบำรุงรักษา

⚠ ข้อควรระวัง

ก่อนการทำความสะอาด ควรหยุดการทำงานของเครื่องและปิดสวิตช์แหล่งจ่ายไฟ


1. แผ่นกรองเบื้องต้น ■■■

ทำความสะอาดแผ่นกรองเบื้องต้น เนื่องจากจะช่วยลดฝุ่นภายในห้อง ในการซื้อที่มีฝุ่นรบกวนทั่วทั้งแผ่นกรองเบื้องต้น การให้แหล่งจ่ายลมจะลดลง และประสิทธิภาพในการทำความเย็นจะลดต่ำลง นอกจากนี้ อาจเกิดเสียงดัง อย่างลึมทำความสะอาดแผ่นกรองเบื้องต้นโดยท่าตามขั้นตอนด้านล่าง

ขั้นตอน


1

- เปิดแผ่นหน้ากากด้านหน้าและถอดแผ่นกรองเบื้องต้นออก
- ค่อยๆ ยกและถอดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ จากกรอบแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

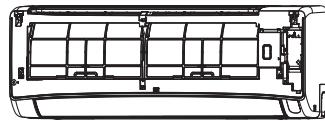



2

- ดูฝุ่นจากเครื่องกรองเบื้องต้นและเครื่องกรองประป้ำอากาศ ใช้เครื่องดูดฝุ่นหากมีฝุ่นจำนวนมาก ล้างกรองเบื้องต้นด้วยน้ำที่เปิดให้ผ่านและค่อยๆ ถูด้วยเบรริงน้ำ น้ำ แล้วปล่อยให้แห้ง

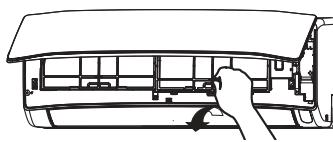

3

- ใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์กลับเข้าไป ในกรอบแผ่นกรองใหม่ หงายแผ่นกรองเบื้องต้นด้านที่มีคำว่า "FRONT" ขึ้น และสอดเข้าไปยังตำแหน่งเดิม
- หลังจากใส่แผ่นกรองเบื้องต้นแล้ว ให้กดแผ่นหน้ากากด้านหน้าที่ตำแหน่งลูกศรทั้งสามส่วน ตามที่แสดงในภาพ และปิดแผ่นหน้ากากด้านหน้า

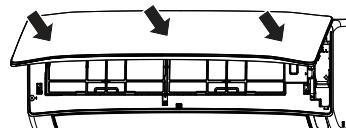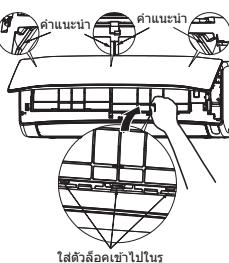

⚠ ข้อควรระวัง


- ห้ามล้างด้วยน้ำร้อนที่มีอุณหภูมิมากกว่า 40°C เพราะแผ่นกรองเบื้องต้นอาจหลอมได้
- เมื่อล้างทำความสะอาด ให้สะบัดความชื้นออกให้หมด และตากให้แห้งในที่ร่ม อย่าหากไว้กลางแดดโดยตรง แผ่นกรองเบื้องต้นอาจหดตัว
- อย่าใช้น้ำยาทำความสะอาดบนแผ่นกรองเบื้องต้น เนื่องจากน้ำยาทำความสะอาดบางชนิดอาจทำให้ประสิทธิภาพในการยึดเหนี่ยนของแผ่นกรองเบื้องต้นเสื่อมสภาพ




2. การทำความสะอาดแผงด้านหน้า

- ถอดแผงหน้ากากด้านหน้าออก และล้างด้วยน้ำสะอาด หลังจากใช้น้ำยาทำความสะอาดแบบเป็นกลางแล้ว ต้องล้างออกให้หมดด้วยน้ำสะอาด
- เมื่อไม่ถอดฝาหน้า ให้เช็ดด้วยผ้าแห้งๆ บุ่มๆ เช็ดริมท่อนโทรศัพท์ให้หัวด้วยผ้าแห้งๆ บุ่มๆ
- เช็ดน้ำออกให้ทั่ว หากมีน้ำล่วงเหลืออยู่ที่ไฟสัญญาณหรือรัวรับสัญญาณของเครื่องปรับอากาศ อาจทำให้เกิดปัญหาได้


วิธีการถอดแผงหน้ากากด้านหน้าออก
อย่าลืมใช้หัตถกรรมเมื่อจับเพื่อถอดและใส่แผงหน้ากากด้านหน้า

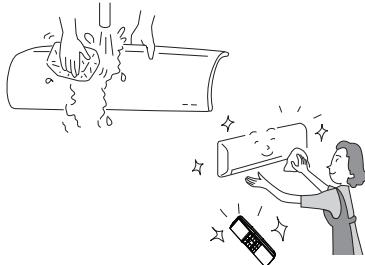

การถอดแผงหน้ากากด้านหน้าออก

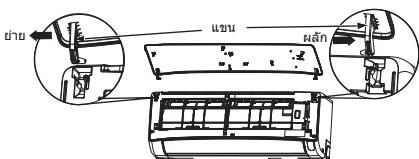

การใส่แผงหน้ากากด้านหน้า

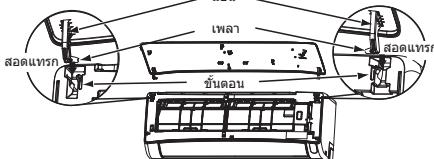

- เมื่อเปิดแผงด้านหน้าจนสุดด้วยมือทั้งสองข้าง ให้เดินแขนข้าวอกไปด้านนอกเพื่อปลดล็อก และขณะปิดแผงด้านหน้าให้เดินออกไปข้างหน้า

- ย้ายส่วนที่ยืน nokma ของแขนยืดด้านซ้ายและขวาไปยังขอบของตัวเครื่อง และใส่ลงในรูอย่างระมัดระวัง

การจัดเตรียมสายไฟ

▲ ข้อควรระวัง

- โปรดใช้สายเดิน
ห้ามติดตั้งสายเดินไว้ใกล้กับท่อน้ำหรือท่อแก๊ส สายล่อฟ้า หรือสายเดินของโทรศัพท์ การติดตั้งสายเดินที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต
- ควรติดตั้งด้วยจรวดคีย์ชิ้นยึดสถานที่ติดตั้งเครื่องปรับอากาศ หากไม่มีตัวติดตั้ง จะอาจเกิดอันตรายจากไฟฟ้าช็อตได้



ข้อสำคัญ

สายไฟในสายไฟน้ำจะมีลักษณะที่สั่งตรงไปนี้:

เขียวและเหลือง : สายเดิน
น้ำเงิน : สายสัมภาระ
น้ำขาว : สายที่มีไฟ

เนื่องจากสีของสายไฟในสายไฟน้ำของเครื่องปรับอากาศอาจไม่ตรงกับเครื่องหมายสีที่ระบุขึ้นปลายสายไฟในปลั๊กของคุณ โปรดดำเนินการตั้งนี้:

สายที่มีสีเขียวและเหลืองต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัววักรช E หรือสัญลักษณ์สายเดิน หรือสีเขียว หรือสีเขียวและเหลือง

สายที่มีสีน้ำเงินต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัววักรช N หรือสัญลักษณ์สายเดินสีน้ำเงิน หรือสีดำ

สายที่มีสีขาวต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัววักรช L หรือสัญลักษณ์สายเดินสีขาว

หมายเหตุ

หากสายไฟชำรุด ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับจากศูนย์บริการ/อะไหล่ที่ได้รับอนุญาตเท่านั้น

▲ ข้อควรระวัง

ต้องทำความสะอาดและบำรุงรักษาเครื่องโดยผู้ให้บริการที่มีความเชี่ยวชาญเท่านั้น ก่อนการทำความสะอาด
ควรหยุดการทำงานของเครื่องและปิดสวิตช์แหล่งจ่ายไฟ





การทำงานในโหมดล้างแฝงค่อยล์เย็น

ระบบ FrostWash ไม่เริ่มทำงาน	ดำเนินทำงานในขณะที่อุณหภูมิภายนอกน้อยกว่า 21 °C หรือมากกว่า 43 °C หาก FrostWash ทำงานเสร็จสิ้นโดยการล้างงานจาก蕊โนทคอนโทรล ระบบจะไม่ทำงานในขณะที่อุณหภูมิภายนอกน้อยกว่า 21 °C หรือมากกว่า 32 °C
	ระบบ FrostWash จะไม่สามารถทำงานข้ามเวลา 60 นาที หลังจากเสร็จสิ้นกระบวนการ Frostwash เพื่อเป็นการป้องกันความเสียหาย
เสียงรบกวนเกิดขึ้นระหว่างการทำงานของ FrostWash	เป็นเสียงที่เกิดจากกระบวนการเปลี่ยนแปลงของอุณหภูมิและเครื่องของการเปลี่ยนแปลงของอุณหภูมิและเสียงที่เกิดจากความต้านทานต่อการเปลี่ยนแปลงของอุณหภูมิ
ไฟแสดงสถานการณ์ความสะอาดกระพริบ	<p>ไฟดับเป็นเวลา 1 วินาทีและตั้ง 1 วินาที เป็นเวลา 10 วินาทีที่เริ่มจาก "FrostWash" ในสมาร์ททาวน์ ด้วย蕊โนทคอนโทรล</p> <ul style="list-style-type: none"> ● เครื่องปรับน้ำยาศักดาล้างทำงาน ● อุณหภูมิภายนอก อุณหภูมิห้อง และความชื้นในห้องไม่เหมาะสมกับการทำงาน "FrostWash" ● ผ่านไปไม่นานกว่า 60 นาทีนับแต่ "FrostWash" สิ้นสุดการทำงาน <p>ไฟดับเป็นเวลา 4 วินาทีและตั้ง 1 วินาทีเป็นเวลา 15 วินาทีที่เริ่มจาก蕊โนทคอนโทรลเพื่อใช้งาน FrostWash เป็นเวลานาน → ให้蕊โนทคอนโทรลเพิ่มเติมในฟังก์ชัน "FrostWash"</p>

■ สถานการณ์ต่อไปนี้ไม่ได้บ่งชี้ถึงข้อผิดพลาดของเครื่องปรับอากาศ

เสียงพุทธหรือเสียงชา	เสียงการไหลของสารทำความเย็นในท่อหรือเสียงวัวที่เกิดขึ้นเมื่อมีการปรับอุณหภูมิ
เสียงเบียดอ้าด	เสียงรบกวนที่เกิดขึ้นเมื่อเครื่องขยายเสียงหรือตัวเรือนจากการเปลี่ยนแปลงของอุณหภูมิ
เสียงกรอบแกรบ	เสียงรบกวนที่เกิดจาก การเปลี่ยนแปลงรอบของพัดลมเครื่องภายใน เช่น เวลาเริ่มต้นการทำงาน
เสียงคลิก	เสียงของมอเตอร์เมื่อเริ่มเปิดเครื่อง
เสียงดดล้ม	เสียงการดัดอากาศในห้องน้ำทั้งและเป้าอุกกาดความชื้นที่สะสมอยู่ในคาดน้ำทึบ รายล้อมอุบัติเด่นเด่น โปรดติดต่อตัวแทนขายของคุณ
เสียงเปลี่ยนการทำงาน	เสียงรบกวนจากการเปลี่ยนสถานะการทำงานที่อาจมาจากเบรคชั่นของพวงกุญแจท่อง
การปล่อยหมอก	หมอกออกตัวขึ้นเมื่ออากาศภายในห้องเย็นลงอย่างมากทันท่วงที่เครื่องปรับอากาศ
กลิ่น	เกิดจากกลิ่นและอนุภาคของควันอาหาร เครื่องสำอางฯลฯ ที่มีอยู่ในห้องถูกดูดเข้าไปในเครื่องปรับอากาศและถูกปักกลิ่นเข้าไปในห้องอีกด้วย
อุณหภูมิภายนอกห้องจึงจะลดลง	อุณหภูมิท่องเที่ยวกับอุณหภูมิภายนอกห้องจึงจะลดลง

การใช้งานฟังก์ชันป้องกันเชื้อรา


ฟังก์ชันป้องกันเชื้อราในทำงาน	ดำเนินทำงานในรากาศการทำงานในโหมด Cooling Dry หรือ Auto เมื่อเวลาไม่เกิน 10 นาที ฟังก์ชันป้องกันเชื้อราจะไม่สามารถทำงานได้เมื่อเวลาที่เหลือต่อเนื่องต่อไปในโหมด off ดำเนินทำงานในรากาศการทำงานโดย OFF Timer หรือ GoodSleep Timer ฟังก์ชันป้องกันเชื้อราจะไม่ทำงาน ดำเนินการทำงานโดย ON Timer ถูกตั้งไว้และได้ทำการปิดเครื่องฟังก์ชันป้องกันเชื้อราจะไม่ทำงาน
ขณะทำงานฟังก์ชันป้องกันเชื้อรา	ไฟแสดงสถานะ "Clean" ที่เครื่องหมายในขณะที่ฟังก์ชันป้องกันเชื้อราทำงาน หากฟังก์ชันป้องกันเชื้อราไม่ทำงาน ดำเนินการทำงานโดย FrostWash และ Filter จะดับลง
หมายเหตุ	หากส่วนบนของน้ำยาที่ใส่ลงมาถูกอุณหภูมิที่อุ่นหรือความชื้นของอากาศเพิ่มสูงขึ้นแล้วแต่สถานการณ์ การนำร้อนกันเชื้อราจะทำงานภายใต้ความร้อน Fan หากภายในห้องมีน้ำตาลอุ่นอยู่ใกล้กับเครื่องภายใน อาจมีปัญหาอุ่นมาก หากจานเป็นไฟยกเลิกฟังก์ชันป้องกันเชื้อรา หลังจากการทำงาน FrostWash สิ้นสุดลง น้ำยาจะแห้งอุ่นขึ้นและสภาวะห้องอาจทำให้เกิดไขมันได้และไม่สามารถใช้ได้อีกต่อไป หากจานเป็นไฟยกเลิกฟังก์ชันป้องกันเชื้อรา

การตรวจสอบอย่างสม่ำเสมอ

โปรดตรวจสอบดังต่อไปนี้โดยผู้ให้บริการที่มีความเชี่ยวชาญทุกๆ ครึ่งปีหรือหนึ่งปี โปรดติดต่อตัวแทนจำหน่ายของคุณหรือศูนย์บริการ

1		สายตันหลุดหรือชำรุดหรือไม่
2		โครงของขาตั้งได้รับผลกระทบร้ายแรงจากสิ่นหรือไม่ ตัวเครื่องภายนอกอาคารเสียหายหรือไม่มั่นคงหรือไม่
3		ปลั๊กไฟเสียบอยู่กับเตารีดสนิทหรือไม่ (ระวังอย่าให้ลักษณะ)

หากเครื่องยังคงไม่สามารถทำงานได้ตามปกติหลังจากดำเนินการตรวจสอบข้างต้นแล้ว ให้ปิดเซอร์วิสเบรคเกอร์และติดต่อศูนย์สนับสนุนของคุณทันที

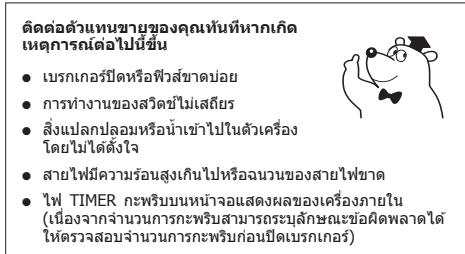

โปรดติดต่อผู้แทนเจ้าหน้าที่โดยทันที หากเรื่องปัจจุบันอาจส่งผลกระทบต่อสิ่งแวดล้อม เช่น การปลูกไม้ในพื้นที่สาธารณะ หรือการก่อสร้างที่ทำลายทรัพยากรทางธรรมชาติ ให้ดำเนินการแก้ไขทันที ไม่ควรปล่อยให้สิ่งแวดล้อมเสียหายไปอย่างร้ายแรง ดังนั้น ผู้นำท้องถิ่นและผู้เชี่ยวชาญด้านสิ่งแวดล้อม ควรร่วมมือกันเพื่อปกป้องและรักษาสิ่งแวดล้อมให้อยู่คู่กับเราไปตลอดกาล

โปรดทราบ:
เมื่อเปิดสวิตช์เครื่อง โดยเฉพาะเมื่อไฟในห้องลับ
อาจมีกระแสปั่นเปลี่ยนแปลงของความสว่างเกิดขึ้นเล็กน้อย ซึ่งไม่ใช่เรื่อง
ที่ต้องกังวล
โปรดปฏิบัติตามเงื่อนไขของผู้รับจ่ายไฟฟ้าในท้องถิ่น

บริการหลังการขายและการรับประกัน

ເມື່ອຂອງຮັບບິກາຣ ໃຫ້ຕຽຈສອນຈຸດຕ່າງໆ ຕ່ວໄປນີ້

สภาพการทำงาน	ตรวจสอบจุดต่างๆ ต่อไปนี้
<p>หากเรียนทบทวนไม่ได้แล้วในสังคมภายนอก (หน่วยเรียนทบทวนให้ฟังก์ชันที่ไม่ต้องห่วงเรื่องเวลา)</p>	<ul style="list-style-type: none"> ● ต้องเปลี่ยนแบบเดือริใหม่หรือไม่ ● ใส่แบบเดือริถูกข้าวหรือไม่
<p>เมื่อเครื่องทำงานความเย็นได้ไม่เต็มที่</p>	<ul style="list-style-type: none"> ● พิวซีทำงานได้ปกติหรือไม่ ● แรงดันไฟฟ้าสูงมากหรือต่ำมากหรือไม่ ● ตัวติดคงจะ “ปีด” อุ่นหรือไม่ ● ใช้การตั้งค่าโน้มน้าวตามตารางจากตัวเครื่องบัน្តอภาคีที่ห้องหรือไม่ ● แผ่นกรองอากาศมีฝุ่นเจ็บหนาหรือไม่ ● แสงอาทิตย์ส่องด้านซ้ายของบานหน้าออกอาการโดยแรงหรือไม่ ● มีสิ่งกัดขาดการไหลลงของลมของตัวเครื่องอย่างอาการหรือไม่ ● เปิดประตูหรือหน้าต่างไว้หรือไม่ หรือ มีแหล่งความร้อนภายในห้องหรือไม่ ● ตั้งค่าอุณหภูมิอย่างเหมาะสมหรือไม่ ● มีสิ่งกัดขาดการไหลของลมของตัวเครื่องบัน្តอภาคีที่ห้องหรือตัวเครื่อง ภายนอกอาการหรือไม่ ● ตั้งความเร็วพัดลมเป็น “ต่ำ” หรือ “เรียบ” หรือไม่

ໜາຍເຫດ

- หลักสูตรเรื่องการใช้งานเครื่องบินภาคภายในท้องฟ้าหัวการท่องเที่ยวในไทยเป็นภาษาอังกฤษโดยมีอายุน้อยกว่า 21 ปีและเชี่ยวชาญ (70 องค์กรทั่วโลก)

		តំបន់	សុំបន់
រាយឈានអេក្រង់	ឧណទាុវិភាគរបៀបង់ °C	21	32
	ឧណទាុវិភាគរបៀបើក °C	15	23
នគរាជការ	ឧណទាុវិភាគរបៀបង់ °C	21	46
	ឧណទាុវិភាគរបៀបើក °C	15	26