

OPERATION MANUAL

air Home 400

—
ROOM AIR CONDITIONER
SPLIT TYPE
DJ SERIES




HITACHI




INDOOR UNIT
RAK-DJ18PCAST
RAK-DJ24PCAST

OUTDOOR UNIT

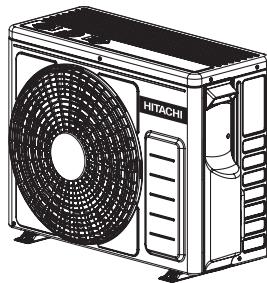

RAC-DJ18PCAST

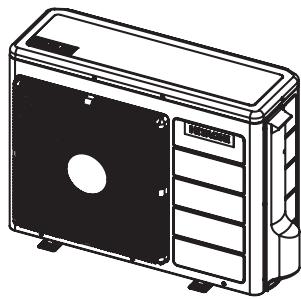

RAC-DJ24PCAST

MODELS

RAK-DJ18PCAST/RAC-DJ18PCAST
RAK-DJ24PCAST/RAC-DJ24PCAST

EN INSTRUCTION MANUAL
TH ក្រុមគករាបីងបាល

Access the full version
of the User Operation Manual by
scanning the code.

[https://docs.hitachiaircon.com/
RAK-DJ-PCAST/RAC-DJ-PCAST](https://docs.hitachiaircon.com/RAK-DJ-PCAST/RAC-DJ-PCAST)



Cooling & Heating

<H1171:A>



SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "⚠ Warning" and "⚠ Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.

	Make sure to connect earth line.		The sign in the figure indicates prohibition.
	Indicates the instructions that must be followed.		

	WARNING	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Operation Instructions should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual

- Please keep this manual after reading.

PRECAUTIONS DURING INSTALLATION

	WARNING	<ul style="list-style-type: none"> Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. Be sure to use the specified piping set for R32. Otherwise, this may result in broken copper pipes or faults. Do not use refrigerant other than the one indicated on the outdoor unit (R32) when installing, moving or repairing. Using other refrigerants may cause trouble or damage to the unit, and personal injury. 	
	CAUTION	<ul style="list-style-type: none"> A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Please ensure smooth flow of water when installing the drain hose. Do not install the indoor unit in a machine shop or kitchen where vapor from oil or its mist flows to the indoor unit. The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance and may deform and in the worst case, break the plastic parts of the indoor unit. 	

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

	WARNING	<ul style="list-style-type: none"> Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire. Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly. If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/part centers. If the air conditioner is not cool, one possible cause could be due to refrigerant leakage, so consult your dealer. The refrigerant gas used in the air conditioner is harmless. But if refrigerant gas leaks into the room, harmful products are generated when in contact with fire from appliances such as a stove heater. When there is refrigerant gas accumulation in the room, immediately stop the air conditioner. Open the windows for ventilation and contact your agent. 	
--	----------------	--	--

PRECAUTIONS DURING OPERATION

	WARNING	<ul style="list-style-type: none"> Avoid an extended period of direct air flow for your health. 	
		<ul style="list-style-type: none"> Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF. 	
		<ul style="list-style-type: none"> Do not use any conductor as fuse wire, this could cause fatal accident. 	
		<ul style="list-style-type: none"> During thunder storm, disconnect and turn off the circuit breaker. 	
		<ul style="list-style-type: none"> Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result. 	

PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.



- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.



- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.



- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.



- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.



- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.


- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

- This appliance is not intended for use by persons (including children) who are physically handicapped sensory or mental or lack of experience and knowledge. Unless supervised or instructed on the use of electrical appliances by persons responsible for their safety.

CAUTION

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

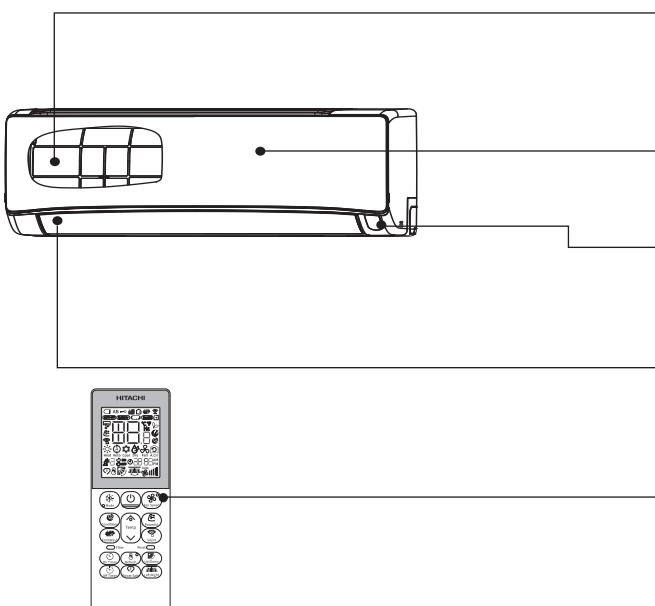

Pre-filter

To prevent dust from coming into the indoor unit.
(Refer page 9)

Front panel

(Refer page 10)

Indoor unit indicators


Light indicator showing the operating condition.
(Refer page 5)

Horizontal deflector, Vertical deflector (Air Outlet)

Remote controller

Send out operation signal to the indoor unit. So as to operate the whole unit.

OUTDOOR UNIT

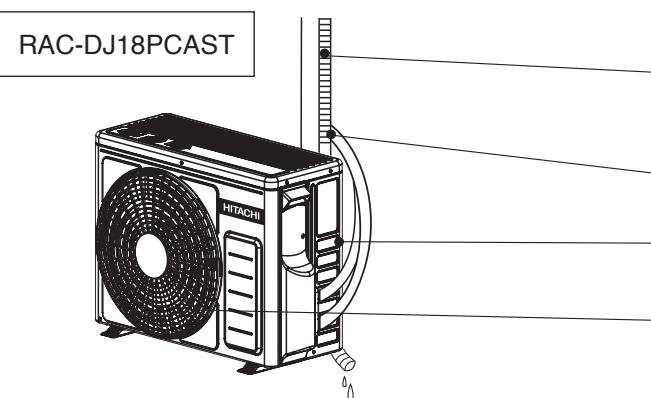


Drain pipe

Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back, Left side)

Air outlet

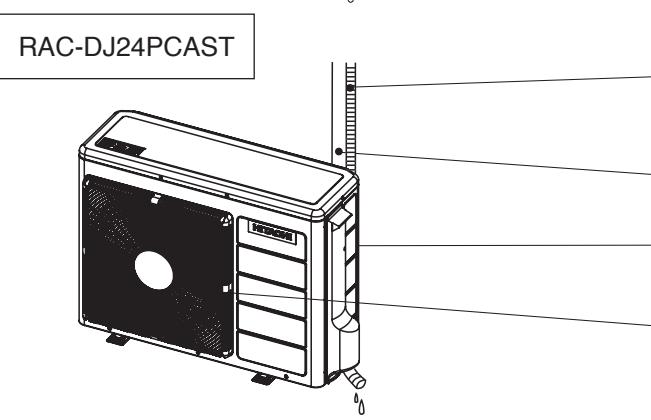

Drain pipe

Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back, Left side)

Air outlet

MODEL NAME AND DIMENSIONS


MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAK-DJ18PCAST, RAK-DJ24PCAST	950	294	230
RAC-DJ18PCAST	658	530	275
RAC-DJ24PCAST	850	650	298

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT INDICATIONS



Operation Lamp (Yellow)
This lamp lights during operation.

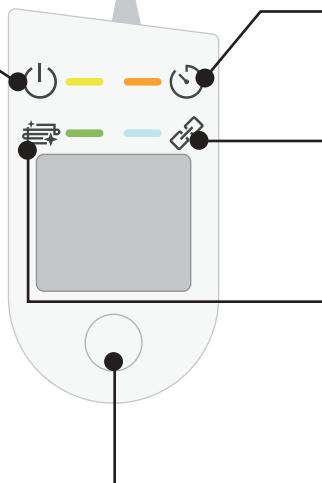

Timer Lamp (Orange)
This lamp lights when the timer is working.

Wi-Fi Lamp (Blue)
Optional

Clean Function Lamp (Green)
This lamp uses for FrostWash, Mold Guard, Filter Sign.

Temporary Switch

Use this switch to start and stop when the remote controller does not work.

- By pressing the temporary switch, the operation is done in automatic mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

▲ CAUTION

Turn off the circuit breaker if the unit is not be operated for a long period.

- ★ If the power stays on and the unit is not operated, power is slightly consumed in the control circuit. The power is saved by turning off the power switch (or the circuit breaker when the power is supplied from the outdoor unit).

NAMES AND FUNCTIONS OF REMOTE CONTROLLER

- This remote controller controls the operation and timer setting of the room air conditioner. The operating range of the remote controller from the indoor unit is 7m. If indoor lighting is used, the range may be shorter.

Off Mode Sign

Mode Selector Button

Use this button to select the operation mode. Every time you press this button, the mode will change from  (Cool) →  (Dry) →  (Fan) →  (A.Cir) cyclically.

GoodSleep Button

FrostWash Button

Filter Sign Reset Button

Refresh Button

On Timer Button


Select the turn ON time.

Off Timer Button

Select the turn OFF time.

Power SAFE Button

Signal Transmission

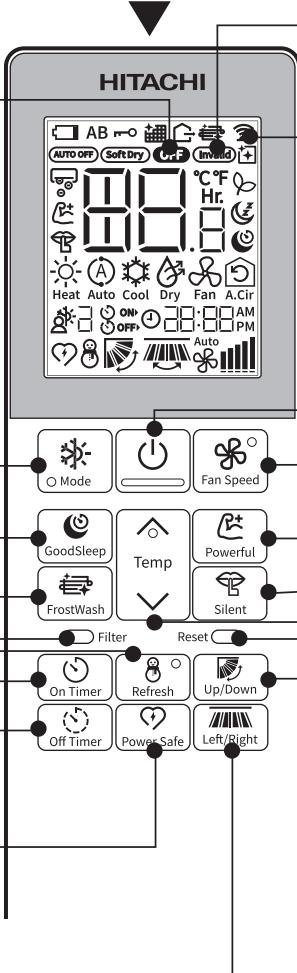

Invalid Operation Sign

Shown at invalid setting or operation

Transmission Sign

The transmission sign blinks when a signal has been sent.

On/Off Button

Press this button to start operation.

Press it again to stop operation.

FAN SPEED Button

Select the fan speed.

Powerful Button

SILENT Button

TEMPERATURE Button

Room temperature setting. Value will change quicker when you keep pressing.

RESET Button

UP/DOWN Button

Controls the angle of the horizontal air deflector.

Left/Right Button

Precautions for Use

- Do not put the remote controller under direct sunlight and high temperature.
- Do not drop it on the floor, and protect it from water.
- If you press the FUNCTION button during operation, the air conditioner may stop for about 3 minutes for protection before you can start it again.

INFORMATION

Capabilities

CAUTION

Do not use a stove or any other high temperature devices in proximity to the indoor unit.



PROHIBITION

Cooling and Dehumidifying Capabilities

- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

Refrigerant Information

- For the refrigerant charge information, please refer to the outdoor unit installation manual or specification label.

THE IDEAL WAYS OF OPERATION

Suitable Room Temperature



Warning

Freezing temperature is bad for health and a waste of electric power.

Ventilation



Caution


Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.

Effective Usage Of Timer

At night, please use the "OFF or ON timer or SLEEP timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.



Install curtain or blinds

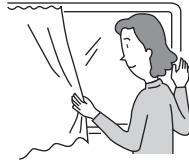

It is possible to reduce heat entering the room through windows.

Do Not Forget To Clean The Pre-Filter



Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

Please Adjust Suitable Temperature For Baby And Children




Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

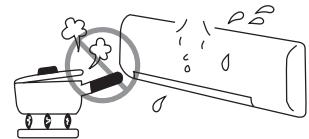

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 3W in the operation control circuit even if it is in "OFF" mode.

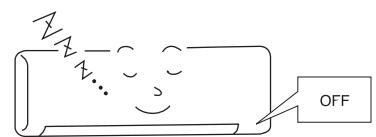

When Lightning Occurs

Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

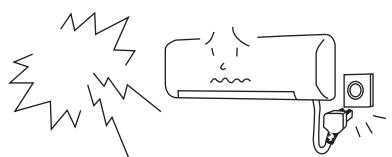

Interference From Electrical Products

Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

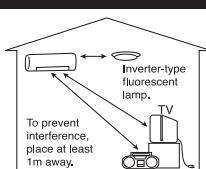


ATTACHING THE AIR PURIFYING FILTERS

1

Open the front panel


- Pull up the front panel by holding it at both sides with both hands.

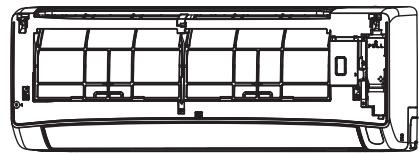

2

Remove the Pre-filter


- Push upward to release the claws and pull out the Pre-filter.

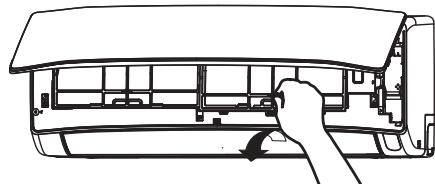

3

Attaching the air purifying filters (Accessories) to the filter frame.


- Attach the air purifying filters to the C-case to the designated position.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used.
- The air purifying filters are not washable. It is recommended to use vacuum to clean. It can be used for 1 year. When you want to renew it, please ask your sales agent.

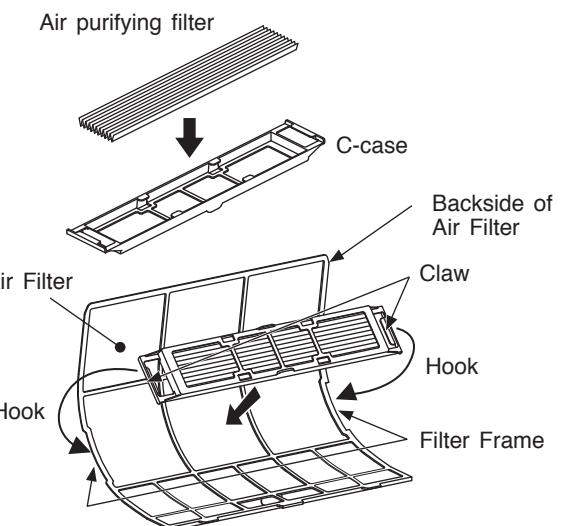


CAUTION

Do not bend the air purifying filter as it may cause damage to the structure.

Please do not smell direct from source of filter.

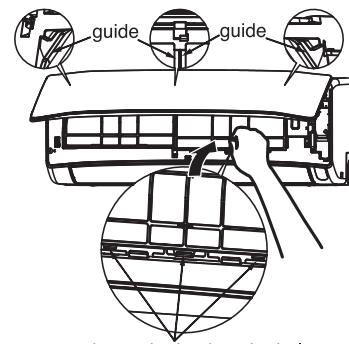

insert the hook to the hole

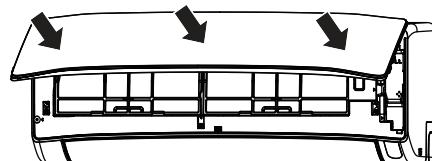


4

Attach the Pre-filters

- Attach the Pre-filters by ensuring that the surface written "FRONT" is facing front.
- After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

NOTE

- In case of removing the air purifying filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air purifying filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air purifying filters are not washable. It is recommended to use vacuum to clean it. It can be used for 1 year time. Type number for this air purifying filter is <SPX-CFH22AC25>. Please use this number for ordering when you want to renew it.
- Do not use detergent on the air purifying filter as some detergent may deteriorate the air purifying filter electrostatic performance.

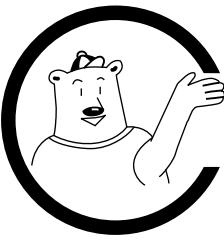

MAINTENANCE

⚠ CAUTION

Before cleaning, stop operation and switch off the power supply.

1. PRE-FILTER




Clean the Pre-filter, as it removes dust inside the room. In case the Pre-filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the Pre-filter following the procedure below.

PROCEDURE


1

- Open the front panel and remove the Pre-filter
- Gently lift and remove the air purifying filters from the air purifying filter frame.

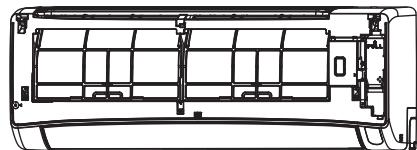



2

- Vacuum dust from the Pre-filter and air purifying filter using vacuum cleaner. If there is too much dust, rinse under running tap water and gently brush it with soft bristle brush. Allow filters to dry in shade.

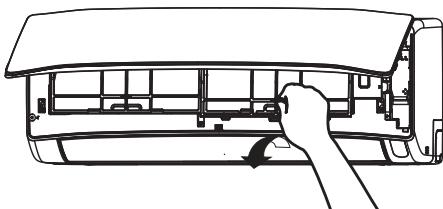

3

- Re-insert the air purifying filter to the filter frame. Set the Pre-filter with "FRONT" mark facing front, and slot them into the original state.
- After attaching the Pre-filters, push the front panel at three arrow portions as shown in figure and close it.

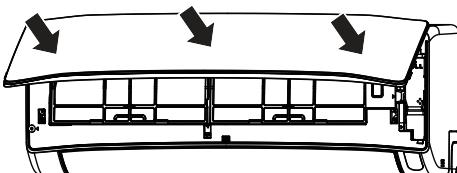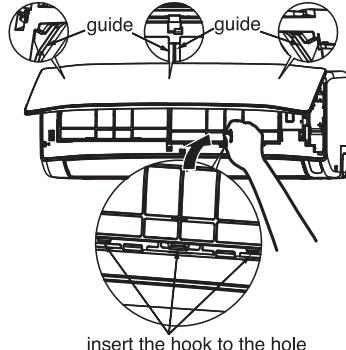


⚠ CAUTION

- Do not wash with hot water at more than 40°C. The Pre-filters may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The Pre-filters may shrink.
- Do not use detergent on the Pre-filter as some detergent may deteriorate the Pre-filter electrostatic performance.


2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water. Wash it with a soft sponge. After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.

Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

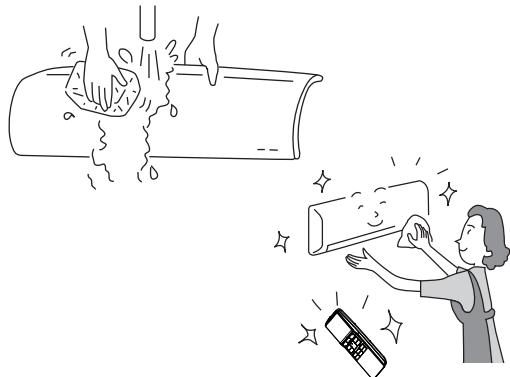


Removing the Front Panel

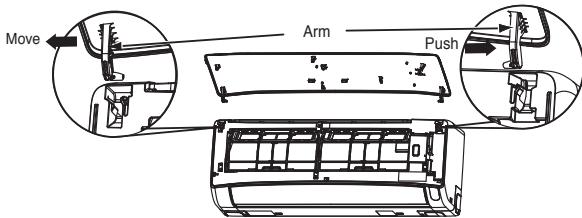

- When the front panel is fully opened with both hands, push the right arm to the outside to release it, and while closing the front panel slightly, pull it out forward.

Attaching the Front Panel

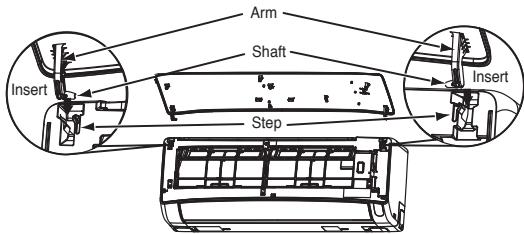

- Move the projections of the left and right arms into the Flanges in the unit and securely insert them into the holes.

CAUTION

- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



WIRING ARRANGEMENT

CAUTION

- Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock
- A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.



IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow	:	Earth
Blue	:	Neutral
Brown	:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

NOTE

If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.

CAUTION

Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

FROSTWASH OPERATION

FrostWash Operation does not start	It does not wash when outside temperature is less than about 21°C or more than 43°C. When "FrostWash" is done by operating a remote controller, it does not wash when the room temperature is less than about 21°C or more than about 32°C.
	When 60 minutes after the end of "FrostWash", "FrostWash" is not operated for product protection.
	It is the sound that the internal machine is inflated and contracted by the temperature change and the fin of the heat exchanger is frozen and thawed
(Clean Function Lamp) blinks	<p>Repeat for 1 second on and 1 second off for 10 seconds Because "FrostWash" can not work when operating the "FrostWash" with remote controller.</p> <ul style="list-style-type: none"> ● The air conditioner is operating ● Outside air temperature, room temperature and room humidity are not suitable for "FrostWash" ● It has not been over 60 minutes since the end of "FrostWash" <p>Repeat for 4 seconds on and 1 second off for 15 seconds Because FrostWash has not been done for a long time. → Operate the remote controller to operate "FrostWash".</p>

Mold Guard Operation

Mold Guard operation does not start	If the air conditioner has operated in cooling and drying mode, including auto mode, for less than 10 minutes, the Mold Guard operation will not start even if the air conditioner is in off mode. If operation of the air conditioner is stop by OFF Timer or GoodSleep Timer, the Mold Guard will not operate. If ON Timer is set and on time is within about 2 hours, the Mold-Guard will not operate.
During Mold Guard	(Clean Function Lamp) on the indoor unit lights up during Mold Guard operation. If Mold Guard operation stop at middle point, FrostWash and Filter sign indicator will turn off.
Notes	The horizontal deflector remain open. Room temperature or humidity may rise. Depending on situation, Mold Guard will operate with Fan Mode. When there would be the window near indoor unit, the water might condense on the window during Mold Guard. If necessary, to cancel Mold Guard. When after FrostWash operation, the water inside the indoor unit evaporates and depending on the room conditions, may emitted as steam. But this is not a malfunction. If necessary, to cancel Mold-Guard.

■ The following phenomena do not indicate unit failure.

Hissing or fizzy sounds	Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.
Squeaking noise	Noise generated when the unit expands or contracts due to temperature changes.
Rustling noise	Noise generated with the indoor unit fan's rpm changing such as operation start times.
Clicking noise	Noise of the motorized valve when the unit is switched on.
Perking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Odors	Caused as the smells and particles of smoke, food, cosmetics, etc. present in room air become attached the unit and blown off into the room again.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONNEL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

If the unit still fails to operate normally after performing the above inspections, turn the circuit breaker off and contact your sales agent immediately.

Contact your sales agent immediately if the following phenomena should occur

- The circuit breaker switches off or the fuse blows frequently.
- The switch operation is not stable.
- Foreign matter or water accidentally enters the unit interior.
- The power cord gets excessively hot or its insulation is torn or stripped.
- TIMER lamp on the indoor unit display blinks. (As the nature of the failure can be identified by the blinking cycle, check the blinking cycle before turning off the circuit breaker.)



Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent for the model of your unit, serial number, date of installation. Please also inform him regarding the fault.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.

The conditions of the local Power Supply Companies are to be observed.

Note

- Avoid to use the room air conditioner for cooling operation when the outside temperature is below 21°C (70°F). The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Minimum	Maximum
Indoor	Dry bulb °C	21	32
	Wet bulb °C	15	23
Outdoor	Dry bulb °C	21	46
	Wet bulb °C	15	26

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. (Remote controller display is dim or blank.)	<ul style="list-style-type: none">● Do the batteries need replacement?● Is the polarity of the inserted batteries correct?
When it does not cool well	<ul style="list-style-type: none">● Is the fuse all right?● Is the voltage extremely high or low?● Is the circuit breaker "ON"?● Is the setting of operation mode different from other indoor units?● Is the pre-filter blocked with dust?● Does sunlight fall directly on the outdoor unit?● Is the air flow of the outdoor unit obstructed?● Are the doors or windows opened, or is there any source of heat in the room?● Is the set temperature suitable?● Are the air inlets or air outlets of indoor and outdoor units blocked?● Is the fan speed "LOW" or "SILENT"?

คู่มือ การใช้งาน

air Home 400

เครื่องปรับอากาศสำหรับห้อง
แบบแยกส่วน
รุ่น DJ



ชื่อรุ่น

RAK-DJ18PCAST/RAC-DJ18PCAST
RAK-DJ24PCAST/RAC-DJ24PCAST

HITACHI




เครื่องภายใน


RAK-DJ18PCAST
RAK-DJ24PCAST



เครื่องภายนอก

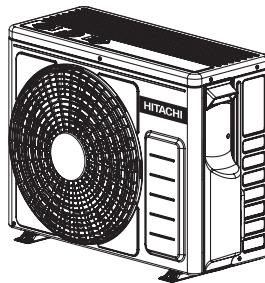

RAC-DJ18PCAST

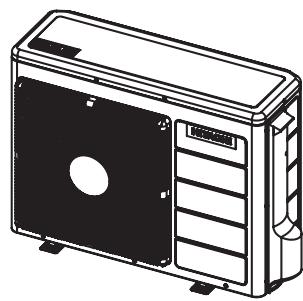

RAC-DJ24PCAST

โปรดสแกนคิวอาร์โค้ดนี้ เพื่อดูคู่มือการใช้งาน
ฉบับสมบูรณ์



[https://docs.hitachiaircon.com/
RAK-DJ-PCAST/RAC-DJ-PCAST](https://docs.hitachiaircon.com/RAK-DJ-PCAST/RAC-DJ-PCAST)

Cooling & Heating

<H1171:A>



ข้อควรระวังเพื่อความปลอดภัย

- โปรดอ่าน “ข้อควรระวังเพื่อความปลอดภัย” โดยละเอียดก่อนการใช้งานเครื่องปรับอากาศ เพื่อให้แน่ใจว่าใช้งานเครื่องปรับอากาศได้อย่างถูกต้อง
- โปรดใส่ใจเป็นพิเศษกับสัญลักษณ์ “▲ คำเตือน” และ “▲ ข้อควรระวัง” ส่วน “คำเตือน” ประกอบด้วยเนื้อหาการใช้งานที่หากไม่ปฏิบัติตามอย่างเคร่งครัด อาจเป็นสาเหตุให้เสียชีวิตหรือไดรับบาดเจ็บรุนแรงได้ ส่วน “ข้อควรระวัง” ประกอบด้วยเนื้อหาการใช้งานที่หากไม่ปฏิบัติตามอย่างหนาแน่น อาจเป็นสาเหตุให้เกิดผลร้ายแรงได้ โปรดปฏิบัติตามค่าแนะนำอย่างเคร่งครัดเพื่อความปลอดภัย
- สัญลักษณ์ต่างๆ แสดงความหมายดังนี้

ตรวจสอบให้แน่ใจว่ามีการเชื่อมต่อสายติด	สัญลักษณ์ในรูปแสดงถึงข้อห้ามต่างๆ
แสดงถึงคำแนะนำที่ต้องปฏิบัติตาม	

คำเตือน	สัญลักษณ์นี้แสดงว่าสารทำร้ายที่ติดไฟได้ หากสารทำร้ายมีเปลวไฟ ห้ามนำมายังจุดระเบิดภายในออก
ข้อควรระวัง	สัญลักษณ์นี้แสดงว่าควรอ่านคำแนะนำในการใช้งานโดยละเอียด
ข้อควรระวัง	สัญลักษณ์นี้แสดงว่าช่างบริการควรติดต่อผู้ดูแลอุปกรณ์โดยอ้างอิงข้อมูลในคู่มือการติดตั้ง
ข้อควรระวัง	สัญลักษณ์นี้แสดงว่ามีข้อมูลอยู่ในคู่มือการใช้งานและ/หรือคู่มือการติดตั้ง

- โปรดเก็บคู่มือไว้หลังจากการอ่าน

ข้อควรระวังระหว่างทำการติดตั้ง

คำเตือน	<ul style="list-style-type: none"> ห้ามรื้อเครื่องปรับอากาศเพื่อประกอบใหม่ อาจทำให้เกิดน้ำร้าว การทำงานผิดพลาด ไฟฟ้าลัดวงจร หรือเพลิงไหม้ หากรื้อ เครื่องปรับอากาศเพื่อประกอบใหม่ด้วยตนเอง โปรดทดสอบตามตัวแทนจำหน่ายของคุณ หรือช่างเทคนิคที่มีความชำนาญในการติดตั้งเครื่องปรับอากาศของคุณ อาจทำให้เกิดน้ำร้าว ไฟฟ้าลัดวงจร หรือเพลิงไหม้ หากติดตั้งเครื่องปรับอากาศด้วยตนเอง โปรดใช้สายติด ห้ามติดสัมภาระที่ไม่เกิดไฟฟ้าขึ้น โปรดใช้ชุดระบบท่อเฉพาะรุ่น R32 มีฉนั้น อาจทำให้เกิดการชำรุดของท่อทองแดงหรือปั๊มหายต่างๆ ห้ามใช้สารทำร้ายที่ระเหยได้ เช่น ก๊าซโซลินอล อาจทำให้เกิดปั๊มหายหรือความเสียหายต่อตัวเครื่อง และการบาดเจ็บส่วนบุคคลได้
ข้อควรระวัง	<ul style="list-style-type: none"> ควรติดตั้งตัวตัวเองโดยขึ้นอยู่กับสถานที่ติดตั้งเครื่องปรับอากาศ หากไม่มีตัวตัวเอง อาจเกิดอันตรายจากไฟฟ้าขึ้นได้ ห้ามติดตั้งตัวเครื่องใกล้กับสถานที่ที่มีแก๊สไวไฟ ตัวเครื่องภายนอกอาคารอาจติดไฟ หากมีการรั่วของแก๊สไวไฟรอบๆ ตัวเครื่อง โปรดตรวจสอบให้แน่ใจว่ามีการระบายน้ำที่ดีเพื่อทำการติดตั้งท่อระบายน้ำ ห้ามติดตั้งเครื่องภายใน ในร้านขายเครื่องจักรหรือห้องครัวที่มีไออกซิเจนจากน้ำมันหรือละอองไอน้ำ หากไฟเข้าสู่ตัวเครื่อง ภายใน น้ำมันจะสะสมบนตัวแลกเปลี่ยนความร้อน ซึ่งจะลดประสิทธิภาพของเครื่องภายในและอาจทำให้เสียรูปและในกรณีที่เลวร้ายที่สุดจะทำให้ชิ้นส่วนพลาสติกของตัวเครื่องภายในเสียหาย

ข้อควรระวังระหว่างการเปลี่ยนเครื่องหรือบำรุงรักษา

คำเตือน	<ul style="list-style-type: none"> หากมีสถานการณ์ที่ไม่ปกติเกิดขึ้น (เช่น กลิ่นไหม) โปรดหยุดการทำงานของเครื่องและปิดตัวตัวเอง ติดต่อตัวแทนจำหน่ายของคุณ อาจทำให้เกิดการทำลายเครื่องปรับอากาศ โปรดติดตัวแทนจำหน่ายของคุณสำหรับการบำรุงรักษา การบำรุงรักษาด้วยตนเองที่ไม่เหมาะสม อาจทำให้เกิดไฟฟ้าขึ้นและเพลิงไหม้ โปรดติดตัวแทนจำหน่ายของคุณต้องการรื้อถอนหรือติดตั้งเครื่องใหม่ อาจทำให้ไฟฟ้าขึ้นและเพลิงไหม้ หากคุณรื้อถอนและติดตั้งเครื่องใหม่ด้วยตนเองอย่างไม่เหมาะสม หากสายไฟชำรุด ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับจากศูนย์บริการ/อะไหล่ที่ได้รับอนุญาตเท่านั้น ถ้าเครื่องปรับอากาศไม่เย็น สาเหตุที่เป็นไปได้อายุสูงที่คือสารทำความเย็นร้าว โปรดติดตัวแทนจำหน่ายของคุณ กำชับทำความสะอาดที่ใช้ในเครื่องปรับอากาศไม่เป็นอันตราย แต่หากกำชับทำความสะอาดในห้อง จะทำให้เกิดสารที่เป็นอันตรายเมื่อสัมผัสกับไฟจากเครื่องใช้ เช่น เดาก๊ส เมือกำชับทำความสะอาดเย็นจะทำให้เสียหายในห้อง ให้หยอดไข่เครื่องปรับอากาศ และติดตัวแทนจำหน่ายของคุณ
----------------	---

ข้อควรระวังในการใช้งาน

คำเตือน	<ul style="list-style-type: none"> เพื่อสุขภาพของคุณ ควรหลีกเลี่ยงการรับลมโดยตรงเป็นระยะเวลานาน <ul style="list-style-type: none"> ห้ามแพทย์ ห้องไม่หรือวัตถุอื่นๆ เช่น ไปในช่องระบายน้ำอากาศ เช่น ออก เนื่องจากพัดลมจะหมุนที่รับความเร็วสูง ซึ่งอาจก่อให้เกิดการบาดเจ็บได้ ก่อนการทำความสะอาดหรือปรับแต่งแผงกันได้ ให้แน่ใจว่าได้ปิดสวิตช์แล้ว ห้ามใช้ด้านไฟฟ้าใดๆ แทนสายไฟฟ้า การทำเช่นนี้อาจก่อให้เกิดอุบัติเหตุร้ายแรงถึงขั้นเสียชีวิต <ul style="list-style-type: none"> ในขณะที่มีพยายามฝึกหัด ให้ตัดการเชื่อมต่อและปิดตัวตัวเอง ไม่ควรวางกระป๋องสเปรย์และวัสดุไวไฟอื่นๆ ภายในระยะ 1 เมตรจากช่องลมออกของทั้งเครื่อง ปรับอากาศและตัวเครื่องลมร้อนจะทำให้แรงดันภายในกระป๋องสเปรย์เพิ่มขึ้นจนอาจจะเบิดได้
----------------	---

ข้อควรระวังระหว่างการใช้งาน

- ควรใช้งานผลิตภัณฑ์ภายใต้ข้อกำหนดของผู้ผลิต และต้องไม่ใช้งานเพื่อจุดประสงค์อื่นๆ



- ห้ามใช้งานเครื่องปรับอากาศขณะมือเปลี่ยก การทำเช่นนี้อาจก่อให้เกิดอุบัติเหตุร้ายแรงถึงขั้นเสียชีวิต

- เมื่อใช้งานเครื่องปรับอากาศกับอุปกรณ์เผาไหม้ ให้รับ��อากาศในห้องเป็นประจำ เพื่อหลีกเลี่ยงการขาดออกซิเจน



- อย่าให้มัมเย็นที่ออกจากการแผงลมเครื่องปรับอากาศหันเข้าหาอุปกรณ์ทำความร้อนในครัวเรือน เนื่องจากอาจส่งผลกระทบต่อการทำงานของอุปกรณ์นั้นๆ ได้ เช่น กาต้มน้ำด้วยไฟฟ้า เตาอบ เป็นต้น




- อย่าสอดน้ำหรือฉีดน้ำใส่ตัวเครื่องปรับอากาศโดยตรง เมื่อทำความสะอาด เนื่องจากอาจทำให้เกิดไฟฟ้าลัดวงจร



ข้อควรระวัง

- ห้ามใช้กระป๋องน้ำดื่มหรือสเปรย์น้ำดูดลมไก่กับตัวเครื่องปรับอากาศภายในห้องสารเดมน้ำอาจติดบนพินแลกเปลี่ยนความร้อน และปิดกั้นทางระบายของน้ำที่จะหายไปยังภาครองน้ำทึบ น้ำจะหยดลงบนพัดลมกรงกระอกและจะทำให้น้ำกระเซ็นออกจากการเครื่องปรับอากาศภายในห้อง

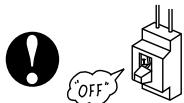

- โปรดปิดสวิตช์ตัวเครื่องและปิดตัวต当ใจระหว่างการทำความสะอาด พัดลมความเร็วสูงภายในตัวเครื่องอาจทำให้เกิดอันตรายได้




- ปิดตัวต当ใจ หากไม่มีการใช้งานเครื่องปรับอากาศเป็นระยะเวลานาน



- ห้ามปืนตัวเครื่องภายนอกอาคาร หรือวางสิ่งของไว้ด้านบนตัวเครื่อง

- ห้ามวางภาชนะใส่น้ำ (เช่น แจกัน) บนตัวเครื่องภายนอกอาคารเพื่อหลีกเลี่ยงไม่ให้น้ำหยดลงบนตัวเครื่อง น้ำที่หยดลงบนเครื่องอาจทำให้จำนวนภายในเครื่องชำรุดและก่อให้เกิดไฟฟ้าลัดวงจร

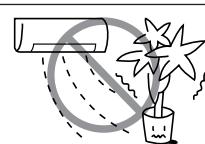

- ห้ามวางต้นไม้ไว้ใต้ทangลมโดยตรง เนื่องจากอาจเป็นอันตรายต่อต้นไม้ได้


- เมื่อใช้งานเครื่องปรับอากาศโดยที่เปิดประตูและหน้าต่างทึบไว้ (ความชื้นภายในห้องจะสูงกว่า 80% ตลอดเวลา) และโดยที่แผ่นเบนทางลมคาวาหน้าลง หรือเคลื่อนที่โดยอัตโนมัติเป็นระยะเวลานาน น้ำจะควบแน่นบนแผ่นเบนทางลมและหยดลงมาเป็นครั้งคราว ซึ่งจะทำให้เฟอร์นิเจอร์ของคุณเปียกชื้น ดังนั้น อย่าใช้งานเครื่องภายนอกล่างเป็นเวลานาน

- หากปริมาณความร้อนในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่อง (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ล่วงหน้า

- เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย ทางประสาทสัมผัสหรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น

ชื่อและฟังก์ชันของแต่ละส่วน

ตัวเครื่องปรับอากาศ

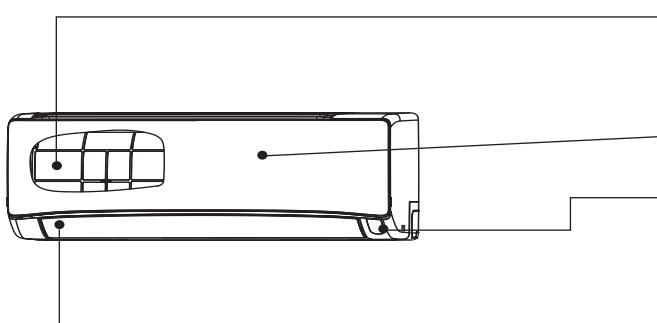

แผ่นกรองเบื้องต้น
เพื่อป้องกันฝุ่นละอองเข้าสู่ตัวเครื่องปรับอากาศ
(ดูหน้า 21)

แฟลน้ำภาคด้านหน้า (ดูหน้า 22)


ไฟสัญญาณตัวเครื่องปรับอากาศ
ไฟสัญญาณแสดงสถานภาพการทำงาน
(ดูหน้า 17)

แผ่นเบนทางลมแนวนอน • แผ่นเบนทางลมแนวตั้ง
(ช่องลมออก)



รีโมทคอนโทรล
ส่งสัญญาณการทำงานไปยังตัวเครื่องปรับอากาศ
เพื่อใช้งานฟังก์ชันทั้งหมดของเครื่อง

ตัวเครื่องภายนอกอาคาร

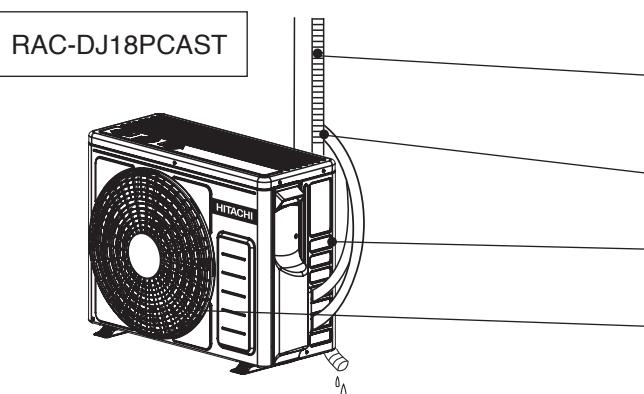


ท่อระบายน้ำ
น้ำที่ควบคุมแน่นจะระบายน้ำสู่ภายนอก

ท่อเชื่อมต่อและห้องวนสำหรับระบบการวางท่อ

ช่องลมเข้า (ด้านหลัง, ด้านข้าง)

ช่องลมออก

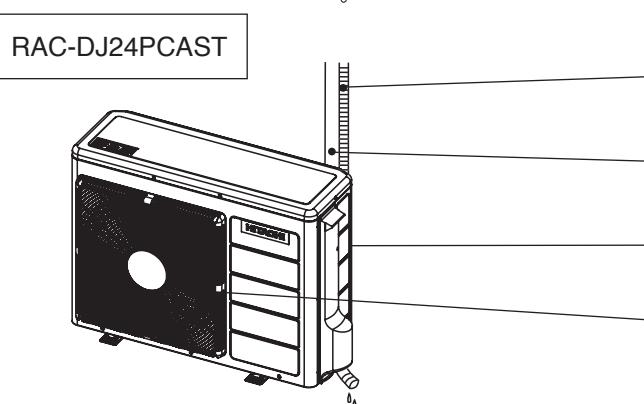

ท่อระบายน้ำ
น้ำที่ควบคุมแน่นจะระบายน้ำสู่ภายนอก

ท่อเชื่อมต่อและห้องวนสำหรับระบบการวางท่อ

ช่องลมเข้า (ด้านหลัง, ด้านข้าง)


ช่องลมออก

ชื่อรุ่นและขนาด

รุ่น	ความกว้าง (มม.)	ความสูง (มม.)	ความหนา (มม.)
RAK-DJ18PCAST, RAK-DJ24PCAST	950	294	230
RAC-DJ18PCAST	658	530	275
RAC-DJ24PCAST	850	650	298

ชื่อและหน้าที่ของแต่ละชิ้นส่วน

สัญลักษณ์แสดงตัวเครื่องภายใน

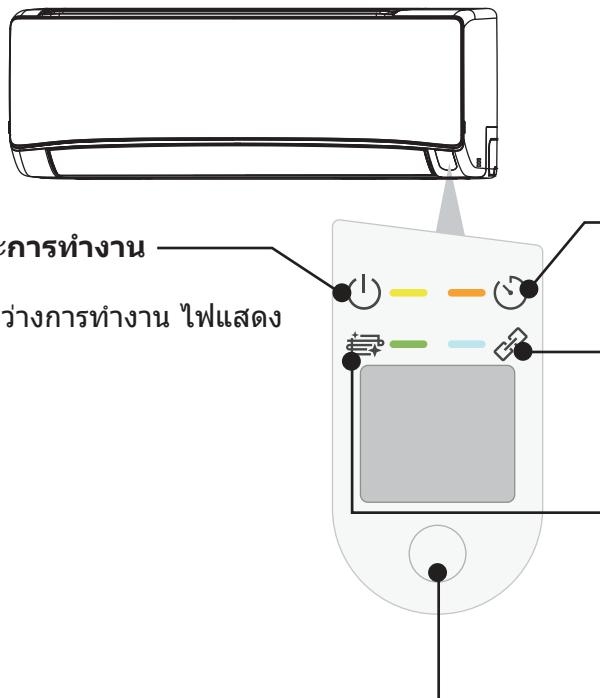

ไฟแสดงสถานะการทำงาน
(สีเหลือง)
ไฟนี้ดิดสว่างระหว่างการทำงาน ไฟแสดง

ไฟตั้งเวลา (สีส้ม)
ไฟนี้สว่างเมื่อตั้งเวลากำลังทำงาน

ไฟสัญญาณ Wi-Fi (สีน้ำเงิน)
อุปกรณ์เสริม

ไฟแสดงสถานะความสะอาด
(สีเขียว)

ไฟนี้จะสว่างขึ้นเมื่อใช้งานฟังก์ชันการ
รีเซ็ตฟิลเตอร์ FrostWash, Mold
Guard

สวิตซ์ชั่วคราว

ใช้สวิตซ์นี้เพื่อเริ่มและหยุดการทำงานเมื่อรีโมทคอนโทรลไม่สามารถ
ใช้งานได้

- โดยการกดสวิตซ์ชั่วคราวจะทำให้เครื่องปรับอากาศทำงานในโหมด
อัตโนมัติ
- เมื่อเปิดหรือปิดใช้งานเครื่องปรับอากาศด้วยสวิตซ์ชั่วคราว หลังจาก
ปิดแหล่งจ่ายไฟและเปิดใหม่อีกครั้ง เครื่องปรับอากาศจะทำงานใน
โหมดอัตโนมัติ

☆ หากเปิดแหล่งจ่ายไฟแต่ไม่ได้ใช้งานเครื่องปรับอากาศ วงจรควบคุมจะทำให้สีน้ำเงินเปลี่ยนไปเป็นสีเหลืองเล็กน้อย สามารถ
ประยุกต์พลังงานได้โดยการปิดแหล่งจ่ายไฟ (หรือเบรกเกอร์ว่างจะเมื่อจ่ายไฟจากตัวเครื่องภายนอก)

ชื่อและฟังก์ชันของรีโมตคอนโทรล

- รีโมตคอนโทรลนี้ใช้ควบคุมการทำงานและการตั้งเวลาของเครื่องปรับอากาศในห้อง รีโมตคอนโทรลมีระยะการทำงาน 7 เมตร จากตัวเครื่องในอาคาร หากมีการใช้แสงภายในอาคาร จะย่อจราจรได้ดีกว่านี้

สัญลักษณ์โหมดปิด

ปุ่มเลือกโหมด
ใช้ปุ่มนี้เพื่อเลือกโหมดการทำงาน
ทุกครั้งที่คุณกดปุ่มนี้ โหมดจะเปลี่ยนจาก
 (ทำความเย็น) →  (ลดความชื้น) →  (พัดลม) →  (หมุนเวียนอากาศ) หมุนวนกันไป

ปุ่ม GoodSleep

ปุ่มละลายน้ำแข็ง

ปุ่มรีเซ็ตสัญลักษณ์แผ่นกรอง


ปุ่มรีเฟรช

ปุ่มตั้งเวลาเปิดเครื่อง
เลือกเวลาที่จะเปิดเครื่อง

ปุ่มตั้งเวลาปิดเครื่อง
เลือกเวลาที่จะปิดเครื่อง

ปุ่มประหยัดพลังงาน

การส่งสัญญาณ

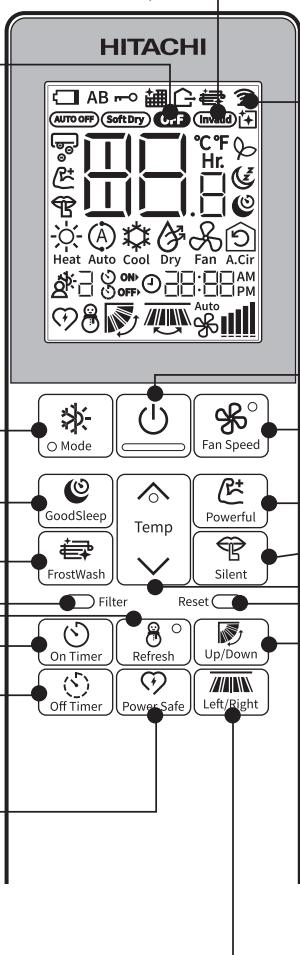

สัญลักษณ์การทำงานไม่ถูกต้อง
แสดงเมื่อการตั้งค่าหรือการทำงานไม่ถูกต้อง

สัญลักษณ์การส่งสัญญาณ
สัญลักษณ์การส่งสัญญาณจะกะพริบ
เมื่อมีการส่งสัญญาณ

ปุ่มเปิด/ปิด

กดปุ่มนี้เพื่อเริ่มการทำงาน
กดอีกครั้งเพื่อหยุดการทำงาน

ปุ่มความเร็วพัดลม
เลือกความเร็วพัดลม

ปุ่มการทำงานเต็มประสิทธิภาพ

ปุ่มเย็น

ปุ่มอุณหภูมิ
การตั้งค่าอุณหภูมิห้อง เมื่อคุณกด
ค้างไว้ ค่าจะเปลี่ยนเร็วขึ้น

ปุ่มรีเซ็ต

ปุ่มชี้น/ลง
ควบคุมองศาของแผ่นเบนท่างลง
แนวนอน

ปุ่มซ้าย/ขวา

ข้อควรระวังเบื้องต้นในการใช้งาน

- อย่าวางรีโมตคอนโทรลให้โดนแสงแดดโดยตรงและมีอุณหภูมิสูง
- อย่าทำตอกพื้น และป้องกันไม่ให้เปียกน้ำ
- หากคุณกดปุ่มฟังก์ชันระหว่างการทำงาน เครื่องปรับอากาศอาจหยุดทำงานประมาณ 3 นาทีเพื่อเป็นการป้องกัน
ก่อนที่คุณจะสามารถเริ่มต้นได้อีกครั้ง

ข้อมูล

ความสามารถ

ข้อควรระวัง

อย่าใช้เดาหรืออุปกรณ์ที่มีอุณหภูมิสูงอื่นๆ ใกล้กับตัว
เครื่องภายใน



ข้อห้าม

ความสามารถในการทำความเย็นและลดความชื้น

- หากความร้อนในห้องมีมากกว่าความสามารถในการ
ทำความเย็นของเครื่องปรับอากาศ (เช่น หากมีคนจำนวนมาก
มากอยู่ในห้องหรือใช้เครื่องทำความร้อนอื่นๆ) อุณหภูมิ
ภายในห้องอาจจะไม่ถึงอุณหภูมิที่ตั้งไว้

ข้อมูลสารทำความเย็น

- สำหรับข้อมูลการเติมสารทำความเย็น โปรดดูคู่มือการติดตั้ง
เครื่องภายในนอกหรือฉลากข้อมูลจำเพาะ

วิธีการใช้งานที่ถูกต้อง

อุณหภูมิห้องที่เหมาะสม



คำเตือน

อุณหภูมิเย็นจัดนั้นไม่ดีต่อสุขภาพ และเสียพลังงานไฟฟ้าโดยใช่เหตุ

การระบายอากาศ



ข้อควรระวัง


อย่าปิดห้องเป็นเวลานาน ให้เปิดประตูและหน้าต่างเป็นครั้งคราวเพื่อให้อากาศถ่ายเทเข้ามาในห้อง

การใช้งานตัวตั้งเวลาอย่างมีประสิทธิภาพ

ในตอนกลางคืน โปรดใช้ "โหมดการทำงานของตัวตั้งเวลาเปิดปิด หรือตัวตั้งเวลาอนหลับ" ให้สอดคล้องกับเวลาเด่นนอนของคุณในตอนเช้า การดำเนินการตั้งกล่าวจะช่วยให้คุณนอนคลายไปกับอุณหภูมิห้อง ที่แสนสบาย โปรดใช้ตัวตั้งเวลาให้เป็นประโยชน์




ติดตั้งผ้าม่านหรือม่านบังตา

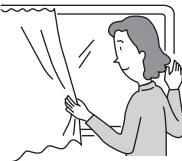

ผ้าม่านช่วยลดความร้อนที่ผ่านเข้ามาในห้องได้

อย่าลืมล้างแผ่นกรองเบื้องต้น

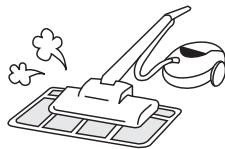

แผ่นกรองอากาศที่มีฝุ่นจับจะลดความแรงของลมและประสิทธิภาพการทำงาน หากทำความสะอาดบ่อยๆ เพื่อป้องกันไม่ให้สิ่นเปลืองพลังงานไฟฟ้า โปรดทำความสะอาดแผ่นกรองทุกๆ 2 สัปดาห์

โปรดปรับอุณหภูมิให้เหมาะสม กับเด็กเล็กและเด็กโต




โปรดให้ความสำคัญกับอุณหภูมิห้องและทิศทางการไหลของอากาศเมื่อใช้งานเครื่องปรับอากาศสำหรับเด็กเล็ก เด็กโต และผู้สูงอายุที่เคลื่อนไหวไม่สะดวก

ข้อมูลสำหรับผู้ใช้

เครื่องปรับอากาศและแหล่งความร้อนภายในห้อง


ข้อควรระวัง

หากปริมาณความร้อนในห้องเกินกว่าความสามารถในการทำความเย็นของเครื่องปรับอากาศ (ตัวอย่างเช่น: มีคนอยู่ในห้องจำนวนมาก การใช้อุปกรณ์ทำความร้อน เป็นต้น) เครื่องปรับอากาศอาจไม่สามารถทำอุณหภูมิตามที่ตั้งค่าไว้ลงหน้า

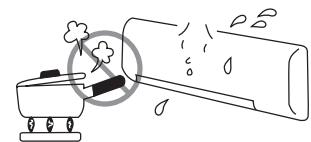

ไม่ได้ใช้งานเป็นเวลานาน

เมื่อไม่ได้ใช้งานเครื่องปรับอากาศเป็นเวลานาน โปรดปิดสวิตซ์จากแหล่งจ่ายไฟหลัก หากยัง "เปิด" แหล่งจ่ายไฟหลักอยู่ เครื่องปรับอากาศจะยังคงใช้ไฟฟ้าประมาณ 3 วัตต์ในวงจรควบคุมการทำงาน แม้ว่าเครื่องจะอยู่ในโหมด "ปิด" แล้วก็ตาม

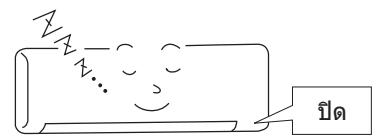

เมื่อเกิดไฟไหม้

คำเตือน


เพื่อป้องกันไม่ให้ตัวเครื่องเสียหายในระหว่างไฟไหม้ โปรดหยุดใช้งานตัวเครื่องและถอนปลั๊กออกจากเต้าเสียบ



คลื่นรบกวนจากเครื่องใช้ไฟฟ้า

ข้อควรระวัง

เพื่อลดเสียงรบกวน โปรดติดตั้งเครื่องปรับอากาศและวางแผนริมห้องโถรให้ห่างจากเครื่องใช้ไฟฟ้าอย่างน้อย 1 เมตร

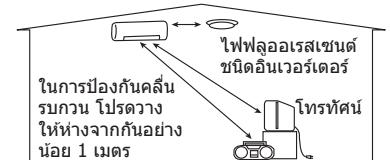


การใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

1

เปิดแผงด้านหน้า


- ยกแผงด้านหน้าขึ้นโดยการใช้ทั้งสองมือจับทั้งสองฝั่ง

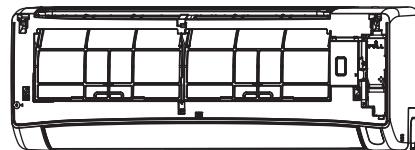

2

ถอนแผ่นกรองเบื้องต้นออก


- ดันขึ้นเพื่อปลดล็อก และดึงแผ่นกรองเบื้องต้นออกมา

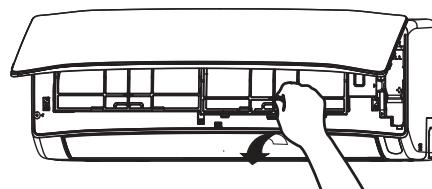

3

การติดแผ่นฟอกอากาศ (อุปกรณ์เสริม) เข้ากับกรอบของแผ่นกรองอากาศ

- ติดแผ่นฟอกอากาศเข้ากับช่องรูปตัว C ในตำแหน่งที่กำหนด
- ความสามารถในการทำความสะอาดจะลดลงเล็กน้อย และความเร็วในการทำความสะอาดจะช้าลงเมื่อใช้แผ่นฟอกอากาศ
- แผ่นฟอกอากาศไม่สามารถล้างทำความสะอาดได้ ขอแนะนำให้ใช้เครื่องดูดฝุ่นในการทำความสะอาดได้ แผ่นฟอกอากาศมีอายุใช้งานได้ 1 ปี เมื่อคุณต้องการใช้งานแผ่นฟอกอากาศหลังจาก 1 ปี โปรดสอบถามด้วยแทนข่ายของคุณ

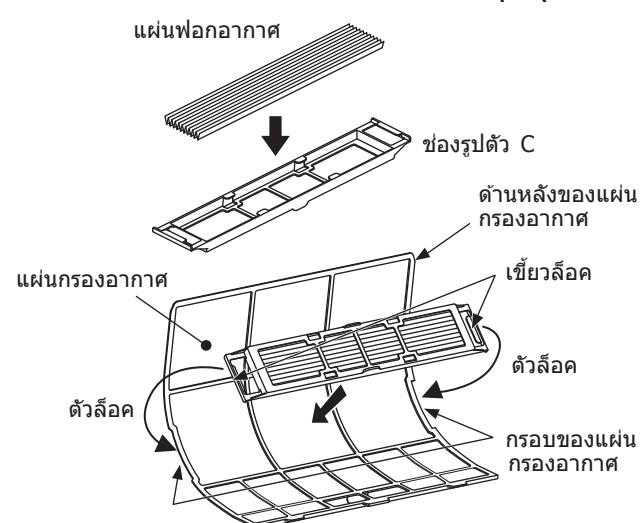

⚠️ ข้อควรระวัง

อย่างอ่อนแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ เนื่องจากอาจทำให้โครงของแผ่นกรองชำรุดได้


โปรดอย่าสูดลมอากาศจากแผ่นกรองโดยตรง



4


ใส่แผ่นกรองเบื้องต้น

- ใส่แผ่นกรองเบื้องต้นโดยตรวจสอบให้แน่ใจว่าหางด้านที่เขียนว่า "FRONT" ขึ้น
- หลังจากใส่แผ่นกรองเบื้องต้นแล้ว ให้กดแผงหน้าหากด้านหน้าที่ต้าแหน่งลูกศรทั้งสามส่วน ตามที่แสดงในภาพ และปิดแผงหน้าหากด้านหน้า

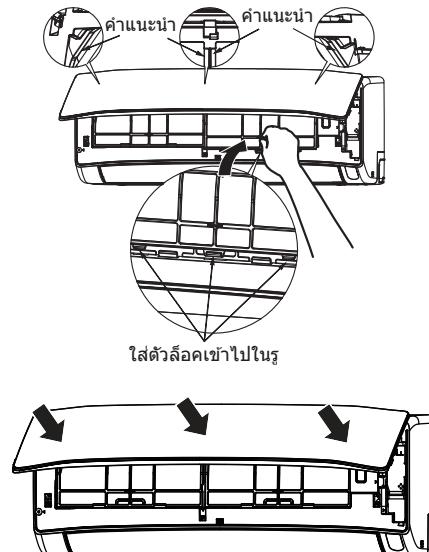

หมายเหตุ

- กรณีที่คอลด์แพนกรองสำหรับฟอกอากาศให้บริสุทธิ์ โปรดทำความสะอาดขั้นตอนด้านบน
- ความสามารถในการทำความสะอาดจะลดลงเล็กน้อย และความเร็วในการทำความสะอาดจะช้าลง เมื่อมีการใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ ดังนั้น ให้ตั้งค่าความเร็วพัดลมไว้ที่ "HIGH" (สูง) ในกรณีที่ใช้แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์
- ห้ามล้างแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ ขอแนะนำให้ใช้เครื่องดูดฝุ่นในการทำความสะอาด อาจใช้งานได้ถึง 1 ปี หมายเลขอุปกรณ์ของแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์นี้คือ <SPX-CFH22AC25> โปรดใช้หมายเลขอุปกรณ์นี้สำหรับการสั่งซื้อเมื่อต้องการเปลี่ยนใหม่
- อย่าใช้น้ำยาทำความสะอาดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ เนื่องจากน้ำยาทำความสะอาดบางชนิดอาจทำให้ประสิทธิภาพในการยึดหยุ่นของแผ่นกรองเสื่อมสภาพ

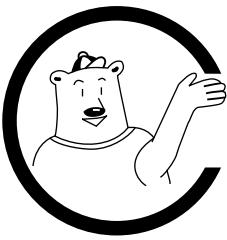

การบำรุงรักษา

⚠ ข้อควรระวัง

ก่อนการทำความสะอาด ควรหยุดการทำงานของเครื่องและปิดสวิตซ์แหล่งจ่ายไฟ


1. แผ่นกรองเบื้องต้น

ทำความสะอาดแผ่นกรองเบื้องต้น เนื่องจากจะช่วยลดฝุ่นภายในห้อง ในกรณีที่มีฝุ่นจับทั่วทั้งแผ่นกรองเบื้องต้น การไหลของลมจะลดลง และประสิทธิภาพในการทำความสะอาดจะลดลง นอกจากนี้ อาจเกิดเสียงดัง อย่าลืมทำความสะอาดแผ่นกรองเบื้องต้นโดยทำการตามขั้นตอนด้านล่าง

ขั้นตอน


1

- เปิดแผงหน้าหากด้านหน้าและถอดแผ่นกรองเบื้องต้นออก
- ค่อยๆ ยกและถอดแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์ จากกรอบแผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์

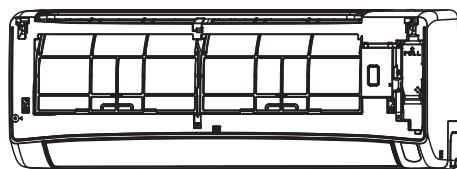



2

- ดูดฝุ่นจากเครื่องกรองเบื้องต้นและเครื่องกรองปรับอากาศ ใช้เครื่องดูดฝุ่นหากมีฝุ่นจำนวนมาก ล้างกรองเบื้องต้นด้วยน้ำที่เป็นในลพานและค่อยๆ ถูด้วยแปรงขนนุ่ม และบีบล่อให้แห้ง

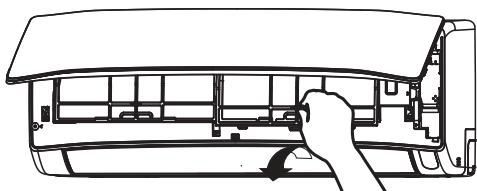

3

- ใส่แผ่นกรองสำหรับฟอกอากาศให้บริสุทธิ์กลับเข้าไปในกรอบแผ่นกรองใหม่ หมายแผ่นกรองเบื้องต้นด้านที่มีคำว่า "FRONT" ขึ้น และสอดเข้าไปยังตำแหน่งเดิม
- หลังจากใส่แผ่นกรองเบื้องต้นแล้ว ให้กดแผงหน้าหากด้านหน้าที่ตำแหน่งลูกศรทั้งสามส่วน ตามที่แสดงในภาพ และปิดแผงหน้าหากด้านหน้า

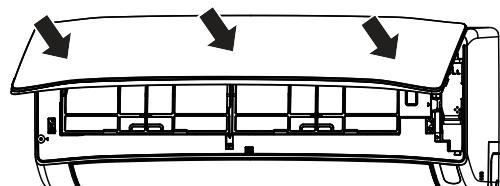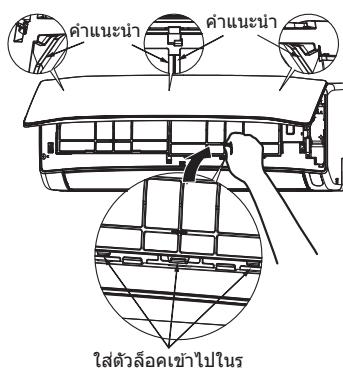


⚠ ข้อควรระวัง

- ห้ามล้างด้วยน้ำร้อนที่มีอุณหภูมิมากกว่า 40°C เพราะแผ่นกรองเบื้องต้นอาจหลอมได้
- เมื่อล้างทำความสะอาด ให้สะบัดความชื้นออกให้หมด และตากให้แห้งในที่ร่ม อย่าตากไว้กลางแดดโดยตรง แผ่นกรองเบื้องต้นอาจหลอมได้
- อย่าใช้น้ำยาทำความสะอาดบนแผ่นกรองเบื้องต้น เนื่องจากน้ำยาทำความสะอาดบางชนิดอาจทำให้ประสิทธิภาพในการยึดหยุ่นของแผ่นกรองเบื้องต้นเสื่อมสภาพ


2. การทำความสะอาดแผงด้านหน้า

- ถอดแผงหน้าหากด้านหน้าออก และล้างด้วยน้ำสะอาด ล้างทำความสะอาดด้วยฟองน้ำนุ่มๆ หลังจากใช้น้ำยาทำความสะอาดแบบเป็นกลางแล้ว ต้องล้างออกให้หมดด้วยน้ำสะอาด
- เมื่อไม่ถอดฝาหน้า ให้เช็ดด้วยผ้าแห้งนุ่มๆ เช็ดริมขอบโตรลให้ทั่วด้วย ผ้าแห้งนุ่มๆ
- เช็ดน้ำออกให้ทั่ว หากมีน้ำหลงเหลืออยู่ที่ไฟสัญญาณหรือตัวรับสัญญาณของเครื่องปรับอากาศ อาจทำให้เกิดปัญหาได้

วิธีการถอดแผงหน้าหากด้านหน้าออก
อย่าลืมใช้ทั้งสองมือจับเพื่อถอดและใส่แผงหน้าหากด้านหน้า

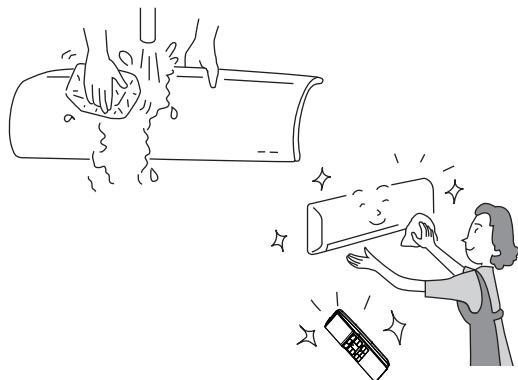


การถอดแผงหน้าหากด้านหน้าออก

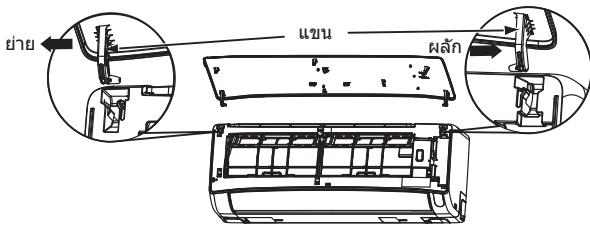

- เมื่อเปิดแผงด้านหน้าจนสุดด้วยมือทั้งสองข้าง ให้ดันแขนข้าวออกไปด้านนอกเพื่อปลดล็อก และขณะปิด แผงด้านหน้าให้ดึงออกไปข้างหน้า

การใส่แผงหน้าหากด้านหน้า

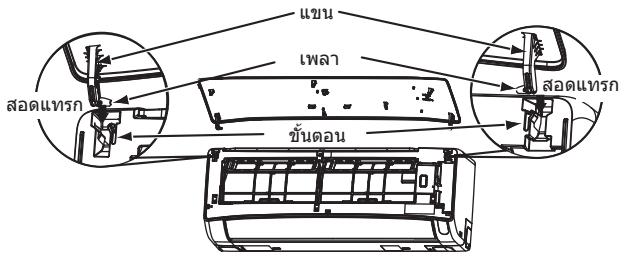

- ย้ายส่วนที่ยื่นออกมาของแขนยืดด้านข้างและขวางไปยังขอบของตัวเครื่อง แล้วใส่ลงในรูอย่างระมัดระวัง

⚠ ข้อควรระวัง

- ห้ามใช้น้ำร้อน (สูงกว่า 40 องศาเซลเซียส) เบนชิน น้ำมันเชื้อเพลิง กรดทินเนอร์ หรือแปรรูป เนื่องจากจะทำให้พื้นผิวพลาสติกและสารเคลือบชำรุดเสียหาย



การจัดเตรียมสายไฟ

⚠ ข้อควรระวัง

- โปรดใช้สายดิน ห้ามติดตั้งสายดินไว้ใกล้กับท่อน้ำหรือท่อแก๊ส สายล่อฟ้า หรือสายดินของโตรต้อฟฟ์ การติดตั้งสายดินที่ไม่เหมาะสมอาจทำให้เกิดไฟฟ้าช็อต
- ควรติดตั้งตัวตัดวงจรโดยขึ้นอยู่กับสถานที่ติดตั้งเครื่องปรับอากาศ หากไม่มีตัวตัดวงจร อาจเกิดอันตรายจากไฟฟ้าช็อตได้



ข้อสำคัญ

สายไฟในสายไฟน่าจะมีสีตามรหัสดังต่อไปนี้:

เขียวและเหลือง	: สายดิน
น้ำเงิน	: สายเสนคุนย์
น้ำตาล	: สายที่มีไฟ

เนื่องจากสีของสายไฟในสายไฟน่าของเครื่องปรับอากาศอาจไม่ตรงกับเครื่องหมายสีที่ระบุขึ้นปลายสายไฟในปลั๊กของคุณ โปรดดำเนินการดังนี้:

สายที่มีสีเขียวและเหลืองต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร E หรือสัญลักษณ์สายดิน หรือสีเขียว หรือสีเขียวและเหลือง

สายที่มีสีน้ำเงินต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร N หรือสัญลักษณ์เสนคุนย์ หรือสีเขียว

สายที่มีสีน้ำตาลต้องต่อเข้ากับขั้วปลายสายไฟในปลั๊กที่กำกับด้วยตัวอักษร L หรือสัญลักษณ์สายที่มีไฟ หรือสีแดง

หมายเหตุ

หากสายไฟชำรุด ต้องเปลี่ยนเป็นสายไฟพิเศษที่ได้รับจากศูนย์บริการ/อะไหล่ที่ได้รับอนุญาตเท่านั้น

⚠ ข้อควรระวัง

ต้องทำความสะอาดและบำรุงรักษาเครื่องโดยผู้ให้บริการที่มีความเชี่ยวชาญเท่านั้น ก่อนการทำความสะอาดควรหยุดการทำงานของเครื่องและปิดสวิตซ์แหล่งจ่ายไฟ

การทำงานในโหมดล้างແພງຄອຍລົມເຢັນ

ระบบ FrostWash ไม่เริ่มทำงาน	ถ้าไม่ทำงานในขณะທີ່ອຸນຫຼວມີກາຍນອກນ້ອຍກວ່າ 21 °C หรือมากกว່າ 43 °C หาก FrostWash ทำงานเสร็จสิ้นโดยการล้างงานจาก蕊ไม่ทคอมໂທຣລ ຮະບນຈະໄມ່ทำงานໃນขณะທີ່ອຸນຫຼວມີກາຍນອກນ້ອຍກວ່າ 21 °C หรือมากกว່າ 32 °C
	ระบบ FrostWash ຈະໄມ່ສາມາດຖາງການຊ້າໄຕກາຍໃນຮະຍະເວລາ 60 ນາທີ ແລ້ວຈາກເສົ້າງສິນກະຮຽນການ Frostwash ເພື່ອເປົ້າການປຳປັກຄວາມເສີ່ຍຫຍໍາ
ເສີ່ຍນກວນເກີດຂຶ້ນ ຮ່າງການທ່າງການ ຂອງ FrostWash	ເປົ້າເສີ່ຍນທີ່ເຄື່ອງກາຍໃນເກີດການຍາຍດັວແລະ ດັວຈາກເປົ້ານກວນແພງຄອຍລແລກເປົ້ານກວນແພງຄອຍລ ແຊ່ເໜັງແລະລະລາຍ
 (ໄຟແສດງ ສຕານການທ່າງການ ສະດາດກະພົບ)	ໄຟດີດີເປັນເວລາ 1 ວິນາທີແລະດັບ 1 ວິນາທີ ເປັນເວລາ 10 ວິນາທີເນື່ອງຈາກ "FrostWash" "ໄຟສາມາດທ່າງການໄດ້ເນື່ອງສັງງານ "FrostWash" ດ້ວຍ蕊ນິທຄອນໄທຣລ <ul style="list-style-type: none"> ● ເຄື່ອງປັບອາກາສກໍາລັງທ່າງການ ● ອຸນຫຼວມີກາຍນອກ ອຸນຫຼວມີທ່ອງ ແລະ ຄວາມຂຶ້ນໃນທ່ອງໄໝເໜ່າມ່າກັບການທ່າງການ "FrostWash" ● ຜ່ານໄປໄປໄໝເກີນ 60 ນາທີນັບດັ່ງແຕ່ "FrostWash" ສິນສັດການທ່າງການ
	ໄຟດີດີເປັນເວລາ 4 ວິນາທີແລະດັບ 1 ວິນາທີເປັນ ເວລາ 15 ວິນາທີ ເນື່ອງຈາກໄມ່ໄດ້ໃໝ່ງານ FrostWash ເປັນເວລາ ນານ → ໃຊ້蕊ນິທຄອນໂທຣລເພື່ອເປີດໃໝ່ງານຟັງກັນ "FrostWash"

■ ສຕານການຄົດຕ່າງໆໄປນີ້ໄດ້ບັງຊື້ຄື່ນຂອງຜິດພາດຂອງ
ເຄື່ອງປັບອາກາສ

ເສີ່ຍຝູ້ຫຼືເສີ່ຍຝ້າ	ເສີ່ຍນກວນທີ່ໄລຂອງສາຮ່າທ່າງການເຢັນໃນທ່ອ ຫຼືເສີ່ຍງາລວ່າທີ່ເກີດຂຶ້ນເນື່ອງການປັບອາກາສ ກ່າວໄລ
ເສີ່ຍຝີ່ດົ້າດ	ເສີ່ຍນກວນທີ່ເກີດຂຶ້ນເນື່ອງເຄື່ອງຍາຍຫຼືຫຼຸດ ດັວເນື່ອງຈາກເປົ້ານກວນແພງຄອຍລແປງຂອງອຸນຫຼວມີ
ເສີ່ຍກຽມແກນ	ເສີ່ຍນກວນທີ່ເກີດຈາກເປົ້ານກວນແພງຄອຍລ ຂອງພັດລົມເຄື່ອງກາຍໃນ ເນັ້ນ ເວລາເຮັມຕັ້ນ ການທ່າງການ
ເສີ່ຍຄົກ	ເສີ່ຍນນອດເຕອຣ໌ເນື່ອເຮັມເປີດເຄື່ອງ
ເສີ່ຍດູດລົມ	ເສີ່ຍນດູດລົມທີ່ໄລຂອງອຸນຫຼວມີໃນທ່ອນ້າທີ້ໆ ລາຍ ລະເວີດເພີ່ມເຕີມ ໂປຣດົດຕ່າງໆແຫ່ງມີຫຍຸ້ງ
ເສີ່ຍເປົ້ານກວນ	ເສີ່ຍນກວນຈາກເປົ້ານກວນແພງຄອຍລ ທ່າງການເນື່ອງຈາກຄວາມແປຮັນຂອງພັລັງງານ ຕາມເປົ້ານກວນແພງຄອຍລຂອງອຸນຫຼວມີທ່ອງ
ກລິ່ນ	ເກີດຈາກກລິ່ນແລະອນຸກາຄຂອງគັນ ອາຫາ ເຄື່ອງສ່າວາງ ໍລ່າ ທີ່ມີອຸ່ນໃນທ່ອງຄຸກຄຸດ ເຂົ້າໄປໃນເຄື່ອງປັບອາກາສແລະຖຸກປັກລັບ ເຂົ້າໄປໃນທ່ອງອຶກຄົງ
ອຸນຫຼວມີກາຍໃນ ທ່ອງໄໝເສົ້າງຕາມທີ່ດັ່ງ ຄໍາໄວ	ອຸນຫຼວມີທ່ອງຈົງຈົງຈະແດກຕ່າງຈາກ ອຸນຫຼວມີທີ່ດັ່ງໄວ້ເລັກນອຍຂຶ້ນອຸ່ນກັບຈຳນວນ ຄຸນໃນທ່ອງແລະສະກວະໃນທ່ອງຫຼືອຸ່ນກັບທ່ອງ

การໃໝ່ງານຟັງກັນປຳປັກເຊົ້ວຮາ

ຟັງກັນປຳປັກເຊົ້ວຮາ ໄມ່ທ່າງການ	ຄ້າເຄື່ອງປັບອາກາສທ່າງການໃນໂນມດ Cooling Dry ຫຼື Auto ເປັນເວລາໄຝເກີນ 10 ວິນາທີ ພັງກັນປຳປັກເຊົ້ວຮາຈະໄມ່ສາມາດທ່າງການໄດ້ແນ່ວ້າເຄື່ອງປັບອາກາສຈະຍູ້ໃນໂນມດ off ຄ້າເຄື່ອງປັບອາກາສຫຼຸດການທ່າງການໂດຍ OFF Timer ຫຼື GoodSleep Timer ພັງກັນປຳປັກເຊົ້ວຮາເຊື້ອງຈາກໄມ່ທ່າງການ ຄ້າ ON Timer ອຸກຕັ້ງໄວ້ແລະໄດ້ທ່າການເປີດ ເຄື່ອງເປັນເວລາໄຝເກີນ 2 ຊົ່ວໂມງຟັງກັນປຳປັກເຊົ້ວຮາ ປຳປັກເຊົ້ວຮາຈະໄມ່ທ່າງການ
ຂະນະທ່າງການຟັງກັນປຳປັກເຊົ້ວຮາ	 (ໄຟແສດງສຕານ ການທ່າງການ ປຳປັກເຊົ້ວຮາ) ທີ່ເຄື່ອງ ກາຍໃນຕິດຂຶ້ນໃນຄະນະທີ່ຟັງກັນປຳປັກເຊົ້ວຮາ ທ່າງການ ແກ້ໄຂຟັງກັນປຳປັກເຊົ້ວຮາຈົບສັງຄູນ ດັ່ງ "ໄຟສຕານ FrostWash ແລະ Filter ຈະ ດັບລົງ
ໜ້າຍເຫດ	ບານສົງແນວນອນຍັງຄົງເປີດອູ້ ອຸນຫຼວມີທ່ອງຫຼືອຸ່ນກັບຄວາມຂຶ້ນຈາກເພີ່ມສູງຂຶ້ນ ແລວແຕ່ສຕານການຄົດຕ່າງໆ ການປຳປັກເຊົ້ວຮາຈະ ທ່າງການກາຍໃດໂນມດ Fan ຫຼັກໃນທ່ອງມີໜ້າດັ່ງອູ້ໄລກັນເຄື່ອງ ກາຍໃນ ຈະມີໜ້າທ່າງການໃຫ້ເຍັດ ໃນຂຶ້ນທີ່ຟັງກັນປຳປັກເຊົ້ວຮາ ຫຼັງຈາກການທ່າງການ FrostWash ສິນສັດລົງ ນ້າຈາກແພງຄອຍລເຢັນແລະສະກວະໃນທ່ອງ ຈໍາທ່າໃຫ້ເກີດໄວ້ນ້າໄດ້ແຕ່ໄນ້ສື່ວຳຜິດປົກຕິ ແກ້ໄຂ ຈໍາເປັນໃຫ້ເຍັດເລັກຟັງກັນປຳປັກເຊົ້ວຮາ

การຕຽບສອບຍ່າງສຳເນົມວ

ໂປຣດົດຕ່າງໆ ຕ່າງໆໄປນີ້ໂດຍຜູ້ໃຫ້ບັນດາທີ່ມີຄວາມ
ເຊື່ອວ່າຫຼຸດທຸກໆ ຄົງປີ້ປີ້ຫຼືປີ້ປີ້ໄປນີ້ ໂປຣດົດຕ່າງໆແຫ່ງ
ຈໍານ່າຍຂອງຄຸນຫຼືສຸນຍົບບົນດາ

	ສາຍດິນຫຼຸດຫຼືຂໍອ້າຮຸດຫຼືໄມ່
	ໂຄຮ່ງຂອງຫຼັດທີ່ໄດ້ຮັບຜລກະທບວຮ້າ ແຮງຈາກສົນມີຫຼືໄມ່ ດັວເຄື່ອງກາຍນອກ ອາກາສເຢັງຫຼືຫຼືໄມ່ມັນຄົງຫຼືໄມ່
	ປລັກໄຟເສີຍອູ້ກັບເຕັກບັນສົນທີ່ຫຼືໄມ່ (ຮະວັງອໍາຍາໃຫ້ປລັກຫລວມ)

หากเครื่องยังคงไม่สามารถทำงานได้ตามปกติหลังจากดำเนินการตรวจสอบข้างต้นแล้ว ให้ปิดเซอร์กิตเบรคเกอร์และติดต่อตัวแทนขายของคุณทันที

ติดต่อตัวแทนขายของคุณทันทีหากเกิดเหตุการณ์ดังนี้

- เบรกเกอร์ปิดหรือไฟส่องสว่างบ่อย
- การทำงานของสวิตช์ไม่เสถียร
- ลึ้งแปลงกล้อมหรือนำเข้าไปในตัวเครื่องโดยไม่ต้องใจ
- สายไฟมีความร้อนสูงเกินไปหรืออ่อนวนของสายไฟขาด
- ไฟ TIMER กะพริบบนหน้าจอแสดงผลของเครื่องภัยใน (เนื่องจากจำนวนการกะพริบสามารถระบุลักษณะของผิดพลาดได้ให้ตรวจสอบจำนวนการกะพริบก่อนปิดเบรกเกอร์)



โปรดติดต่อตัวแทนจำหน่ายโดยทันที หากเครื่องปรับอากาศยังคงไม่สามารถทำงานได้โดยปกติหลังจากการตรวจสอบด้านบนแล้ว แจ้งรุ่นของเครื่องปรับอากาศ หมายเลขการผลิต วันที่ทำการติดตั้งแก่ตัวแทนจำหน่ายของคุณ โปรดแจ้งให้ตัวแทนทราบถึงปัญหาที่เกิดขึ้นด้วย

โปรดทราบ:

เมื่อปิดสวิตช์เครื่อง โดยเฉพาะเมื่อไฟในห้องสัลอาจมีการเปลี่ยนแปลงของความสว่างเกิดขึ้นเล็กน้อย ซึ่งไม่ใช่เรื่องที่ต้องกังวล โปรดปฏิบัติตามเงื่อนไขของบริษัทจ่ายไฟฟ้าในห้องถีน

หมายเหตุ

- หลักการใช้งานเครื่องปรับอากาศภายในห้องสำหรับการทำงานในโหมดทำความเย็นเมื่ออุณหภูมิภายนอกต่ำกว่า 21 องศาเซลเซียส (70 องศา华renaise) อุณหภูมิสำหรับการใช้งานสูงสุดและต่ำสุดที่แนะนำทั้งด้านร้อนและเย็นควรเป็นไปตามด้านล่าง:

		ต่ำสุด	สูงสุด
ภายในห้อง	อุณหภูมิกระเพาะแห้ง °C	21	32
	อุณหภูมิกระเพาะเปียก °C	15	23
นอกอาคาร	อุณหภูมิกระเพาะแห้ง °C	21	46
	อุณหภูมิกระเพาะเปียก °C	15	26

บริการหลังการขายและการรับประกัน

เมื่อขอรับบริการให้ตรวจสอบจุดต่างๆ ดังนี้

สภาพการทำงาน	ตรวจสอบจุดต่างๆ ดังนี้
หากรีโมทคอนโทรลไม่ส่งสัญญาณ (หน้าจอรีโมทคอนโทรล มีดังหรือว่างเปล่า)	<ul style="list-style-type: none"> ต้องเปลี่ยนแบตเตอรี่ใหม่หรือไม่ ใส่แบตเตอรี่ถูกข้อข้อหรือไม่
เมื่อเครื่องทำความเย็นได้ไม่เต็มที่	<ul style="list-style-type: none"> ไฟส่องสว่างได้ปกติหรือไม่ แรงดันไฟฟ้าสูงมากหรือต่ำมากหรือไม่ ตัวตัดวงจร “เปิด” อยู่หรือไม่ ใช้การตั้งค่าโหมดการทำงานต่างจากตัวเครื่องปรับอากาศอื่นๆ หรือไม่ แผ่นกรองอากาศมีฝุ่นจับหนาหรือไม่ แสงอาทิตย์ส่องถึงตัวเครื่องภัยในอาคารโดยตรงหรือไม่ มีสิ่งกีดขวางการไหลของลมของตัวเครื่องภัยในอุ่นออกอาคารหรือไม่ เปิดประตูหรือหน้าต่างไว้หรือไม่ หรือมีแหล่งความร้อนภัยในห้องหรือไม่ ตั้งค่าอุณหภูมิอย่างเหมาะสมสมหรือไม่ มีสิ่งอุดตันช่องลมเข้าออกของตัวเครื่องปรับอากาศหรือตัวเครื่องภัยในอุ่นออกอาคารหรือไม่ ตั้งความเร็วพัดลมเป็น “ต่ำ” หรือ “เรียบ” หรือไม่