

Panasonic[®]

Operating Instructions Air Conditioner

Indoor Unit
CS-L72JD1R5

Outdoor Unit
CU-L72JD1R8



IMPORTANT

- Please read these operating instructions carefully and thoroughly before installing and operating your air conditioner.
- Please retain these operating instructions for future reference after reading them thoroughly.

© Panasonic HA Air-Conditioning (M) Sdn. Bhd. 2008.
Unauthorized copying and distribution is a violation
of law.

TABLE OF CONTENTS

Safety Precautions	3
Product Introduction	6
1. Name and function of parts	6
2. Wired Remote Controller	7
Operating Instructions.....	8
Maintenance and Service	26
1. Indoor Unit.....	26
2. Call the service immediately in the following situations	26
3. Operation Tips.....	27
4. Filter.....	27
5. When the air conditioner is not going.....	27
6. Troubleshooting Tips! Save time and money!.....	28



FOR YOUR RECORDS

Write the model and serial numbers here:

Model # _____

Serial # _____

You can find them on a label on the side of each unit.

Dealer's Name _____

Date Purchased _____

- Staple your receipt to this page in the event you need it to prove date of purchase or for warranty issues.



READ THIS MANUAL


Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of Troubleshooting Tips first, you may not need to call for service at all.



PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.

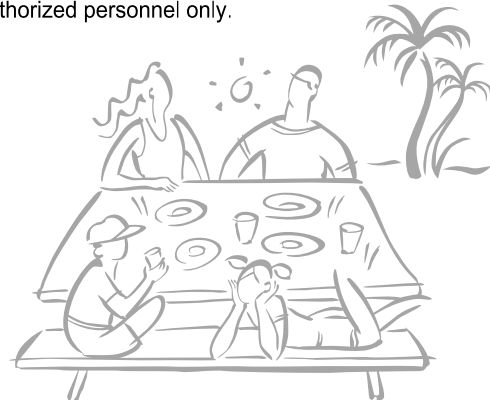

Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.



WARNING

This symbol indicates the possibility of death or serious injury.



CAUTION

This symbol indicates the possibility of injury or damage.



WARNING

Always ground the product.

- *There is a risk of electric shock.*

For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center. Do not disassemble or repair the product by yourself.

- *There is risk of fire or electric shock.*

Use the correctly rated breaker or fuse, and earth leakage current breaker.

- *There is risk of fire or electric shock.*

Do not install the product on a defective installation stand. Be sure that the installation area does not deteriorate with age.

- *It may cause product to fall.*

Be sure to check the refrigerant to the used. Please read the label on the product.

- *Incorrect refrigerant used can prevent the normal operation of the unit.*

Do not place a heater or other heating appliances near the power cable.

- *There is risk of fire and electric shock.*

Do not use a defective or underrated circuit breaker. Use the correctly rated breaker and fuse.

- *There is risk of fire or electric shock.*

Always ground the product as per the wiring diagram. Do not connect the ground wire to gas or water pipes lightning rod or telephone ground wire.

- *There is risk of fire or electric shock.*

Do not modify or extend the power cable. If the power cable or cord has scratches or skin peeled off or deteriorated then it must be replaced.

- *There is risk of fire or electric shock.*

Never install the outdoor unit on a moving base or a place from where it can fall down.

- *The falling outdoor unit can cause damage or injury or even death of a person.*

Don't use a power cord, a plug or a loose socket which is damaged.

- *Otherwise it may cause a fire or electrical shock.*

Do not allow water to run into electric parts. Install the unit away from water sources.

- *There is risk of fire, failure of the product, or electric shock.*

Do not use a multi consent. Always use this appliance on a dedicated circuit and breaker.

- *Otherwise it can cause electric shock or fire.*

Install the panel and the cover of control box securely.

- *There is risk of fire or electric shock due to dust, water ect.*

For installation, removal or reinstall, always contact the dealer or an Authorized Service Center.

- *There is risk of fire, electric shock, explosion, or injury.*

When the product is soaked (flooded or submerged) in water, contact an Authorized Service Center for repair before using it again.

- *There is risk of fire or electric shock.*

Do not touch, operate, or repair the product with wet hands. Hold the plug by hand when taking out

- *There is risk of electric shock or fire.*

Do not store or use or even allow flammable gas or combustibles near the product.

- *There is risk of fire.*

Indoor/outdoor wiring connections must be secured tightly and the cable should be routed properly so that there is no force pulling the cable from the connection terminals.

- Improper or loose connections can cause heat generation or fire.

Safely dispose off the packing materials. Like screws, nails, batteries, broken things etc after installation or svc and then tear away and throw away the plastic packaging bags.

- Children may play with them and cause injury.

Make sure to check that the power cable plug is not dirty, loose or broken and then only insert the plug completely.

- Dirty, loose or broken power plug can cause electric shock or fire.

In outdoor unit the step-up capacitor supplies high voltage electricity to the electrical components. Be sure to discharge the capacitor completely before conducting the repair work.

- An charged capacitor can cause electrical shock.

When installing the unit, use the installation kit provided with the product.

- Otherwise the unit may fall and cause severe injury.

Be sure to use only those parts which are listed in the svc parts list. Never attempt to modify the equipment.

- The use of inappropriate parts can cause an electrical shock, excessive heat generation or fire.

Do not use the product in a tightly closed space for a long time. Perform ventilation regularly.

- Oxygen deficiency could occur and hence harm your health.

Do not open the front grille of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)

- There is risk of physical injury, electric shock, or product failure.

If strange sounds, smell or smoke comes from product. Immediately turn the breaker off or disconnect the power supply cable.

- There is risk of electric shock or fire.

Ventilate the product room from time to time when operating it together with a stove, or heating element etc.

- Oxygen deficiency can occur and hence harm your health.

Turn the main power off and unplug the unit when cleaning or repairing the product.

- There is risk of electric shock.

When the product is not to be used for a long time, disconnect the power supply plug or turn off the breaker.

- There is risk of product damage or failure, or unintended operation.

Take care to ensure that nobody especially kids could step on or fall onto the outdoor unit.

- This could result in personal injury and product damage.

Take care to ensure that power cable could not be pulled out or damaged during operation.

- There is risk of fire or electric shock.

Do not place ANYTHING on the power cable.

- There is risk of fire or electric shock.

Do not plug or unplug the power supply plug to turn the unit ON/OFF .

- There is risk of fire or electric shock.

When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.

- Do not use the telephone or turn switches on or off. There is risk of explosion or fire.

CAUTION

Two or more people must lift and transport the product.

- Avoid personal injury.

Do not install the product where it will be exposed to sea wind (salt spray) directly.

- It may cause corrosion on the product.

Install the drain hose to ensure that the condensed water is drained away properly.

- A bad connection may cause water leakage.

Keep level even when installing the product.

- To avoid vibration or noise.

Do not install the product where the noise or hot air from the outdoor unit could damage or disturb the neighborhoods.

- It may cause a problem for your neighbors and hence dispute.

Always check for gas (refrigerant) leakage after installation or repair of product.

- Low refrigerant levels may cause failure of product.

Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.

- *There is risk of damage or loss of property.*

Do not block the inlet or outlet of air flow.

- *It may cause product failure.*

Use a soft cloth to clean. Do not use harsh detergents, solvents or splashing water etc .

- *There is risk of fire, electric shock, or damage to the plastic parts of the product.*

Do not touch the metal parts of the product when removing the air filter.

- *There is risk of personal injury.*

Do not step on or put anything on the product. (outdoor units)

- *There is risk of personal injury and failure of product.*

Always insert the filter securely after cleaning. Clean the filter every two weeks or more often if necessary.

- *A dirty filter reduces the efficiency.*

Do not insert hands or other objects through the air inlet or outlet while the product is operating.

- *There are sharp and moving parts that could cause personal injury.*

Be cautious when unpacking and installing the product.

- *Sharp edges could cause injury.*

If the refrigerant gas leaks during the repair, do not touch the leaking refrigerant gas.

- *The refrigerant gas can cause frostbite (cold burn)*

Do not tilt the unit when removing or uninstalling it.

- *The condensed water inside can spill .*

Do not mix air or gas other than the specified refrigerant used in the system .

- *If air enters the refrigerant system, an excessively high pressure results, causing equipment damage or injury.*

If the refrigerant gas leaks during the installation, ventilate the area immediately.

- *Otherwise it can be harmful for your health.*

Dismantling the unit, treatment of the refrigerant oil and eventual parts should be done in accordance with local and national standards.

Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.

- *Moisture may condense and wet or damage furniture.*

Do not expose your skin or kids or plants to the cool or hot air draft.

- *This could harm to your health.*

Do not drink the water drained from the product.

- *It is not sanitary and could cause serious health issues.*

Use a firm stool or ladder when cleaning, maintaining or repairing the product at an height.


- *Be careful and avoid personal injury.*

OPERATING TEMPERATURE(°C) - Inverter Model

COOLING MODE			
INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.
32°C	21°C	43°C	-10°C
HEATING MODE			
INDOOR		OUTDOOR	
MAX.	MIN.	MAX.	MIN.
30°C	10°C	24°C	-10°C

Product Introduction


Name and function of parts

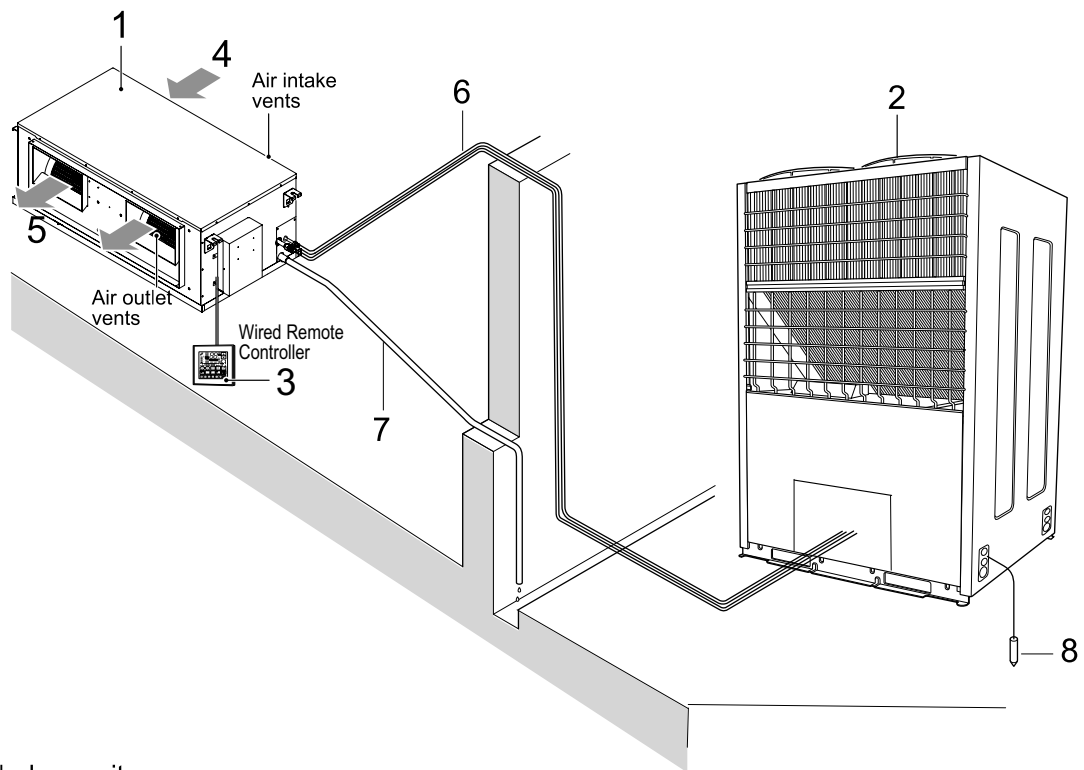

- 1: Indoor unit
- 2: Outdoor unit
- 3: Remote controller
- 4: Inlet air
- 5: Discharge air
- 6: Refrigerant piping, connection electric wire
- 7: Drain pipe
- 8: Ground wire
wire to ground outdoor unit to prevent electrical shocks.

Wired Remote Controller

Name and Function of Remote Controller

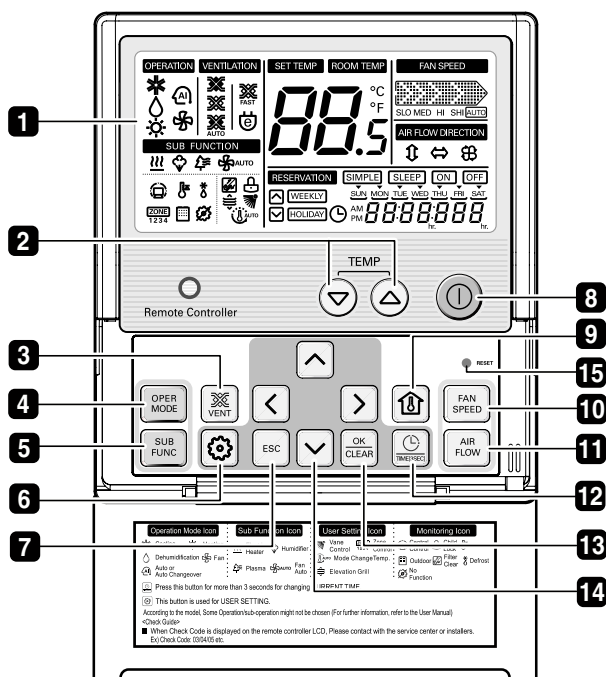


- 1** OPERATION INDICATION SCREEN
- 2** SET TEMPERATURE Button
- 3** VENTILATION Button (not working)
- 4** OPERATION MODE SELECTION Button
- 5** SUBFUNCTION Button(not working)
- 6** FUNCTION SETTING Button
- 7** EXIT Button
- 8** ON/ OFF Button
- 9** ROOM TEMPERATURE Button
- 10** FAN SPEED Button
- 11** AIR FLOW Button(not working)
- 12** RESERVATION/ TIME SETTING Button
- 13** SETTING/ CANCEL Button
- 14** UP, DOWN, LEFT, RIGHT Button
- 15** RESET Button

* Some functions may not be operated and displayed depending on the product type.

Operating instructions

Cooling Mode - Standard Operation

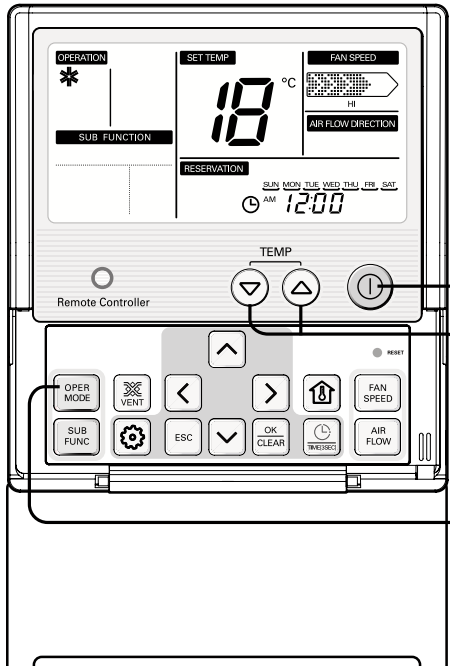

1 Press  button to turn on the indoor.


2 Press  button to select Cooling operation mode.

3 Adjust the desired temperature by pressing   buttons.

Press  button to check the Room temperature.
When setting the desired temperature higher than room temperature, only ventilation wind is blow out instead of cooling wind.

❖ Setting Temp Range : 18°C~30°C (64°F~86°F)

Heating Mode

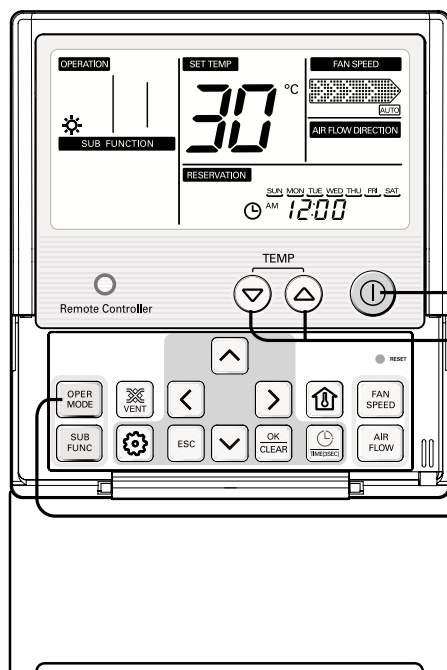


1 Press button to turn on the indoor.



2 Press button to select Heating mode.




3 Adjust the desired temperature by pressing buttons.

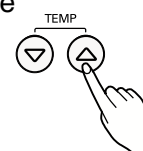

When setting the desired temperature lower than room temperature, there is only ventilation wind.


❖ Setting Temp Range : 16°C~30°C (60°F~86°F)

Dehumidification Mode

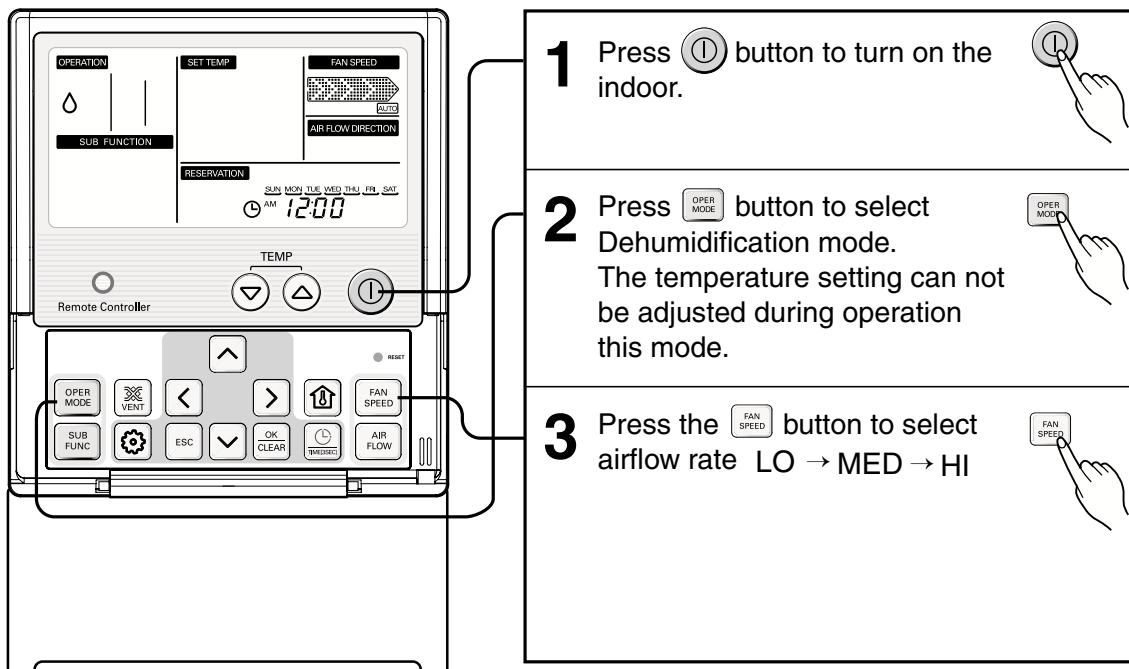


In rainy season or high humidity climate, it is possible to operate simultaneously dehumidifier and cooling mode to remove humidity effectively.

Auto Changeover Mode

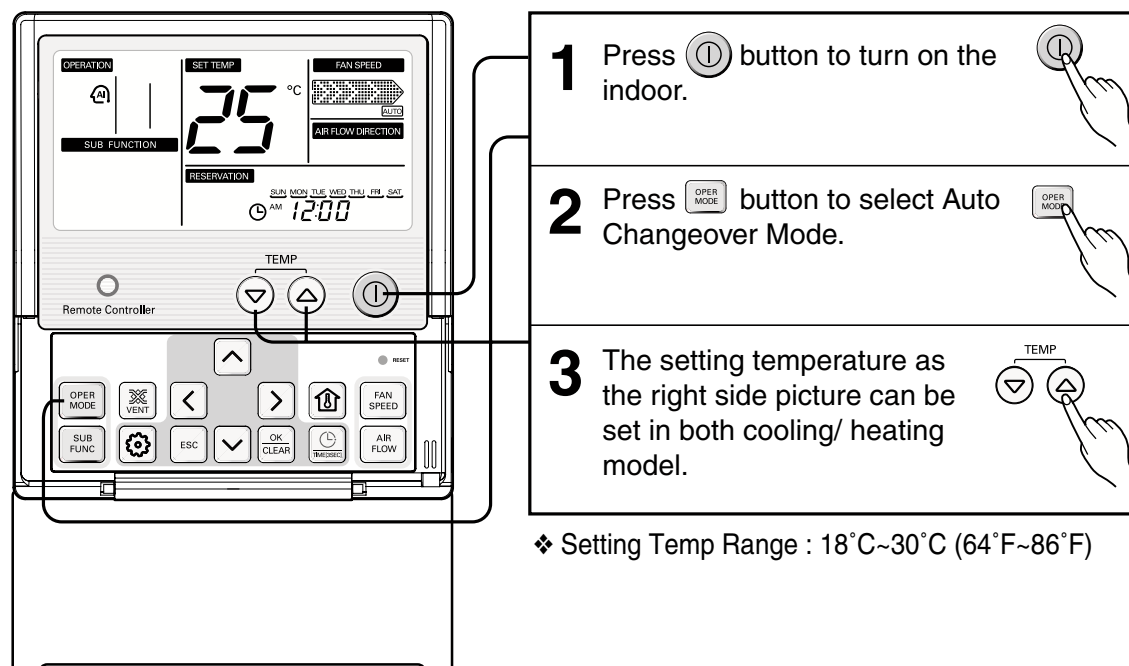


❖ Setting Temp Range : 18°C~30°C (64°F~86°F)

Fan Mode

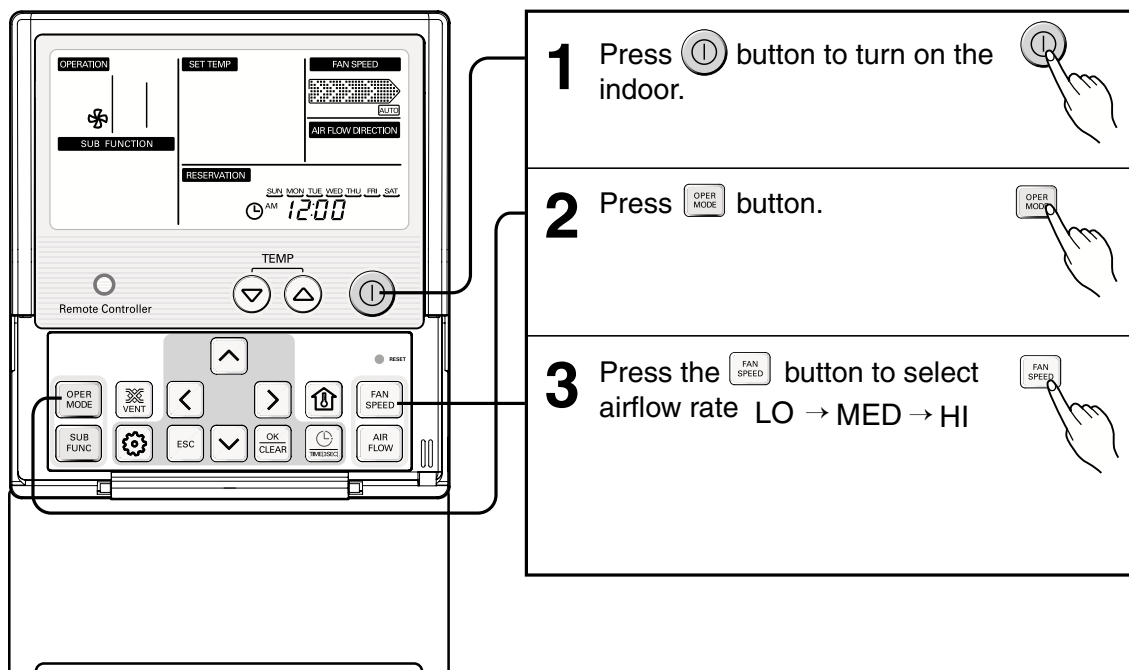

- * When operating in wind mode, the outdoor compressor doesn't work.
- * FAN operation doesn't bring out cold air but air from regular fan comes out.

Temperature setting/ room temperature check

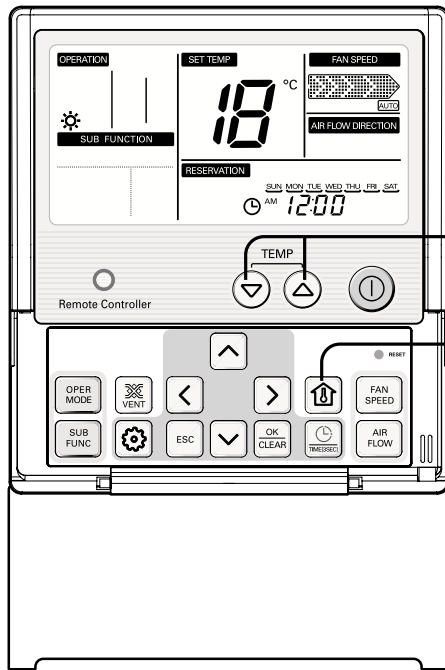

1 We can simply adjust the desired temperature.
 • Press the buttons to adjust the desired temperature.

: Increase 1°C or 2°F per one time pressing

: Decrease 1°C or 2°F per one time pressing

Room temp: Indicate the current room temperature.

Set temp: Indicate the temperature that user want to set.

Depend on what kind of controller, the desired temperature can be adjusted at 0.5°C or 1°F.


Cooling operation: The cooling mode doesn't work if desired temperature is higher than room temperature Please lower the desired temperature.

Heating operation: The heating mode doesn't work if desired temperature is lower than room temperature Please increase the desired temperature.

2 Whenever press button, the room temperature will be displayed within 5 seconds.
 After 5 seconds, it turns to display the desired temperature.
 Because of location of remote controller, the real room temperature and the this displayed value can be different


Function setting : Filter Sign Clear

This function is to clear the indicator of indoor filter cleaning.

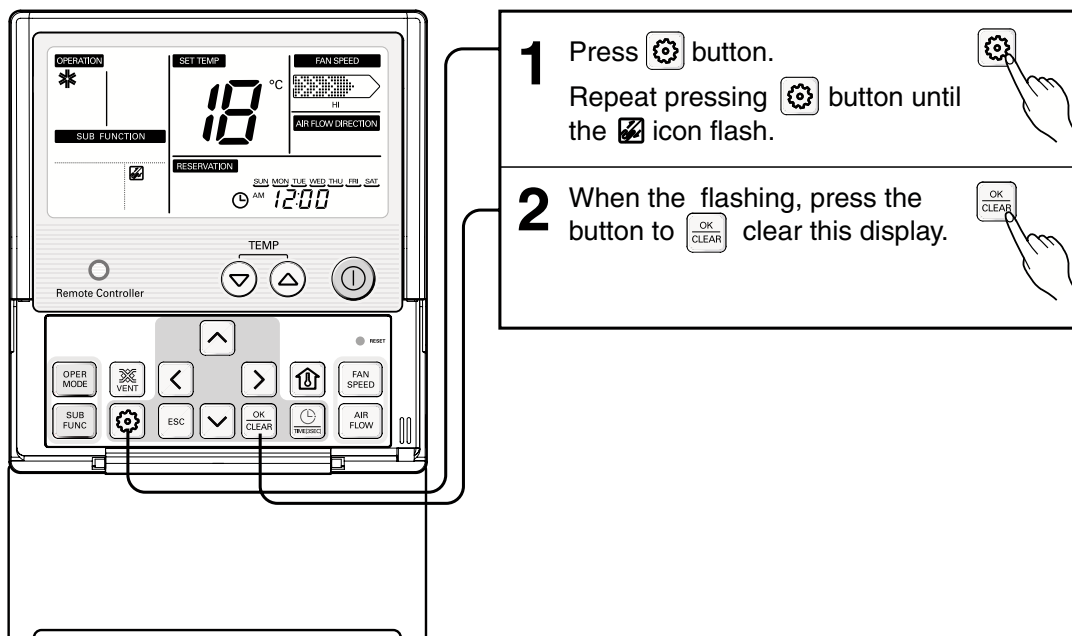

When filter is covered by dust, it will reduce cooling/ heating efficiency and accumulate more electric power. Therefore, do clean the filter whenever cleaning time is expired.

Function setting : Child Lock

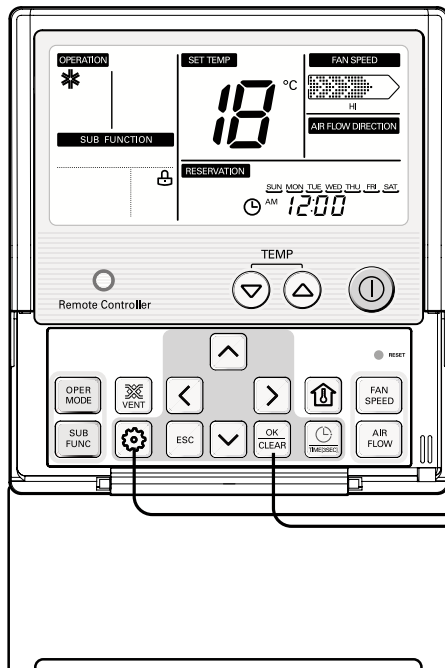

This function is to prevent children or other people from using indoor.


- Press  button.
- Repeat pressing  button until the  icon flash.



- When the button flashing, press  button to set this function.
- When setting this function,  icon will be displayed whenever entering any operation except for Room temperature access. However, it is possible to control normally by wireless remote controller.




To release this setting, keep pressing  button until  icon flash and then enter  button.

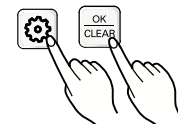

Function Setting : Mode Change Temp

This function is to set converting temp. of Auto Changeover

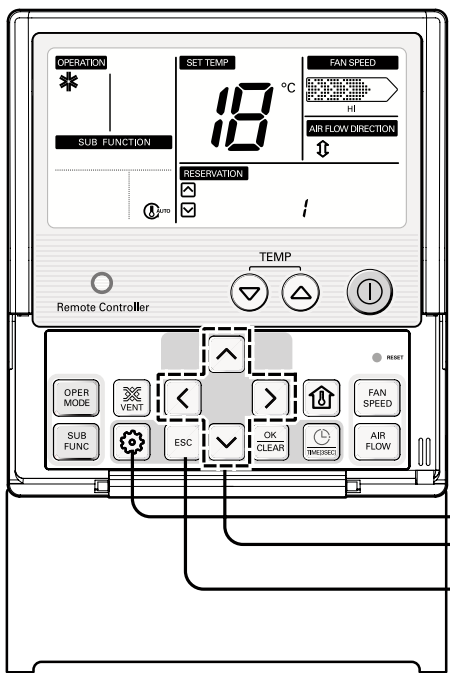


- 1 Press  button.
- 2 Repeat pressing  button until  icon flash.
Ex) Setting ACO Temp as '3'.
- 3 Press   button to change converting temp value : 1~7
 →   

- 4 Press  button to complete and active the setting process.

- 5 Press  button to exit or system will automatically release without any input after 25 seconds.

Changing Current Time

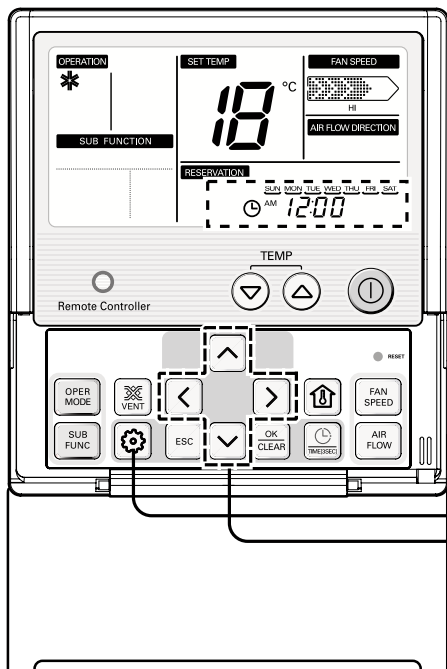


- 1 Keep pressing button for 4 secs to enter Setting current time mode.



Ex) Changing Current Time as 'Monday / AM 10:20'.


- 2 Press key to adjust the current day.

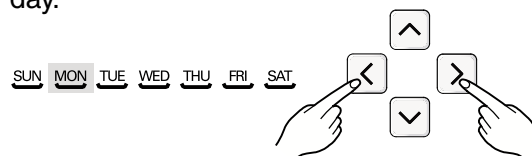

- 3 Press key to move to AM/ PM setting mode (the 'AM/ PM segment will flash).




- 4 Setting AM/ PM value by pressing button.

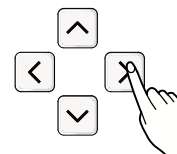


- 5 Press button to move to 'Hour' setting mode. (the 'Hour' segment will flash)




- 6 Setting Hour value by pressing button.

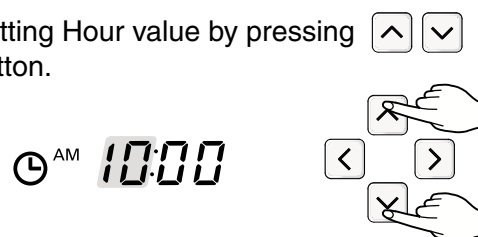

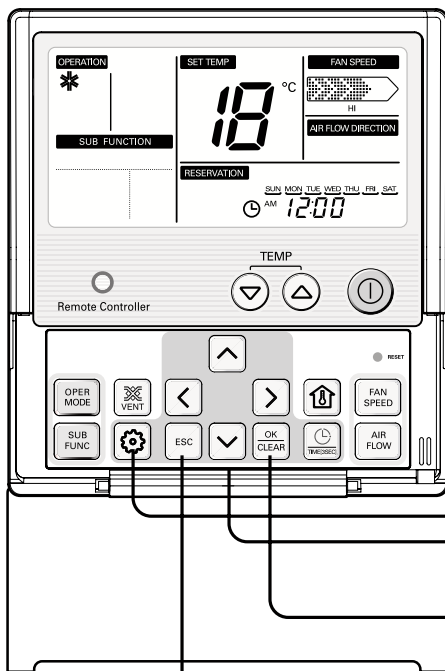


7 Press button to move to 'Minute' setting mode. (the 'Minute' segment will flash)

AM 10:00

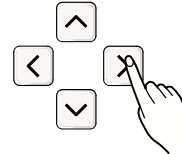

8 Setting Minute value by pressing button.

AM 10:20

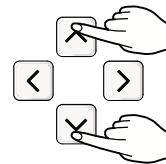

9 Press button to finish.

AM 10:20




10 In the process, press button to release and exit from setting mode. (In case of exit with incomplete information, it will return to the previous setting)



Programming : Setting Simple Reservation

In case of there is not any reservation setup on system, it is possible to make a SIMPLE reservation on indoor unit.

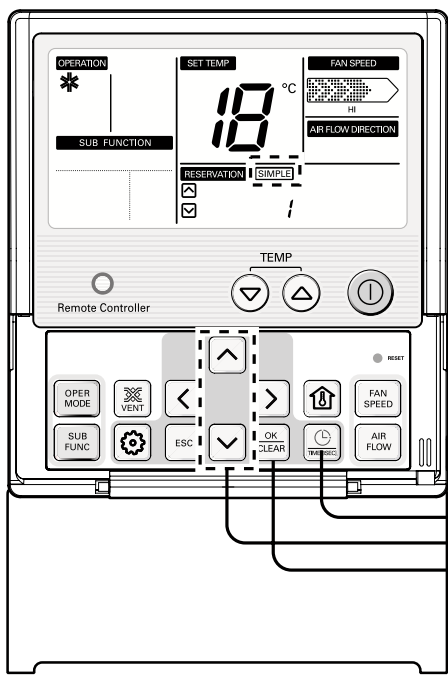

- Press  button to enter the Programming mode.
(the **SIMPLE** segment flashing)

Ex) Setting Simple Reservation time as '3'.
- Press   button to adjust reservation time.


 → 
- Press  button to finish setting.


- Adjusting the reservation time after finish reservation setting will release the previous one.

※ If the indoor is ON, we can make the reservation for turning OFF. In reserve, if the indoor is OFF, we can set the timer for turning ON. The reservation time is from 1 to 7 hours.

Programming : Setting Sleep Reservation

This function is able to turn off Air conditioner when sleeping or after some hours.

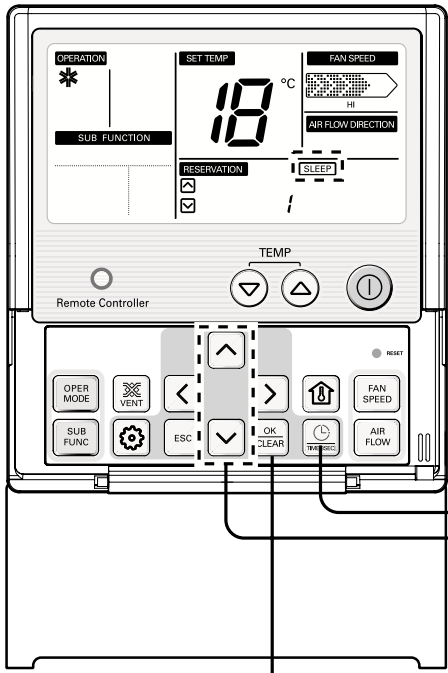

The diagram shows a remote control with various buttons. Callouts 1 through 5 point to specific buttons: 1 points to the 'TIMER' button, 2 points to the 'TIMER' button, 3 points to the 'UP' and 'DOWN' arrow buttons, 4 points to the 'OK/CLEAR' button, and 5 points to the 'OK/CLEAR' button.

- 1 Press  button to enter the Programming mode.
Ex) Setting Sleep Reservation time as '3'.
- 2 Repeat pressing  button to enter the SLEEP reservation setting mode.
( segment flashing)
- 3 Press   button to adjust reservation time.
The SLEEP reservation time is from 1 to 7 hours.


- 4 Press  button to finish setting.
Whenever reservation is done,  icon will flash.
When this setting is released,  icon will disappear.
- 5 Adjust the reservation time after finish reservation setting will release the previous one.

⚠ CAUTION

Please set a suitable time for sleep reservation.
(turning cooling for long time may be harmful to health)

Programming : Setting ON Reservation

This function is able to turn air conditioner ON after a setting time.

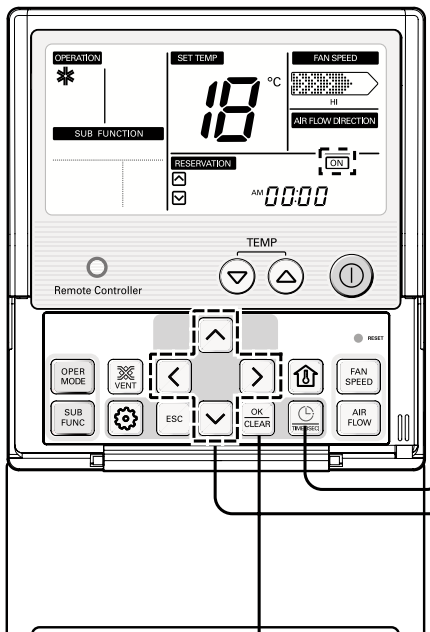

- Press  button.

Ex) Setting ON Reservation Time as 'AM 10:20'.
- Repeat pressing  button to enter the ON reservation setting mode.
( segment flashing)
- Press   button to adjust AM/ PM setting.

 AM 12:00
- Press   button to Hour setting mode. When the Hour icon flash, please setting time.
The setting range is within 1~12.

 AM 12:00

 AM 10:00
- Press   button to shift to Minute setting mode. When the Minute icon flash, please setting minute the setting range is within 00~59.


 AM 10:00

 AM 10:20
- Press  button to finish setting.

 AM 10:20

Programming : Setting OFF Reservation

This function is able to turn air conditioner OFF after a setting time.

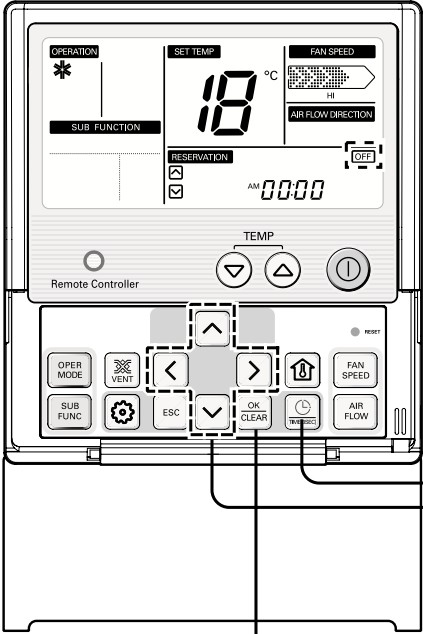

- Press  button.

Ex) Setting OFF Reservation Time as 'AM 10:20'.
- Repeat pressing  button to enter the OFF reservation setting mode.
( segment flashing)
- Press   button to adjust AM/ PM setting.

 AM 12:00
- Press   button to shift to Hour setting mode. When the Hour icon flash, please setting time.
The setting range is within 1~12.

 AM 12:00

 AM 10:00
- Press   button to shift to Minute setting mode. When the Minute icon flash, please setting minute the setting range is within 00~59.

 AM 10:00

 AM 10:20
- Press  button to finish setting.


 AM 10:20

Programming : Weekly Reservation


The weekly reservation is active after setting current time

1 Press programming button to enter the Programming mode. Repeat pressing button to select [Weekly reservation]. (The segment will be flashed) Ex) Setting one action as below. - Day : TUE - ON Time : 11:30 AM - OFF Time : 12:30 PM		
2 Press left, right button to adjust the current day.		
3 Press up, down button to adjust the action number.		
4 Press right button to move to 'Hour' Part on ON Time section. (The 'Hour' segment will be flashed)		
5 Press up, down button to adjust the Hour on Start Time section.		
6 Press right button to move to 'Minute' Part on Start time section. (The 'Minute' segment will be flashed)		


- 7** Press up, down button to adjust the Minute on Start Time section.

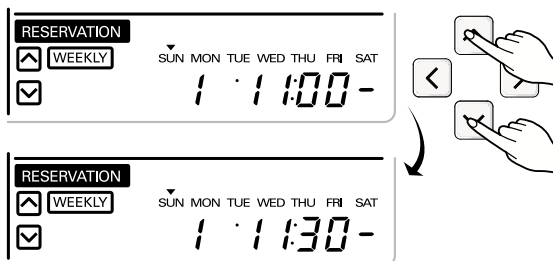


- 8** Press right button to move to 'Hour' Part on OFF Time section.
(The 'Hour' segment will be flashed)

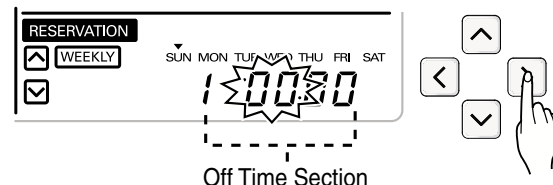


- 9** Please refer the process from No.5 to No.7 for setting OFF Time. It is same method.




- 10** If you finish the setting, press setting/cancel button to complete programming.
The under bar segment will be created, when it finished.

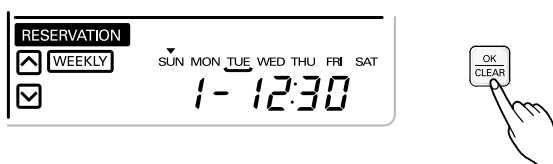

- 11** Please refer the process from No.2 to No.10 for setting other day weekly program. It is same method.




- 12** Press exit button to exit or system will automatically release without any input after 25 seconds.




<Note>

Description of weekly reservation

<Start Time Section>

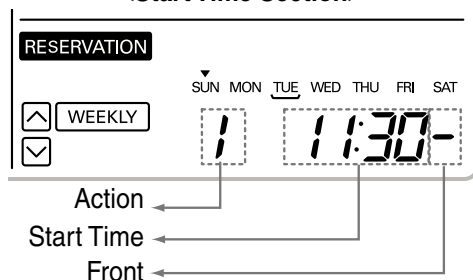


<Off Time Section>

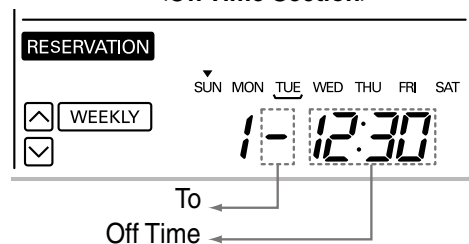

* Two actions per weekday can be programmed, in total 14 actions

Programming : Holiday Reservation

This function is to automatically stop the machine working on some days.

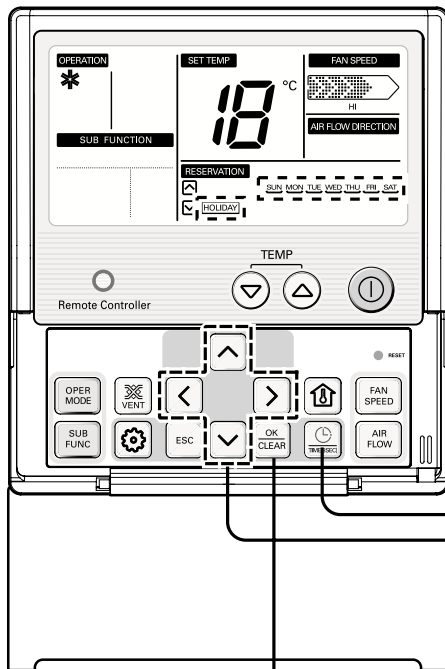


1 Press button to enter the reservation setting mode.




2 Repeat pressing button to enter the holiday reservation setting mode.
(**HOLIDAY** segment flashing)




3 Press button to move to holiday position.

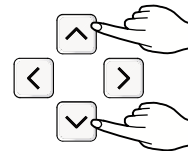

4 Press button to set or release a selected day as holiday or not.
(* the holiday is indicated with a underline)

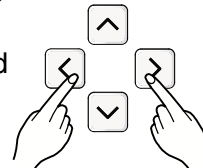

5 If there is any holiday from Monday to Sunday, **HOLIDAY** segment on LCD will be displayed.

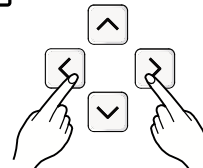


6 Press the button to exit or if there is not any input, system will release any setting after 10 seconds.



7 It is possible to set the air conditioner OFF in every "holiday"
(ex. 9:00, 10:00, 13:00)


Error code display function

When the error occurred in the indoor unit, then the error code will be displayed on remote controller - "CH" and error code number is displayed at regular intervals.

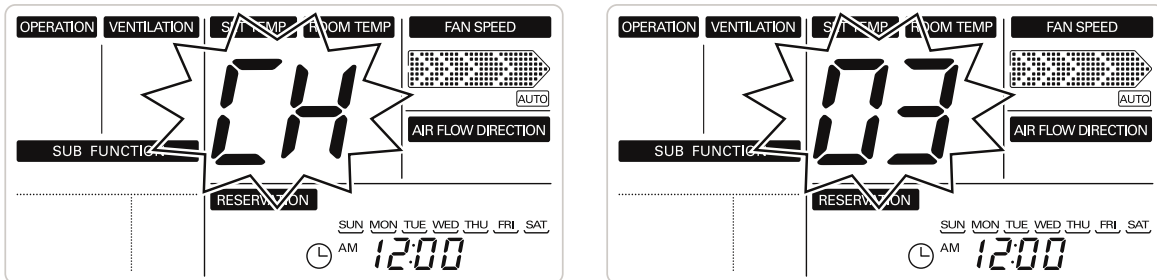



Ex) In case of "CH03"

When the remote controller is used in Group Control, the error code will be displayed as shown below (This is only apply for "CH03")

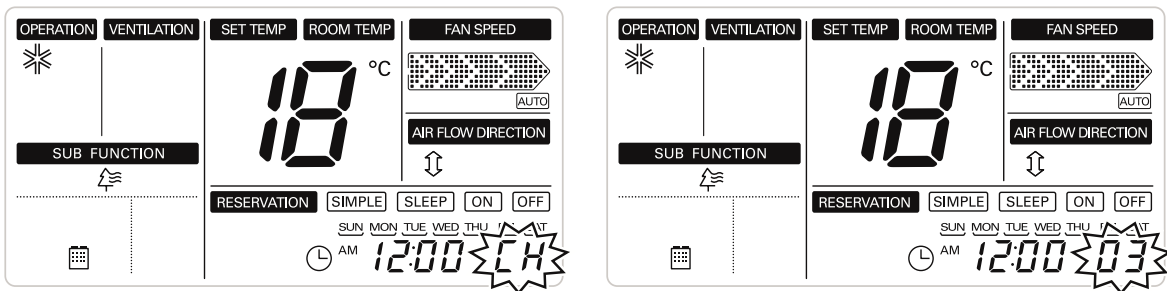

- "CH" and error code number is displayed at regular intervals beside the Clock (as shown in figure).

2 Error code displayed on PCB

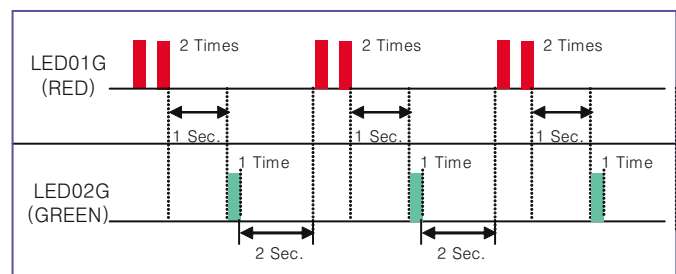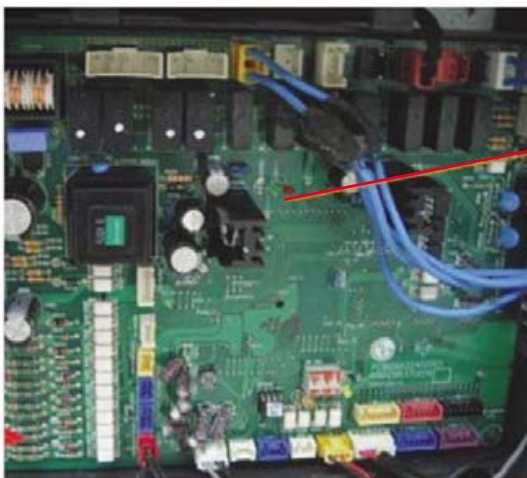

Ex) In case of "CH21"

Maintenance and Service


Indoor Unit

Grille, Case and Remote Control

- Turn the system off before cleaning, To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

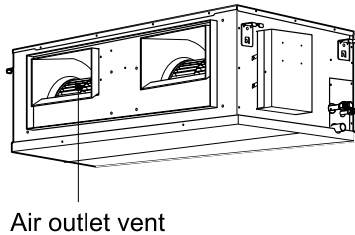

Call the service immediately in the following situations

1. Anything abnormal such as burning smell, loud noise etc. happen. Stop the unit and turn the breaker off. Never try to repair by yourself or restart the system in such cases.
2. Main power cord is too hot or damaged.
3. Error code is generated by self diagnosis.
4. Water leaks from indoor unit.
5. Any switch, breaker (safety, earth) or fuse fails to work properly

User must carry routine checkup & cleaning to avoid unit's poor performance.
In case of special situation, the job must be carried out by service person only

Operation Tips !

Do not overcool the room.

This is not good for the health and wastes electricity.

Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in cooling operation.

Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the air conditioned air in the room.

Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room from time to time.

Filter

The units shipped without a filter and is the responsibility of ductwork.

Filter must always be used and must be kept clean.

When filters become dirt laden, insufficient air will be delivered and increasing operating costs and wear-and-tear on the units and

Filters should be checked monthly especially since the unit may

the installer to secure a filter in the return air

red by the blower, decreasing your units efficiency and controls.

be used for both heating and cooling

When the air conditioner is not going....

When it is not going to be used for a long time.

1 Operate the air conditioner on Air circulation mode for 2 to 3 hours.

- This will dry out the internal parts.

2 Turn off the circuit breaker.

CAUTION: Turn off the circuit breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and may cause a fire.

3. Remove the batteries from the Remote Controller.

When the air conditioner is to be used again.

- Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

Troubleshooting Tips !Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

Case	Explanation	See page
The air conditioner does not operate.	• Have you made a mistake in timer operation? • On first starting, the indoor unit operates in fifteen seconds. • Has the fuse blown or has the circuit breaker been tripped?	18
The room has a peculiar odor.	• Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.	-
It seems that condensate is leaking from the air Conditioner.	• Condensation occurs when the airflow from the air conditioner cools the warm room air.	-
Air conditioner does not operate for about 3 minutes when restart.	• This is the protector of the mechanism. • Wait about three minutes and operation will begin.	-
Does not cool or heat effectively.	• Is the air filter dirty? See air filter cleaning instructions. • The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. • Has the setting temperature been set incorrectly? • Are the indoor unit's air inlet or outlet vents obstructed?	8,9
The air conditioner operation is noisy.	• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit. • For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.	-
Crack sound is heard.	• This sound is generated by the expansion/contraction of the inlet grille, etc. due to changes of temperature.	-
Remote control display is faint, or no display at all.	• Has the circuit breaker been tripped?	-

Panasonic Corporation

Website: <http://panasonic.net/>

MFL62048503

Printed in China