

AIR CONDITIONER (SPLIT TYPE) Owner's Manual



For commercial use สำหรับใช้งานเชิงพาณิชย์

Indoor Unit

Model name:

Ceiling Type


42TSV0131CP 42TSV0181CP

42TSV0241CP

42TSV0361CP

42TSV0401CP

42TSV0401CP1

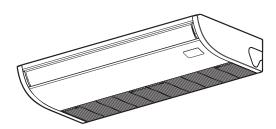



1115653804

 Owner's Manual
 1
 English

 คู่มือการใช้งาน
 14
 ภาษาไทย

Carrier 1115653804_EN TH.indb 1 3/28/16 4:42 PM

Original instruction

ADOPTION OF NEW REFRIGERANT

This Air Conditioner uses R410A an environmentally friendly refrigerant.

According to IEC 60335-1

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

According to EN 60335-1

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

"Maschinenlärminformations-Verordnung - 3. GPSGV, der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779."

Contents

1	Precautions for safety	. 3
2	Part names	. 5
3	Wired remote controller	. 5
4	Correct usage	. 7
5	Timer operation	. 7
6	Adjustment of wind direction	. 8
	Power saving mode	
8	Maintenance	10
	Troubleshooting	
10	Operations and performance	12
11	Installation	13

1-EN 2-EN

Please read carefully through these instructions that contain important information which complies with the "Machinery" Directive (Directive 2006 / 42 / EC), and ensure that you understand them.

After reading these instructions, be sure to keep them in a safe place together with the Installation Manual supplied with your product.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you. A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
Qualified installer	The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.
Qualified service person	The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.

■ Warning indications on the air conditioner unit

Warning indication	Description
WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.
Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.	WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.
CAUTION High temperature parts. You might get burned when removing this panel.	CAUTION High temperature parts. You might get burned when removing this panel.
CAUTION Do not touch the aluminum fins of the unit. Doing so may result in injury.	CAUTION Do not touch the aluminum fins of the unit. Doing so may result in injury.
CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.

ΕN

3-EN -2 -

Carrier 1115653804_EN TH.indb 2 3/28/16 4:42 PM

1 Precautions for safety

The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.



Genera

- Carefully read Owner's Manual before starting the air conditioner. There are many important things to keep in mind for daily operation.
- Ask for installation to be performed by the dealer or a professional. Only a qualified installer (*1) is able to install an
 air conditioner. If a non-qualified person installs an air conditioner, it may result in problems such as fire, electric
 shock, injury, water leakage, noise and vibration.
- Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Places where the operation sound of the outdoor unit may cause a disturbance. (Especially at the boundary line with a neighbour, install the air conditioner while considering the noise.)

Transportation and storage

- · To transport the air conditioner, wear shoes with protective toe caps, protective gloves, and other protective clothing.
- To transport the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if
 the bands should break.
- Before stacking the packing cartons for storage or transportation, heed the precautions written on the packing cartons. Failure to heed the precautions may cause the stack to collapse.
- The air conditioner must be transported in stable condition. If any part of the product broken, contact your dealer.
- · When the air conditioner must be transported by hand, carry it by two or more people.

Installation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air
 conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the
 work properly may result in electric shocks and/or electrical leaks.
- After the installation work has been completed, have the installer explain about the circuit breaker positions. In the
 event that trouble has occurred in the air conditioner, set the circuit breaker to the OFF position, and contact a
 qualified service person (*1).
- If the unit is installed in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.
- Do not install the air conditioner in a location that may be subject to a risk of expose to a combustible gas. If a
 combustible gas leaks and becomes concentrated around the unit, a fire may occur.
- Use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other trouble. Have the installation performed by a professional.
- . Confirm that earthing is performed correctly.

Operation

- Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
- Inside the air conditioner are high-voltage areas and rotating parts. Due to the danger of electric shocks or of your
 fingers or physical objects becoming trapped in the rotating parts, do not remove service panel of the outdoor unit.
 When work involving the removal of these parts is required, contact a qualified installer (*1) or a qualified service
 person (*1).
- Do not move or repair any unit by yourself. Since there is high voltage inside the unit, you may get electric shock when removing the cover and main unit.
- Use of a stand more than 50 cm high to clean the filter of the indoor unit or to carry out other such jobs constitutes
 working at heights. Due to the danger of falling off the stand and injuring yourself while working at heights, this kind
 of work should not be done by unqualified individuals. When this kind of work must be carried out, do not do it yourself
 but ask a qualified installer (*1) or a qualified service person (*1) to do it for you.
- Do not touch the aluminum fin of the outdoor unit. You may injure yourself if you do so. If the fin must be touched, do
 not touch it yourself but contact a qualified installer or a qualified service person.
- Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury.
- Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise
 it may cause imperfect combustion.
- When the air conditioner is operated with a combustion appliance in the same place, ventilate the room sufficiently.
 Poor ventilation causes oxygen shortage.
- When the air conditioner is used in a closed room, sufficiently ventilate the room. Poor ventilation causes oxygen shortage.
- Do not expose your body to cool air directly for a long time and do not cool yourself excessively.
- Doing so may result in deteriorated physical condition and ill health
- Do not insert your finger or a stick into the air intake or discharge.
- Doing so may result injury as the fan is rotating at high speed inside the unit.
- Consult the shop where you purchased the air conditioner if air conditioning (cooling and heating) is not performed properly as a refrigerant leakage may be the cause. Confirm the repair details with a qualified service person (*1) when the repair includes additional charging of the refrigerant.
- Stop running the air conditioner and turn off the breaker before cleaning.
 Otherwise, injury may result as the fan is rotating at high speed inside the unit.

Repairs

- If there is any kind of trouble (such as when an error display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person (*1). Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person (*1) arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other trouble.
- If the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.
- If there is a danger of the indoor unit's falling, do not approach the indoor unit but set the circuit breaker to the OFF
 position, and contact a qualified installer (*1) or a qualified service person (*1) to refit the unit. Do not set the circuit
 breaker to the ON position until the unit has been refitted.
- If there is a danger of the outdoor unit's toppling over, do not approach the outdoor unit but set the circuit breaker to
 the OFF position, and contact a qualified installer (*1) or a qualified service person (*1) to have the improvements or
 refitting done. Do not set the circuit breaker to the ON position until the improvements or refitting is completed.
- · Do not customize the unit. Doing so may result in fire, electric shock or other trouble.

Relocation

 When the air conditioner is to be relocated, do not relocate it yourself but contact a qualified installer (*1) or a qualified service person (*1). Failure to relocate the air conditioner properly may result in electric shocks and/or a fire.

5-EN 6-EN

ACAUTION

To disconnect the appliance from the mains supply.

• This appliance must be connected to the mains by means of a switch with a contact separation of at least 3 mm.

The installation fuse (all types can be used) must be used for the power supply line of this air conditioner. Installation

- Certainly lay the drain hose for perfect draining. Improper drainage may cause flooding in the house and getting furniture wet.
- Connect the air conditioner to an exclusive power supply of the rated voltage, otherwise the unit may break down or cause a fire.
- · Confirm that the outdoor unit are fixed on the base. Otherwise, falling down of the units or other accidents may occur.

Operation

- Do not use this air conditioner for special purpose such as preserving food, precision instruments, art objects, breeding animals, car, vessel.
- · Do not touch any switches with wet finger, otherwise you may get an electric shock.
- If the air conditioner will not be used for a considerably long time, turn off the main switch or the circuit breaker, for safety.
- To make the air conditioner operate in its original performance, operate it within the range of the operating temperature specified in the instructions. Otherwise it may cause a malfunction, or water leak from the unit.
- · Prevent any liquid from falling into the remote controller. Do not spill juice, water or any kind of liquid.
- · Do not wash the air conditioner. Doing so may result in electric shock.
- Check whether the installation base and other equipment have become deteriorated after being used for a long time.
 Leaving them such condition may result in the unit's falling down and causing injury.
- Do not leave flammable sprays or other flammable materials near the air conditioner, and do not spray flammable aerosol directly to the air conditioner. They may catch fire.
- · Stop running the air conditioner and turn off the breaker before cleaning.
- Otherwise, injury may result as the fan is rotating at high speed inside the unit.
- Ask for cleaning of the air conditioner to be performed by the dealer.
- Cleaning the air conditioner in an improper manner may cause damage to plastic parts, insulation failure of electric parts or other parts, and result in a malfunction. In the worst case, it may result in water leakage, electric shock, smoke emission or fire.
- · Do not put a water container such as a vase on the unit.
- Water intrusion into the unit may occur and it may cause deterioration of electric insulation and result in electric shock.
- · Do not wash air conditioners with pressure washers. Electric leaks may cause electric shocks or fires.

■ Information on the transportation, handling and storage of the carton

◆Examples of indication on the carton

Symbol	Description	Symbol	Description
予	Keep dry	DO NOT DROP	Do not drop
FRAGILE	Fragile	DO NOT LAY DOWN	Do not lay down
11 cartons	Stacking height (12 cartons can be stacked in this case)	DO NOT WALK ON THIS CARJON	Do not walk on this carton
<u> </u>	This side up		Do not step
	Handle with care		

Other cautions	Description
Injury possibility. Don't handle with packing band, or may get injured in case of broken band.	CAUTION Injury possibility. Don't handle with packing band, or may get injured in case of broken band.
lay a 10mm thick plywood over the pallet.	Stacking notice. In case that cardboard boxes protrude out of pallet when stacking. lay a 10 mm thick plywood over the pallet.

El


7-EN **-4-**

Carrier 1115653804_EN TH.indb 4 3/28/16 4:42 PM


^(*1) Refer to the "Definition of Qualified Installer or Qualified Service Person".

Part names

■ Indoor unit

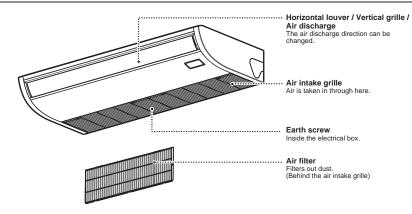

■ Outdoor unit (The design varies depending on the outdoor unit. The following illustration shows an example.)

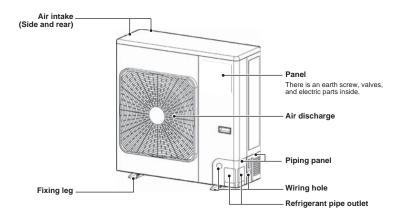

3 Wired remote controller


This remote controller can control the operation of up to 8 indoor units.


■ Display section

In the display illustration below all the icons are shown. When the unit is in operation, only relevant icons will be displayed.

- When the leak breaker is turned on for the first time, sering flashes on the display part of the remote controller.
- While this icon is flashing, the model is being automatically confirmed.

Wait till sering icon has disappeared to use the remote controller.



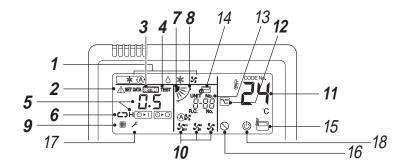

1 Operation mode

The selected operation mode is displayed.

2 Error display

Displayed while the protective device works or a error occurs.

3 SETTING display

Displayed during setup of the timer or other settings.

4 TEST run display

Displayed during a test run.

5 Timer display

When an error occurs, error code is displayed.

6 Timer mode display

The selected timer mode is displayed.

7 Louver position display

Displays louver position.

8 Swing display

Displayed during up / down movement of the louver

9 Filter display

Reminder to clean the air filter.

10Fan speed display

The selected fan speed mode is displayed.

(Auto)	(A)S
(High)	\$50°
(Med.)	35
(Low)	\$¢


11Set temperature display

The selected set temperature is displayed.

12 Power saving mode display

Limits compressor speed (capacity) to save energy.

9-EN 10-EN

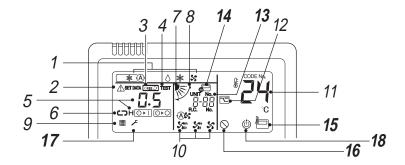

13 UNIT No. display

Displays the number of the indoor unit selected. Also displays error code of indoor and outdoor units.

14 Central control display

Displayed when the air conditioner is used under the central control in combination with a central control remote controller.

In case the remote controller is disabled by the central control system, flashes.

The button operation is not accepted.

Even when ON / OFF, MODE, or TEMP. button is pushed, and the button operation is not accepted. (Settings made by the remote controller vary with the central control mode. For details, refer to the Owner's Manual of the central control remote controller.)

15 Remote controller sensor display

Displayed while the sensor of the remote controller is used.

16 No function display

Displayed when the function requested is not available on that model.

17 Service display


18 Operation ready display

This display appears on some models.

■ Operation section

Push each button to select a desired operation.

• The control saves commands in memory and after the initial setting, there is no need for any additional settings unless changes are desired. The air conditioner can be operated by pushing the

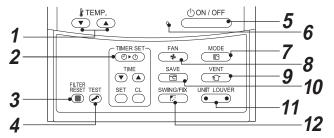

1 button (Temperature set button) Adjusts the set point.

Select the desired set point by pushing & TEMP.

v or & TEMP. •

2 TIMER SET DUTTON (Timer set button)

Use to setup the timer.

3 button (Filter reset button)

Resets " III " display after cleaning filter.

4 button (Test button)

Use only for service. (During normal operation, do not use this button.)

5 ON/OFF button

When the button is pushed, the operation starts, and it stops by pushing the button again.
When the operation has stopped, the operation lamp and all the displays disappear.

6 Operation lamp

Green light illuminates when unit is on. Although it flashes when the protection device is operated or an error occurs.

7 B button (Operation mode button) Selects desired operation mode.

8 button (Fan speed button) Selects the desired Fan speed.

9 (VENT) button (Ventilation button)

Use when a power ventilation kit (locally procured) is connected.

 If "\(\int\)" is displayed on the remote controller when this button is pushed, no vent kit connected.

10 $\stackrel{\text{\tiny SAVE}}{\boxdot}$ button (Power save operation)

Use to initiate power saving mode.

11 button (Unit / Louver select button)

Selects a unit number (left) and louver number (right).

UNIT:

Selects an indoor unit when adjusting wind direction multiple indoor units are controlled with one remote controller.

LOUVER:

Selects a louver when wind direction adjustment is set independently.

12 button (Swing / Louver direction button)

Selects automatic swing or setting the louver direction.

♦ OPTION:

Remote controller sensor

Usually the temperature sensor of the indoor unit senses the temperature. The temperature on the surrounding of the remote controller can also be sensed.

For details, contact the dealer from which you have purchased the air conditioner.

ΕN

11-EN 12-EN

Carrier 1115653804_EN TH.indb 6 3/28/16 4:42 PM

4 Correct usage


When the air conditioner is used for the first time or when the setting is changed, follow the steps below. Settings are saved in memory and are displayed anytime the unit is turned on by pushing the OONIGET, button.

■ Preparation

- · When the circuit breaker is turned on, the partition lines are displayed on the remote controller.
- * After the circuit breaker is turned on, the remote controller does not accept any commands for approx. 1 minute, this is not a failure.

REQUIREMENT

When the air conditioner is re-powered after it has not been used for a long period, turn on the circuit breaker at least 12 hours before starting the air conditioner.

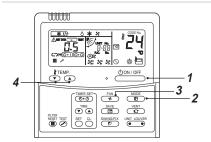


♦ Start

1 Push ON/OFF button.

The operation lamp illuminates, and the operation starts.


2 Select an operation mode with the " MODE "

One push of the button, and the display changes in the order shown below.



3 Select fan speed with " button.

One push of the button, and the display changes



- When fan is in " (A) Auto", fan speed is adjusted based on difference between set point and room temperature.
- The temperature sensor detects the return air temperature at the indoor unit, which differs from the room temperature depending on the installation condition.

Set point is a target of room temperature. ((A) "Auto" is not selectable in the Fan mode.)

4 Select the set point temperature by pushing the "TEMP. ▼" or "TEMP. ▲" buttons.

◆ Stop

Push ONLOFF button.

The operation lamp goes off, and the operation stops.

NOTE

Auto Changeover

- During Auto Mode, the unit selects the operating mode (cooling, or fan only) based on the user set point temperature.
- If the Auto mode is uncomfortable, you can select the desired conditions manually.

Cooling

If there is a demand for cooling, unit will start approximately 1 minute after mode is selected.

When the operation is attempted to restart after stop

When the unit is attempted to restart immediately after it was stopped, the unit can not start for approx. 3 minutes this is to protect the compressor.


5 Timer operation

• Three timer modes are available: (Setting of up to 168 hours is enabled.)

Off timer : The unit stops when the set time is reached.

Repeat Off timer : The unit stops daily when the set time is reached.


On timer : The unit starts when the set time is reached.



◆ Set

1 Push (0.0) button.

The timer mode changes with every push of the button.



· SETTING and timer display flashes.

2 Push ♥ to select "set time".

- With every push of button, the set time decreases by 0.5 hr (30 minutes) (0.5 23.5 hours) or 1 hr (24 168 hours).

Example of remote control display

23.5 hours (*1)



34 hours (*2)



shows 1 day (24 hours).

shows 10 hours. (Total 34 hours)

3 Push [™] button.

icon disappears and time display goes on, and () i or () con flashes. (When On timer is activated, time and On timer () i are icons and other icons disappear.)

4 Cancel timer operation.

Push button.
Timer icon disappears.

NOTE

- When the operation stops after the timer reached the preset time, the Repeat Off timer resumes the operation by pushing ODNIOFF button and stops the operation after the time of the timer has reached the set time.

This is due to normal processing of the remote controller.

13-EN 14-EN

6 Adjustment of wind direction


For best cooling performance, adjust the louvers (adjustment plates of up / down wind direction) appropriately. Cold air descends and warm air rises, so to cool a room tilt them horizontally.

! CAUTION

Direct the louvers horizontally for cooling. If the louvers stay pointed downward during cooling, condensation may form on the discharge port and / then drops from the louvers.

 When operation is stopped, the horizontal louver (plate for adjusting the vertical air flow) automatically closes.





♦ How to set up the wind direction

1 Push wing operation.

The wind direction changes for every push of the button

In Cool / Dry operation

Direct the louver (adjustment plate of up / down wind direction) horizontally. If directing it downward, the dew may form on the surface of the air discharge port and may drop down.



In Fan operation

Select a desired wind direction.



♦ How to start swinging

1 Push , set the louver (adjustment plate of up / down wind direction) direction to the lowest position, and then push , again. SWING , is displayed and the up / down wind direction is automatically selected.

Display during swinging



♦ How to stop swinging

1 Push at a desired position while the louver is swinging.

When swing is pushed after that, wind direction can be set again from the highest position.

Display when swinging is stopped



In this case, push (graph again two seconds later.

 In Cool / Dry operation, the louver does not stop as it directs downward. If stopping the louver as it directs downward during swing operation, it stops after moving to the third position from the highest position.

Display when stopping the swing



◆ Unit select button


- When multiple indoor units are controlled with one remote controller, wind direction can be set for each indoor unit by selecting individually.
- When no indoor unit number is displayed, all indoor units in the control group can be controlled simultaneously.
- Each time button (left side of the button) is pushed, the display changes as follows:





Horizontal air flow adjustment

To change the horizontal air flow direction, point the vertical louvers inside the horizontal louver in your preferred direction.



NOTE

 When the horizontal louver is pointing downward in COOL mode, water droplets may form on the surface of the cabinet or louver and drop down.

15-EN -8-

Carrier 1115653804_EN TH.indb 8 3/28/16 4:42 PM

7 Power saving mode

The power saving mode saves energy by limiting the maximum current which will effect cooling capacity that the unit can generate.

Push $\stackrel{\text{\tiny SAVE}}{\begin{subarray}{c}{|}}$ button during operation.


- The air conditioner enters power saving mode.
- Tag appears on the display.

Power saving mode will stay in effect until it is cancelled.

To cancel the power saving mode, push 🖰 button again.

disappears.


■ To configure the power saving mode settings

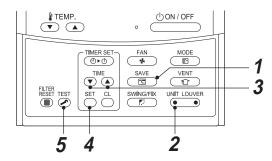

- 1 Push 🐯 button for at least four seconds when the air conditioner is not working.
 - SETTING, symbol, and numbers flash.
- **2** Push $\frac{\text{UMT LOUVER}}{(G-1)}$ (left side of the button) to select an indoor unit to be set.
 - Each time you push the button, UNIT No. change as follows:

The fan of the selected unit runs.

- $\textbf{3} \ \, \text{Push} \, \textcircled{\tiny{\tiny{\tiny{TIME}}}} \, \textcircled{\tiny{\tiny{\tiny{A}}}} \, \text{buttons, to adjust the power saving mode setting.}$
 - Each push of the button changes the power level by 1 % within the range from 100 % to 50 %.
 - · The factory default is 75 %.



- **4** Push ^{SET} button.
- 5 Push Button to complete the setting.

NOTE

- During a Power save operation, the maximum current of the outdoor unit is limited. The operating power consumption
 might not be lowered, however, under certain conditions.
- Capability of the air conditioner is saved during the Power save operation. The room may not become cool or warm
 enough.
- A Power save operation cannot be programmed with the central control remote controller and depending on the installation conditions of the outdoor unit.
- If multiple units are connected as a group, all of them are put in Power save mode.
- The Power save feature might be restricted, depending on the outdoor unit used. For details, contact the original retailer

17-EN

8 Maintenance


⚠ WARNING

Cleaning the air filter and other parts of the air filter involves dangerous work in high places. Ask a qualified
installer or qualified service person to do it. Do not attempt it by yourself.

Cleaning air filters

Clogged air filters will reduce the cooling performance

- (1) If "\omega" is displayed on the remote controller, clean the air filters.
- (2) When the cleaning of air filters has been completed, push 👸 button. "\" disappears.



♦ When the unit will not be used for a long time

- 1. Perform the fan operation for a couple of hours to dry inside.
- 2. Push (DON/OFF) on the remote controller to stop running, and turn off the circuit breaker.
- 3. Clean the air filters and reinstall them.

♦ Before the cooling season

Clean the drain pan.

Contact the dealer where you purchased the product.

(Drain does not work if the drain pan or vent is clogged. In some cases the drain may overflow and wet the wall or floor. Clean the drain pan before the cooling season.)

♦ Check periodically

- If the unit is used for a long time, parts may deteriorate and cause malfunction or bad drainage of dehumidified water depending on the heat, humidity, or dust.
- In addition to the usual maintenance, it is recommended that you have the unit checked and maintained by the dealer where you purchased it.

NOTE

For environmental conservation, it is strongly recommended that the indoor and outdoor units of the air conditioner in use be cleaned and maintained regularly to ensure efficient operation of the air conditioner.

When the air conditioner is operated for a long time, periodic maintenance (once a year) is recommended. Furthermore, regularly check the outdoor unit for rust and scratches, and remove them or apply rustproof treatment, if necessary.

As a general rule, when an indoor unit is operated for 8 hours or more daily, clean the indoor unit and outdoor unit at least once every 3 months. Ask a professional for this cleaning / maintenance work.

Such maintenance can extend the life of the product though it involves the owner's expense.

Failure to clean the indoor and outdoor units regularly will result in poor performance, freezing, water leakage, and even compressor failure.

Maintenance List

Part	Unit	Check (visual / auditory)	Maintenance
Heat exchanger	Indoor / outdoor	Dust / dirt clogging, scratches	Wash the heat exchanger when it is clogged.
Fan motor	Indoor / outdoor	Sound	Take appropriate measures when abnormal sound is generated.
Filter	Indoor	Dust / dirt, breakage	Wash the filter with water when it is contaminated. Replace it when it is damaged.
Fan	Indoor	Vibration, balance Dust / dirt, appearance	Replace the fan when vibration or balance is terrible. Brush or wash the fan when it is contaminated.
Air intake / discharge grilles	Indoor / outdoor	Dust / dirt, scratches	Fix or replace them when they are deformed or damaged.
Drain pan	Indoor	Dust / dirt clogging, drain contamination	Clean the drain pan and check the downward slope for smooth drainage.
Ornamental panel, louvers	Indoor	Dust / dirt, scratches	Wash them when they are contaminated or apply repair coating.
Exterior	Outdoor	Rust, peeling of insulator Peeling / lift of coat	Apply repair coating.

E٨

19-EN 20-EN

Carrier 1115653804_EN TH.indb 10 3/28/16 4:42 PM

9 Troubleshooting

Check the points described below before requesting repair.

	Symptom	Cause
	Outdoor unit • A noise is heard when the power is turned on.	The outdoor unit is preparing for running.
It is not a malfunction.	Sometimes a swishing is heard. Indoor unit A clacking sound is heard.	When the unit starts running, during operation, or immediately after the unit stops running, a sound such as water flowing may be heard, or the operation sound may become louder for a couple of minutes immediately after the unit starts running. This is the sound of the refrigerant flowing or the dehumidifier draining. This is a sound generated when the heat exchanger, etc. expands and contracts slightly due to temperature change.
=	Discharged air smells unusual.	Various smells from the walls, carpet, clothes, cigarette, cosmetics, etc. adhere to the air conditioner.
	The unit does not run.	Has a blackout occurred? Has the circuit breaker blown? Has the protective device been activated? (The operation indicator and on the remote controller are blinking.)
Check again.	The room does not cool down.	Is the air intake or discharge of the outdoor unit clogged? Is a door or window open? Is the air filter clogged with dust? Is the air volume set to "Low"? or is the operation mode set to "Fan"? Is the setup temperature appropriate?

If you find something unusual even after checking the above, stop running the unit, turn off the circuit breaker, and inform the dealer where you purchased the product of the product number and symptom. Do not attempt to repair the unit by yourself as doing so is dangerous. If the check indicator (E_{0}^{n} I, F_{0}^{n} I, H_{0}^{n} I etc.) is displayed on the remote controller LCD, inform the dealer of its content as well.


If any of the following occur, stop running the unit immediately, turn off the circuit breaker, and contact the dealer where you purchased the product.

- · The switch does not work properly.
- · The circuit breaker often blows out.
- · You unintentionally put a foreign object or water inside.
- The unit cannot be run even after the cause of the protective device activation is removed.
- · Other unusual conditions are found.

■ Confirmation and check


When an error occurred in the air conditioner, an error code and indoor UNIT No. appear on the display part of the remote controller.

The error code is only displayed during the operation. If the display disappears, operate the air conditioner according to the following "Confirmation of error log" for confirmation.



■ Confirmation of error log

When an error occurred on the air conditioner, the error log can be confirmed with the following procedure. (The error log is stored in memory up to 4 errors.) The log can be confirmed from both operating status and stop status.



1 When pushing [™] and [™] buttons at the same time for 4 seconds or more, the following display appears.

If \not is displayed, the mode enters in the error log mode.

- [01: Order of error log] is displayed in CODE
 No.
- [Error code] is displayed in CHECK.
- [Indoor unit address in which an error occurred] is displayed in Unit No..



2 Every pushing of D button used to set temperature, the error log stored in memory is displayed in order.

The numbers in CODE No. indicate CODE No. [01] (latest) \rightarrow [04] (oldest).

REQUIREMENT

Do not push $\stackrel{\alpha}{\longrightarrow}$ button because all the error log of the indoor unit will be deleted.

3 After confirmation, push ∌ button to return to the usual display.

21-EN 22-EN 22-EN

Carrier 1115653804_EN TH.indb 11 3/28/16 4:42 PM

10 Operations and performance

▼ Check before running

- Check whether the earth wire is cut or disconnected.
- Check whether the air filter is installed.
- Turn on the circuit breaker 12 hours or more before starting operation.

▼ 3 minutes protection function

3-minutes protection function prevents the air conditioner from starting for initial 3 minutes after the main power switch / circuit breaker is turned on for restarting the air conditioner.

▼ Power failure

Power failure during operation will stop the unit completely.

- To restart the operation, push the ON / OFF button on the remote controller.
- Lightning or a wireless car telephone operating nearby may cause the unit to malfunction. Turn off the main power switch or circuit breaker and then turn them on again. Push the ON / OFF button on the remote controller to restart.

▼ Group control

Up to 8 units can be operated simultaneously using a wired remote controller (sold separately). For details, consult you local dealer.

▼ Protective device

- Stops operation when the air-conditioner is overloaded.
- If the protective device is activated, the unit stops running, and the operation indicator and check indicator on the remote controller blink.

▼ If the protective device is activated

- Turn off the circuit breaker and perform a checkup.
 Continued running may cause a malfunction.
- Check whether the air filter is installed. If not, the heat exchanger may be clogged with dust and water leakage may occur.

▼ During cooling

- The air intake or discharge of the outdoor unit is clogged.
- Strong wind continuously blows against the discharge of the outdoor unit.

▼ Do not turn off the circuit breaker

 During the air-conditioning season, leave the circuit breaker turned on, and use the ON / OFF key on the remote controller.

▼ Air conditioner operating conditions

For proper performance, operate the air conditioner under the following temperature conditions:

	Outdoor tempera	ture : 15 °C to 46 °C (Dry bulb temp.)
Cooling operation	Room temperatu	re : 21 °C to 32 °C (Dry bulb temp.), 15 °C to 24 °C (Wet bulb temp.)
0 .	[CAUTION]	Room relative humidity – less than 80 %. If the air conditioner operates in excess of this figure, the surface of the air conditioner may cause dewing.

If air conditioner is used outside of the above conditions, safety protection may work.

ΕN

23-EN 24-EN

Carrier 1115653804_EN TH.indb 12 3/28/16 4:42 PM

11 Installation

Do not install the air conditioner in the following places

- Do not install the air conditioner in any place within 1 m from a TV, stereo, or radio set. If the unit is installed in such place, noise transmitted from the air conditioner affects the operation of these appliances.
- Do not install the air conditioner near a high frequency appliance (sewing machine or massager for business use, etc.), otherwise the air conditioner may malfunction.
- Do not install the air conditioner in locations where iron or other metal dust is present. If iron or other metal dust adheres to or collects on the interior of the air conditioner, it may spontaneously combust and start a fire.
- Do not install the air conditioner in a humid or oily place, or in a place where steam, soot, or corrosive gas is generated.
- Do not install the air conditioner in a salty place such as seaside area.
- Do not install the air conditioner in a place where a great deal of machine oil is used.
- · Do not install the air conditioner in a place where it is usually exposed to strong wind such as in seaside area.
- · Do not install the air conditioner in a place where sulfureous gas generated such as in a spa.
- · Do not install the air conditioner in a vessel or mobile crane.
- Do not install the air conditioner in an acidic or alkaline atmosphere (in a hot-spring area or near a chemicals factory, or in a place subject to combustion emissions). Corrosion may be generated on the aluminum fin and copper pipe of the heat exchanger.
- Do not install the air conditioner near an obstacle (air vent, lighting equipment, etc.) that disturbs discharge air.
 (Turbulent airflow may reduce the performance or disable devices.)
- Do not use the air conditioner for special purposes such as preserving food, precision instruments, or art objects, or where breeding animals or growing plants are kept. (This may degrade the quality of preserved materials.)
- Do not install the air conditioner over an object that must not get wet. (Condensation may drop from the indoor unit at a humidity of 80 % or more or when the drain port is clogged.)
- Do not install the air conditioner in a place where an organic solvent is used.
- Do not install the air conditioner near a door or window subject to humid outside air.
 Condensation may form on the air conditioner.
- Do not install the air conditioner in a place where special spray is used frequently.

Be careful with noise or vibrations

- Do not install the air conditioner in a place where noise by outdoor unit or hot air from its air discharge annoys your neighbors.
- Install the air conditioner on a solid and stable foundation so that it prevents transmission of resonating, operation
 noise and vibration.
- · If one indoor unit is operating, some sound may be audible from other indoor units that are not operating.

25-EN 26-EN

Carrier 1115653804_EN TH.indb 13 3/28/16 4:42 PM

คำแนะนำเบื้องต้น

การเลือกใช้สารทำความเย็นชนิดใหม่

เครื่องปรับอากาศนี้ใช้น้ำยา R410A ซึ่งเป็นสารทำความเย็นที่เป็นมิตรต่อ สิ่งแวดล้อม

ตามมาตรฐาน IEC 60335-1

บุคคล (รวมถึงเด็กเล็ก) ที่มีสภาพร่างกาย การรับรู้ หรือสภาพจิตใจไม่ปกติ หรือขาดความรู้และประสบการณ์ ไม่ควรใช้งานอุปกรณ์นี้ เว้นแต่ได้รับการ ควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานอุปกรณ์จากผู้ที่รับผิดชอบ ต่อความปลอดภัยของบุคคลนั้นได้ ควรดูแลเด็กไม่ให้เล่นเครื่องปรับอากาศ

ตามมาตรฐาน EN 60335-1

เด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีสภาพร่างกาย การรับรู้ หรือสภาพ จิตใจไม่ปกติ หรือขาดความรู้และประสบการณ์สามารถใช้เครื่องปรับอากาศนี้ ได้ แต่ต้องมีการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานอุปกรณ์ ในวิธีที่ปลอดภัย และเข้าใจถึงอันตรายที่อาจเกิดขึ้น ไม่ควรปล่อยให้เด็กเล่น เครื่องปรับอากาศ ไม่ควรให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษาโดยที่ไม่มี การควบคุมดูแล

สารบัญ

	ข้อควรระวังเพื่อความปลอดภัย	
2	ชื่อชิ้นส่วน	18
3	รีโมทคอนโทรลแบบใช้สาย	18
	การใช้งานอย่างถูกต้อง	
	การใช้งานตั้งเวลาเปิดปิด	
6	การปรับทิศทางลม	2
	โหมดประหยัดพลังงาน	
	การบำรุงรักษา	
	การแก้ไขปัญหา	
	การทำงานและประสิทธิภาพ	
11	การติดตั้ง	26

TH

โปรดอ่านคำแนะนำต่างๆ ที่มีข้อมูลสำคัญ ซึ่งตรงตาม "Machinery" Directive (Directive 2006/42/EC) อย่างละเอียดถี่ถ้วน และโปรดปฏิบัติตามข้อมูลดังกล่าว

หลังจากอ่านแล้ว โปรดแน่ใจว่าได้เก็บคู่มือติดตั้งซึ่งแนบมาพร้อมกับผลิตภัณฑ์ของท่านไว้ในที่ปลอดภัย

ชื่อสามัญ : เครื่องปรับอากาศ

คำจำกัดความของผู้ติดตั้งที่มีความชำนาญหรือช่างบริการที่มีความชำนาญ เครื่องปรับอากาศต้องได้รับการูติดตั้ง บำรุงรักษา ช่อมแซม และถอดรื้อโดยผู้ติดตั้งที่มีความชำนาญหรือช่างบริการที่มีความชำนาญ เมื่อต้องดำเนินการใดๆ เหล่านี้โปรดร้องข^{ื้}ให้ผู้ติดตั้งที่มีความชำนาญหรือช่างบริการที่มีความชำนาญดำเนินการให้ ผู้ติดตั้งที่มีความชำนาญหรือช่างบริการที่มีความชำนาญเป็นตัวแทน ซึ่งมีความชำนาญและความรู้ดังที่ได้อธิบายในตารางด้านล่าง

ตัวแทน	ความชำนาญและความรู้ที่ตัวแทนจะต้องมี	
 ผู้ติดตั้งที่มีความชำนาญ ผู้ติดตั้งที่มีความชำนาญ ผู้ติดตั้งที่มีความชำนาญ ผู้ติดตั้งที่มีความชำนาญ บุคคลที่ทำการติดตั้ง ดูแลรักษา ย้ายตำแหน่ง และถอดเครื่องปรับ เดชิบา แคเรียร์ คอร์ปอเรชั่น ผู้ติดตั้งจะต้องได้รับการมีกอบรมเพื่อติดตั้ง ดูแลรักษา ย้ายตำแหน่ง ปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการอบรมและมีความรู้ความเข้าใจเป็นอย่างดีเกี่ยวกับการ ผู้ติดตั้งที่มีความชำนาญซึ่งได้รับอนุญาตให้ปฏิบัติงานทางด้านไฟฟ้าที่เกี่ยวกับการติดตั้ง การยัการดดจะมีความเชี่ยวชาญเกี่ยวกับงานด้านไฟฟ้าตามที่กำหนดไว้โดยช้อกำหนดและกฎหมาย บุคคลที่ได้รับการฝึกอบรมงานทางด้านไฟฟ้าเกี่ยวกับเครื่องปรับอากาศที่ผลิตโดยโดชิบา แคเรียร์ หรืออีกประการหนึ่ง ผู้ติดตั้งนั้นได้รับคำแนะนำในการปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการความรู้ความเข้านาญซึ่งได้รับอนุญาตให้ปฏิบัติงานที่ยวกับสารทำความเย็นและท่อที่เกี่ยวกับการปฏิบัติงานที่ยวกับการปฏิบัติงานกับสารทำความเย็น ตามที่กำหนดใว้ โดยช้อกำหนดและกฎหมายท้องถิ่น และเป็นบุคคลที่ได้รับการฝึกอบรมทางตักบัสารทำความเย็นและท่อของเครื่องปรับอากาศที่ผลิตโดยโดชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่งผลิตคนนะนำในการปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการฝึกอบรมในการปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการฝึกอบรมในการปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการฝึกอบรมในการปฏิบัติงานดังกล่าวจากบุคคลที่ได้รับการสังปรับอากาศที่ผลิตโดยโตชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ผู้ติดตั้งนั้นใส่กับคนุดเก็บได้รับการอบรมและมีความรู้คะเป็นอย่างดีเกี่ยวกับกับคลามรู้คะเก็บสิตอามเล็บสิทยาสหีเล็ตโดยโตชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ผู้ติดตั้งนั้นใส่การปฏิบัติงานดังกล่าจากบุคคลที่ได้รับการอบรมและมีความรู้คามเล็บสิทยา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ผู้ติดตั้งนั้นใส่การปฏิบัติงานดังกล่าจากบุคคลที่ได้รับการอบรมและมีความรู้คามเล็บสิทยา และเรียร์ที่ได้รับการอบรมและมีความรู้คามเล็บสิทยา เล็บสิทยาที่ได้เกี่ยวกับการอบรมและมีความเล็บสิทยาที่ได้เกี่ยวกับการอบรมและมีความรูกเล็บสิทยาที่เล็บสิทยาที่ได้เก็บสาบทายสหีเล็บสิทยาที่ได้เก็บสาบทายรมนุดเล็บสิทยาที่ได้เก็บสาบทายกรมที่ได้เก็บสิทยาที่ได้เก็บสิทยาที่ได้เก็บสิทยาที่ในสิทยาที่ได้เก็บสิทยาที่ได้		
ช่างบริการที่มี ความช้านาญ	 ช่างบริการที่มีความชำนาญ คือ บุคคลที่ทำการติดตั้ง ช่อมแชม บำรุงรักษา ย้ายตำแหน่ง และถอดเครื่อง ปรับอากาศที่ผลิตโดยโตชิบา แคเรียร์ คอร์ปอเรชั่น ช่างบริการจะต้องได้รับการฝึกอบรมเพื่อติดตั้ง ช่อมแชม บำรุงรักษา ย้ายตำแหน่ง และถอดเครื่องปรับอากาศที่ผลิตโดยโตชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ช่างบริการนั้นได้รับคำแนะนำในการปฏิบัติงานตั้งกล่าวจากบุคคลที่ได้รับการอบรมและมีความรู้ความเข้าใจ เป็นอย่างดีเกี่ยวกับการปฏิบัติงานเหล่านี้ ช่างบริการที่มีความชำนาญซึ่งได้รับอนุญาดให้ปฏิบัติงานทางด้านไฟฟ้าที่เกี่ยวกับการติดตั้ง การช่อมแชม การข้ายตำแหน่ง และการถอดจะมีความเชี้ขอชาญเกี่ยวกับจานด้านไฟฟ้าเกี่ยวกับการดิดตั้ง การช่อมแชม การค้ายดำแหน่ง และเป็นบุคคลที่ได้รับการฝึกอบรมงานทางด้านไฟฟ้าเกี่ยวกับครื่องปรับอากาศที่ผลิตโดย โตชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ช่างบริการนั้นได้รับคำแนะนำในการปฏิบัติงานดัง ช่างบริการที่มีความชำนาญซึ่งได้รับอนุญาดให้ปฏิบัติงานเกี่ยวกับสารทำความเย็นและท่อที่เกี่ยวกับการดิดตั้ง การช่อมแชม การย้ายดำแหน่ง และการถอดซึ่งจะมีความเชี่ยวชาญเกี่ยวกับการปฏิบัติงานนั้ ช่างบริการที่มีความชำนาญซึ่งได้รับอนุญาดให้ปฏิบัติงานเกี่ยวกับสางที่กรบการปฏิบัติงานกับสารทำความเย็น และท่อตามที่กำหนดไว้โดยข้อกำหนดและกฎหมายท้องถิ่น และเป็นบุคคลที่ได้รับการมีกอบรมทางด้าน การปฏิบัติงานที่งสารทำความเย็นและท่อของเครื่องปรับอากาศที่ผลิตโดยโดชิบา แคเรียร์ คอร์ปอเรชั่น หรือ อีกประการหนึ่ง ช่างบริการนี้เข้อหาและนำในการปฏิบัติงานที่ความสูงคืวกประการหนึ่ง ช่างบริการที่มี ความสูงกับเครื่องปรับอากาศที่ผลิตโดยโดชิบา แคเรียร์ คอร์ปอเรชั่น หรืออีกประการหนึ่ง ช่างบริการที่มี ความชำนาญนั้นได้รับคำแนะนำในการปฏิบัติงานตั้งกล่าจากบุคคลที่ได้รับการอบรมและมีความผู้ความผู้ความเข้าใจเมื่องกนกัดว่อเกียงดีเกี่ยวกับการปฏิบัติงานนี้ เป็นอย่างดีเกี่ยวกับการปฏิบัติงานนี้ 	

■ สัญลักษณ์คำเตือนบนชุดเครื่องปรับอากาศ

สัญลักษณ์คำเตือน	คำอธิบาย
WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.	คำเตือน อันตรายจากไฟฟ้าซ็อต ปลดแหล่งจ่ายไฟฟ้าทั้งหมดก่อนทำการซ่อม
WARNING Moving parts. Do not operate unit with grille removed.	 คำเตือน ชิ้นส่วนกำลังเคลื่อนที่ อย่าใช้งานเครื่องปรับอากาศขณะที่ถอดตะแกรงออก
Stop the unit before the servicing.	ให้ปิดเครื่องปรับอากาศก่อนทำการซ่อม
CAUTION	ข้อควรระวัง
High temperature parts. You might get burned when removing this panel.	ชิ้นส่วนมีอุณหภูมิสูง ท่านอาจโดนลวกเมื่อถอดแผงครอบนี้
CAUTION	ข้อควรระวัง
Do not touch the aluminum fins of the unit. Doing so may result in injury.	อย่าสัมผัสครีบอะลูมิเนียมของเครื่องปรับอากาศ มิฉะนั้น อาจได้รับบาดเจ็บ
CAUTION	ข้อควรระวัง
BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	อันตรายจากการระเบิด ให้เปิดวาล์วบริการก่อนเปิดเครื่องปรับอากาศ มิฉะนั้น อาจเกิด การระเบิด

3-TH 4-TH

Carrier 1115653804_EN TH.indb 15 3/28/16 4:42 PM

1 ข้อควรระวังเพื่อความปลอดภัย

ผู้ผลิตไม่ขอรับผิดชอบต่อความเสียหายที่มีสาเหตุมาจากการละเลยไม่ปฏิบัติตามคำแนะนำในคู่มือเล่มนี้

🕂 คำเตือน

ทั่วไป

- อ่านคู่มือการใช้งานให้ละเอียดก่อนเริ่มใช้เครื่องปรับอากาศ มีหลายสิ่งที่สำคัญต้องระลึกไว้ในระหว่างใช้งานประจำวัน
- ให้ผู้แทนจำหน่ายหรือผู้ติดตั้งมืออาชีพดำเนินการติดตั้ง ผู้ติดตั้งที่มีความชำนาญ (*1) เท่านั้นจึงจะสามารถติดตั้งเครื่อง
 ปรับอากาศได้ หากผู้ไม่มีความชำนาญติดตั้งเอง อาจก่อให้เกิดปัญหา เช่น ไฟไหม้ ไฟดูด การบาดเจ็บ น้ำรั่วซึม เสียงรบกวน
 และการสั่นสะเทือนได้
- ห้ามใช้สารทำความเย็นใด ๆ ที่แตกต่างจากที่ระบุไว้ในการเดิมหรือเปลี่ยน มิฉะนั้น อาจทำให้มีแรงดันสูงผิดปกติเกิดขึ้นใน วงจรการทำความเย็น ซึ่งอาจทำให้ผลิตภัณฑ์นี้ทำงานผิดปกติ หรือเกิดการระเบิด หรืออาจทำให้ท่านได้รับบาดเจ็บได้
- การทำงานของตัวเครื่องภายนอกอาจสร้างเสียงรบกวน (โดยเฉพาะบริเวณที่ติดต่อกับเพื่อนบ้าน จึงควรพิจารณาเสียงรบกวน ในขณะติดตั้งเครื่องด้วย)

การเคลื่อนย้ายและจัดเก็บ

- ในการเคลื่อนย้ายเครื่อง ต้องสวมใส่รองเท้าที่ปกปิดนิ้วเท้า สวมถุงมือป้องกัน และสวมใส่เครื่องแต่งกายป้องกันอื่นๆ
- ในการเคลื่อนย้ายเครื่อง ห้ามจับถือที่สายรัดกล่องผลิตภัณฑ์ ท่านอาจบาดเจ็บได้หากสายขาด
- ก่อนวางซ้อนกล่องผลิตภัณฑ์เพื่อจัดเก็บหรือเคลื่อนย้าย โปรดอ่านคำแนะนำที่ระบุไว้บนกล่องให้ละเอียด การไม่ปฏิบัติตาม คำแนะนำเหล่านั้นอาจทำให้กองของกล่องผลิตภัณฑ์ล้มลงมาได้
- 🔹 เครื่องปรับอากาศต้องเคลื่อนย้ายในสภาพสมบูรณ์ หากส่วนใดส่วนหนึ่งของผลิตภัณฑ์เสียหาย โปรดติดต่อผู้แทนจำหน่าย
- เมื่อต้องเคลื่อนย้ายเครื่องปรับอากาศด้วยมือ ต้องใช้คนอย่างน้อยสองคนหรือมากกว่า

การติดตั้ง

- การดำเนินการเกี่ยวกับไฟฟ้ากับเครื่องปรับอากาศต้องกระทำโดยผู้ติดตั้งที่มีความชำนาญ (*1) หรือช่างบริการที่มี
 ความชำนาญ (*1) เท่านั้น ผู้ที่ไม่มีความชำนาญไม่สามารถดำเนินการเองได้ เพราะการดำเนินการที่ไม่เหมาะสม
 อาจก่อให้เกิดไฟฟ้าดูดและ/หรือไฟฟ้ารั่วได้
- ภายหลังเสร็จสิ้นการติดตั้ง ให้ผู้ติดตั้งขึ้แจงเกี่ยวกับตำแหน่งสวิตซ์ของเครื่องตัดกระแสไฟฟ้า หากเกิดปัญหาขึ้นในเครื่อง ปรับอากาศ ให้โยกสวิตซ์ของเครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง OFF แล้วติดต่อข่างบริการที่มีความชำนาญ (*1)
- หากติดตั้งเครื่องปรับอากาศในห้องขนาดเล็ก จะต้องเติมสารทำความเย็นในปริมาณที่กำหนด เพื่อไม่ให้เกินค่าจำกัดความดัน ภายใน มิฉะนั้น อาจเกิดการรั่วซึมได้ ปรึกษาผู้แทนจำหน่ายที่ท่านชื้อเครื่องปรับอากาศนี้เมื่อท่านต้องการคำนวณปริมาณ สารทำความเย็น การสะสมของสารทำความเย็นที่มีความเข้มข้นสูงอาจก่อให้เกิดอันตรายจากการขาดออกซิเจน
- อย่าติดตั้งเครื่องปรับอากาศในบริเวณที่อาจเสี่ยงต่อการสัมผัสกับก๊าซไวไฟ หากก๊าชรั่วและสะสมอยู่รอบเครื่อง อาจเกิดไฟไหม้ได้
- ควรเลือกใช้ผลิตภัณฑ์ที่บริษัทระบุเป็นชิ้นส่วนอะไหล่เท่านั้น การใช้ผลิตภัณฑ์ที่ไม่ได้ระบุไว้อาจก่อให้เกิดไฟไหม้ ไฟฟ้าดูด น้ำรั่วชืม หรือปัญหาอื่นๆ ได้ และต้องให้ผู้เชี่ยวชาญเป็นผู้ติดตั้งให้
- ต้องแน่ใจว่าได้ต่อสายดินอย่างถูกต้อง

การใช้งาน

- ก่อนเปิดช่องดูดอากาศเข้าของตัวเครื่องภายในหรือแผงควบคุมไฟฟ้าของตัวเครื่องภายนอก ต้องโยกสวิตช์ของเครื่องตัด
 กระแสไฟฟ้าไปที่ตำแหน่ง OFF มิฉะนั้นอาจเกิดไฟฟ้าลัดวงจรกับชิ้นส่วนภายในผ่านหน้าสัมผัสได้ ผู้ติดตั้งที่มีความชำนาญ
 (*1) หรือช่างบริการที่มีความชำนาญ (*1) เท่านั้นที่จะเปิดช่องดูดอากาศเข้าของตัวเครื่องภายในหรือแผงควบคุมไฟฟ้า
 ของตัวเครื่องภายนอกและปฏิบัติงานที่ต้องการได้
- ภายในเครื่องปรับอากาศมีไฟฟ้าแรงสูงและมีชิ้นส่วนที่กำลังหมุน ห้ามถอดแผงควบคุมไฟฟ้าของตัวเครื่องภายนอก เพราะ อาจเกิดอันตรายจากไฟฟ้าดูดนิ้วมือหรือส่วนต่างๆ ของร่างกายอาจติดเข้าไปในชิ้นส่วนที่กำลังหมุน เมื่อมีความจำเป็น ที่จะต้องถอดชิ้นส่วนเหล่านี้ออกมา โปรดติดต่อผู้ติดตั้งที่มีความชำนาญ (*1) หรือช่างบริการที่มีความชำนาญ (*1)
- อย่าเคลื่อนย้ายหรือช่อมเครื่องปรับอากาศด้วยต[ิ]นเอง เนื่องจากมีไฟฟ้าแรงสูงภายในเครื่อง ท่านอาจถูกไฟฟ้าดูดชณะถอด ฝาครอบ

- ใช้บันไดที่สูงกว่า 50 เซนติเมตร ในการทำความสะอาดแผ่นกรองอากาศของตัวเครื่องภายในหรือทำงานอื่นๆ ที่อยู่บนที่สูง เนื่องจากผู้ไม่มีความชำนาญอาจเกิดอันตรายจากการตกบันไดและบาดเจ็บจากการทำงานบนที่สูง เมื่อต้องทำงานเช่นนั้น จึงไม่ควรทำด้วยตนเอง แต่ควรติดต่อผู้ติดตั้งที่มีความชำนาญ (*1) หรือช่างบริการที่มีความชำนาญ (*1) เป็นผู้ทำให้
- อย่าสัมผัสครีบอะลูมิเนียมของตัวเครื่องภายนอก เพราะอาจจะทำให้ได้รับบาดเจ็บได้ หากจำเป็นต้องสัมผัสครีบ ไม่ควรทำด้วย ตนเองแต่ควรติดต่อผู้ติดตั้ง หรือช่างบริการที่มีความชำนาญเป็นผู้ทำให้
- อย่าปืนชิ้นไปหรือวางสิ่งของไว้ต้านบนของตัวเครื่องภายนอก ตัวท่านหรือสิ่งของอาจตกลงมาจากตัวเครื่องทำให้ได้รับบาดเจ็บ ได้
- อย่าวางอุปกรณ์ที่มีการเผาใหม้ใดๆ ไว้ในทิศทางที่สัมผัสกับลมจากเครื่องปรับอากาศโดยตรง มิฉะนั้นอาจเกิดการเผาใหม้ ที่ไม่สมบรณ์
- เมื่อเครื่องปรับอากาศทำงานในสถานที่เดียวกับอุปกรณ์ที่มีการเผาไหม้อื่น ควรให้อากาศถ่ายเทได้ดีเพียงพอ หากอากาศ ถ่ายเทได้ไม่ดีอาจทำให้ขาดออกซิเจนได้
- เมื่อใช้งานเครื่องปรับอากาศในห้องปิด ควรให้ห้องถ่ายเทอากาศได้ดีเพียงพอ หากอากาศถ่ายเทได้ไม่ดีจะทำให้ชาดออกซิเจน
- อย่าให้ร่างกายสัมผัสลมเย็นโดยตรงเป็นเวลานาน และอย่าให้ร่างกายเย็นเกินไป อาจทำให้สภาพร่างกายทรดโทรมและเจ็บป่วย
- ห้ามสอดนิ้วหรือไม้เข้าไปในช่องดูดอากาศเข้าหรือช่องอากาศออก เพราะอาจได้รับบาดเจ็บได้เนื่องจากพัดลมหมุนด้วยความเร็วสูง
- ปรึกษาร้านค้าที่ท่านชื้อเครื่องปรับอากาศหากเครื่องปรับอากาศทำความเย็นได้ไม่ดีซึ่งอาจเกิดจากสารทำความเย็นรั่ว ตรวจสอบข้อมูลการช่อมกับช่างบริการที่มีความชำนาญ (*1) ให้แน่ใจเมื่อมีการเรียกเก็บค่าสารทำความเย็นเพิ่มเติม
- หยุดการทำงานของเครื่องปรับอากาศและปิดเครื่องตัดกระแสไฟฟ้าก่อนการทำความสะอาด มิฉะนั้น อาจได้รับบาดเจ็บเนื่องจากพัดลมหมนด้วยความเร็วสงภายในตัวเครื่อง

การซ่อม

- หากเกิดปัญหาใดๆ ขึ้น (เช่น เมื่อปรากฏสัญลักษณ์ข้อผิดพลาด ได้กลิ่นใหม้ ได้ยินเสียงผิดปกติ เครื่องปรับอากาศไม่ทำ
 ความเย็น หรือน้ำรั่ว) ในเครื่องปรับอากาศ อย่าสัมผัสเครื่องปรับอากาศเอง ให้โยกสวิตช์ของเครื่องตัดกระแสไฟฟ้าไปที่
 ตำแหน่ง OFF แล้วติดต่อช่างบริการที่มีความชำนาญ (*1) ทำอย่างใดอย่างหนึ่งให้แน่ใจว่าเครื่องจะไม่ถูกเปิดขึ้น (เช่น เขียนว่า
 "เครื่องเสีย" ไว้ใกล้กับเครื่องตัดกระแสไฟฟ้า) จนกว่าช่างบริการที่มีความชำนาญ (*1) จะมาถึง การใช้เครื่องในสภาพ
 ที่มีปัญหาต่อไปอาจทำให้กลไกการทำงานของเครื่องเกิดปัญหาเพิ่มขึ้นหรืออาจเกิดไฟฟ้าดูดหรือปัญหาอื่นๆ ได้
- หากช่องพัดลมเสียหาย อย่าเข้าใกล้ตัวเครื่องภายนอก ให้โยกสวิตช์ของเครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง OFF แล้วติดต่อ
 ให้ช่างบริการที่มีความชำนาญมาช่อม อย่าโยกสวิตช์ของเครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง ON จนกว่าจะช่อมเรียบร้อยแล้ว
- หากตัวเครื่องภายในตกลงมา อย่าเข้าใกล้ตัวเครื่อง ให้โยกสวิตช์ของเครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง OFF แล้วติดต่อ ผู้ติดตั้งที่มีความขำนาญ (*1) หรือข่างบริการที่มีความขำนาญ (*1) มาติดตั้งเครื่องใหม่ อย่าโยกสวิตช์ของเครื่องตัดกระแส ไฟฟ้าไปที่ตำแหน่ง ON จนกว่าจะติดตั้งใหม่เรียบร้อยแล้ว
- หากตัวเครื่องภายนอกล้มลง อย่าเข้าใกล้ตัวเครื่อง ให้โยกสวิตช์ของเครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง OFF แล้วติดต่อ ผู้ติดตั้งที่มีความขำนาญ (*1) หรือข่างบริการที่มีความขำนาญ (*1) มาแก้ไขหรือติดตั้งเครื่องใหม่ อย่าโยกสวิตช์ของ เครื่องตัดกระแสไฟฟ้าไปที่ตำแหน่ง ON จนกว่าจะแก้ไขหรือติดตั้งใหม่เรียบร้อยแล้ว
- อย่าปรับแต่งเครื่องเอง เพราะอาจก่อให้เกิดไฟไหม้ ไฟฟ้าดูด หรือปัญหาอื่นๆ ได้

การย้ายตำแหน่ง

 เมื่อจะย้ายตำแหน่งเครื่องปรับอากาศ อย่าย้ายตำแหน่งด้วยตนเอง ให้ติดต่อผู้ติดตั้งที่มีความชำนาญ (*1) หรือช่างบริการ ที่มีความชำนาญ (*1) การย้ายตำแหน่งที่ไม่เหมาะสมอาจทำให้ไฟฟ้าดูดและ/หรือเกิดไฟไหม้ได้

ΤH

6-TH

🕂 ข้อควรระวัง

ถอดปลั๊กอุปกรณ์จากแหล่งจ่ายไฟหลัก

• อปกรณ์นี้ต้องเชื่อมต่อกับแหล่งจ่ายไฟหลักด้วยสวิตช์ซึ่งมีระยะห่างหน้าสัมผัสขั้วต่ออย่างน้อย 3 มม.

สายไฟของแหล่งจ่ายไฟของเครื่องปรับอากาศนี้ต้องใช้ฟิวส์ในการติดตั้ง (ใช้ได้ทุกชนิด) การติดตั้ง

- วางท่อน้ำทิ้งให้ถูกต้องเพื่อให้ระบายน้ำได้ดี การระบายน้ำที่ไม่ดีอาจทำให้น้ำขังและทำให้เฟอร์นิเจอร์เปียก
- ต่อเครื่องปรับอากาศเข้ากับแหล่งจ่ายไฟที่มีแรงดันตามที่กำหนด มิฉะนั้นเครื่องอาจเสียหรือทำให้เกิดไฟไหม้
- แน่ใจว่าตัวเครื่องภายนอกยึดอยู่กับฐาน มิฉะนั้นเครื่องอาจล้มลงหรืออาจเกิดอุบัติเหตุอื่นๆ


การใช้งาน

- อย่าใช้เครื่องปรับอากาศนี้ผิดวัตถุประสงค์ เช่น ใช้เก็บอาหาร เครื่องมือวัด งานศิลปะ สัตว์เลี้ยง รถ เรือ
- อย่าสัมผัสสวิตช์ใดๆ ในขณะมือเปียก มิฉะนั้นท่านอาจถกไฟฟ้าดด
- หากไม่ใช้เครื่องปรับอากาศเป็นเวลานาน ให้ปิดเครื่องหรือตัดกระแสไฟฟ้าเพื่อความปลอดภัย
- เพื่อให้เครื่องปรับอากาศทำงานเป็นปกติ เปิดใช้ในช่วงอุณหภูมิที่ระบุในคำแนะนำ มิฉะนั้นเครื่องอาจทำงานผิดพลาดหรือ เกิดน้ำรั่ว
- อย่าให้น้ำ น้ำผลไม้ หรือของเหลวใดๆ หยดหรือหกใส่รีโมทคอนโทรล
- อย่าล้างเครื่องปรับอากาศ เพราะอาจทำให้ไฟฟ้าดูด
- ตรวจสอบว่าฐานยึดและอุปกรณ์อื่นๆ ชำรุดหรือไม่หลังจากการใช้งานเป็นเวลานาน ในกรณีที่ฐานยึดชำรุดอาจทำให้ตัวเครื่อง ลัมลงและทำให้เกิดการบาดเจ็บได้
- อย่าให้ละอองก๊าซหรือวัตถุไวไฟอื่นเข้าใกล้เครื่องปรับอากาศ และอย่าพ่นสารไวไฟไปที่เครื่องปรับอากาศ เพราะอาจทำให้ สารเหล่านั้นติดไฟได้
- หยุดการทำงานของเครื่องปรับอากาศและตัดกระแสไฟฟ้าก่อนทำความสะอาด มิฉะนั้น อาจบาดเจ็บได้เพราะพัดลมหมุนด้วยความเร็วสูง
- ให้ผู้แทนจำหน่ายทำความสะอาดเครื่องปรับอากาศให้ การทำความสะอาดที่ไม่ถูกวิธีอาจทำให้ชิ้นส่วนพลาสติกเสียหาย ฉนวนของชิ้นส่วนไฟฟ้าหรือส่วนอื่นๆ ละลาย และทำให้ เกิดการทำงานผิดพลาด ในกรณีร้ายแรง อาจเกิดน้ำรั่วซึม ไฟฟ้าดูด เกิดควัน หรือไฟไหม้ได้
- อย่าวางภาชนะใส่น้ำ เช่น แจกัน บนตัวเครื่อง
 น้ำที่ชึมเข้าไปในเครื่องอาจทำให้ฉนวนไฟฟ้าชำรุด และทำให้เกิดไฟฟ้าดูดได้
- ห้ามทำความสะอาดเครื่องปรับอากาศด้วยสายฉี่ดที่มีแรงดัน กระแสไฟฟ้ารั่วไหลอาจก่อให้เกิดไฟฟ้าช็อตหรือไฟไหม้

🔳 ข้อมูลเกี่ยวกับการเคลื่อนย้าย การจับถือ และการจัดเก็บกล่องผลิตภัณฑ์

◆ ตัวอย่างสัญลักษณ์บนกล่อง

สัญลักษณ์	ความหมาย	สัญลักษณ์	ความหมาย
Ť	เก็บในที่แห้ง	DO NOT DROP	ห้ามทำตก
FRAGILE	แตกง่าย	DO NOT LAY DOWN	ห้ามวางนอน
11 cartons	การวางข้อน (กรณีนี้ช้อนได้ 12 ชั้น)	DO NOT WALK ON THIS CARTON	ห้ามเดินบนกล่อง
<u> </u>	หงายด้านนี้ขึ้น		ห้ามเทยียบ
	จับถือด้วยความระมัดระวัง		

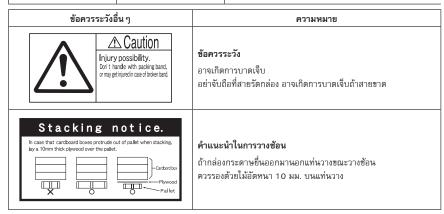


3/28/16 4:42 PM

7-TH 8-TH


^(*1) ให้อ้างอิงจาก "ดำเนินการโดยผู้ติดตั้งที่มีความชำนาญหรือช่างบริการที่มีความชำนาญเท่านั้น"

2 ชื่อชิ้นส่วน

■ ตัวเครื่องภายใน

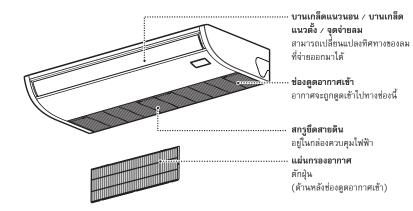

■ ตัวเครื่องภายนอก (ภาพแสดงจะเปลี่ยนแปลงไปตามตัวเครื่องภายนอก ภาพแสดง ต่อไปนี้เป็นภาพตัวอย่างประกอบ)

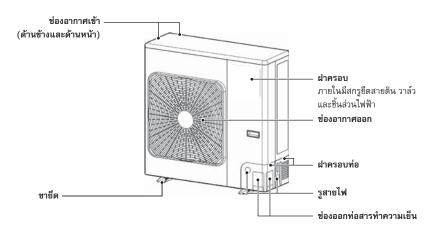

3 รีโมทคอนโทรลแบบใช้สาย


รีโมทคอนโทรลนี้สามารถควบคมการทำงานของตัวเครื่องภายในได้ถึง 8 เครื่อง


หมวดการแสดงผล

ภาพตัวอย่างหน้าจอด้านล่าง แสดงสัญลักษณ์ทั้งหมด ขณะเครื่องทำงาน จะแสดงสัญลักษณ์ที่เกี่ยวข้องเท่านั้น

- เมื่อเปิดเครื่องตัดกระแสไฟฟ้าเป็นครั้งแรก สัญลักษณ์ ธรรมชา กะพริบ บนหน้าจอรีโมทคอนโทรล
- ขณะที่สัญลักษณ์นี้กะพริบ เครื่องจะได้รับการยืนยันการทำงาน โดยอัตโนมัติ

รอจนกว่าสัญลักษณ์ SETTING จะหายไปจึงเริ่มใช้รีโมทคอนโทรลได้



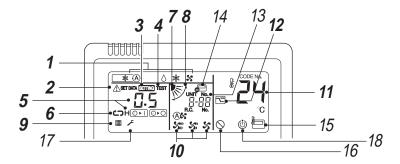

- 1 โหมดการทำงาน แสดงโหมดการทำงานที่เลือก
- สัญลักษณ์ข้อผิดพลาด แสดงเมื่อเครื่องมืออุปกรณ์ป้องกันทำงานหรือ เกิดข้อผิดพลาด
- **3** สัญลักษณ์การตั้งค่า แสดงระหว่างการตั้งเวลาหรือการตั้งค่าอื่นๆ
- 4 สัญลักษณ์การทดสอบเครื่อง แสดงระหว่างการทดสอบเครื่อง
- 5 แสดงตัวเลขเวลา เมื่อเกิดข้อผิดพลาด จะแสดงรหัสข้อผิดพลาด
- 6 แสดงโหมดตั้งเวลา แสดงโหมดตั้งเวลาที่เลือก
- 7 สัญลักษณ์ตำแหน่งบานเกล็ด แสดงตำแหน่งบานเกล็ด


- 8 สัญลักษณ์การส่ายบานเกล็ด แสดงระหว่างการส่ายขึ้นลงของบานเกล็ด
- 9 สัญลักษณ์แผ่นกรองอากาศ เตือนให้ทำความสะอาดแผ่นกรองอากาศ
- 10 สัญลักษณ์ความเร็วพัดลม แสดงโหมดความเร็วพัดลมที่เลือก

(อัตโนมัติ)
(สูง)
(ปานกลาง)
(ต่ำ)

- 11 แสดงผลการตั้งอุณหภูมิ
 แสดงค่าอุณหภูมิที่เลือก
- 12 สัญลักษณ์โหมดประหยัดพลังงาน จำกัดความเร็ว (กำลัง) คอมเพรสเซอร์ เพื่อประหยัด พลังงาน

ТН

9-TH

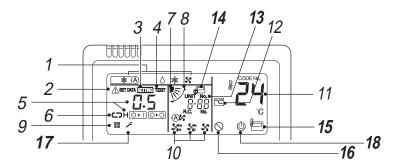

13 แสดงจำนวนเครื่อง

แสดงจำนวนตัวเครื่องภายในที่เลือกใช้และยังแสดงรหัส ข้อผิดพลาดของตัวเครื่องภายในและภายนอก

14 การแสดงผลระบบควบคมส่วนกลาง

แสดงเมื่อเครื่องปรับอากาศถูกต่ออยู่กับระบบควบคุม ส่วนกลางร่วมกับรีโมทคอนโทรลควบคุมส่วนกลาง

ในกรณีรีโมทคอนโทรลนี้ถูกยกเลิกจากระบบควบคุม ส่วนกลาง สัญลักษณ์ 🏍 จะกะพริบ และไม่สามารถใช้งานปุ่มต่างๆ ได้

แม้จะกดปุ่ม ON/OFF, MODE หรือ TEMP. ปุ่มดังกล่าว ก็จะไม่ทำงาน (รายละเอียดการตั้งค่าของรีโมทคอนโทรล อาจแตกต่างกันไปตามโหมดของระบบควบคุมส่วนกลาง สำหรับรายละเอียดเพิ่มเติม สามารถอ่านได้จากคู่มือ การใช้งานรีโมทคอนโทรลส่วนกลาง)

15 สัญลักษณ์เซ็นเซอร์ของรีโมทคอนโทรล แสดงขณะใช้งานเซ็นเซอร์ของรีโมทคอนโทรล

16 สัญลักษณ์ไม่มีฟังก์ชัน แสดงเมื่อฟังก์ชันที่ต้องการไม่มีในเครื่องร่นนั้น


17 สัญลักษณ์การซ่อมบำรง

18 สัญลักษณ์พร้อมทำงาน สัญลักษณ์นี้แสดงในเครื่องบางรุ่น

หมวดการทำงาน

กดปุ่มแต่ละปุ่มเพื่อเลือกการใช้งานที่ต้องการ

 หลังจากการตั้งค่าครั้งแรก รีโมทคอนโทรลจะบันทึกคำสั่งไว้ในหน่วยความจำ จึงไม่จำเป็นต้องตั้งค่าใดๆ เพิ่มเติมอีก นอกจาก ต้องการเปลี่ยนการตั้งค่าใหม่ สามารถใช้งานเครื่องปรับอากาศได้โดยการกดปุ่ม

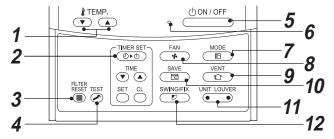

ปุ่ม ⊕ั (ปุ่มปรับอุณหภูมิ) ปรับค่าที่ตั้งไว้

เลือกค่าที่ต้องการโดยการกด 🛊 TEMP. 🔻 หรือ 🖟 TEMP. 🔺

2 ปุ่ม ™ (ปุ่มตั้งเวลา) ใช้สำหรับการตั้งเวลา

3 ปุ่ม 🖥 (ปุ่มตั้งค่าแผ่นกรองใหม่)

ตั้งค่า " 🎟 " ใหม่หลังจากการทำความสะอาดแผ่นกรอง

4 ปุ่ม 등 (ปุ่มทดสอบ)
 ใช้สำหรับการช่อมแชมเท่านั้น
 (อย่าใช้ปุ่มนี้ในระหว่างการใช้งานปกติ)

5 ปุ่ม <u>(การทำงานจะเริ่มขึ้น และจะหยุดทำงาน</u> เมื่อกดปุ่มนี้ การทำงานจะเริ่มขึ้น และจะหยุดทำงาน เมื่อกดปุ่มนี้อีกครั้ง เมื่อการทำงานหยุดลงแล้ว ไฟแสดงการทำงานและการ แสดงผลทั้งหมดจะหายไป

6 ไฟแสดงการทำงาน เมื่อเปิดเครื่อง ไฟแสดงสีเชียวจะสว่างขึ้น นอกจากนี้ไฟแสดงจะกะพริงแมื่ดใช้งานอุปกรณ์ป้องกับ

นอกจากนี้ไฟแสดงจะกะพริบเมื่อใช้งานอุปกรณ์ป้องกัน หรือมีความบกพร่องเกิดขึ้น

7 ปุ่ม 🛅 (ปุ่มโหมดการทำงาน) เลือกโหมดการทำงานที่ต้องการ

8 ปุ่ม 🚣 (ปุ่มความเร็วพัดลม) เลือกระดับความเร็วพัดลมตามที่ต้องการ

9 ปุ่ม 🖭 (ปุ่มระบายอากาศ)

ใช้เมื่อเชื่อมต่อชุดระบายอากาศระบบไฟฟ้า (หาได้ทั่วไป)

 หาก "\one "ปรากฏขึ้นบนรีโมทคอนโทรลเมื่อกดปุ่มนี้ แสดงว่าไม่ได้เชื่อมต่อชุดระบายอากาศ

10 ปุ่ม (การทำงานแบบประหยัดพลังงาน) ใช้งานในโหมดประหยัดพลังงาน

11 ปุ่ม 🌅 (ปุ่มเลือกตัวเครื่อง/บานเกล็ด)

เลือกจำนวนเครื่อง (ซ้าย) และจำนวนบานเกล็ด (ซวา)

เลือกตัวเครื่องภายในเมื่อควบคุมการปรับทิศทางลมของ ตัวเครื่องภายในหลายเครื่องด้วยรีโมทคอนโทรลเครื่องเดียว บานเกล็ด:

เลือกบานเกล็ดเมื่อปรับตั้งทิศทางลมของแต่ละเครื่องแยก ออกจากกัน

12 ปุ่ม 📂 (ปุ่มส่ายบานเกล็ด/ทิศทางของ บานเกล็ด)

เลือกการส่ายบานเกล็ดอัตโนมัติ หรือปรับทิศทางการ ส่ายของบานเกล็ด

🔷 ตัวเลือกเสริม :

เซ็นเซอร์รีโมทคอนโทรล

โดยทั่วไป เช็นเซอร์อุณหภูมิของตัวเครื่องภายในจะทำหน้าที่ ตรวจจับอุณหภูมิ และสามารถตรวจจับอุณหภูมิรอบ ๆ รีโมทคอนโทรลได้

สำหรับรายละเอียดเพิ่มเติม โปรดติดต่อผู้แทนจำหน่าย จากร้านค้าที่ท่านชื้อเครื่องปรับอากาศนี้

11-TH

4 การใช้งานอย่างถูกต้อง


การใช้งานเครื่องปรับอากาศครั้งแรก หรือเมื่อเปลี่ยนการตั้งค่า ให้ปฏิบัติตามขั้นตอนตามด้านล่าง ค่าที่ปรับตั้งจะถูกจัดเก็บไว้ใน หน่วยความจำ และจะแสดงขึ้นทุกครั้งที่เปิดใช้งานตัวเครื่องโดยการกดปุ่ม

การเตรียมการ

- เมื่อเปิดใช้งานเครื่องตัดกระแสไฟฟ้า เส้นแบ่งส่วนจะปรากฏขึ้นบนรีโมทคอนโทรล
- หลังจากเปิดใช้เครื่องตัดกระแสไฟฟ้า รีโมทคอนโทรลจะยังไม่ตอบรับคำสั่งใดๆ เป็นเวลาประมาณ 1 นาที ซึ่งไม่ใช่อาการ ผิดปกติแต่อย่างใด

ข้อกำหนด

เมื่อเปิดใช้งานเครื่องปรับอากาศอีกครั้งหลังจากไม่ได้ใช้งานเป็นเวลานาน จะต้องเปิดเครื่องตัดกระแสไฟฟ้าทิ้งไว้อย่างน้อย 12 ชั่วโมง ก่อนเริ่มใช้งานเครื่องปรับอากาศอีกครั้ง

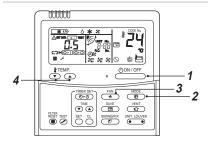


◆ เริ่มทำงาน

1 กดปุ่ม 💍

ไฟแสดงการทำงานจะสว่างขึ้น และตัวเครื่องจะเริ่มทำงาน



3 เลือกความเร็วพัดลมด้วยปุ่ม "→ " กดปุ่มเพียงหนึ่งครั้ง จอแสดงผลจะเปลี่ยนไปตามลำดับ ที่แสดงด้านล่างนี้



- เมื่อพัตลมอยู่ในโหมด "(A) Auto" ระดับความเร็ว ของพัตลมจะถูกปรับตามความแตกต่างระหว่างค่าที่ กำหนดไว้ และอุณหภูมิห้อง
- เซ็นเซอร์อุณหภูมิจะตรวจจับอุณหภูมิลมกลับที่
 ตัวเครื่องภายในซึ่งแตกต่างจากอุณหภูมิห้อง โดย
 ชื่นอยู่กับสภาพการติดตั้ง
 ค่าที่กำหนด คือ อุณหภูมิห้องที่ต้องการปรับ
 (ไม่สามารถเลือก (\$\frac{\mathbf{X}}{\mathbf{S}}\$ "Auto" ในโหมดพัดลมได้)
- 4 เลือกอุณหภูมิที่ต้องการปรับด้วยการกดปุ่ม TEMP. ▼ หรือ TEMP. ▲

♦ หยุดทำงาน

กดปุ่ม 👛

ไฟแสดงการทำงานจะดับลง และหยุดการทำงาน

หมายเหตุ

การเปลี่ยนโหมดอัตโนมัติ

- ขณะใช้โหมดอัตโนมัติ เครื่องจะเลือกโหมดการทำงาน (ทำความเย็นหรือพัดลมอย่างเดียว) ตามอุณหภูมิที่ตั้งไว้
- หากไม่ชอบโหมดอัตโนมัติ คุณสามารถเลือกปรับเองได้ตามต้องการ

การทำความเย็น

หากมีการสั่งงานให้ทำความเย็น เครื่องจะเริ่มทำงานหลังจากที่เลือกโหมดประมาณ 1 นาที


เมื่อเริ่มการทำงานใหม่หลังจากหยุดทำงาน

หากพยายามเปิดใช้งานตัวเครื่องอีกครั้งทันทีหลังจากตัวเครื่องหยุดทำงาน จะไม่สามารถใช้งานตัวเครื่องได้ประมาณ 3 นาที เพื่อเป็นการปกป้องคอมเพรสเซอร์

5 การใช้งานตั้งเวลาเปิดปิด

• สามารถใช้งานตั้งเวลาเปิดปิดได้สามโหมด : (สามารถตั้งเวลาได้ถึง 168 ชั่วโมง)

ตั้งเวลาปิด : เครื่องจะหยุดทำงานเมื่อถึงเวลาที่ตั้งไว้ ตั้งเวลาปิดซ้ำ : เครื่องจะหยุดทำงานเมื่อถึงเวลาที่ตั้งไว้ทุกวัน ตั้งเวลาเปิด : เครื่องจะเริ่มทำงานเมื่อถึงเวลาที่ตั้งไว้



♦ การตั้งค่า

1 กดปุ่ม ™erset

โหมดตั้งเวลาเปิดปิดจะเปลี่ยนไปในแต่ละครั้งที่กดป่ม



การแสดงผล SETTING และการตั้งเวลาเปิดปิดจะกะพริบ

2 กดปุ่ม 🛡 ั๋ (พื่อเลือก "ตั้งเวลา"

- แต่ละครั้งที่กดปุ่ม (1) เวลาที่ตั้งจะเพิ่มขึ้นครั้งละ
 0.5 ชั่วโมง (30 นาที)
 หากตั้งเวลาเปิดปิดมากกว่า 24 ชั่วโมง จะสามารถ ตั้งเวลาเพิ่มขึ้นได้ครั้งละ 1 ชั่วโมง เวลาสูงสุดที่ สามารถตั้งได้คือ 168 ชั่วโมง (7 วัน)
 รีโมทคอนโทรลจะแสดงเวลาที่ตั้งไว้ (ระหว่าง
 0.5 ถึง 23.5 ชั่วโมง) (*1) หรือ จำนวนวันและเวลา (24 ชั่วโมงขึ้นไป) (*2) ตามที่แสดงด้านล่าง

ตัวอย่างการแสดงผลของรีโมทคอนโทรล

23.5 ชั่วโมง (*1)



• 34 ชั่วโมง (*²)



쉺 แสดง 1 วัน (24 ชั่วโมง)

;∏⊢ แสดง 10 ชั่วโมง (ทั้งหมด 34 ชั่วโมง)

3 กดปุ่ม 💍

สัญลั่กษณ์ SITIMS จะปรากฏขึ้นและเวลาจะแสดง และสัญลักษณ์ [②▶] หรือ (②▶) กะพริบ (เมื่อใช้งานตั้งเวลาเปิดนาฬิกาและตัวตั้งเวลา [②▶] จะปรากฏและสัญลักษณ์อื่นจะหายไป)

4 ยกเลิกการตั้งเวลา

กดปุ่ม 💍 สัญลักษณ์ตัวตั้งเวลาจะหายไป

หมายเหตุ

- ตัวเครื่องจะหยุดทำงานเมื่อถึงเวลาที่ตั้งปิดไว้ ให้กดปุ่ม
 <u>ง่างหาครื่</u> หากต้องการให้ฟังก์ชันตั้งเวลาปิดซึ่งทำงานต่อ
 และหยุดทำงานเมื่อถึงเวลาปิดซ้ำที่ตั้งไว้
- เมื่อกดปุ่ม (พระพร ชณะพิงก์ชันตั้งเวลาปิดทำงานอยู่ ไฟเตือนของฟิงก์ชันตั้งเวลาจะดับไป จากนั้นจะปรากฏ ขึ้นอีกครั้งหลังจากผ่านไป 5 วินาที ซึ่งเป็นกระบวนการทำงานปกติของรีโมทคอนโทรล

ΤH

14-TH

13-TH

- 20 -

Carrier 1115653804_EN TH.indb 20 3/28/16 4:42 PM

6 การปรับทิศทางลม


เพื่อประสิทธิภาพการทำความเย็นที่ดีที่สุด ให้ปรับบานเกล็ด (การปรับแผ่นปรับทิศทางลม ชื้น/ลง) ให้เหมาะสมที่สุด ลมเย็นจะกระจายลงด้านล่างและลมร้อนจะลอยชื้นด้านบน ให้ปรับแผ่นบานเกล็ดอยู่ในแนวนอนหากต้องการทำความเย็น

ข้อควรระวัง

สำหรับการทำความเย็น ให้ปรับบานเกล็ตในแนวนอน หากบานเกล็ตยังคงอยู่ในตำแหน่งชี้ลงด้านล่างระหว่าง การทำความเย็น อาจเกิดการควบแน่นบนช่องจ่ายลม จากนั้นอาจมีน้ำหยดลงมาจากบานเกล็ด

 เมื่อการทำความเย็นหยุดลง บานเกล็ตในแนวนอน (แผ่น ปรับทิศทางลมในแนวตั้ง) จะปิดลงโดยอัตโนมัติ





◆ วิธีการกำหนดทิศทางลม

ในโหมดการทำความเย็น/ลดความชื้น

ปรับให้บานเกล็ด (แผ่นปรับทิศทางลมขึ้น/ลง) ส่ายในแนวนอน หากปรับให้ส่ายลงด้านล่าง อาจทำให้มีหยดน้ำเกาะบนพื้นผิว ของช่องปล่อยลม และทำให้น้ำหยด



ในโหมดพัดลม


เลือกทิศทางบานเกล็ดตามความต้องการ



◆ วิธีเริ่มการส่ายบานเกล็ด

1 กด <u>คร</u> และปรับบานเกล็ด (แผ่นปรับทิศทาง ลมขึ้น/ลง) ไปที่ตำแหน่งต่ำสุด จากนั้นกด <u>คร</u> อีกครั้ง

การแสดงผลขณะส่าย



◆ วิธีหยุดการส่ายบานเกล็ด

1 กด Example ในตำแหน่งที่ต้องการขณะที่บานเกล็ด กำลังส่าย

หากกด ॕॣॖऻॕ หลังจากนั้น จะสามารถปรับทิศทางลม ได้อีกครั้งจากตำแหน่งสงสด

การแสดงผลเมื่อหยุดการส่ายบานเกล็ด



ในกรณีนี้ ให้กด 🚟 อีกครั้ง หลังจากผ่านไป 2 วินาที

 ในโหมตทำความเย็น/ลดความชื้น บานเกล็ดจะไม่ หยุดส่ายเนื่องจากทิศทางของบานเกล็ดจะส่ายลง ด้านล่าง หากหยุดส่ายบานเกล็ดขณะที่สายลงด้านล่าง ในโหมดส่ายบานเกล็ดบานเกล็ดจะหยุดส่ายหลังจาก ที่สายไปถึงตำแหน่งที่สามจากตำแหน่งสูงสุด


การแสดงผลเมื่อหยุดส่ายบานเกล็ด



🔷 ปุ่มเลือกตัวเครื่อง


- เมื่อควบคุมตัวเครื่องภายในหลายเครื่องด้วยรีโมทคอนโทรล ตัวเดียว จะสามารถปรับทิศทางของลมสำหรับตัวเครื่อง ภายในแต่ละเครื่องได้
- หากไม่มีจำนวนตัวเครื่องภายในปรากฏขึ้น จะสามารถ
 ควบคุมตัวเครื่องภายในทั้งหมดในกลุ่มควบคุมพร้อมกันได้
- แต่ละครั้งที่กดปุ่ม (ด้านซ้ายของปุ่ม) จอแสดงผล จะเปลี่ยนไปตามลำดับดังนี้:





การปรับทิศทางลมในแนวนอน

การเปลี่ยนทิศทางลมในแนวนอน ปรับบานเกล็ดแนวตั้ง ด้านในบานเกล็ดแนวนอนให้ชี้ไปยังทิศทางที่ท่านต้องการ



หมายเหต

 เมื่อบานเกล็ดในแนวนอนชี้ลงด้านล่างในโหมด COOL อาจทำให้มีหยดน้ำเกาะบนพื้นผิวของตัวเครื่องหรือ บานเกล็ดและหยดลงมา

15-TH 16-TH

Carrier 1115653804_EN TH.indb 21 3/28/16 4:42 PM

7 โหมดประหยัดพลังงาน


โหมดประหยัดพลังงานนี้จะช่วยประหยัดพลังงานโดยการจำกัดกระแสไฟฟ้าสูงสุดซึ่งจะมีผลต่อประสิทธิภาพการทำความเย็น ที่ตัวเครื่องสามารถผลิตได้

กดปุ่ม 🛅 ระหว่างการทำงาน

- เครื่องปรับอากาศเข้าสู่โหมดประหยัดพลังงาน
- 🔁 ปรากฏบนจอแสดงผล

โหมดประหยัดพลังงานจะยังคงมีผลอยู่จนกว่าจะยกเลิกการทำงาน การยกเลิกโหมดประหยัดพลังงาน ให้กดปุ่ม 🚟 อีกครั้ง


- 🔁 จะหายไป
- การกำหนดค่าโหมดประหยัดพลังงาน

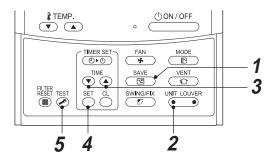

- 1 กดปุ่ม 🛅 ค้างไว้อย่างน้อย 4 วินาที ในขณะที่เครื่องปรับอากาศไม่ทำงาน
 - SETTING, สัญลักษณ์ และตัวเลขจะกะพริบ
- 2 กด 🍑 (ด้านซ้ายของปุ่ม) เพื่อเลือกตัวเครื่องภายในที่จะตั้งค่า
 - แต่ละครั้งที่กดปุ่ม หมายเลขตัวเครื่องจะเปลี่ยนไปตามลำดับ ดังนี้ :

พัดลมของตัวเครื่องที่เลือกจะทำงาน

- แต่ละครั้งที่กดปุ่ม จะทำให้ระดับพลังงานเปลี่ยนไปครั้งละ 1% จาก 100% ถึง 50%
- ค่าตั้งจากโรงงาน คือ 75%



- 4 กดปุ่ม 💍
- 5 กดปุ่ม 👼 เพื่อให้การตั้งค่าเสร็จสมบูรณ์

หมายเหต

- ระหว่างการทำงานในโหมดประหยัดพลังงาน กระแสไฟฟ้าสูงสุดของตัวเครื่องภายนอกจะถูกจำกัด ดังนั้นปริมาณการใช้ไฟฟ้า ขณะทำงานอาจลดลง ทั้งนี้ จะเป็นเพียงในบางสภาวะเท่านั้น
- ประสิทธิภาพของเครื่องปรับอากาศจะถูกจำกัดเมื่อเครื่องอยู่ในโหมดประหยัดพลังงาน ห้องอาจไม่เย็นหรือร้อนเพียงพอ ต่อความต้องการ
- ไม่สามารถตั้งค่าการทำงานแบบประหยัดพลังงานด้วยรีโมทคอนโทรลส่วนกลางได้ ทั้งนี้ขึ้นอยู่กับสภาวะการติดตั้งตัวเครื่อง ภายนอก
- ถ้าเชื่อมต่อตัวเครื่องหลายเครื่องเข้าด้วยกันเป็นกลุ่ม ทุกเครื่องก็จะทำงานในโหมดประหยัดพลังงาน
- คุณสมบัติการประหยัดพลังงานอาจถูกจำกัดตามตัวเครื่องภายนอกที่ใช้ สำหรับรายละเอียดเพิ่มเติม โปรดติดต่อผู้แทน จำหน่ายของท่าน

ΤH

17-TH

8 การบำรุงรักษา


🕂 คำเตือน

 การทำความสะอาดแผ่นกรองอากาศ และส่วนอื่น ๆ ของแผ่นกรองอากาศเป็นการเสี่ยงอันตรายจากการทำงาน ในที่สูง ดังนั้น ควรให้ผู้ติดตั้งที่มีความชำนาญ หรือข่างบริการที่มีความชำนาญเป็นผู้ดำเนินการให้ อย่าพยายาม ดำเนินการด้วยตัวท่านเอง

การทำความสะอาดแผ่นกรองอากาศ

การอุดตันของแผ่นกรองอากาศจะทำให้ประสิทธิภาพในการทำความเย็นลดลง

- ้ (1) หาก "m" ปรากฏขึ้นบนรีโมทคอนโทรล ให้ทำความสะอาดแผ่นกรองอากาศ
- (2) เมื่อทำความสะอาดแผ่นกรองอากาศเสร็จแล้ว ให้กดปุ่ม 🕌 และ "\" จะหายไป



♦ เมื่อไม่ใช้งานเครื่องเป็นเวลานาน

- 1. ให้ใช้งานพัดลมเป็นเวลาประมาณ 2 ชั่วโมง เพื่อลดความขึ้นภายในเครื่องปรับอากาศ
- 2. กดปุ่ม 💍 บนรีโมทคอนโทรลเพื่อหยุดการทำงาน และปิดเครื่องตัดกระแสไฟฟ้า
- 3. ทำความสะอาดแผ่นกรองอากาศ และติดตั้งกลับเข้าที่

♦ ก่อนถึงช่วงเวลาที่มีอากาศเย็น

ทำความสะอาดถาดรับน้ำทิ้ง

ติดต่อผู้แทนจำหน่ายจากร้านที่ท่านชื้อผลิตภัณฑ์

(การระบายน้ำที่งอาจไม่สามารถทำได้หากช่องระบายอากาศ หรือถาดรับน้ำทิ้งอุดดัน ในบางกรณีน้ำทิ้งอาจล้นออก และ ทำให้ผนังหรือพื้นเปียก ดังนั้น ควรทำความสะอาดถาดรับน้ำทิ้งก่อนถึงช่วงเวลาที่มีอากาศเย็น)

♦ การตรวจเซ็คตามระยะเวลา

- หากใช้งานเครื่องมาเป็นระยะเวลานาน ชิ้นส่วนต่างๆ อาจมีการเสื่อมสภาพ และเป็นสาเหตุให้เกิดความบกพร่องขึ้น หรือ การระบายน้ำทั้งจากโหมดลดความชื้นมีประสิทธิภาพลดลง ทั้งนี้ขึ้นอยู่กับความร้อน ความชื้น หรือสิ่งสกปรก
- นอกจากการบำรุงรักษาอยู่เป็นประจำแล้ว แนะนำให้มีการตรวจเช็คตัวเครื่อง และบำรุงรักษาโดยผู้แทนจำหน่ายจากร้านค้า ที่ท่านชื้อผลิตภัณฑ์นี้

หมายเหตุ

เพื่อป้องกันความสูญเสียจากสภาพแวดล้อม ซอแนะนำให้ท่านทำความสะอาด และบำรุงรักษาตัวเครื่องภายในและตัวเครื่อง ภายนอกซองเครื่องปรับอากาศเป็นประจำ เมื่อใช้งานเครื่องปรับอากาศเป็นเวลานาน ซอแนะนำให้ดำเนินการบำรุงรักษาเครื่อง ตามช่วงเวลา (ปีละครั้ง) นอกจากนี้ควรตรวจสอบรอยชีดช่วน หรือสนิมที่ตัวเครื่องภายนอกอยู่เสมอ และกำจัดสนิมออก หรือ ใช้น้ำยาป้องกันสนิม หากจำเป็น

ตามข้อควรปฏิบัติทั่วไป เมื่อใช้งานตัวเครื่องภายในเป็นเวลาตั้งแต่ 8 ชั่วโมงขึ้นไปต่อวัน ต้องทำความสะอาดตัวเครื่องภายใน และตัวเครื่องภายนอกอย่างน้อยทุกๆ 3 เดือน โดยให้ผู้เชี่ยวชาญเป็นผู้ดำเนินการให้

การบำรุงรักษาอยู่เสมอดังที่กล่าวมาจะช่วยยึดอายุการใช้งานของผลิตภัณฑ์ และยังเป็นการลดค่าใช้จ่ายของผู้ใช้งานเครื่องด้วย การไม่บำรุงรักษาตัวเครื่องภายนอกและตัวเครื่องภายในอยู่เสมออาจทำให้ประสิทธิภาพของตัวเครื่องลดลงเป็นน้ำแข็งมีน้ำรั่วซึม หรือแม้แต่อาจทำให้คอมเพรสเซอร์บกพร่องได้

รายการการบำรุงรักษา

ชิ้นส่วน	ตัวเครื่อง	การตรวจเซ็ค (ดู/ฟังเสียง)	การบำรุงรักษา		
เครื่องแลกเปลี่ยน ความร้อน	ตัวเครื่องภายใน/ ตัวเครื่องภายนอก	ฝุ่น/สิ่งสกปรกอุดตัน, รอยชีดช่วน	ทำความสะอาดเครื่องแลกเปลี่ยนความร้อนเมื่อเกิดการ อุดดัน		
มอเตอร์พัดลม	ตัวเครื่องภายใน/ ตัวเครื่องภายนอก	เสียง	ตรวจสอบด้วยวิธีการที่เหมาะสมเมื่อเกิดเสียงดังผิดปกติ		
แผ่นกรอง	ตัวเครื่องภายใน	ฝุ่น/สิ่งสกปรก, การแตกหัก			
พัดลม	ตัวเครื่องภายใน	การสั่น, ความสมดุลฝุ่น/สิ่งสกปรก, รูปร่าง	เปลี่ยนพัดลมเมื่อเกิดการสั่นขณะทำงาน หรือไม่สมดุล ชัดหรือทำความสะอาดพัดลมเมื่อสกปรก		
ช่องดูดอากาศเข้า/ ช่องอากาศออก	ตัวเครื่องภายใน/ ตัวเครื่องภายนอก	ฝุ่น/สิ่งสกปรกอุดตัน, รอยชีดช่วน	ช่อมหรือเปลี่ยนใหม่เมื่อชิ้นส่วนผิดรูป หรือเสียหาย		
ถาดรับน้ำทิ้ง	ตัวเครื่องภายใน	ฝุ่น/สิ่งสกปรกอุดตัน, การปนเปื้อน ของน้ำทิ้ง	ทำความสะอาดถาดรับน้ำทิ้งและตรวจสอบการวางท่อ ให้อยู่ในแนวราบเพื่อให้ระบายน้ำทิ้งได้ดี		
ฝาครอบตกแต่ง, บานเกล็ด	ตัวเครื่องภายใน	ฝุ่น/สิ่งสกปรก, รอยชืดช่วน	ทำความสะอาดเมื่อสกปรกหรือทาน้ำยาเคลือบ		
ภายนอก	ตัวเครื่องภายนอก	สนิม, ฉนวนหลุดออก พื้นผิวตัวเครื่องหลุด/กะเทาะออก	ทาน้ำยาเคลือบ		

19-TH 20-TH

9 การแก้ไขปัญหา

ตรวจสอบข้อต่างๆ ข้างล่างนี้ก่อนแจ้งซ่อม

อาการ		อาการ	สาเหตุ	
	ตัวเครื่องภายนอก	• มีเสียงดังเมื่อเปิดเครื่อง	• ตัวเครื่องภายนอกกำลังเตรียมการทำงาน	
อาการเหล่านี้ไม่มืดปกติ	ตัวเครื่องภายใน	 บางครั้งมีเสียงฟู่ดังชื้น มีเสียงแกร็กดังชื้น ลมที่ปล่อยออกมามีกลิ่นไม่ปกติ 	เมื่อตัวเครื่องเริ่มทำงาน ระหว่างการทำงาน หรือทันทีที่ตัวเครื่อง หยุดทำงาน อาจมีเสียง เช่น เสียงน้ำไหลดังขึ้น หรือเสียงการ ทำงานอาจดังกว่าปกติสักครู่ทันทีที่เครื่องเริ่มทำงาน เป็นเสียง สารทำความเย็นไหลหรือเสียงระบายน้ำในเครื่องลดความขึ้น เป็นเสียงที่โดขึ้นเมื่อเครื่องแลกเปลี่ยนความร้อน ฯลฯ ขยายตัว และหดตัวเล็กน้อยเนื่องจากอุณหภูมิเปลี่ยนแปลง กลิ่นต่างๆ จากผนัง พรม เลื้อผ้า บุหรี่ เครื่องสำอาง ฯลฯ ถูกดูด เข้าไปในเครื่องปรับอากาศ	
	ตัวเครื่องไม่ทำงาน		โฟดับหรือไม่? เครื่องตัดกระแสไฟฟ้าทยุดทำงานหรือไม่? อุปกรณ์ป้องกันทำงานหรือไม่? (สัญลักษณ์แสดงการทำงาน และ เลารรจสอบบนรีโมทคอนโทรลกะพริบ)	
ตราจสอบอีกครัง	ห้องไม่เย็นลง		ช่องอากาศเข้าหรือช่องอากาศออกของตัวเครื่องภายนอกอุดตัน หรือไม่? ประตูหรือหน้าต่างเปิดอยู่หรือไม่? แผ่นกรองอากาศเต็มไปด้วยฝุ่นหรือไม่? ดังความแรงสมเป็น "Low" หรือตั้งโหมดการทำงานเป็น "Fan" หรือไม่? อุณหภูมิที่ตั้งไว้เหมาะสมหรือไม่?	

หากเกิดสิ่งผิดปกติบางอย่างหลังจากการตรวจสอบข้างต้น หยุดการทำงานของเครื่อง ปิดเครื่องตัดกระแสไฟฟ้า และแจ้งหมายเลข เครื่องและอาการของผลิตภัณฑ์แก่ผู้แทนจำหน่ายที่ท่านชื้อผลิตภัณฑ์ อย่าพยายามช่อมเครื่องเองเพราะจะเกิดอันตราย หากรหัส ข้อผิดพลาด (£3 1, £3 1, #3 1 ฯลฯ) แสดงบนหน้าจอของรีโมทคอนโทรลแบบใช้สาย แจ้งให้ผู้แทนจำหน่ายทราบด้วย


หากข้อใดข้อหนึ่งด้านล่างนี้เกิดขึ้น ให้หยุดการทำงานของเครื่องทันทีและปิดเครื่องตัดกระแสไฟฟ้า แล้วติดต่อผู้แทนจำหน่าย ที่ท่านชื้อผลิตภัณฑ์นี้

- สวิตซ์ทำงานผิดปกติ
- เครื่องตัดกระแสไฟฟ้าหยุดทำงานบ่อยครั้ง
- ท่านเผลอทำให้วัตถแปลกปลอมหรือน้ำเข้าไปในเครื่อง
- ตัวเครื่องทำงานไม่ได้แม้จะหยุดการทำงานของอุปกรณ์ป้องกันไปแล้ว
- พบสภาวะผิดปกติอื่นๆ

การยืนยันและตรวจสอบ


เมื่อเกิดซ้อผิดพลาดขึ้นในเครื่องปรับอากาศ รหัสซ้อผิดพลาด และหมายเลขตัวเครื่องภายในจะปรากฏบนส่วนหน้าจอของ รีโมทคอนโทรล

รหัสข้อผิดพลาดจะแสดงระหว่างการทำงานเท่านั้น หากรหัส ที่แสดงหายไป ตรวจสอบเครื่องปรับอากาศตามหัวข้อ "การ ยืนยันรายงานข้อผิดพลาด" ต่อไปนี้เพื่อยืนยันปัญหา



การยืนยันรายงานข้อผิดพลาด

เมื่อเกิดข้อผิดพลาดขึ้นในเครื่องปรับอากาศ สามารถยืนยัน รายงานข้อผิดพลาดได้ตามขั้นตอนต่อไปนี้ (รายงานข้อ ผิดพลาดจะบันทึกไว้ได้ถึง 4 ข้อ) การยืนยันรายงานข้อผิดพลาดได้ทั้งในขณะเครื่องทำงานและ หยดทำงาน



เมื่อกดปุ่ม \bigs และ \bigs พร้อมกันอย่างน้อย 4 วินาที หน้าจอจะแสดงดังนี้

หากสัญลักษณ์ 🗲 ปรากฏขึ้น โหมดการทำงานจะเข้าสู่ โหมดขึ้นยันรหัสข้อผิดพลาด

- [01: ลำดับของรายงานข้อผิดพลาด] แสดงที่ CODE No.
- [รหัสข้อผิดพลาด] จะแสดงที่ CHECK
- [หมายเลขตัวเครื่องภายในที่เกิดข้อผิดพลาด] จะแสดง ที่ Unit No.



2 แต่ละครั้งที่กดปุ่มปรับอุณหภูมิ ⊕ั □ รายงาน ข้อผิดพลาดที่บันทึกอยู่ในหน่วยความจำจะแสดง ตามลำดับ

ตัวเลขใน CODE No. แสดงลำดับรายงานข้อผิดพลาด [01] (ล่าสุด) → [04] (เก่าที่สุด)

ข้อถ้าจะ เค

อย่ากดปุ่ม 🖰 เพราะรายงานข้อผิดพลาดทั้งหมดของ ตัวเครื่องภายในจะถูกลบทิ้ง

3 หลังจากยืนยันแล้ว กดปุ่ม 👺 เพื่อกลับสู่หน้าจอ ปกติ

TH

22-TH

21-TH

10การทำงานและประสิทธิภาพ

▼ ตรวจสอบก่อนเริ่มทำงาน

- ตรวจสอบว่าสายดินถูกตัดหรือขาดหรือไม่
- ตรวจสอบว่าติดตั้งแผ่นกรองอากาศหรือไม่
- เปิดเครื่องตัดกระแสไฟฟ้าก่อนเริ่มการทำงานอย่างน้อย
 12 ชั่วโมง

▼ ฟังก์ชันการป้องกัน 3 นาที

ฟังก์ชันการป้องกัน 3 นาทีจะป้องกันไม่ให้เครื่องปรับอากาศ เริ่มทำงานใหม่ใน 3 นาทีแรกหลังจากเปิดสวิตช์จ่ายไฟหลัก หรือเครื่องตัดกระแสไฟฟ้า

▼ ระบบไฟฟ้าขัดข้อง

หากกระแสไฟฟ้าชัดข้องในระหว่างการทำงานจะทำให้เครื่อง หยุดทำงานทันที

- หากต้องการเริ่มการทำงานใหม่ ให้กดปุ่มเปิด/ปิดเครื่อง บนรีโมทคอนโทรล
- ฟ้าผ่าหรือการใช้โทรศัพท์ติดรถยนต์ไร้สายใกล้ๆ อาจทำให้ เครื่องทำงานผิดพลาด ปิดสวิตช์แหล่งจ่ายไฟหลักหรือ เครื่องตัดกระแสไฟฟ้า แล้วเปิดใหม่อีกครั้ง กดปุ่มเปิด/ปิด เครื่องบนรีโมทคอนโทรลเพื่อเริ่มการทำงาน

▼ การควบคุมเป็นกลุ่ม

สามารถใช้รีโมทคอนโทรลแบบใช้สาย (แยกชายต่างหาก) ควบคุมเครื่องพร้อมกันได้ถึง 8 เครื่อง ติดต่อขอรายละเอียด เพิ่มเติมได้ที่ผู้แทนจำหน่าย

▼ อุปกรณ์ป้องกัน

- หยุดการทำงานของเครื่องปรับอากาศเมื่อเครื่องทำงาน หนักเกินไป
- หากอุปกรณ์ป้องกันเริ่มทำงาน ตัวเครื่องหยุดทำงาน และสัญลักษณ์แสดงการทำงานและการตรวจสอบบน รีโมทคอนโทรลจะกะพริบ

▼ หากอปกรณ์ป้องกันทำงาน

- ปิดเครื่องตัดกระแสไฟฟ้าและตรวจสอบ การใช้งานเครื่อง ต่อไปอาจเกิดความผิดพลาด
- ตรวจสอบว่าได้ติดตั้งแผ่นกรองอากาศหรือไม่ ถ้าไม่ได้ ติดตั้ง ฝุ่นอาจอุดตันในอุปกรณ์แลกเปลี่ยนความร้อน และ อาจเกิดน้ำรั่วซึ้มได้

▼ ระหว่างการทำความเย็น

- ช่องอากาศเข้าและช่องอากาศออกของตัวเครื่องภายนอก จะถูกปิดกั้นไว้
- ลมแรงจะเป่าออกจากช่องอากาศออกของตัวเครื่องภายนอก อย่างต่อเนื่อง

▼ อย่าปิดเครื่องตัดกระแสไฟฟ้า

 ระหว่างใช้งานเครื่องปรับอากาศ ให้เปิดเครื่องตัดกระแส ไฟฟ้าทิ้งไว้ แล้วใช้ปุ่มเปิด/ปิดเครื่องบนรีโมทคอนโทรล

▼ เงื่อนไขการทำงานของเครื่องปรับอากาศ

เพื่อการทำงานที่มีประสิทธิภาพ ควรใช้งานเครื่องปรับอากาศภายใต้เงื่อนไขอุณหภูมิดังนี้ :

การทำความเย็น	อุณหภูมิภายนอก	: 15 °C ถึง 46 °C (อุณหภูมิกระเปาะแห้ง)
	อุณหภูมิภายใน	: 21 °C ถึง 32 °C (อุณหภูมิกระเปาะแห้ง) , 15 °C ถึง 24 °C (อุณหภูมิกระเปาะเปียก)
	[ข้อควรระวัง]	ความชิ้นสัมพัทธ์ในห้อง – น้อยกว่า 80% หากเครื่องปรับอากาศทำงานในสภาพเกินกว่าค่านี้ อาจเกิดละอองน้ำบนพื้นผิวของเครื่องปรับอากาศ

หากใช้งานเครื่องปรับอากาศนอกเหนือจากเงื่อนไขดังกล่าว ระบบรักษาความปลอดภัยจะทำงาน

23-TH 24-TH

11 การติดตั้ง

อย่าติดตั้งเครื่องปรับอากาศในสถานที่ต่อไปนี้

- อย่าติดตั้งเครื่องปรับอากาศใกล้กับโทรทัศน์ ลำโพง หรือชุดเครื่องเสียง ภายในระยะ 1 ม. หากติดตั้งตัวเครื่องในสถานที่ดังกล่าว สัญญาณที่ส่งออกจากเครื่องปรับอากาศอาจไปรบกวนการทำงานของอุปกรณ์เหล่านั้น
- อย่าติดตั้งเครื่องปรับอากาศใกล้กับอุปกรณ์ที่มีคลื่นความถี่สูง (เครื่องเย็บผ้า หรือเครื่องนวดที่ใช้งานในเชิงธุรกิจ ฯลฯ) มิฉะนั้น อาจทำให้เครื่องปรับอากาศทำงานบกพร่องได้
- อย่าติดตั้งเครื่องปรับอากาศในที่ที่อาจมีผงเหล็กหรือโลหะอื่นๆ หากผงเหล่านี้เกาะอยู่ หรือสะสมอยู่ภายในตัวเครื่องปรับอากาศ อาจทำให้เกิดการเผาใหม้ภายในและติดไฟได้
- อย่าติดตั้งเครื่องปรับอากาศในที่ที่มีความชื้นหรือมีคราบน้ำมัน หรือในที่ที่มีการปล่อยไอน้ำ, เขม่า หรือ ก๊าชที่มีฤทธิ์กัดกร่อน
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่มีความเค็มหรือ ใกล้กับชายหาด
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่ที่มีการใช้น้ำมันเครื่องในปริมาณมาก
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่ที่สัมผัสกับลมแรงบ่อยๆ เช่น บริเวณชายหาด
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่ที่มีการปล่อยก๊าซซัลเฟอร์ เช่น สปา
- อย่าติดตั้งเครื่องปรับอากาศในเรือเดินสมุทร หรือรถเครนเคลื่อนที่
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่ที่มีความเป็นกรด หรือเป็นด่าง (เช่น บริเวณน้ำพุร้อน หรือใกล้โรงเคมี หรือในบริเวณที่ อาจสัมผัสกับไอเสีย) อาจเกิดการกัดกร่อนที่ครีบอะลูมิเนียม และท่อตะกั่วของเครื่องแลกเปลี่ยนความร้อน
- อย่าติดตั้งเครื่องปรับอากาศใกล้กับสิ่งกิดชวาง (ช่องลม อุปกรณีให้แสงสว่าง ฯลฯ) ซึ่งอาจกิดชวางการปล่อยลม (กระแสลมที่ไม่ สม่ำเสมออาจทำให้ประสิทธิภาพของอุปกรณ์นั้นลดลง)
- อย่าใช้เครื่องปรับอากาศผิดวัตถุประสงค์ เช่น เก็บอาหาร เครื่องมือวัด อุปกรณ์ศิลปะ สัตว์เลี้ยง หรือปลูกต้นไม้ (การกระทำดังกล่าวอาจทำให้สิ่งของที่จัดเก็บไว้มีคุณภาพลดลง)
- อย่าติดตั้งเครื่องปรับอากาศให้หนือสิ่งของที่ไม่สามารถโดนน้ำได้ (อาจมีน้ำหยดจากตัวเครื่องภายในที่ความขึ้นสูงกว่า 80% ขึ้นไป เมื่อช่องระบายน้ำทั้งอดตัน)
- อย่าติดตั้งเครื่องปรับอากาศในสถานที่ที่มีการใช้ตัวทำละลายอินทรีย์
- อย่าติดตั้งเครื่องปรับอากาศใกล้กับประตู หรือหน้าต่างซึ่งอาจสัมผัสกับอากาศขึ้นภายนอกได้ อาจทำให้มีใอน้ำก่อตัวอยู่ภายในเครื่องปรับอากาศ
- อย่าติดตั้งเครื่องปรับอากาศในที่ที่มีการใช้สเปรย์บ่อย ๆ

ระมัดระวังเมื่อมีเสียงดังผิดปกติ หรือเครื่องสั่น

- อย่าติดตั้งเครื่องปรับอากาศในที่เสียงของตัวเครื่องภายนอก หรือ ลมร้อนที่ปล่อยออกมาจากตัวเครื่องรบกวนเพื่อนบ้านได้
- ติดตั้งเครื่องปรับอากาศบนพื้นผิวที่มีความแข็งแรงและเรียบเพื่อป้องกันไม่ให้เกิดเสียงก้อง หรือเสียงดังในการทำงาน และ การสั้นสะเท็คน
- หากตัวเครื่องภายในหนึ่งตัวกำลังทำงานอยู่ อาจได้ยินเสียงจากเครื่องที่ไม่ได้ทำงานด้วย

TF

25-TH 26-TH

Carrier 1115653804_EN TH.indb 26 3/28/16 4:42 PM



1115653804

Carrier 1115653804_EN TH.indb 2