

TOSHIBA

OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)

For general public use

ENGLISH

ESPAÑOL

FRANÇAIS

ITALIANO



Indoor unit (Heating models)

RAS-07, 10, 13, 18, 24 UKH Series
RAS-10, 13, 16 UKV Series
RAS-M10, M13, M22 UKV Series

Outdoor unit

/ 07, 10, 13, 18, 24 UAH Series
/ 10, 13, 16 UAV Series

(Cooling models)

RAS-07, 10, 12, 13, 18, 24 UK Series
RAS-19, 25, 32, 45 UKP Series
RAS-10, 13 UKCV Series
RAS-M10, M13, M22 UK Series

/ 07, 10, 12, 13, 18, 24 UA Series
/ 19, 25, 32, 45 UA Series
/ 10, 13 UACV Series

1075001001

PRECAUTIONS FOR SAFETY

DANGER

- Do not install, repair, open or remove the cover. It may expose you to dangerous voltages. Ask the dealer or the specialist to do this.
- Turning off the power supply will not prevent potential electric shock.
- The appliance shall be installed in accordance with national wiring regulation.
- Means for disconnection from the supply having a contact separation of at least 3 mm in all poles must be incorporated in the fixed wiring.

WARNING


- Do not expose your body directly to cool air for a long time.
- Do not insert your finger or stick, etc. into the air inlet/outlet.
- When an abnormality (burning smell, etc.) occurs, stop the air conditioner and disconnect the power supply or turn off the breaker.

CAUTION

- Do not wash the unit with water. It may cause an electric shock.
- Do not use this air conditioner for other purposes such as preserving food, breeding animal, etc.
- Do not step or put anything on the indoor/outdoor unit. It may cause injury if you fall down.
- Before cleaning the unit, turn off the main switch or the circuit breaker.
- When the unit won't be used for a long time, turn off the main switch or the circuit breaker.

INDOOR UNIT DISPLAY

- ① Hi POWER (Green)
 - ② FILTER (Orange)
 - ③ PRE.DEF or FAN-ONLY (Orange)
 - ④ TIMER (Yellow)
 - ⑤ OPERATION (Green/*Orange)
- * Orange : Auto Restart Operation

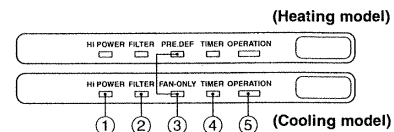

PREPARATION BEFORE USE

Preparing Filters

1. Open the air inlet grille and remove the air filters.
2. Attach Zeolite and Bioenzyme filters.

Loading Batteries



1. Remove the cover. Insert 2 new batteries (AAA type) following the (+) and (-) positions.
2. Push RESET : Adjust the clock.
3. Place the cover back.

Remote Control Location

- Max. 7 m from the indoor unit

Setting and Adjusting the Clock

1. Push CLOCK (adjust only).
2. Press : Set the current time.
3. Press : Start the clock.

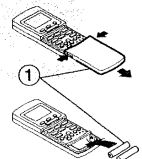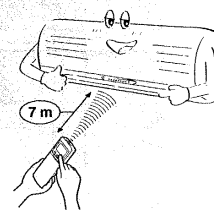


AIRFLOW DIRECTION

1. Press : Move the louver in the desired vertical direction.
2. Press : Swing the air automatically and press again to stop.
3. For horizontal direction, adjust manually.


Note:

- The and cannot be used in ON TIMER.
- Use only the to move the louver.

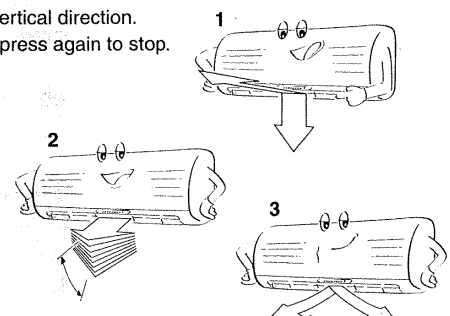

REMOTE CONTROL FUNCTION

- ① Infrared signal emitter
- ② Start/Stop button (START/STOP)
- ③ Mode select button (MODE)
- ④ Temperature button (▼ ▲)
- ⑤ Fan speed button (FAN)
- ⑥ Auto louver button (SWING)
- ⑦ Set louver button (FIX)
- ⑧ Off timer button (OFF)
- ⑨ On timer button (ON)
- ⑩ Reserve button (SET)
- ⑪ Cancel button (CLR)
- ⑫ High power button (Hi POWER)
- ⑬ Memory button (MEMO)
- ⑭ Automatic operation button (AUTO)
- ⑮ ECO timer button (ECO)
- ⑯ Filter button (FILTER)
- ⑰ Preset button (PRESET)
- ⑱ Timer button (TIMER)

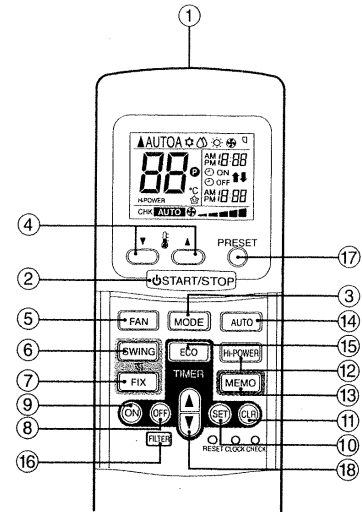

AUTOMATIC OPERATION (AUTO)

To automatically select cooling, heating, or fan only operation and control fan speed and a louver

1. Press **[AUTO]**.

Note: Manual operation can be set.

AUTOMATIC OPERATION (AUTO CHANGEOVER: A)

To automatically select cooling, heating, or fan only operation and control fan speed

1. Press **[MODE]**: Select A.
2. Press ▼ ▲: Set the desired temperature.

Note: Manual operation can be set.

COOLING / HEATING / FAN ONLY OPERATION

1. Press **[MODE]**: Select Cool ❄️, Heat ☀️, or Fan only 🌀.
2. Press ▼ ▲: Set the desired temperature.
Cooling: Min. 17°C, Heating: Max. 30°C, Fan Only: No indication
3. Press **[FAN]**: Select AUTO, LOW —, LOW+ —■, MED —■, MED+ —■, or HIGH —■.

DRY OPERATION

To select dry-cooling operation based on the differences between the set temperature and the current room temperature and automatically control fan speed

1. Press **[MODE]**: Select Dry ☹️.
2. Press ▼ ▲: Set the desired temperature.

HI POWER OPERATION

To automatically control only room temperature, airflow and operation mode (except in DRY, FAN ONLY and ON TIMER mode)

1. Press **[Hi-POWER]**: Start and stop the operation.

ECO TIMER OPERATION


To save energy while sleeping

1. Press **[ECO]**: Select 1, 3, 5 or 9 hrs for OFF timer operation.

TEMPORARY OPERATION

In case of the misplaced or discharged remote control

- Pressing the TEMPORARY button, the unit can start or stop without using the remote control.

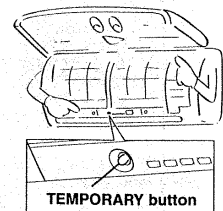

TIMER OPERATION

Setting ON/OFF Timer

1. Press **[ON] / [OFF]**.
2. Press **[▲]**: Set the desired timer.
3. Press **[SET]**: Set the timer.
4. Press **[CLR]**: Cancel the timer.

Everyday Combined Timer (Setting both ON and OFF timer simultaneously and activate everyday.)

Setting Combined Timer

1. Press **ON**.
2. Press **▲** to adjust the ON timer.
3. Press **OFF**.
4. Press **▼** to adjust the OFF timer.
5. Press **SET**.
6. Press **SET** button during the (**▲** or **▼**) mark flashing.
 - During the every day timer is activating, both arrows (**▲**, **▼**) are indicated.

Note:

- Keep the remote control in accessible transmission to the indoor unit; otherwise, the time lag of up to 15 minutes will occur.
- The setting will be saved for the next same operation.

MEMORY / PRESET OPERATION

The setting will be memorized by the unit for future operation (only MODE, Temperature, FAN, TIMER and Hi POWER modes).

1. Start the favorite operation.
2. Press **MEMO** : Standby memorizing the setting.
3. Press and hold **MEMO** for 3 seconds. The **P** mark displays.
4. Press **PRESET** : Operate the preset operation.

AUTO RESTART OPERATION

To automatically restart the conditioner after the power failure (Power of the unit must be on.)

Setting

1. Push and hold the **TEMPORARY** button for 3 seconds to set the operation (orange lamp).
 - Do not operate on **TIMER** operation.
 - Set louver swing operation.
2. Push and hold the **TEMPORARY** button for 3 seconds to cancel the operation (green lamp).

MAINTENANCE

⚠ Firstly, turn off the circuit breaker.

Air Filter Reset

FILTER lamp lights up; the filter must be cleaned.


To turn off the lamp, push the **TEMPORARY** button on the indoor unit or the **FILTER** button on the remote control.

Indoor Unit and Remote Control

- Clean the indoor unit and the remote control with a damp cloth when needed.
- No benzine, thinner, polishing powder or chemically-treated duster.


Zeolite Filter

- Expose to the sun for 6 hours once every 6 months.
- Clean with a vacuum cleaner.
- Replace every 3 years. (P/N: RB-A604DE)

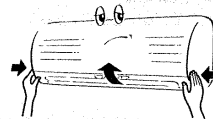

Bioenzyme Filter


- Clean with a vacuum cleaner every 2 weeks.
- Replace every 3 months or as needed.

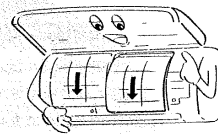

Air Filters

Clean every 2 weeks.

1. Open the air inlet grille.
2. Remove the Zeolite and Bioenzyme filters from the air filter.
3. Vacuum or wash and then dry them.
4. Reinstall the filters and close the air inlet grille.

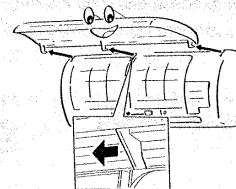

Air Inlet Grille

1. Open and remove the air inlet grille.
2. Wash it with a sponge or a towel and dry it.
3. Reinstall and close it.



SELF CLEANING OPERATION (COOL AND DRY OPERATION ONLY)

To protect bad smell caused by the humidity in the indoor unit

1. If the **START/STOP** button is pressed once during "Cool" or "dry" mode, the fan will continue to run for other 20 minutes, then it will turn off automatically. This will ensure that moisture is cleared up from the indoor unit.
2. To stop the unit immediately, press the **START/STOP** button twice.

Note:

To cancel this function, press and hold the TEMPORARY button about 20 seconds. The self cleaning function will be cancelled.

OPERATION AND PERFORMANCE

1. Three-minute protection feature: To prevent the unit from being activated for 3 minutes when suddenly restarted or switched to ON.
2. Preheating operation: Warm up the unit for 5 minutes before the heating operation starts. (PRE. DEF lamp is on.)
3. Warm air control: When the room temperature reaches the set temperature, the fan speed is automatically reduced and the outdoor unit will stop.
4. Automatic defrosting: Fans will stop during defrost operation.
5. Heating capacity: Heat is absorbed from outdoors and released into the room. When the outdoor temperature is too low, use another recommended heating apparatus in combination with the air conditioner.
6. Consideration for accumulated snow: Select the position for outdoor unit where it will not be subjected to snow drifts, accumulation of leaves or other seasonal debris.

Note: Item 2 to 6 for Heating model

Air conditioner operating conditions

Operation	Temp.	Outdoor	Room
Heating		-10°C ~ 24°C	Less than 28°C
Cooling		15°C ~ 43°C	21°C ~ 32°C
Dry		15°C ~ 52°C (Only AR and 2B model)	17°C ~ 32°C

TROUBLESHOOTING (CHECK POINT)

The unit does not operate.

- The power main switch is turned off.
- The circuit breaker is activated to cut off the power supply.
- Stoppage of electric current
- ON timer is set.

Cooling or Heating is abnormally low.

- The filters are blocked with dust.
- The temperature has been set improperly.
- The windows or doors are opened.
- The air inlet or outlet of the outdoor unit is blocked.
- The fan speed is too low.
- The operation mode is FAN or DRY.

ESPAÑOL

PRECAUCIONES SOBRE SEGURIDAD

PELIGRO

- No instale ni repare la unidad, ni abra o retire la tapa. Si lo hace, se expone a una descarga eléctrica. Solicite ayuda al distribuidor o a un especialista.
- Aunque apague la fuente de alimentación no evitará una potencial descarga eléctrica.
- Este aparato debe instalarse según las normas de instalación eléctrica de cada país.
- En la instalación fija deben incorporarse dispositivos de desconexión del suministro eléctrico con una separación de contacto de 3 mm como mínimo en todos los polos.

ADVERTENCIAS ⚠

- No exponga el cuerpo directamente a la corriente de aire frío durante mucho tiempo.
- No introduzca los dedos, ni palos u otros objetos en la salida y entrada de aire.
- Cuando note alguna anomalía (olor a quemado, etc.), detenga el acondicionador de aire y desconecte la línea de alimentación principal o apague el disyuntor.

PRECAUCIÓN ⚠

- No lave la unidad con agua. Puede ocasionar una descarga eléctrica.
- No utilice el acondicionador de aire para fines especiales tales como conservar alimentos, criar animales, etc.
- No se pare sobre la unidad interior o exterior ni coloque nada sobre ella. Si lo hace, puede caerse y lastimarse.
- Antes de limpiar la unidad, desconecte el interruptor principal o el disyuntor.
- Cuando no se va a utilizar la unidad por un tiempo considerable, desconecte el interruptor principal o el disyuntor.