


SERVICE DATA
FILE NO. 300-721

TOSHIBA

ROOM AIR-CONDITIONER (MOVABLE TYPE)

RAC-16SW

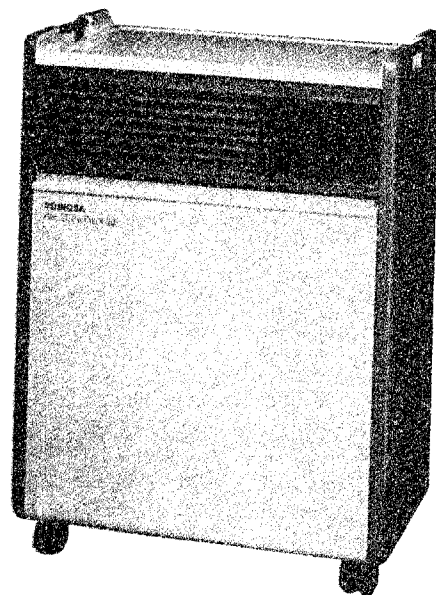

CONTENTS


SPECIFICATIONS	2
SPECIFICATIONS OF ACCESSORIES	3
APPEARANCE	3
SPECIFICATIONS OF ELECTRICAL PARTS	4
WIRING DIAGRAM	5
COOLING CHARACTER CHART	6
REFRIGERATION CYCLE PIPING SYSTEM	7
INSTALLATION INSTRUCTION	8 ~ 9
CLEANING METHOD OF CONDENSER	10
EXPLODED VIEWS AND PARTS LISTS	12 ~ 15

SPECIFICATIONS


Model		RAC-16SW
Dimensions	Height	27-9/16" (700 mm)
	Width	19-11/16" (500 mm)
	Depth	11-13/16" (300 mm)
Net weight		72.8 lbs (33 kg)
Standard performance	Frequency	50Hz
	Cooling capacity	6400BTU/h (1600kcal/h)
	Airflow, high	194 CFM (330 m ³ /h)
	Dehumidity capacity	1.1ℓ/h
Electrical characteristics	Frequency	50Hz
	Rated voltage	1 phase, 220/240 V
	Current (standard)	3.1A
	Power (standard)	670W
	Power-factor	94%
Compressor		600W, 220V/240V, 2 poles
Condenser		Bare tube type, forced-air ventilation
Evaporator		Finned tube type, air-cooled ventilation
Safety devices		Float switch, High pressure switch, Overcurrent relay
Fan motor (for indoor and exhaust)		4 poles, 19W, 230V Single phase induction motor
Refrigerant		R-22 (Charged quantity, 0.35kg)
Air filter		Polyethylene net filter
Power cord		3-core (one core for grounding), 6.2 ft (1.9 m) length
Operating device		Selector switch, Thermostat and Timer
Finish of outer casing		Cabinet (top, side), Control-panel; plastic, Front-panel; steel plate
Accessories		Exhaust hose, Caster seat, Exhaust hole, Rubber cap for exhaust hole

Specifications are subject to change without notice.

SPECIFICATIONS OF ACCESSORIES

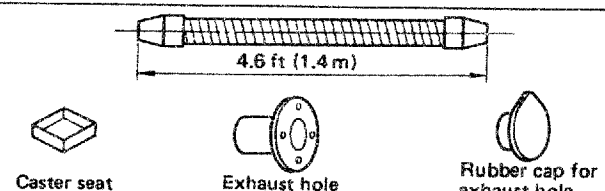Item	Q'ty	Remarks
Exhaust hose	1	
Caster seat	4	
Exhaust hole	1	
Rubber cap for exhaust hole	1	

APPEARANCE

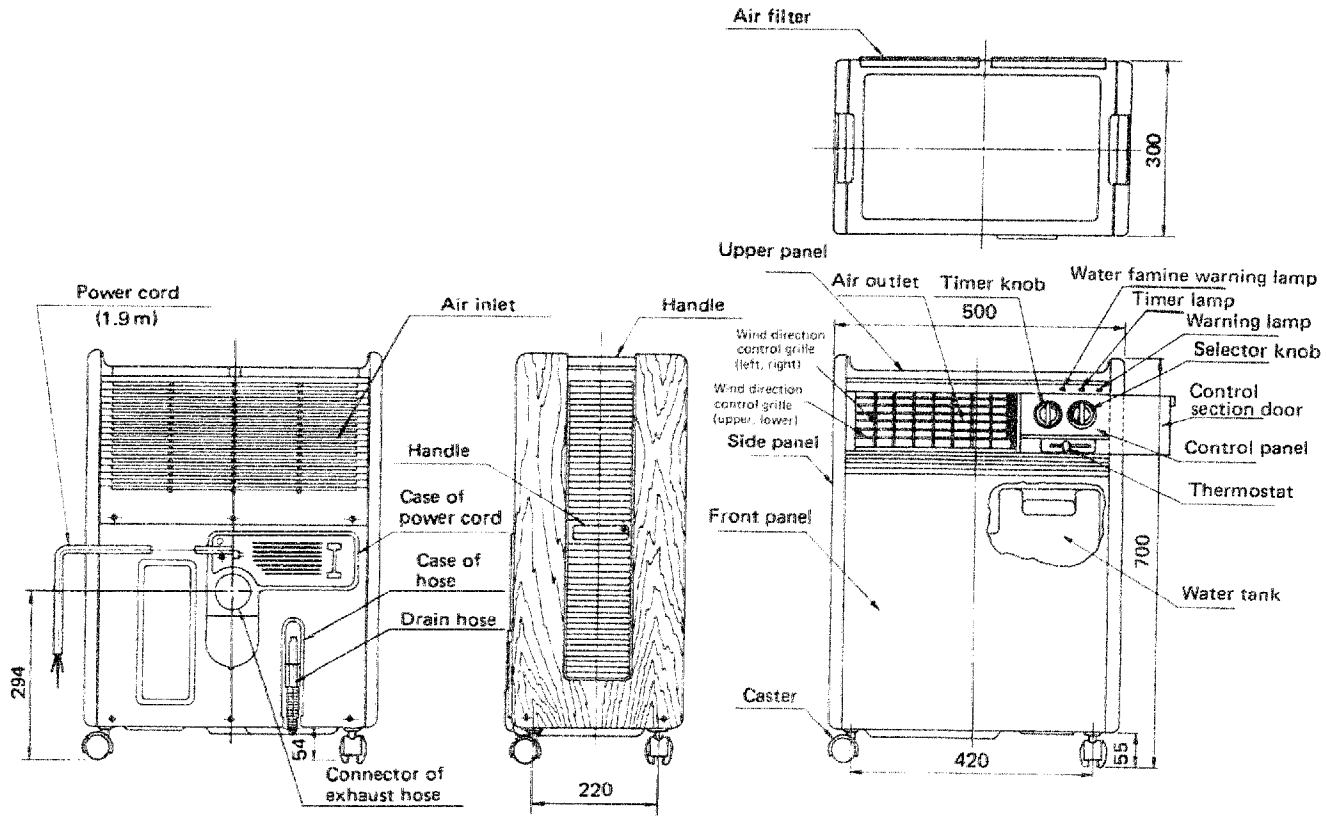

SPECIFICATIONS OF ELECTRICAL PARTS


A088104

1. Model: RAC-16SW

Part name	Type	Specification			
Compressor	PRH88XA3-4M	Single phase, 50Hz, 220/240V AC; 600W output.			
		Winding resistance (Ω) at 20°C.	Red-Black	White-Black	Red-White
			5.40	8.80	14.20
Fan motor	CE-0201T	Single phase, 50Hz, 230V AC; 19W output.			
		Winding resistance (Ω) at 20°C.	Red-Black	White-Black	Black-Orange
			230	422	273
Over current relay	MSF40AMM	Ultimate tripping, 12A (terminal 1-3), at 25°C. Tripping temp, 135°C Resetting temp, 78°C.			
Over current relay	073EQ	Ultimate tripping, 15A (1-2) at 25°C. Tripping temp, 130°C Resetting temp, 70°C.			
Thermostat	B-102S	Rated current, 20A 250V AC. Closing current, 80A 250V AC.			
Selector switch	RS-D150	Rated current, 20A 250V AC. Closing current, 80A 250V AC (terminal 1-2, 5-6). Rated current, 5A 250V AC (terminal 3-6, 4-6).			
Timer	M2504	Timer motor; 200 ~ 240V AC (terminal 10-11). Rated current, 0.5A 200 ~ 240V AC (terminal 2-3). Rated current, 15A 200 ~ 240V AC (terminal 1-2).			
Running capacitors	EAG40M206UF1	400V, 20 μ F (for compressor).			
	40FAFN105UJ	400V, 1 μ F (for fan motor).			
Relay	LY1F-AC230V	Solenoid coil, 230V AC (terminal 7-8). Rated current, 10A 250V AC (terminal 3-5).			
Float switch	FS-085-002D	Rated current, 0.1A 240V AC.			
High pressure switch	HIP-263	Cut-out pressure, 26 $\pm$ 1.5 kg/cm ² G: Manual reset type. Rated current, 8A 250V AC. Closing current, 45A.			
Neon lamp	KNL-3	Neon lamp, 240V AC.			

WIRING DIAGRAM


AGRS105

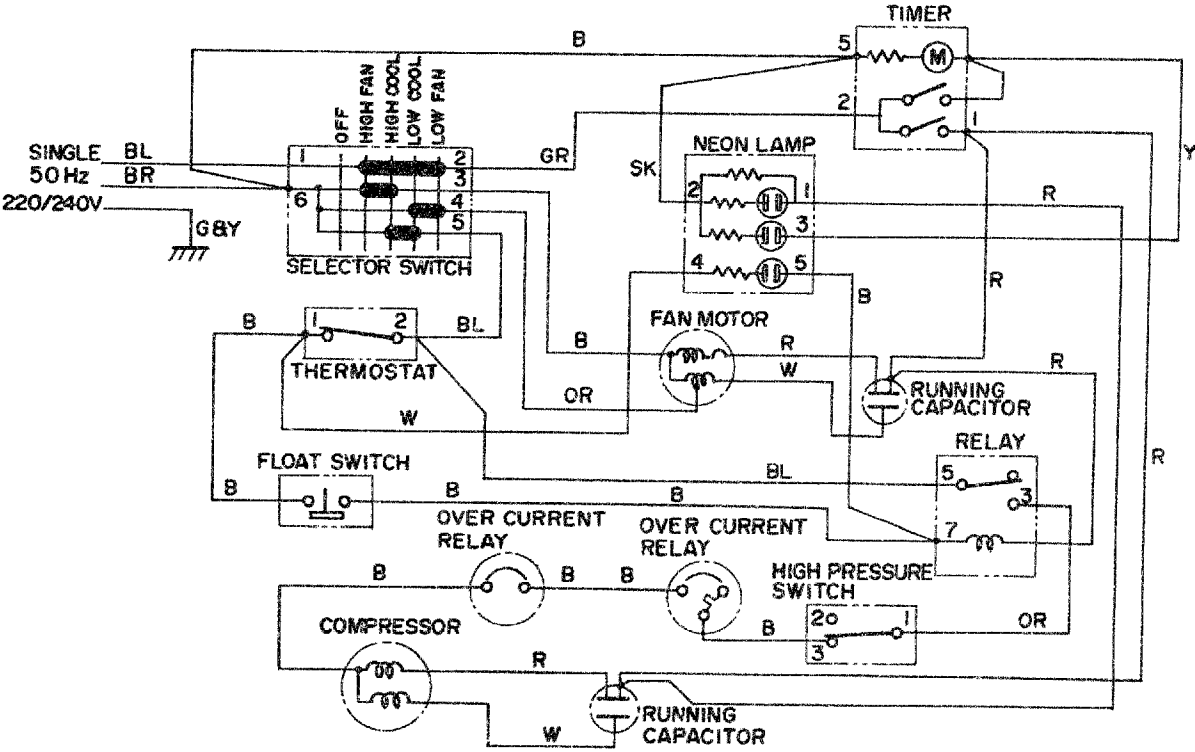

Color Identification	
B: Black	BR: Brown
G: Green	BL: Blue
W: White	GR: Gray
R: Red	OR: Orange
Y: Yellow	
G & Y: Green & Yellow	


COOLING CHARACTER CHART

AG88106

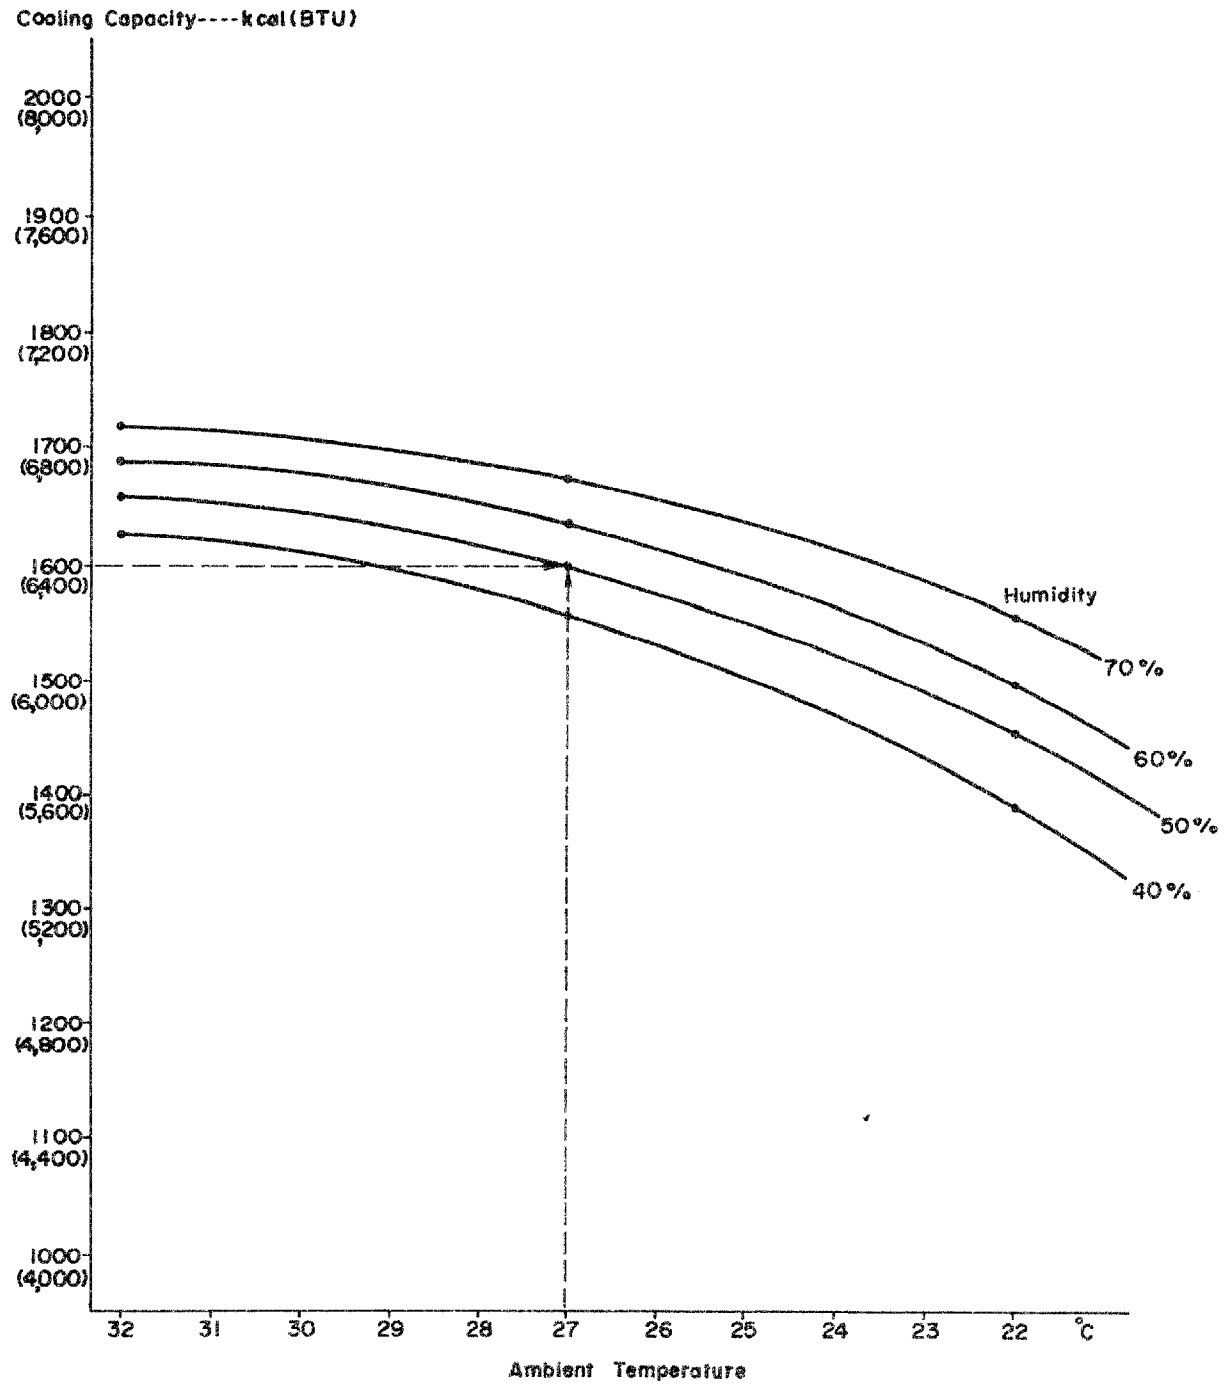

REFRIGERATION CYCLE PIPING SYSTEM

• Refrigerant Flow

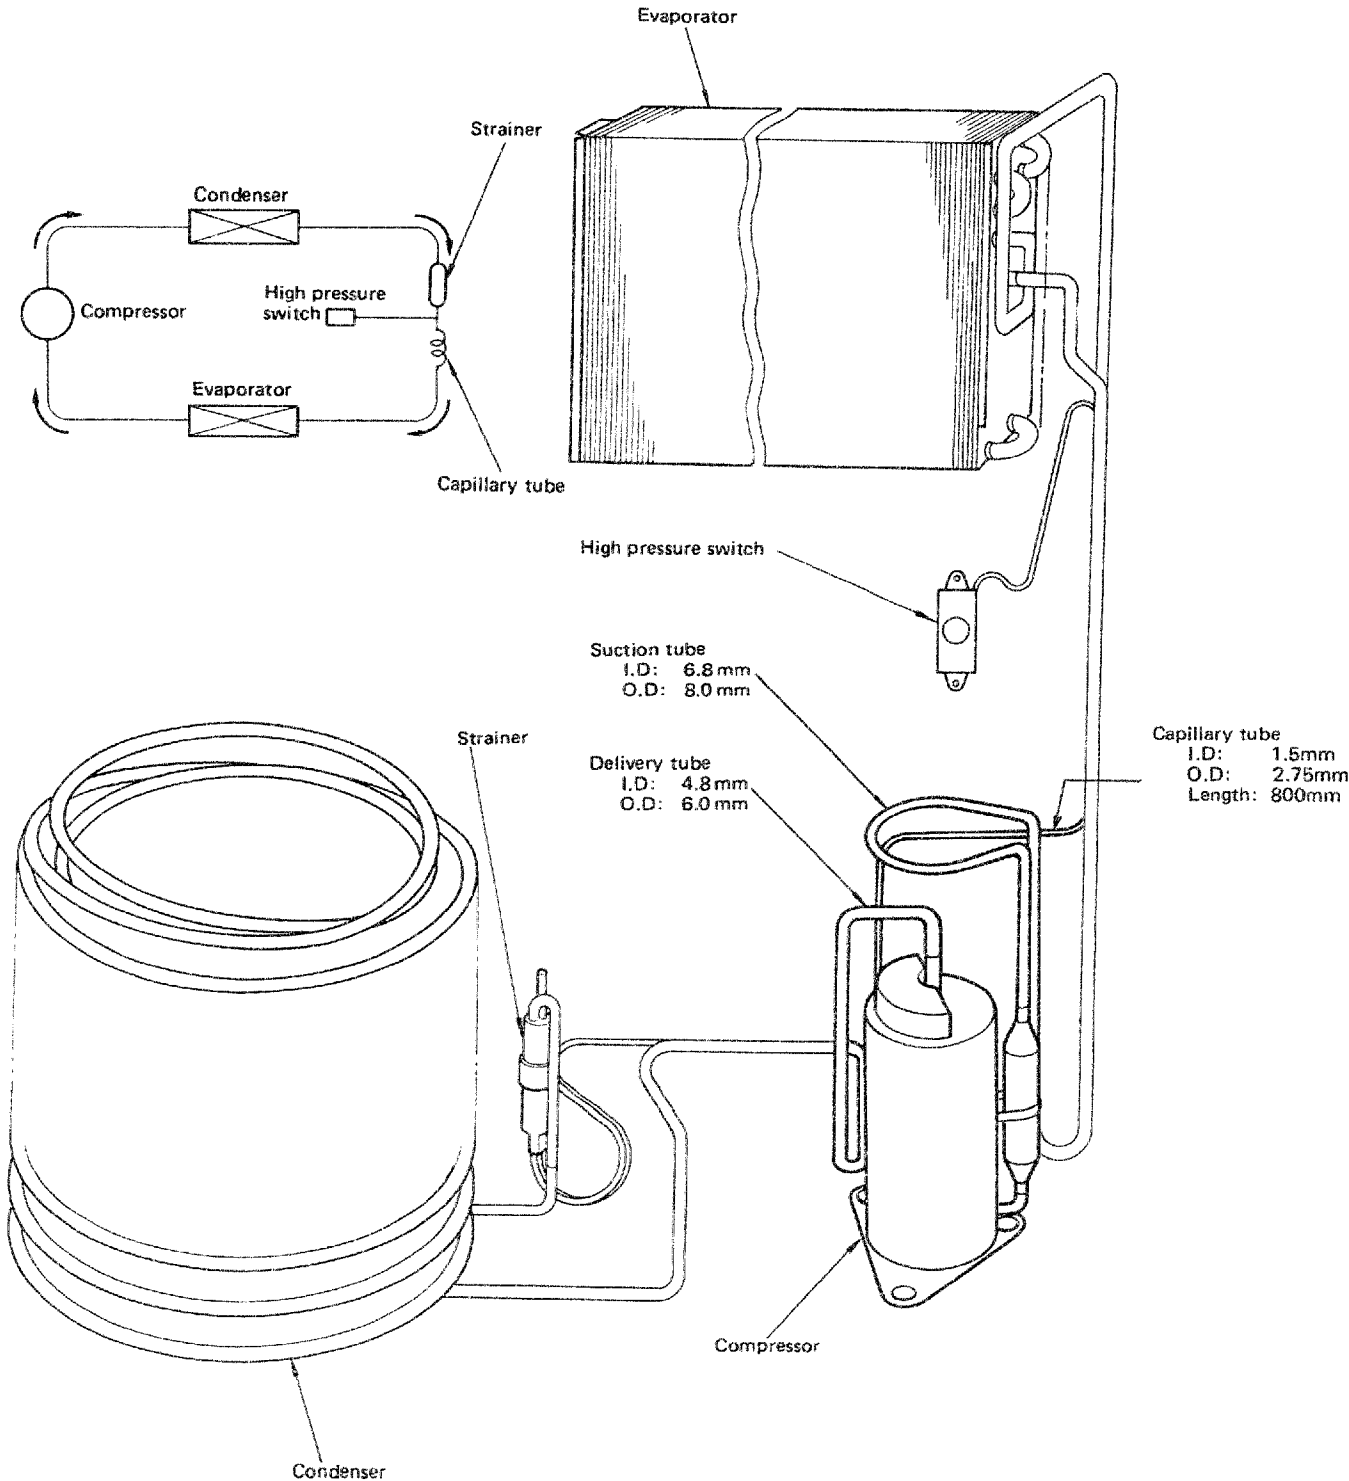

INSTALLATION INSTRUCTION

Please read this installation manual carefully before installing it.

Air conditioner and installation accessories include the items listed below.


Accessories

Parts name	Q'ty	Parts name	Q'ty
Owner's manual	1	Exhaust hose	1
Installation manual	1	Caster seat	4
Exhaust hole	1	Rubber cap (for exhaust hole)	1

1. Installation Method

(1) Insert the connection port (round) into the air conditioner surely to its root.

- 1) The exhaust hose may be extended or contracted from approx. 500 mm to approx. 1,400 mm, but use it in its shortest length if possible.
- 2) Be careful that a U-shaped bend or slack is not yielded in the way of exhaust hose.
- 3) When you move the air conditioner, be sure to pull out the exhaust hose.

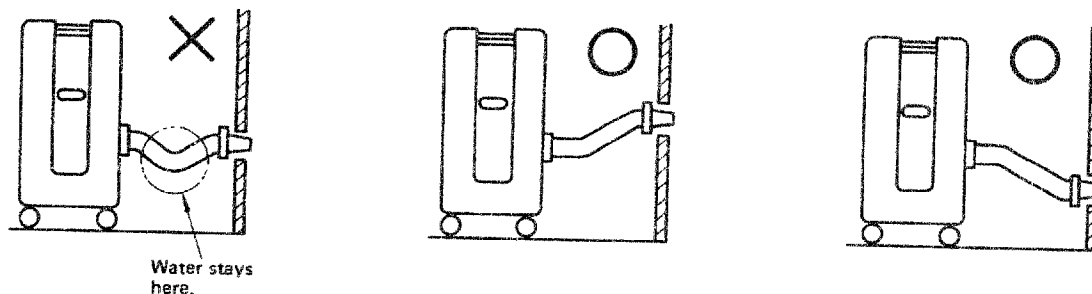

- 4) If the exhaust hose is set with its tip down, the water condensed within the hose might leak out of the room. It is therefore recommended to set the hose with its tip kept higher than the air outlet of the air conditioner proper.

(2) Put a seal under each caster.

(3) Electrical wiring.

Model	Power source	Plug socket rating	Fuse rating
RAC-16SW	1 ϕ 50 Hz 220/240 V	7A	7A

2. Routine Maintenance

Be sure to observe the following for a longer service life of your air conditioner.

Cleaning of air filter once every two weeks

Changing of water in tank . . once every week


Be sure to drain out the water in tank every off season.

3. Water Supply

The water in tank decreases gradually in the course of cooling operation.


If the water is run out, the warning lamp lights up (in orange) and the operation mode is switched to blowing. Then, refill the water.

Open the front door, being down the tank toward you, and lift off the tank.

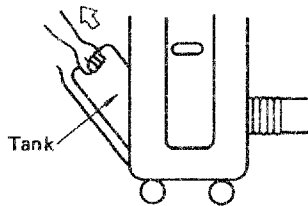

4. Changing of Water

As the water in tank becomes dirty gradually in cooling water, change the water once every week.

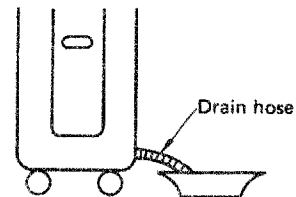

The water in tank becomes 50°C or so in cooling operation. It is abnormal at all.

5. High-pressure Switch Pushbutton

When the high-pressure switch pushbutton is tripped, reset the selector knob to "OFF", and after removing the tripping cause, press the switch.



As the high-pressure switch pushbutton is located behind the tank, press the pushbutton after pulling out the tank.


6. Relocation of Air Conditioner

When you move the air conditioner, be sure to first drain out the water in tank.

7. Mounting and Demounting of Tank Guide

In mounting the tank guide, insert point ① into a square hole on the base plate, ② slide it to right, ③ and drop in surely (to prevent it from being slipped out of position).

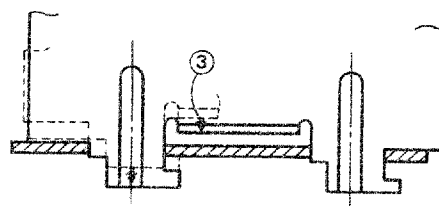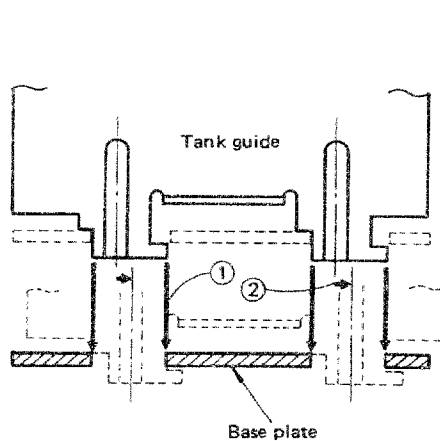

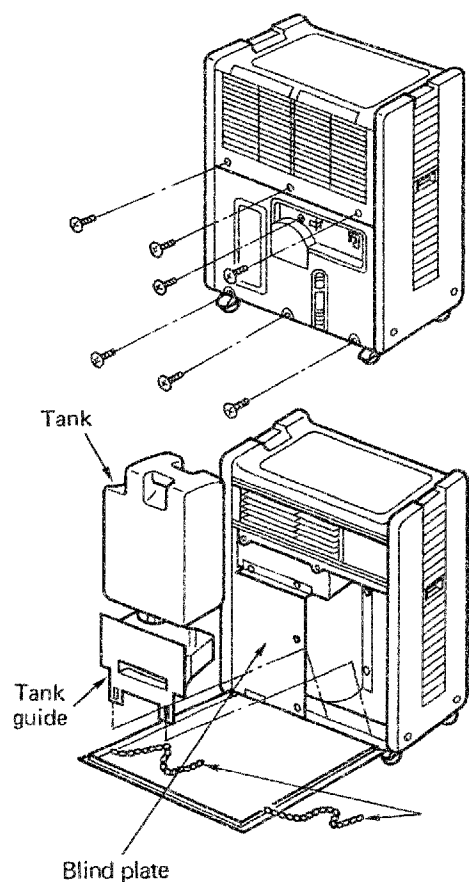


Condenser Servicing Procedure

1. Remove six (6) screws at the back and take off the back plate. Also, remove the screws for fixing the power cord mounting plate in the cord housing.
2. Simultaneously with opening the front door, remove chains on both sides.
3. Remove the tank and tank guide.
4. Remove the blind plate (screwed down at seven spots).

5. Remove six (6) screws fastening the condenser cover (three in the front part and the other three in the rear).


Note: If the lower screw in right hand side on the back (marked * in the right figure) is hard to remove, it is advisable to remove the screw from the front by turning condenser cover to the right after removing other screws.

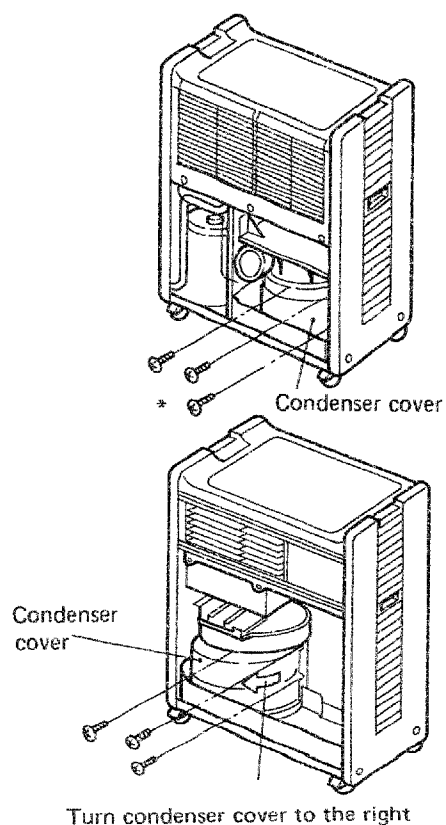

6. Turn the condenser cover clockwise and remove it by pulling it obliquely upward from the front of the set, then the cover will be exposed.
7. When assembling, follow the reverse procedure.


EXPLODED VIEWS AND PARTS LISTS

AG88111

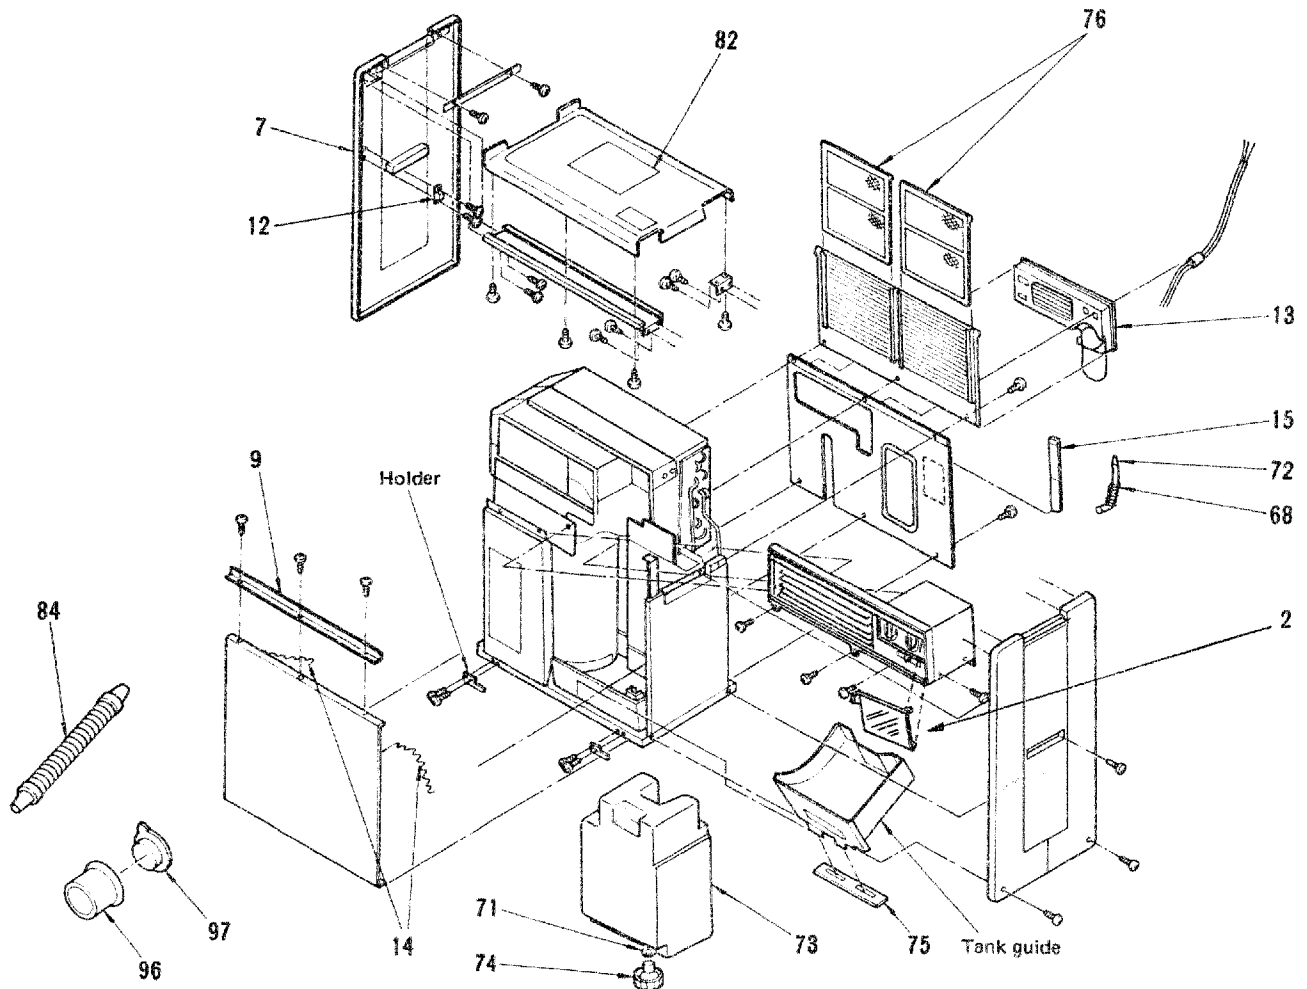


Location No.	Part No.	Description
2	43007702	Door, Control Box
7	43000373	Cabinet, Side, Gray
9	43001526	Sash, Decoration
12	43007259	Magnet Catch
13	43007359	Box, Cord
14	43007344	Chain
15	43007340	Case, Hose
68	43070139	Hose, Water
71	43079081	Cap, Water Tank

Location No.	Part No.	Description
72	43079087	Cap, Hose
73	43079175	Tank, Water
74	43079176	Cap, Water Tank
75	43079185	Packing, Tank Guide
76	43080274	Air Filter
82	43085141	Manual
84	43089119	Exhaust Hose
96	43089055	Exhaust Hole
97	43089056	Cap, Exhaust Hole, Rubber

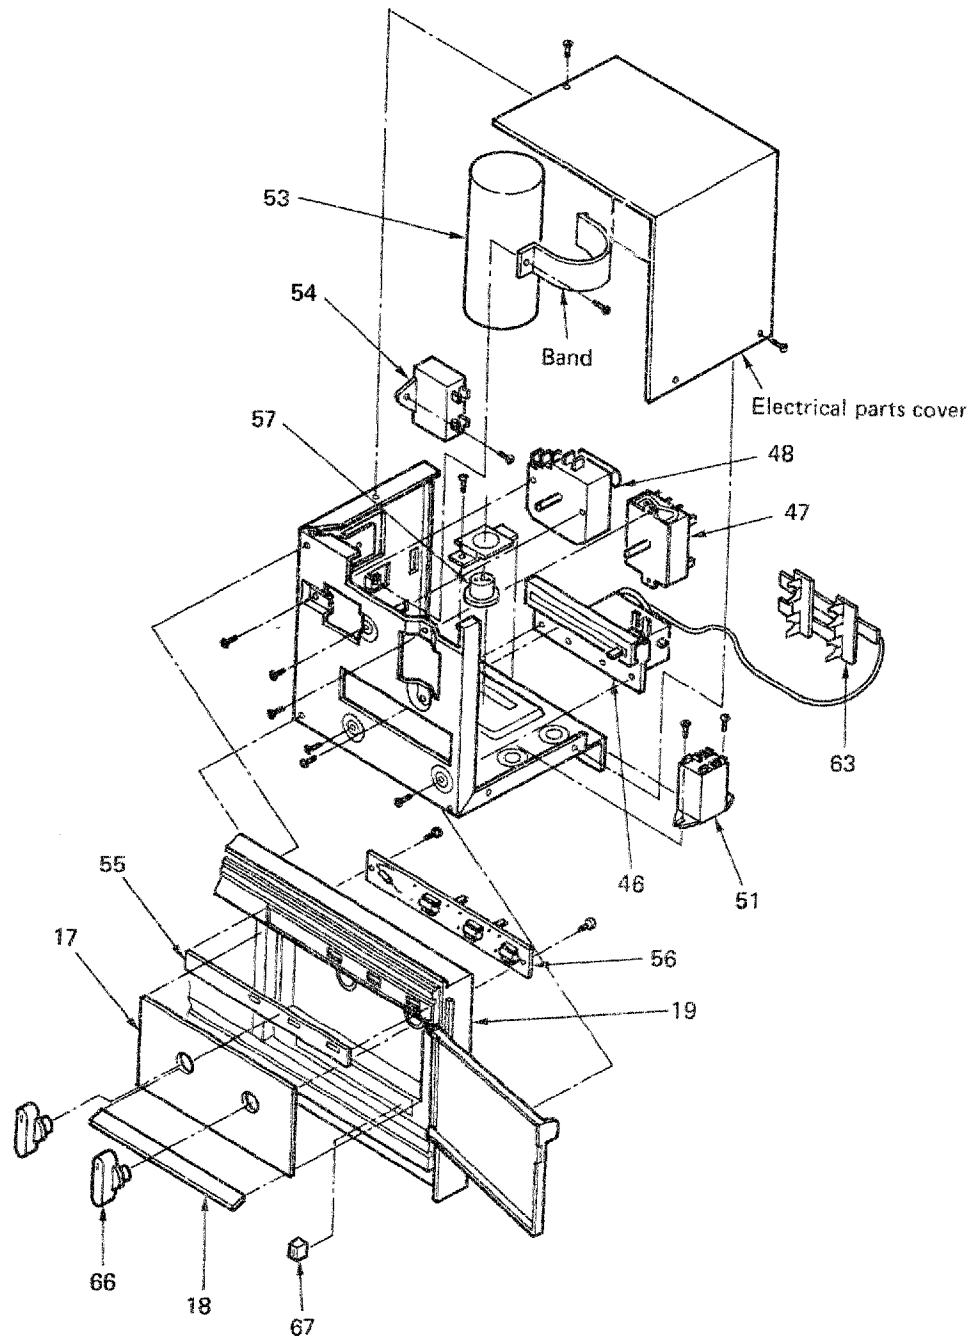


Location No.	Part No.	Description
17	43085107	Panel, Control
18	43085109	Sheet, Thermostat
19	43000398	Panel, Control
46	43050304	Thermostat B-102S
47	43051146	Switch, Rotary, RS-D150
48	43051305	Switch, Timer
51	43054203	Relay, LYIF-AC230V
53	43055325	Capacitor, Plastic Film, 20MFD, 400V

Location No.	Part No.	Description
54	43055288	Capacitor, Plastic Film, 1 MFD, 400V, 40FAFN105UJ
55	43085108	Sheet, LED
56	43058211	Lamp, Neon, KLN-3
57	43054313	Relay, Overload, MSF40AMM
63	43063153	Holder, Thermostat
66	43067084	Knob
67	43067085	Knob, Thermostat

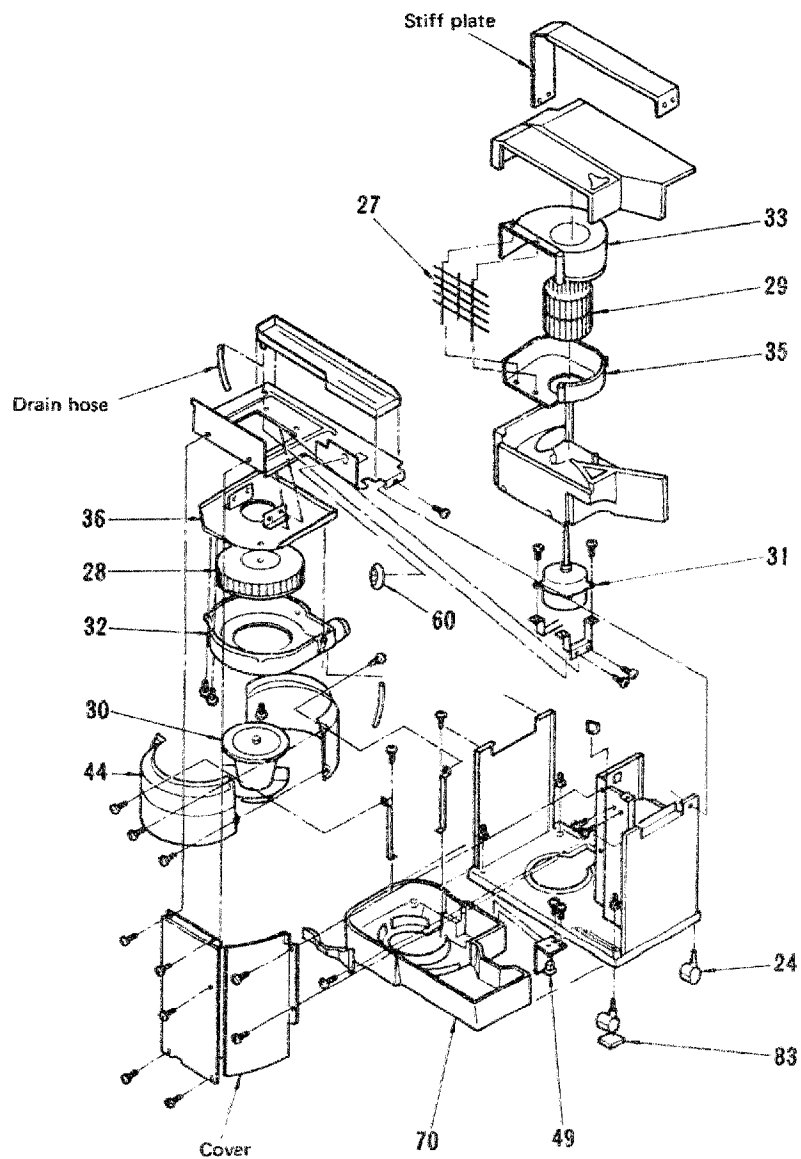

Location No.	Part No.	Description
24	43019623	Caster
27	43019632	Cuard, Fan
28	43020147	Fan, Sirocco, 200X40L
29	43020148	Fan, Sirocco, Plastic, 120X110L
30	43020149	Fan, Water
31	43021439	Motor, AC, 230V, 50Hz, Fan, CE-0201T
32	43022271	Case, Fan

Location No.	Part No.	Description
33	43022272	Case, Fan
35	43022291	Case, Fan
36	43022292	Case, Fan
44	43049584	Cover, Condenser
49	43051306	Switch, Float
60	43062069	Cover, Switch
70	43072202	Water Vessel
83	43089106	Seat, Caster

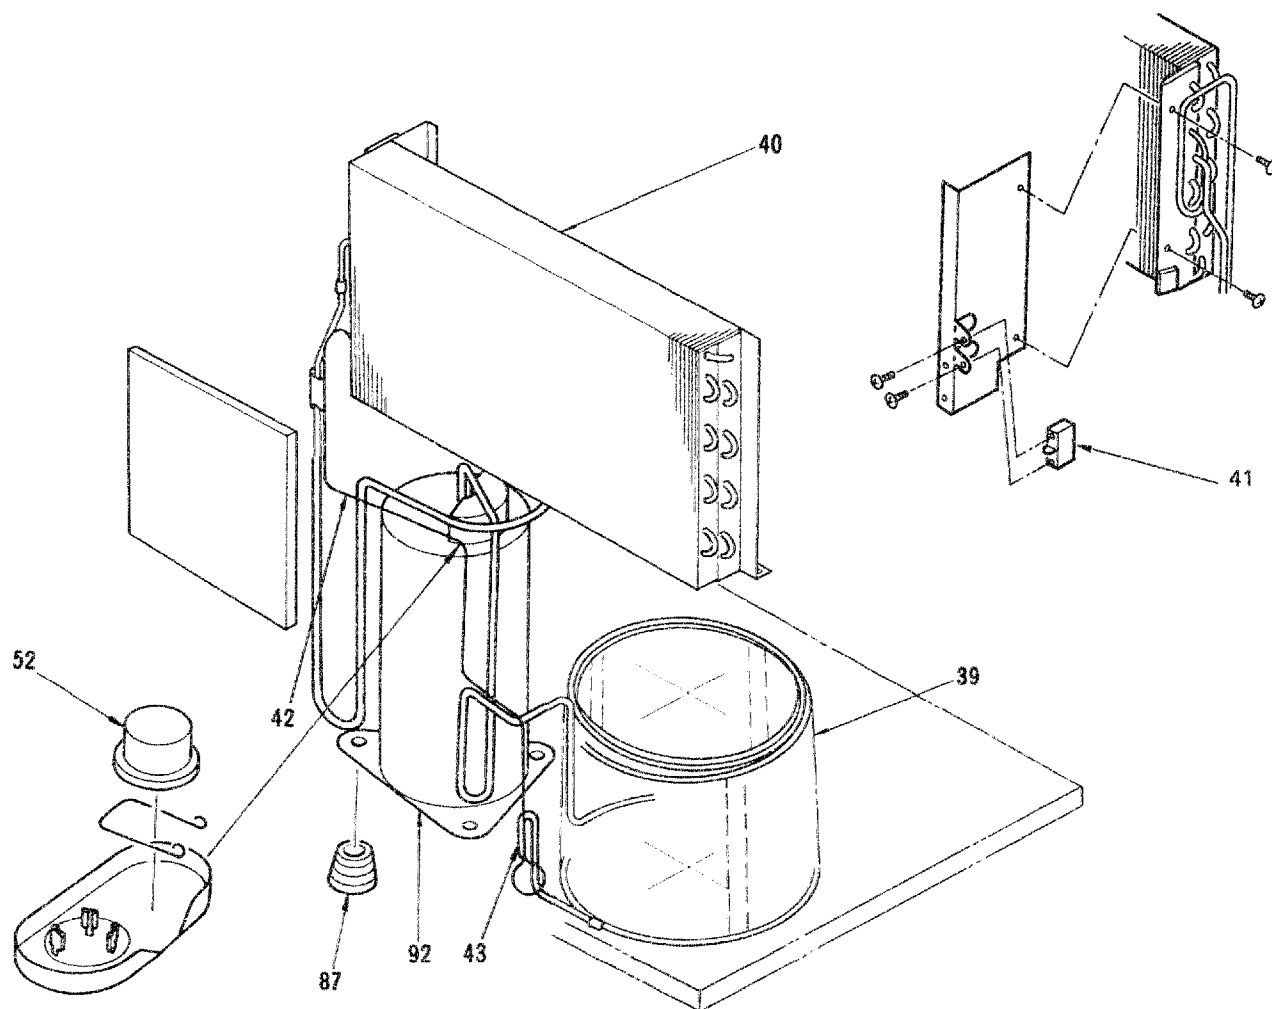

Location No.	Part No.	Description
39	43043490	Condenser
40	43044276	Evaporator
41	43046236	Switch, High Pressure, HIP-263
42	43047491	Capillary Tube
43	43047548	Strainer

Location No.	Part No.	Description
52	43054293	Relay, Overload
87	43095302	Cushion, Rubber
92	43041243	Compressor, RRH88XA3-4M

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105, JAPAN