






Smart Air Pump Manual

Smart Air Pump

Thank you for purchasing our Smart Air Pump. Please read the instruction manual carefully before using the air pump and save it for future reference.

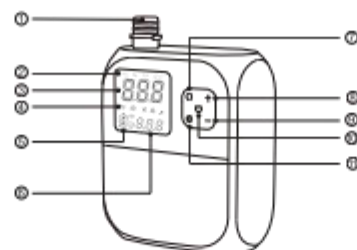

- | | |
|--------------------|------------------|
| ① Air Hose Port | ⑥ Mode selection |
| ② Unit Display | ⑦ Preset+ |
| ③ Pressure present | ⑧ Preset- |
| ④ Mode Display | ⑨ Power switch |
| ⑤ Battery Display | ⑩ LED Lighting |
| ⑪ Pressure Target | |

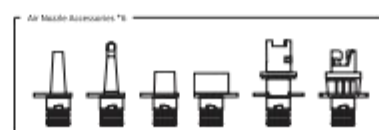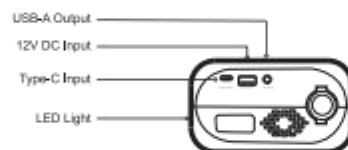

Notes

- Do not leave during inflation.
- Please do not put the air pump near inflammable and explosive items.
- Try to avoid sediment invasion and fall.
- Do not put the product in the place which is too cold, too hot or too wet.
- Product built-in lithium battery, do not throw items into the fire or around a fire.
- Keep the product out of reach of children.

Packing List

1X Smart Air Pump	6X Air Nozzle Accessories
1X Air hose	1X Car Charger Wire
1X Type-C Charger	1X Manual

Specification

Product Name	Smart Air Pump
Product Size	178X132X65mm
Product Net Weight	905g
Inflation Pressure	1.0-25PSI/6-172Kpa
Working Temperature	-10-45°C
Input Parameter	5V-2A
USB Output	5V-2A

Operating

1. Power on and off



Power on: Long press the power button for three seconds to start the air pump. Power on.
off: Long press the power button for three seconds to turn off the air pump.

2. Power Display



Power Indicator Light: The number of indicators on the power indicator bar varies with the power level.
Three Bars: 70%-100%
Two Bars: 30%-70%
One Bar: 5%-30%
One Bar Flash: Less than 5% (In the state of low power, need to charge before use).

3. Start/Stop Button



Start/Stop Button: When the device is powered on, press the START/STOP button to start the inflation, and the inflation will stop automatically when the preset pressure value is reached.

4. Charge Mode

Type-C Charge input 5V-2A, Connect the charging cable to the air pump and the power adapter (purchase by yourself).

Tips: Do not use the air pump during charging.

Indicator light of charge state:

Indicator is flashing green: Charging

Indicator is steady green: Fully charged

5. Inflating Operation

Air Hose Install

Air Hose Install

Connect the end of the hose with nut to the air pump pipe interface and tighten it counterclockwise.

Air nozzle Install

Air Nozzle Install

When inflating, select an appropriate air nozzle, put the air nozzle into the other end of the hose and fix it clockwise.

6. Pressure Detection

Measured Pressure Value: When the air pump is started, the number on the inflation pressure detection object display screen is the measured pressure value after the air pipe connecting.

7. DC Start

Using the car charging wire connect the cigarette lighter electric port with the product DC hole, long press the switch key (⏻) to start the machine. The cigarette lighter can be used to power the product.

8. Application

Scenario switch: Short press the working mode key to select four inflatable scene modes, which are:

Scene Mode	Reference Default Values	Adjustable Range
Tent Mode	6PSI	1-10PSI
Surf Board Mode	13PSI	1-16PSI
Swimming Ring Mode	4PSI	1-4PSI
Custom Mode	6PSI	1-25PSI

9. Pressure Value Preset

After long press (⏻), you can switch the pressure display unit. Unit conversion formula: 1PSI=6KPA.

10. Application Scenario switch

Short press (⏻): adjust the preset pressure value +/-0.5PSI.

Long press (⏻): can quickly adjust the preset pressure value.

Note: The scene switch and the preset pressure value will be saved automatically. When you use it next time, just switch the scene and the preset pressure value will be set automatically.

11. LED Light

Long press to turn on the light, and long press again to turn off.

12. Inflation Pressure Reference

In order to ensure safety, please read the instructions or other ways to check the air pressure required by the inflatable items before inflating, to avoid personal injury caused by over-inflation explosion.

Swimming Ring

The swimming ring should be inflated to 70%-80%, leaving a certain expansion space, the inflating volume is appropriate when using it without obvious depression after the inflation, do not inflate too much. The inflation pressure is related to the load weight. For more detailed pressure advice, please refer to the instruction manual of the relevant supplies.

Malfunction clearing

Malfunction	Troubleshooting
Slow Inflation	1. Check whether the battery is insufficient. 2. Check the air hose for air leaks. 3. Check whether the connecting parts at both ends of the air hose are tightened. 4. Check inflated items for air leaks.
It has been turned on but cannot inflate	Check whether the inflating mode is correct. Select custom mode to adjust preset values from 1-25 psi.
The preset pressure cannot be turned up or down	Check whether the inflating mode is correct. Select custom mode to adjust preset values from 1-25 psi.
Inflation is normal but the pressure is shown to be 0	1. Low pressure products such as balloons are not within the measurable range of this equipment. 2. In the case of empty tire, the tire pressure value can be shown only by inflating the tire for a short period of time.
After twisting the air nozzle, the pump has shut down automatically	It will automatically shut down in three minutes. Long press the start button to start up again.
There is air leakage when connecting the air hose	Tightened the air hose.
The color of the power indicator in the inflatable state is different from that in the standby state	There is an obvious voltage drop during the discharge process for the power lithium battery, which leads to the color inconsistency between the indicator light in the charging state and the standby state. This phenomenon is not a fault.
The power indicator is off after charging	Replace the safe charging cable and adapter to charge again.

Smart Air Pump