

YM529

USER'S MANUAL



CAR PROFESSIONAL SCAN TOOL

Table of Contents

1 Precautions	1
1.1 Precautions	1
2 Using the Car Professional Scan Tool	1
2.1 Tool Description	1
2.2 Specifications	2
2.3 Accessories Included	3
2.4 Navigation Characters	3
2.5 Vehicle Power	3
2.6 System Setup	3
2.7 Vehicle Coverage	9
3 OBDII Diagnostics	10
3.1 OBDII Diagnostics	10
3.2 Reading Codes	11
3.3 Erasing Codes	13
3.4 Viewing Freeze Frame Data	14
3.5 Retrieving I/M Readiness Status	15
3.6 Viewing Vehicle Information	18
3.7 Live PCM Data	19
3.8 Realtime Curve	20
3.9 O2 Sensor Test	21
3.10 On-Board Mon. Test	22
3.11 Component Test	23
3.12 Exiting OBDIITest	24
3.13 Battery Test	24
3.14 DTC Lookup	26
4.Cloud service functionality extension	27
4.1 Enter cloud service	27
4.2 The features of cloud service	27
5.Warranty and Service	29
5.1 Limited One Year Warranty	29
5.2 Service Procedures	30

1 Precautions

1.1 Precautions

To avoid personal injury or damage to the vehicles, read this instruction manual and observe the following safety precautions whenever working on a vehicle:

1. Be sure to test your vehicle in a safe environment.
2. Wear ANSI-compliant eye protection tools.
3. Keep clothing, hair, hands, tools and test equipment away from all operating or hot engine parts.
4. Operate the vehicle in a well-ventilated work area: Exhaust gases are poisonous.
5. Place blocks in front of the drive wheels and never leave the vehicle unattended while running tests.
6. Extreme caution must be exercised when working around ignition coils, distributor caps, ignition wires and spark plugs. These components generate dangerous voltages while the engine is running.
7. Put the transmission into **"PARK"** (for automatic transmission) or **"NEUTRAL"** (for manual transmission) and make sure the parking brake is activated.
8. Keep an applicable fire extinguisher near the hazard area.
9. Don't connect or disconnect any test equipment while the ignition is on or the engine is running.
10. Keep test tools dry, clean and free of oil or grease. Use a mild detergent on a clean cloth to clean the outside of the Car Professional Scan Tool, when necessary.

2 Using the Car Professional Scan Tool

2.1 Tool Description

1. OBDII CONNECTOR- Connects the Car Professional Scan Tool to the vehicle's Data Link Connector (DLC).
2. LCD DISPLAY -Indicates test results.
3. UP button  - Roll up the menu and sub menu in menu screen.

4. DOWN button  - Roll down the menu and sub menu in menu screen.
5. LEFT button  - Moves left the menu and sub menu in menu screen.
6. RIGHT button  - Moves right the menu and sub menu in menu screen.
7. EXIT button  - Cancel the operation or exit.
8. OK button  - Confirms a selection (or action) from a menu list.
9. BT button  - Enter Bluetooth mode.
10. F1 button - Quickly enter the function that have been set
11. F2 button - Quickly enter the function that have been set.
12. Green LED Display  - Indicates no DTC are found or the fault code has been cleared.
13. Yellow LED Display  - Indicates pending DTC exist.
14. Red LED Display  - Indicates there are some problems in one or more of the vehicle's systems.



2.2 Specifications

1. **Display:** 2.8-inch_z 320 x 240 full-angle HD IPS display
2. **Operating Temperature:** 0°C to 60°C (32°F to 140 °F)
3. **Storage Temperature:** -20°C to 70°C (-1°F to 158°F)
4. **Power:** 5.0V to 18.0V provided via vehicle battery
5. **Dimensions(L x W x H):** 146 mm (5.7")x 86 mm (3.3")x27 mm (1.06")
6. **Net Weight:** 228g (0.5 1b)

2.3 Accessories Included

1. **QR code** On the back of the product for User' s Manual download - Instructions on tool operations.
2. **OBDII cable** -- Provides power to tool and communicates between tool and vehicle.

2.4 Navigation Characters

Characters used to help navigate the Car Professional Scan Tool are:

1.  -- indicates current selection.
2. **Pd** -- Identifies a pending DTC when viewing DTC.
3. **\$** -- Identifies the control module number from which the data is retrieved.

2.5 Vehicle Power

The power of the Car Professional Scan Tool is provided via the vehicle Data Link Connector (DLC). Follow the steps below to turn on the Car Professional Scan Tool:

1. Connect the OBDII cable to the Car Professional Scan Tool
2. Find DLC on vehicle.
A plastic DLC cover may be found for some vehicles and you need to remove it before plugging the OBDII cable.
3. Plug OBDII cable to the vehicle' s DLC.


2.6 System Setup

The Car Professional Scan Tool allows you to make the following adjustments and settings:

1. **Language:** Selects desired language.
2. **Unit of measure:** Sets the unit of measure to English or Metric.
3. **Backlight:** Adjusts the backlight of the LCD display.
4. **Key Beep:** Turn on or off the beep of key.
5. **F1 Key Function:** Select F1 key function.
6. **F2 Key Function:** Select F2 key function.

To enter the System Setup menu

From the **Main Screen**, press **UP/DOWN/LEFT/RIGHT** button to select the **Setup** icon, press **OK** button enter **System Setup** menu. Follow the instructions to make adjustments and settings as described in the following setup options.

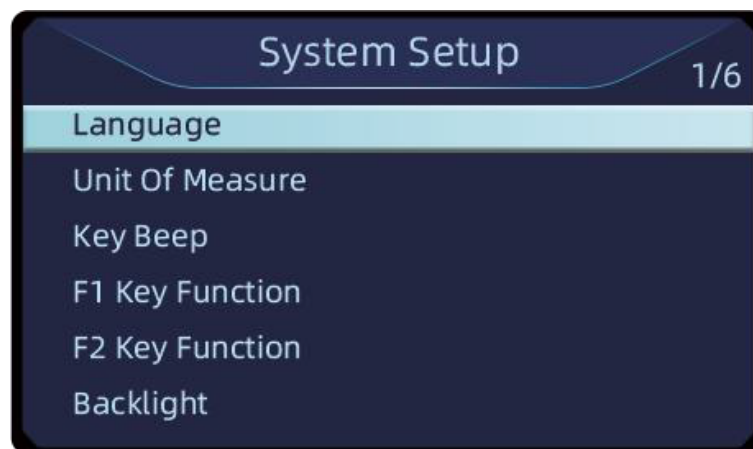


- The number "x/x" to the upper right corner of the screen indicates total number of items under the menu and sequence of currently selected item.


Language

The default language is English

01 From System Setup menu, use **UP/DOWN** button to select **Language**, and press **OK** button.

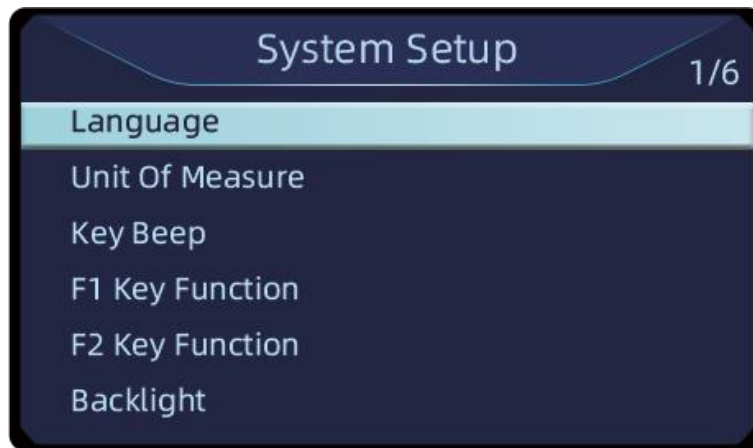


02 Use **UP/DOWN** button to select the desired language and press **OK** button to save your selection and return to previous menu.

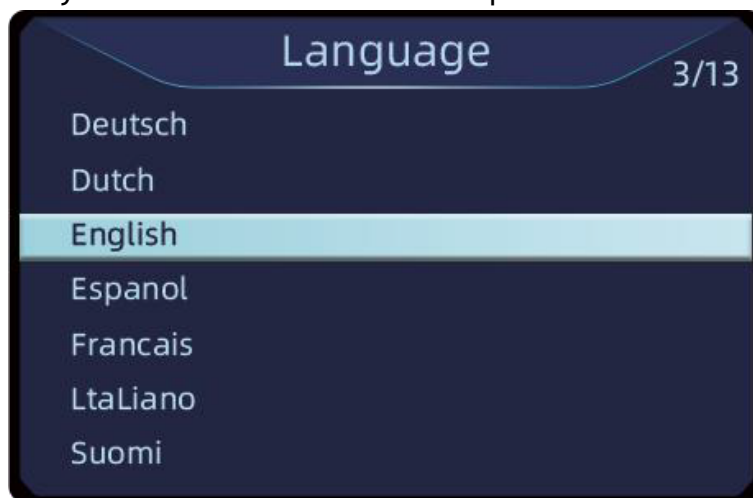

Unit Of Measurement

The default measurement unit is Metric

01 From System Setup menu, use **UP/DOWN** button to select **Unit of Measure** and press **OK** button.

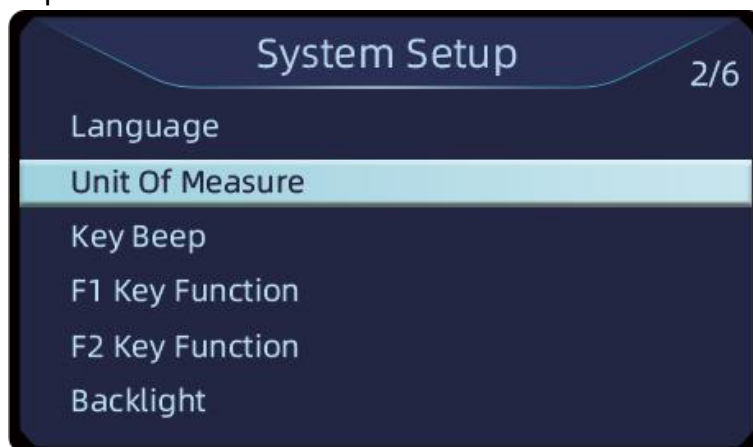

02 From Unit of Measure menu, use **UP/DOWN** button to select the desired unit of measurement.




03 Press **OK** button to save your settings and return to previous menu.

Backlight


01 From System Setup menu, use **UP/DOWN** button to select Backlight, and press **OK** button.



02 From Backlight menu, use **UP/DOWN** button to select manual or automatic backlight adjustment mode.

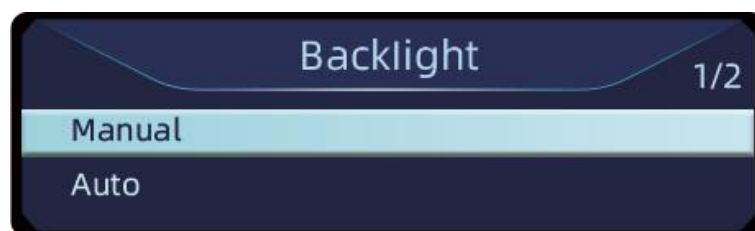

03 If you select manual mode, press the **OK** button to enter the adjustment interface, and use the **UP/DOWN** button to adjust the backlight brightness.

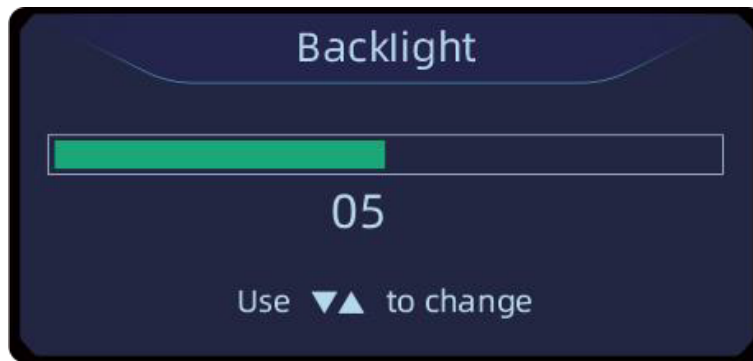


04 If auto mode is selected, press the OK button to enter the adjustment interface, and use the UP/DOWN buttons to adjust the backlight brightness at the current light intensity. When the light intensity changes, the backlight brightness is automatically adjusted.

05 Press **OK** button to save your settings and return to previous menu.


Key Beep

01 From System Setup menu, use **UP/DOWN** button to select Key Beep, and press **OK** button.

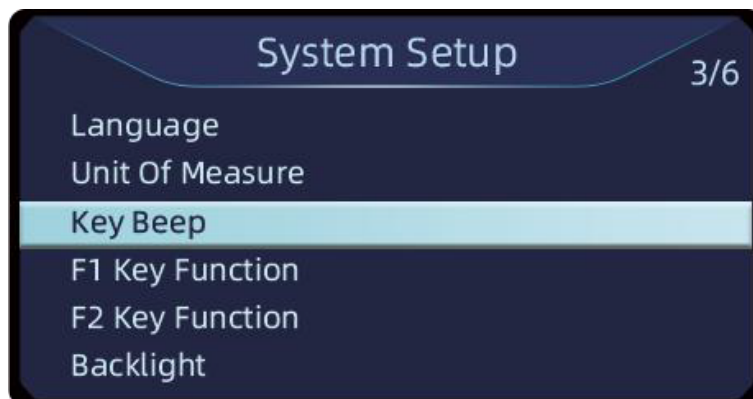

02 From Key Beep menu, use **UP/DOWN** button to Adjust the sound.

03 Press **OK** button to save your settings and return to previous menu.

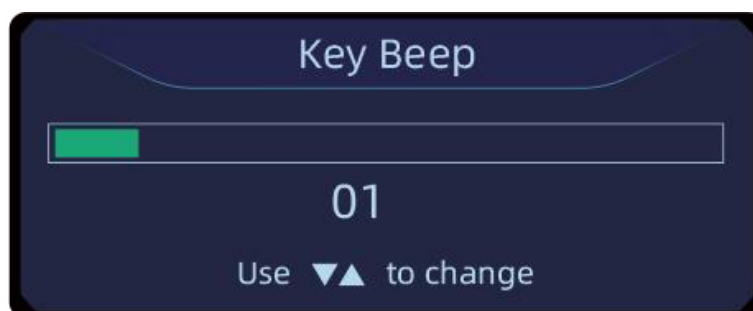

F1 Key Function

01 From System Setup menu, use **UP/DOWN** button to select **F1 Key Function**, and press OK button.



02 From F1 Key Function menu, use **UP/DOWN** button to select F1 key function.

03 Press **OK** button to save your settings and return to previous menu.




F2 Key Function

01 From System Setup menu, use **UP/DOWN** button to select F2 Key Function, and press **OK** button.



02 From F2 Key Function menu, use **UP/DOWN** button to select F2 key function.

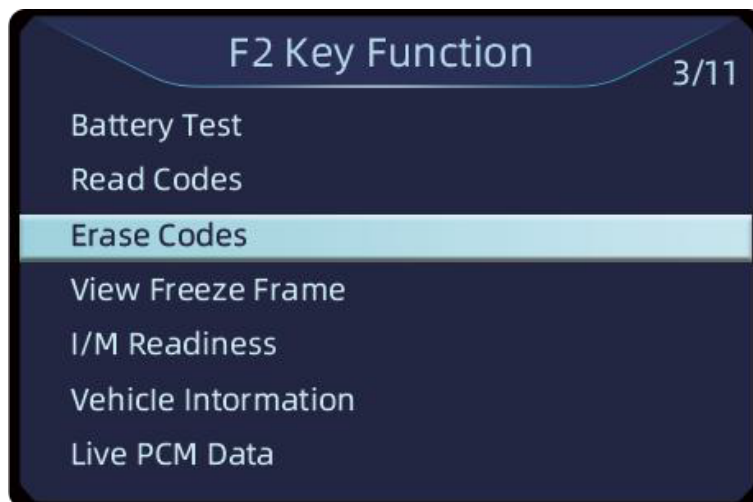

03 Press OK button to save your settings and return to previous menu.

Exiting System Setup

01 Press EXIT button to return to Main Screen.

2.7 Vehicle Coverage

This OBDII / EOBD Car Professional Scan Tool is specially designed to work with all OBDII compliant vehicles, including those equipped with the next-generation protocol - Control Area Network (CAN). It is required by EPA that all 1996 and newer vehicles (cars and light trucks) sold in the United States must be OBDII compliant and this includes all Domestic, Asian and European vehicles.

A small number of 1994 and 1995 model year gasoline vehicles are OBDII compliant. To verify if a 1994 or 1995 vehicle is OBDII compliant,

check the Vehicle Emissions Control Information (VECI) Label which is located under the hood or by the radiator of most vehicles. If the vehicle is OBDII compliant, the label will designate "**OBDII Certified**". Additionally, Government regulations mandate that all OBDII compliant vehicles must have a "**common**" sixteen-pin Data Link Connector (DLC).

For your vehicle to be OBDII compliant it must have a 16-pin DLC (Data Link Connector) under the dash and the Vehicle Emission Control Information Label must state that the vehicle is OBDII compliant.

3 OBDII Diagnostics

3.1 OBDII Diagnostics

CAUTION: Don't connect or disconnect any test equipment with ignition on or engine running.

01 Turn the ignition off.

02 Locate the vehicle's 16-pin Data Link Connector (DLC).

03 Plug into the OBDII cable to the vehicle's DLC.

04 Turn the ignition on. Engine can be off or running.


05 Use **UP/DOWN/LEFT/RIGHT** button select OBDII from the **Main Screen**, Press **OK** button to enter Diagnostic Menu. The tool will display OBDII protocols and the vehicle information until it has detected the vehicle's communication protocol.

• **If the Car Professional Scan Tool fails to communicate with the vehicle's ECU (Engine Control Unit), a "LINKING ERROR!" message shows up on the display.**

1. Verify that the ignition is ON;
2. Check if the Car Professional Scan Tool OBDII connector is securely connected to the vehicle's DLC;
3. Verify that the vehicle is OBDII compliant;
4. Turn the ignition off and wait for about 10 seconds. Turn the ignition back to on and repeat the procedure from step 5.

- If the "LINKING ERROR" message continues to display, then there might be problems for the Car Professional Scan Tool to communicate with the vehicle. Contact your local distributor or the manufacturer's customer service department for assistance.


06 After the system status is displayed (MIL status, DTC counts, Monitor status), wait a few seconds or press any key for Diagnostic Menu to come up.

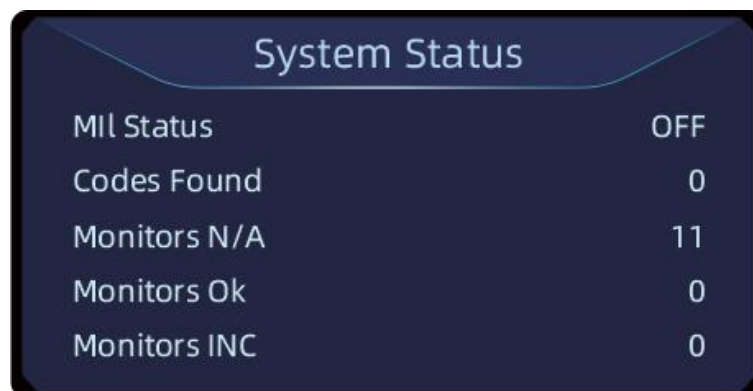

System Status	
MIL Status	OFF
Codes Found	0
Monitors N/A	11
Monitors Ok	0
Monitors INC	0


3.2 Reading Codes

01 Use **UP/DOWN** button to select **Read Codes** from Diagnostic Menu and press **OK** button.

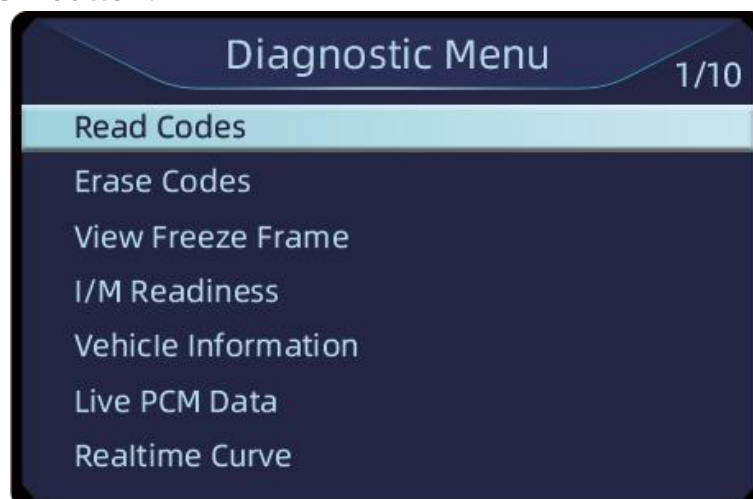

Diagnostic Menu 1/10	
Read Codes	
Erase Codes	
View Freeze Frame	
I/M Readiness	
Vehicle Information	
Live PCM Data	
Realtime Curve	

02 From Trouble Codes menu, use UP/DOWN button to select the type of trouble codes, press OK button.

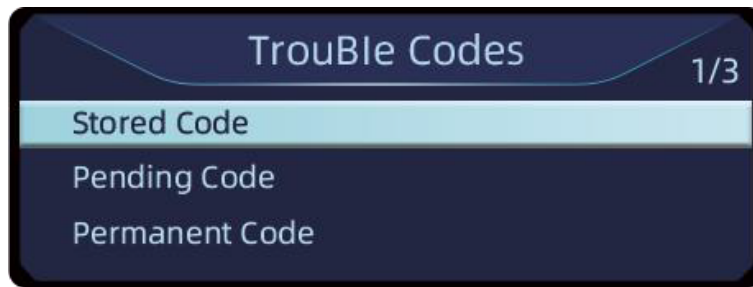


03 View DTC and their definitions on screen.



- The control module number, sequence of the DTC, total number of codes detected and type of codes (Generic or Manufacturer specific, Stored or Pending codes) will be observed on the upper right hand corner of the display.

04 If more than one DTC is found, use **UP/DOWN** button, as necessary, until all the codes have been shown up.

1. If no codes are detected, a "No codes are stored in the module!" message displays on the screen.
2. If retrieved DTC contain any manufacturer specific or enhanced codes, the display indicates "Manufacturer control".

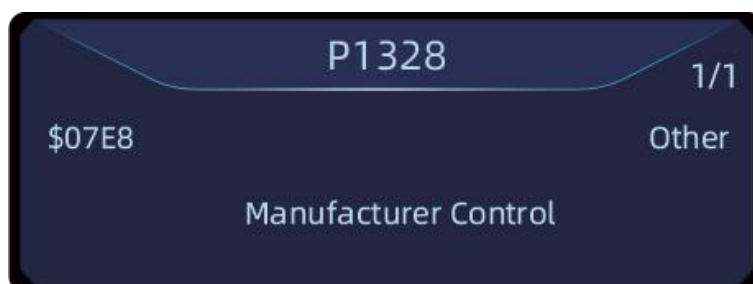


05 Press **EXIT** button to return to previous menu.

3.3 Erasing Codes


CAUTION: Erasing the Diagnostic Trouble Codes may allow the Car Professional Scan Tool to delete not only the codes from the vehicle's on-board computer, but also "**Freeze Frame**" data and manufacturer enhanced data. Further, the I/M Readiness Monitor Status for all vehicle monitors is reset to Not Ready or Not Complete status. Do not erase the codes before the system has been checked completely by a technician.

- This function is performed with key on engine off (KOEO). Do not start the engine.

01 If you decide to erase the DTC, use **UP/DOWN** button to select Erase Codes from Diagnostics Menu and press **OK** button.

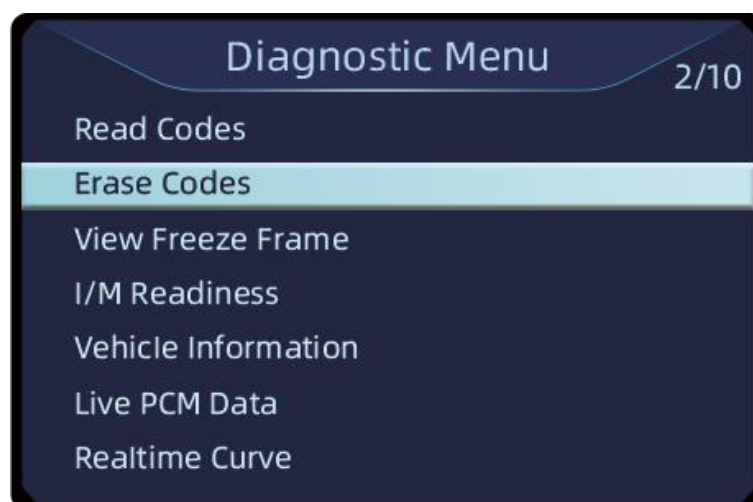

02 A warning message comes up asking for your confirmation.

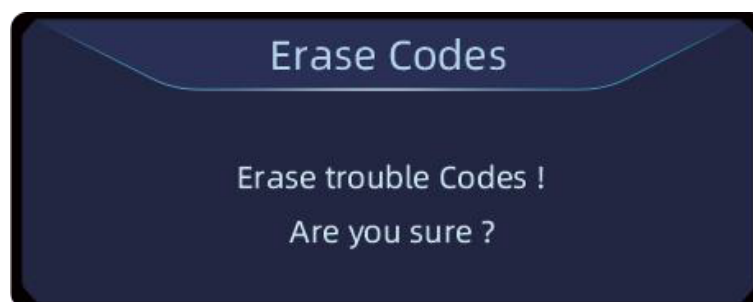

03 If you want to proceed with erasing the codes, press **OK** button to erase.


- If the codes are cleared successfully, an "**Erase Done!**" message shows up.
- If the codes are not cleared, then an "**Erase Failure. Turn Key on with Engine off!**" message displays.

04 Wait a few seconds or press any key to return to **Diagnostic Menu**.


- If you don't want to erase the codes, then press EXIT button. A "**Command Canceled**" message shows up. Press any key or wait a few seconds to return to **Diagnostic Menu**.

3.4 Viewing Freeze Frame Data


01 To view freeze frame, use **UP/DOWN** button to select View Freeze Frame from Diagnostic Menu and press **OK** button.

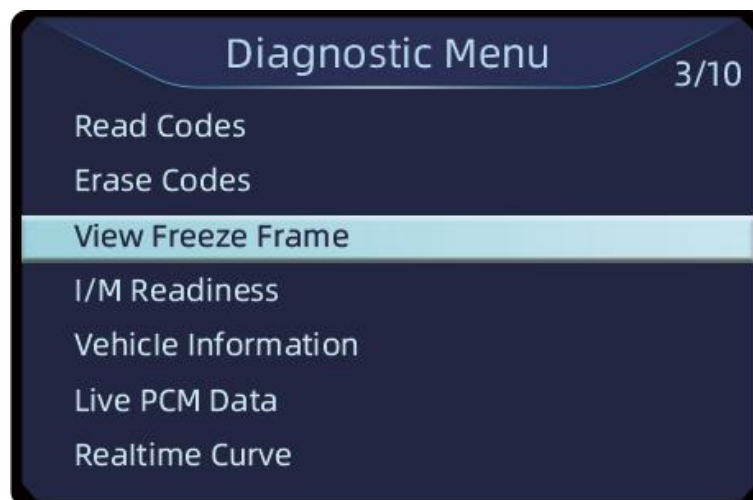

02 Wait a few seconds while the Car Professional Scan Tool validates the **PID MAP**.

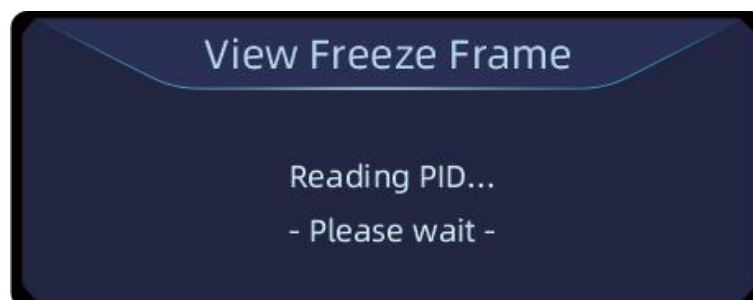

03 If the retrieved information covers more than one screen, use **UP/DOWN** button, as necessary, until all data have been shown up.

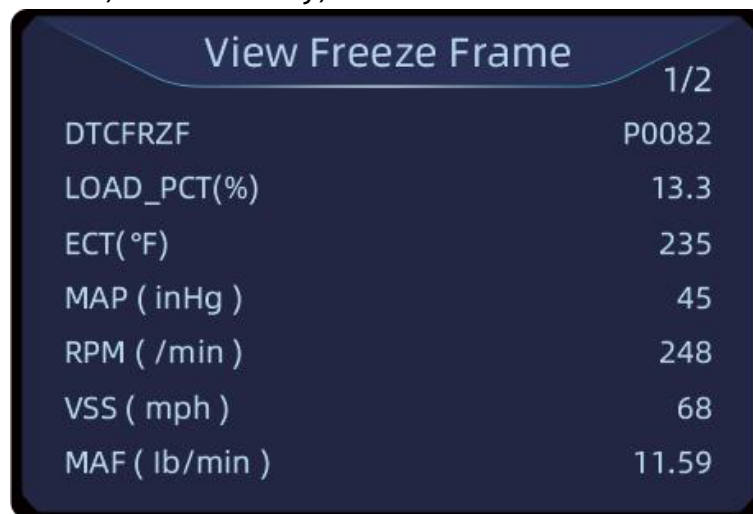

The screenshot shows a dark blue screen with the title 'View Freeze Frame' at the top center. In the top right corner, it displays '1/2'. The screen contains a list of engine parameters and their values:

View Freeze Frame	
DTCFRZF	P0082
LOAD_PCT(%)	13.3
ECT(°F)	235
MAP (inHg)	45
RPM (/min)	248
VSS (mph)	68
MAF (lb/min)	11.59

- the number "x/x" to the upper right corner of the screen indicates total number of screens the retrieved freeze frame covers and sequence of currently displayed data.

- If there is no freeze frame data available, an advisory message "**No Freeze Frame Data Stored!**" shows on the display.

04 Press **EXIT** button to return to **Diagnostic Menu**.

3.5 Retrieving I/M Readiness Status

I/M Readiness function is used to check the operations of the Emission System on OBD II compliant vehicles. It is an excellent function to use prior to having a vehicle inspected for compliance to a state emissions program.

Some latest vehicle models may support two types of **I/M Readiness tests**:

A **Since DTC Cleared** -indicates status of the monitors since the DTC are erased.


B **This Drive Cycle**- indicates status of monitors since the beginning of the current drive cycle.

An I/M Readiness Status result of "**NO**" does not necessarily indicate that the vehicle being tested will fail the state I/M inspection. For some states,

one or more such monitors may be allowed to be "Not Ready" to pass the emissions inspection.

1. **OK** -- Indicates that a particular monitor being checked has completed its diagnostic testing.
2. **INC** -- Indicates that a particular monitor being checked has not completed its diagnostic testing.
3. **N/A** -- The monitor is not supported on that vehicle.

01 Use **UP/DOWN** button to select **I/M Readiness** from Diagnostic Menu and press **OK** button.

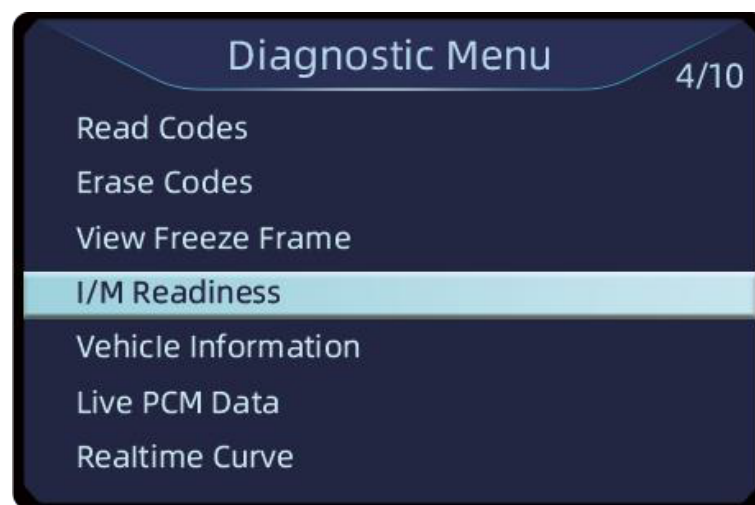

02 If the vehicle supports both types of tests, then both types shows on the screen for selection.



03 Use **UP/DOWN** button to view the status of the MIL light ("**ON**" or "**OFF**") and the following monitors:

- **Misfire monitor** – Misfire monitor
- **Fuel System Mon.** – Fuel System Monitor
- **Comp. Component** – Comprehensive Components Monitor

- **Catalyst Mon.** -- Catalyst Monitor
- **HTD Catalyst** – Heated Catalyst Monitor
- **EVAP System Mon.** -- Evaporation System Monitor
- **Sec. Air System** – Secondary Air Monitor
- **A/C Refrigeration Mon.** – A/C system Monitor
- **Oxygen Sens Mon.** – O₂ Sensors Monitor
- **Oxygen Sens Heater** – O₂ Sensor Heater Monitor
- **EGR** – System Monitor

Since DTCs Cleared		1/2
MIL Status		ON
Mistire Monitor		N/A
Fuel System Mon.		N/A
Comp.Component		N/A
Catalyst Mon.		N/A
HTD Catalyst		N/A
EVAP System Mon.		N/A

04 If the vehicle supports readiness test of "**This Drive Cycle**" , a screen of the following will be displayed:

This Drive Cycle		1/2
MIL Status		OFF
Mistire Monitor		N/A
Fuel System Mon.		N/A
Comp.Component		OK
Catalyst Mon.		N/A
HTD Catalyst		N/A
EVAP System Mon.		N/A


The number "x/x" to the upper right corner of the screen indicates total number of screens the retrieved data cover and sequence of currently displayed data.

05 Press **EXIT** button to return to previous menu.


3.6 Viewing Vehicle Information

The **Vehicle Info**, function enables retrieval of the **Vehicle Identification No. (VIN)**, **Calibration ID(s)**, **Calibration Verification Nos. (CVNs)** and **In-use Performance Tracking** on 2000 and newer vehicles that support **Mode 9**.

01 Use **UP/DOWN** button to select **Vehicle Info**, from **Diagnostic Menu** and press **OK** button.

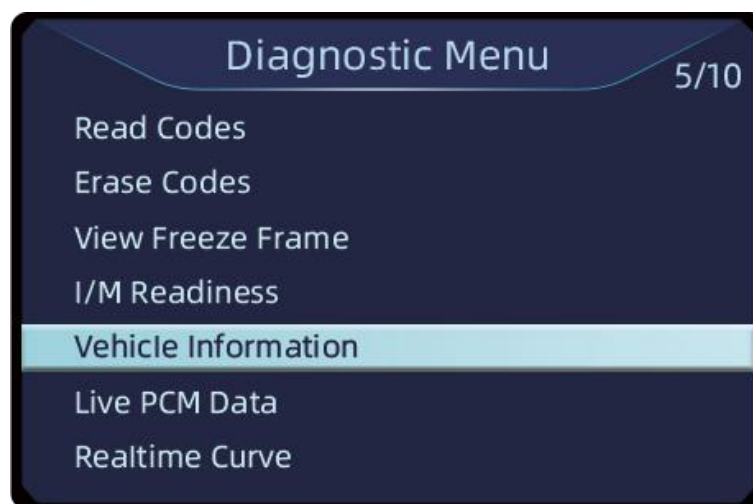


02 Wait a few seconds or press **OK** button to continue.

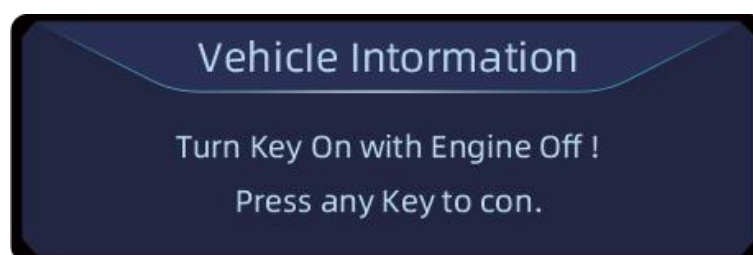

- If the vehicle does not support this mode, a "**The selected mode is not supported!**" message shows on the display.

03 From **Vehicle Info**, menu, use **UP/DOWN** button to select an available item to view and press **OK** button.

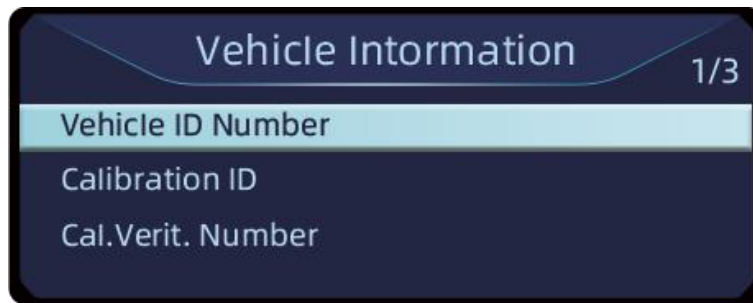

04 View retrieved vehicle information on the screen.


05 Press **EXIT** button to return to previous menu.



3.7 Live PCM Data

The **Live PCM Data** function can retrieve vehicle real time data of **Mode 1**.

01 Use **UP/DOWN** button to select **Live PCM Data** from Diagnostic Menu and press **OK** button.

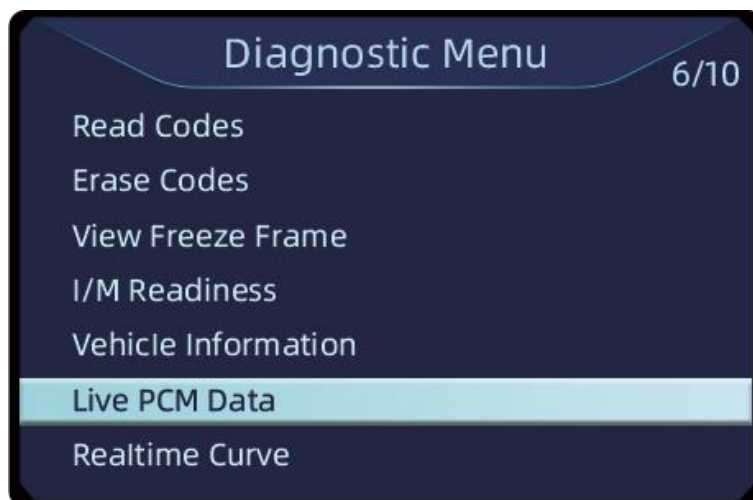

02 Use **UP/DOWN** button to change page in **Live PCM Data** interface.

Live PCM Data		1/12
FUELSYS 1		CL
FUELSYS 2		CL
LOAD_PCT(%)		13.3
ECT(°F)		217
SHRTFT 1 (%)		-97.6
LONGFT 1 (%)		-14.0
SHRTFT 2 (%)		3.9

03 Press **EXIT** button to return to the previous menu.

3.8 Real-time Curve

The **Real-time Curve** function can retrieve vehicle Real-time data of **Mode 1** and displays it in a curved fashion.


01 Use **UP/DOWN** button to select **Real-time Curve** from **Diagnostic Menu** and press **OK** button.

Diagnostic Menu		7/10
Read Codes		
Erase Codes		
View Freeze Frame		
I/M Readiness		
Vehicle Information		
Live PCM Data		
Realtime Curve		

02 Use **UP/DOWN** button to select the item that need to be displayed.

Realtime Curve		1/73
LOAD_PCT(%)		
ECT(°F)		
SHRTFT 1 (%)		
LONGFT 1 (%)		
SHRTFT 2 (%)		
LONGFT 2 (%)		
FRP (PSI)		

03 In the Real-time curve screen, Use **UP/DOWN** button to change the update speed of the curve.

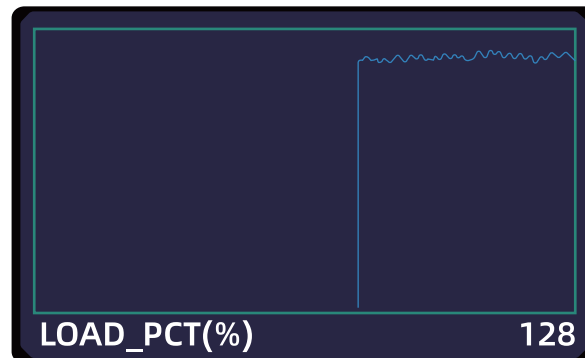


04 Press **EXIT** button to return to the previous menu.

3.9 O₂ Sensor Test


The **O₂S Monitor Test** function allows retrieval and viewing of O₂ sensor monitor test results for the most recently performed tests from the vehicle's on-board computer.

01 Use **UP/DOWN** button to select O₂ **Sensor Test** from Diagnostic Menu and press **OK** button.

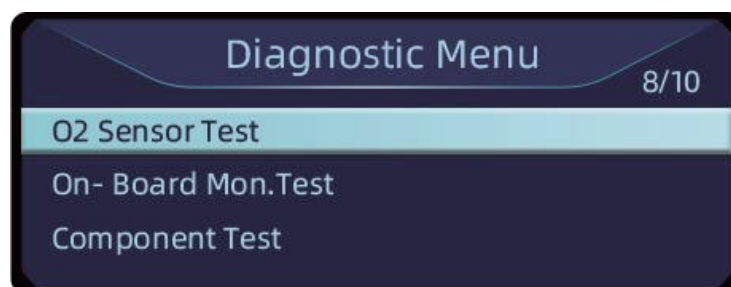


02 Wait until the scan tool validates the PID MAP.

03 Use **UP/DOWN** button to select O₂ sensor from O₂S Monitor Test menu and press **OK** button.

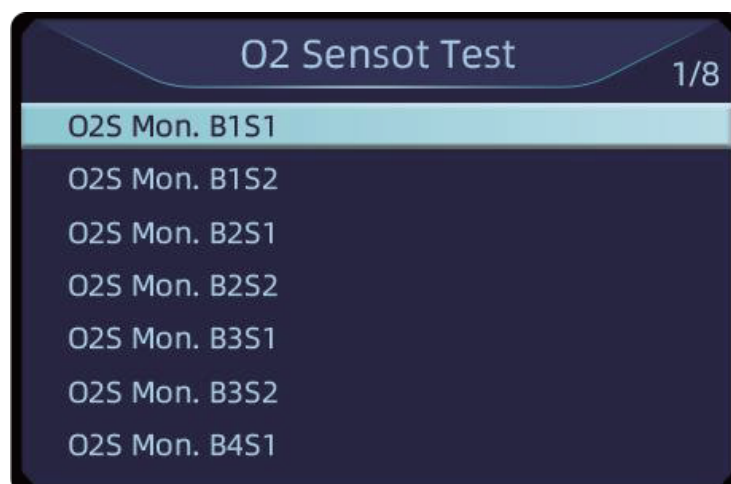

04 Use **UP/DOWN** button to select test result and press **OK** button to view additional data.

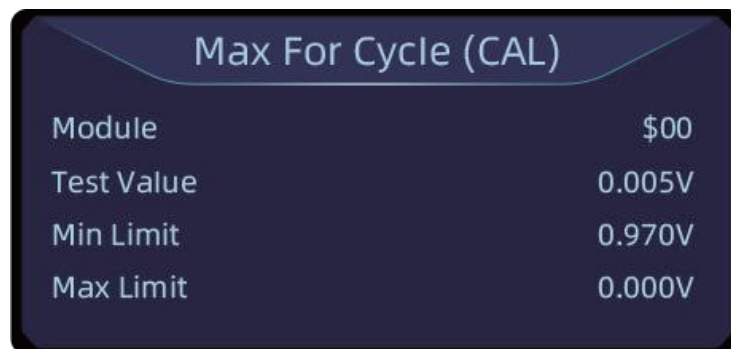

The image shows a screen titled "Max For Cycle (CAL)". It displays a table with four rows of test data.

Max For Cycle (CAL)	
Module	\$00
Test Value	0.005V
Min Limit	0.970V
Max Limit	0.000V

05 Press **EXIT** button to return to the previous menu.

3.10 On-Board Mon. Test

The **On-Board Mon. Test** function retrieves and displays test results for emission-related power train components and systems that are not continuously monitored.

01 Use **UP/DOWN** button to select **On-Board Mon. Test** from **Diagnostic Menu** and press **OK** button.



The image shows a screen titled "Diagnostic Menu" with a page indicator "9/10" in the top right corner. It lists three menu items: "O2 Sensor Test", "On- Board Mon.Test" (which is highlighted with a light blue background), and "Component Test".

Diagnostic Menu 9/10	
O2 Sensor Test	
On- Board Mon.Test	
Component Test	

02 Wait until the scan tool validates the PID MAP.

03 Use **UP/DOWN** button to select the monitor to view and press **OK** button.



The image shows a screen titled "On-Board Mon.Test" with a page indicator "1/6" in the top right corner. It lists six monitor options: "O2S Mon. B1S1" (highlighted with a light blue background), "O2S Mon. B1S2", "Catalyst Mon. B1", "O2S HTR Mon. B1S1", "O2S HTR Mon. B1S2", and "HTD Catalyst Mon. B1".

On-Board Mon.Test 1/6	
O2S Mon. B1S1	
O2S Mon. B1S2	
Catalyst Mon. B1	
O2S HTR Mon. B1S1	
O2S HTR Mon. B1S2	
HTD Catalyst Mon. B1	

04 Use **UP/DOWN** button to select test result and press **OK** button to view additional data.



05 Press **EXIT** button to return to the previous menu.


3.11 Component Test

The **Component** Test initiates a leak test for the vehicle's EVAP system. The scan tool itself does not perform the leak test, but commands the vehicle's on-board computer to start the test. Different vehicle manufacturers might use different criteria and methods for stopping the test once it has been started. Before starting the Component Test, refer to the vehicle service manual for instructions to stop the test.

01 Use **UP/DOWN** button to select **Component Test** from **Diagnostic Menu** and press **OK** button.



02 Wait for the scan tool to display the Component Test menu.

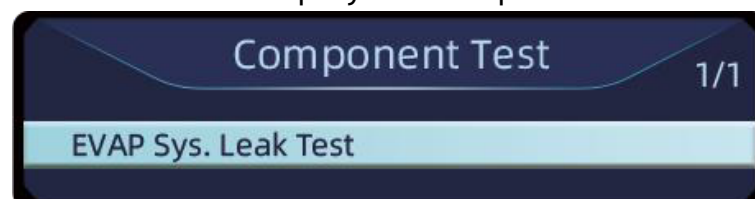


03 Press **OK** button to send command.

04 Wait a few seconds or press any key to return to previous screen.

3.12 Exiting OBDII Test

01 To exit OBDII test, press EXIT button in **Diagnostic Menu**.

02 A warning message comes up asking your confirmation.

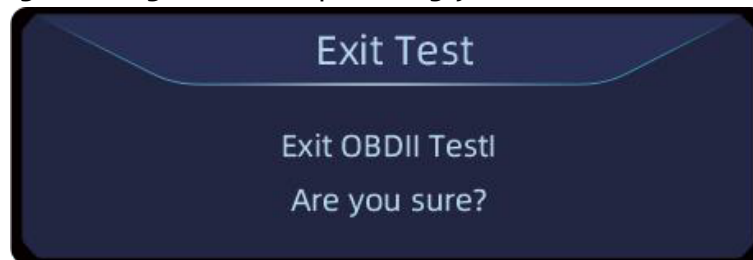

03 If you do want to exit OBDII test, press OK button.

• If you do not want to exit, press **EXIT** button to return.

3.13 Battery Test

The **Battery Test** function can measure the battery voltage, view the battery voltage curve and test the battery life.

To enter the Battery Test menu

Use **UP/DOWN/LEFT/RIGHT** button to select Battery Test from Main Screen and press **OK** button.

Battery measurement


01 From **Battery Test** menu, use **UP/DOWN** button to select **Battery measurement**, and press OK button.

02 Press **EXIT** button to return to the previous menu.



Battery monitoring


01 From **Battery Test** menu, use **UP/DOWN** button to select Battery monitoring, and press **OK** button.

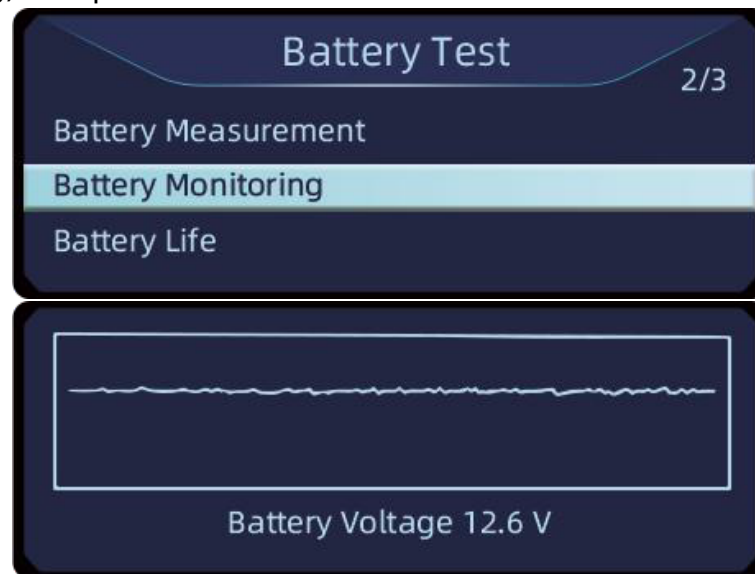

02 Press EXIT button to return to the previous menu.

Battery life


01 From **Battery Test** menu, use **UP/DOWN** button to select Battery Life, and press **OK** button.

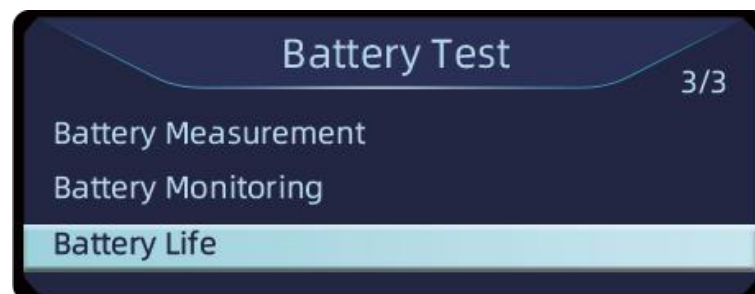

02 There will be some prompts for the steps on the screen, in order to get accurate test results, please be sure to follow the prompts.


Before testing , turn on the engine and run it for a while to make sure the battery is fully charged and turn off high - powered equipment such as A/C

Press any Key to con.

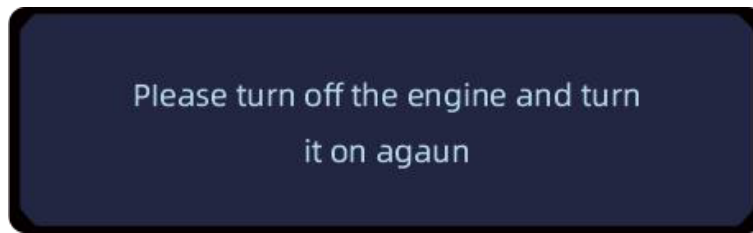

03 Follow the tips above, Turn off the engine, wait a moment and turn it on again.

04 Press **EXIT** button to return to the previous menu.

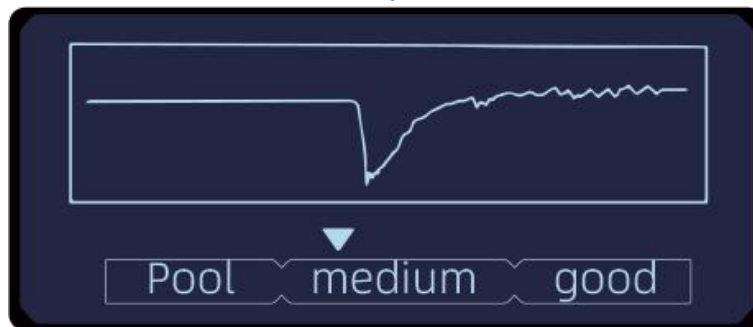

3.14 DTC Lookup


The **DTC Lookup** function is used to search for definitions of DTCs stored in the DTC library and for DTC Guide information.

01 Use **UP/DOWN/LEFT/RIGHT** button to select **DTC Lookup** from **Main Screen** and press **OK** button.

02 From DTC Lookup screen, use the **LEFT/RIGHT** button to move to the desired digit/character, use the **UP/DOWN** button to change selected digit/character and press OK button to confirm.



03 View the data trouble code definition on screen.

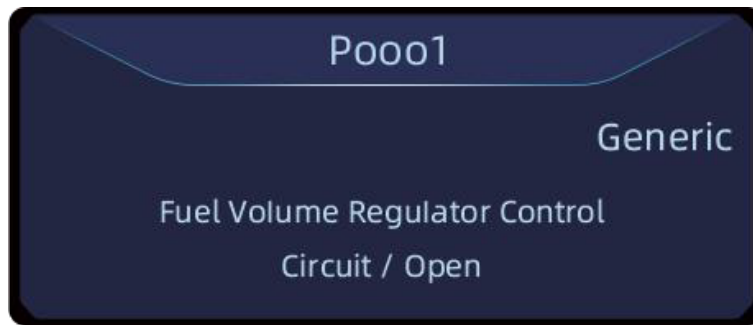


04 To enter another DTC, press the **EXIT** button to return to previous screen.

05 To exit to **Main Screen**, press the **EXIT** button.

4.Cloud service functionality extension

4.1 Enter cloud service

Under any menu, press the **Bluetooth** button and it will enter Bluetooth mode.

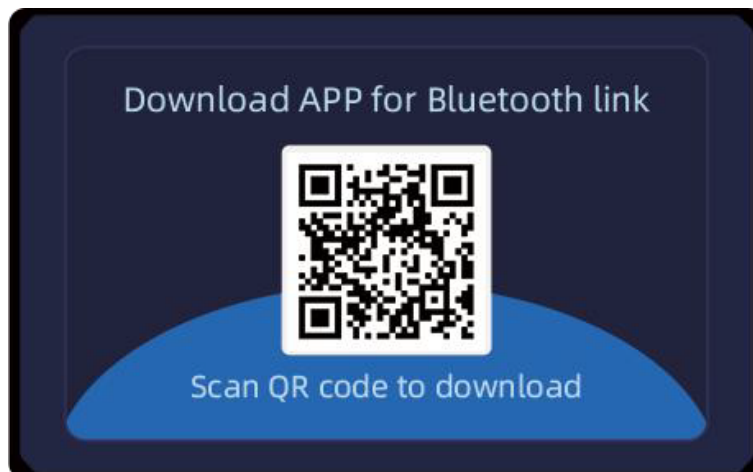

01 Scan the QR code on the screen via your phone to download and install the YMOBD® software.

02 Open the software, Bluetooth will automatically scan and connect. Follow the software prompts for the appropriate function.

Obtaining the appropriate permissions and Registration is required for the first time.

4.2 The features of cloud service

Unified Diagnostic Service

Provide vehicle unified diagnosis service, more ECUs and more functions. Professional testing according to vehicle brand and supported control modules.

Stores the playback data stream

View real-time data streams graphically and record them. After pausing, it can zoom or roam by swiping finger on the slider or on the touch screen.

Vehicle performance testing

It can conduct customized DIY tests on the acceleration performance, braking performance and distance of the vehicle, and provide the corresponding test result report.

Fuel consumption analysis

Provide various fuel consumption data of the vehicle, including idle fuel consumption, driving fuel consumption, average fuel consumption, long-term fuel consumption.

One-click whole vehicle detection

Comprehensive detection of all vehicle sensor data, vehicle information, trouble codes, freeze frames and vehicle monitoring information.

OTA Upgrade

OTA upgrade of OBD devices via Bluetooth, adding new features, and keeping firmware up to date.

Trip analysis

It can record every driving process of the vehicle. Analyze and summarize the driving mileage, average fuel consumption, driving time, driving speed and other data.

Vehicle information

Read vehicle specific vehicle info and info. Includes data such as VIN, number of ignition cycles, number of OBD monitoring conditions met, etc.

Data dashboard

It can collect car engine data in real time, such as speed, speed, water temperature, voltage, fuel consumption, etc. It has two modes of day and night, and has HUD display function.

3 To exit to **Main Screen**, press the **EXIT** button.

Three colors available



5. Warranty and Service

5.1 Limited One Year Warranty

This product will be free from all defects in materials and workmanship for a period of one (1) year from the date of the original purchase, subject to the following terms and conditions:

1 The sole responsibility of us under the Warranty is limited to either the repair or, at the option of us, replacement of the Car Professional Scan Tool at no charge with Proof of Purchase. The sales receipt may be used for this purpose.

2 This warranty does not apply to damages caused by improper use, accident, flood, lightning, or if the product was altered or repaired by anyone other than the Manufacturer's Service Center.

3 We shall not be liable for any incidental or consequential damages arising from the use, misuse, or mounting of the Car Professional Scan Tool. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

4 All information in this manual is based on the latest information available at the time of publication and no warranty can be made for its accuracy or completeness. We reserves the right to make changes at any time without notice.

5.2 Service Procedures

If you have any questions, please contact your local store, distributor. If it becomes necessary to return the Car Professional Scan Tool for repair, contact your local distributor for more information.