

Motorcycle Tire Pressure Monitoring System

Operation Manual

Product Overview

Thank you for purchasing our Tire Pressure Monitoring System (TPMS). This system is designed to provide an extra layer of protection during your ride, as it will alert you in advance about the condition of your motorcycle's tires. After installing the TPMS, the system can monitor the tire pressure and temperature in real-time. If any abnormal tire pressure or temperature is detected, the system will immediately send out an alarm sound and make the screen icons flash to inform the driver. Real-time reminders and prompt handling of problems can prevent traffic accidents and ensure the safety of the driver and passengers.

Introduction to the Receiving Host

1、Interface/Display Description



1.Tire pressure 2.Time/voltage 3.Tire pressure

4.Temperature 5.Setting button 6.Power button

2. The default lower limit of tire pressure for the product at the factory is 1.8 bar, and the upper limit is 3.2 bar. If the pressure exceeds this range, the corresponding number will flash to give an alarm.
3. When the battery voltage is lower than 11V, the voltage number will flash to remind you to replace the battery.
4. Short-press the power button to display the battery voltage, and it will return to the time display after 5 seconds.
5. TYPE-C output with QC3.0, supporting fast charging for Apple, Samsung, and Huawei mobile phones.

Installation Instructions

- 3.1. For the wired version during installation, connect the red power cord to the vehicle's ACC power supply, and the black (GND) cord to the negative pole of the battery.
- 3.2. Install the fixing bracket on the handlebar and tighten it. Mount the host on the bracket, adjust the angle, and then tighten it.
- 3.3. Install the sensor when the host is powered on. First, put the anti-removal ring into the valve, then install the sensor on the valve according to the position and tighten it. Then, screw back the anti-removal ring and tighten it. If the corresponding position on the host does not display the pressure, reinstall the sensor at that position.

For the wired version, the red wire must be connected to ACC; otherwise, it cannot start with the vehicle.

Function Settings (Not recommended for non-professionals to modify)

Users can set parameters according to their own vehicle conditions or actual needs. If no settings

are modified, the system will default to the factory state. Long-press the "Setting Button" for 3 seconds to enter the system setting state. If there is no operation within 30 seconds, the system will automatically exit to the main interface. Settings that are not confirmed will not be saved. Long-press the power button for 5 seconds to turn the device on or off.

Unit Setting (Factory default is Bar)

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state, and "0" will appear in the upper left corner. Press the setting button again, and the Bar icon will flash. Short-press the "Power Button" to select between Psi or bar units. After selecting the desired unit, press the "Setting Button" once to complete the setting.

Temperature Unit Setting (Factory default is °C)

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state. Press the power button once, and the icon "1" will appear in the upper left corner. Press the "Setting Button" once, and "°C" will flash. Use the "Power Button" to select and change to "°F", then press the "Setting Button" once to save the setting.

Time Setting

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state. Press the "Power Button" twice to enter the time setting. Short-press the "Power Button", and the hour will flash. At this time, you can set the hour by short-pressing the "Power Button". After setting the hour, press the "Setting Button" once to enter the minute setting. Short-press the power button to adjust the minute. After completion, long-press the setting button to exit.



Pressure Alarm Upper Limit Setting

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state. Short-press the "Power Button" 3 times to enter the tire pressure upper limit setting. Press the "Setting Button" once, and the tire pressure number will flash. At this time, you can set the maximum upper limit of tire pressure by short-pressing the "Power Button". After setting, press the "Setting Button" once to save.

Pressure Alarm Lower Limit Setting

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state. Short-press the "Power Button" 4 times to enter the tire pressure lower limit setting. Press the "Setting Button" once, and the tire pressure number will flash. At this time, you can adjust the minimum lower limit of tire pressure by short-pressing the "Power Button". After setting, long-press the "Setting Button" to exit.

In the standby state, long-press the "Setting Button" for 3 seconds to enter the system setting state. Short-press the "Power Button" 5 times to enter the tire temperature alarm setting. Short-press the "Setting Button", and the tire temperature number will flash. At this time, you can set the maximum upper limit of tire temperature by short-pressing the "Power Button". After setting, long-press the "Setting Button" to exit.

Factory Parameters of Tire Pressure




Factory Parameters of Tire Pressure


Temperature: 68°C, pressure upper limit: 3.2 bar, pressure lower limit: 1.8 bar.

Appendix 1: Installation Instructions


External Sensor Installation

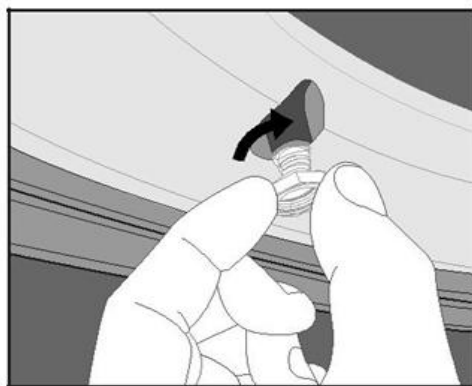


a. First screw in the anti-theft nut

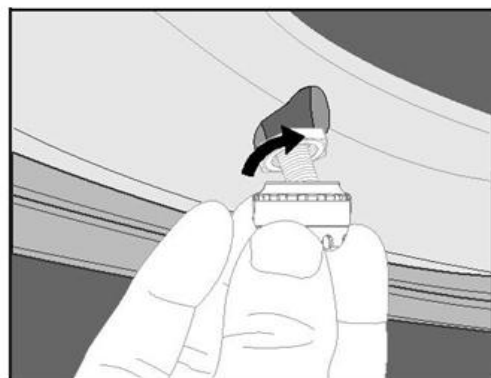

b. Tighten the sensor

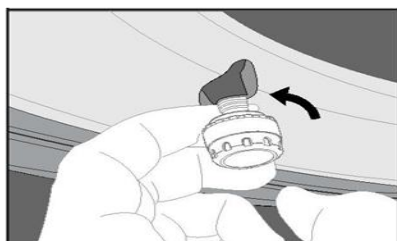

c. Tighten the anti-theft nut against the sensor in the counterclockwise direction

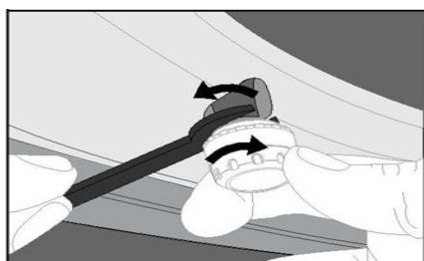

d. After tightening the sensor, use a wrench to tighten the anti-theft nut counterclockwise

Appendix 2: Replacing the Sensor Battery

When replacing the sensor battery, please disassemble and assemble the shell one by one. Do not mix them or disassemble/assemble multiple ones at the same time. This can effectively prevent the sensor from being installed in the wrong tire position due to incorrect assembly of the shell. (Button battery CR1632, operating temperature requirement: $-30^{\circ}\text{C} \sim 80^{\circ}\text{C}$); available in general stores.

Before disassembling the sensor, prepare a nut wrench. Rotate the nut clockwise to separate the nut from the sensor, then remove the sensor counterclockwise.

Use a wrench to unscrew the upper cover of the sensor counterclockwise.


Take out the old battery from the battery holder and dispose of it according to environmental protection classification.

Distinguish the positive and negative positions (the positive pole "+" faces upward); install the new CR1632 button battery.

1. Screw on the upper cover of the sensor, then tighten it clockwise with a wrench



Use a wrench to open the outer cover counterclockwise

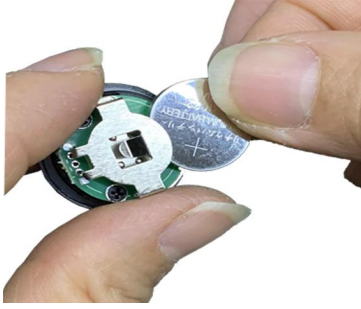

Take out the old battery and install the new one



Close the upper cover and tighten it clockwise with a wrench