



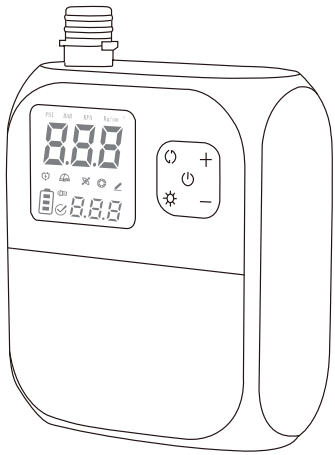



智能充气泵 说明书

Smart Air Pump

感谢购买使用本款充气泵，使用前请仔细阅读说明书并妥善保管，以便日后查看参考。

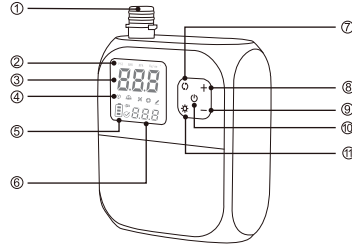

- ① 气管接头
- ② 单位显示
- ③ 当前压力值显示
- ④ 模式显示
- ⑤ 电量显示
- ⑥ 目标压力值显示
- ⑦ 模式选择按键
- ⑧ 增加按键
- ⑨ 减少按键
- ⑩ 电源/启动按键
- ⑪ 灯光按键

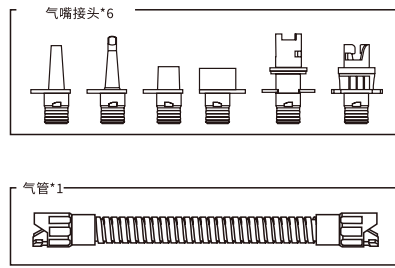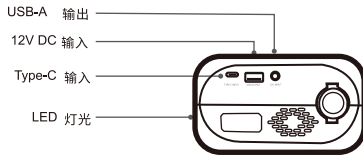

使用注意

- 产品采用内置电池供电，使用后请及时充电。
- 长期搁置不用，请定期充电，建议每月充电1次。
- 充气过程请勿随意离开，充气过程和完成后请勿立即触摸气管和接头，请等待冷却后再取下。
- 请勿靠近易燃易爆物品。
- 请注意避免高空坠落。
- 请勿长期放置过冷、过热、过湿的环境中存放。
- 产品内置电池，禁止靠近火源或随意丢弃。
- 孕妇和儿童禁止使用。

包装清单

1X 主机	6X 气嘴接头
1X 气管	1X 点烟器电源线
1X Type-C 充电线	1X 说明书

规格参数

产品名称	智能充气泵
产品尺寸	178X132X65mm
产品净重	905g
充气压力范围	1.0-25PSI/6-172Kpa
工作温度	-10-45℃
Type-C 输入	5V-2A
USB-A 输出	5V-2A

操作说明

1. 开关机



长按电源按键开机；
长按电源按键关机。

2. 电量显示



三格常亮:70%-100%电量；
两格常亮:30%-70%电量；
一格常亮:5%-30%电量；
一格闪烁:少于5%电量。

3. 启动/停止



短按电源按键启动；
短按电源按键停止。
压力值达到目标值后会自动停止。

4. 充电

产品采用5V/2A (TYPE-C接口) 充电，充电时请把电源适配器(需自备)通过充电线联接产品TYPE-C接头，充电时电量显示会闪烁，表示充电正在进行。

提示:充电过程中产品无法开机，充电完成后电量显示图标会停止闪烁。充电前请确认自备电源适配器是否匹配本产品。

5. 充气

- 将产品和充气对象通过气管进行联接。
- 产品开机，并通过模式按键选择合适的充气场景；
- 通过+/-按键，调整目标压力值
- 按电源/启动按键启动。

提示:充气过程请确保气管与机器，气管与充气对象联接牢固，充气过程中检查是否有漏气情况，充气完成后及时取下。

6. 压力检测

将气管两头与充气对象、机器分别联接好，按电源键并开机，机器会自动检测当前压力值。充气工作当时，会实时显示当前压力值。

7. DC电源供电

电源供电产品可采用12V的直流DC电源(功率需大于100W)直接供电使用。将点烟器电源线直接联接汽车点烟器口或其12V直流电源供电时，产品会断开电池供电。

8. 模式选择

产品提供了不同充气场景下的默认值和调节范围:见下表。

场景模式	默认参考值	可调节范围
帐篷模式	6PSI	1-8PSI
桨板模式	13PSI	1-16PSI
泳圈模式	4PSI	1-4PSI
自由设置模式	6PSI	1-25PSI

9. 压力单位设置

长按 进行压力单位切换。
压力单位换算公式: 1PSI=6KPA

10. 预设压力值调整

短按+/-按键进行预设压力值的调整，按1次预设压力值增加或减少0.5PSI。

长按+/-按键可以进行预设压力值的快速调整

提示:产品具备记忆功能，可以保存末次设置调整的模式和预设压力值，开机后会自动显示末次设置模式。

11. LED 灯光

关机状态下：长按灯光按键，打开灯光。
开机状态下：短按灯光按键，打开灯光。
再次短按灯光按键，慢闪红光，再次短按，红光爆闪。


12. 压力建议

不同充气对象的压力值不同，充气前请准确了解充气对象的充气压力然后进行模式选择，充气压力还需综合考虑温度、承载重量等因素。避免充气不足或过充导致爆炸。
如泳圈充气:一般充到70%-80%，保留一定的余量空间。准确的充气压力建议，请参考充气对象说明。

常见故障排除

故障描述	排除建议
充气慢	1. 检查电量是否充足； 2. 检查气管是否漏气； 3. 检测气管与机器，气管与充气对象接并没有是否连接牢固； 4. 检查充气对象是否漏气。
开机后不工作	1. 检查充气模式、压力是否设置准确； 2. 是否存在低于当前压力值的情况。
无法充电	检查电源适配器、充电线是否匹配，需采用支持5V/2A输出的电源适配器。(部分充电器可能存在协议不匹配问题，请更换适配器)
充气正常工作，但压力值始终为0	1. 部分低压力需求产品，如气球，不在机器量程； 2. 部分大容积产品，充气过程较慢，需一定时间后才有压力显示。
连接气管后，机器自动关机	1. 机器在无任何操作情况下3分钟后会自动关机； 2. 按电源键重新开机即可
接头漏头	检查接头与机器、接头与物品是否联系紧固。
工作过程电量显示掉电快	充气工作需要大电流工作，工作过程显示低于实际电量，结束后会显示准确电量。充气力越大，所需电流和电量也越大。
预设压力值不能调高或调低	1. 检查模式和压力值是否超出当前模式的设置范围； 2. 如超出选择自由设置模式可设置1-25PSI。


智能充气泵

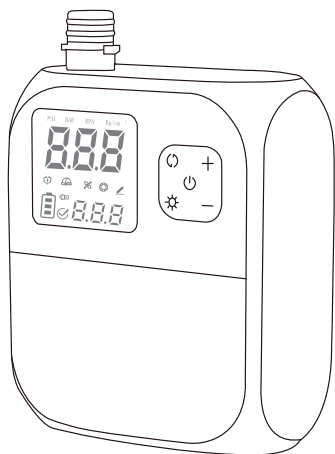




Smart Air Pump Manual

Smart Air Pump

Thank you for purchasing our Smart Air Pump. Please read the instruction manual carefully before using the air pump and save it for future reference.

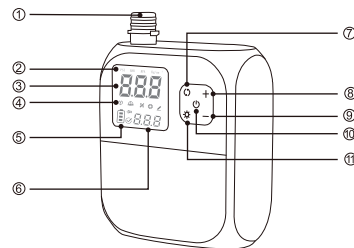

- | | |
|--------------------|------------------|
| ① Air Hose Port | ⑦ Mode selection |
| ② Unit Display | ⑧ Preset+ |
| ③ Pressure present | ⑨ Preset- |
| ④ Mode Display | ⑩ Power switch |
| ⑤ Battery Display | ⑪ LED Lighting |
| ⑥ Pressure Target | |

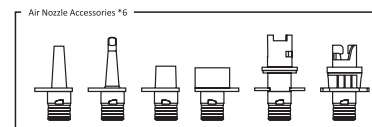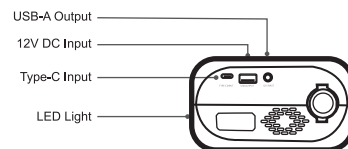

Notes

- Do not leave during inflation
- Please do not put the air pump near inflammable and explosive items
- Try to avoid sediment invasion and fall
- Do not put the product in the place which is too cold, too hot or too wet
- Product built-in lithium battery, do not throw items into the fire or around a fire
- Keep the product out of reach of children

Packing List

1X Smart Air Pump	6X Air Nozzle Accessories
1X Air hose	1X Car Charger Wire
1X Type-C Charger	1X Manual

Specification

Product Name	Smart Air Pump
Product Size	178X132X65mm
Product Net Weight	905g
Inflation Pressure	1.0-25PSI/6-172Kpa
Working Temperature	-10-45°C
Input Parameter	5V-2A
USB Output	5V-2A

Operating

1. Power on and off



Power on: Long press the power button for three seconds to start the air pump
Power off: Long press the power button for three seconds to turn off the air pump

2. Power Display



Power Indicator Light The number of indicators on the power indicator bar varies with the power level:
Three Bars: 70%~100%
Two Bars: 30%~70%
One Bar: 5%~30%
One Bar Flash: Less than 5%
(In the state of low power, need to charge before use)

3. Start/Stop Button



Start/Stop Button When the device is powered on, press the START/STOP button to start the inflation, and the inflation will stop automatically when the preset pressure value is reached.

4. Charge Mode

Type-C Charge input 5V-2A. Connect the charging cable to the air pump and the power adapter (purchase by yourself)

Tips: Do not use the air pump during charging

Indicator light of charge state:
Indicator is flashing green: Charging
Indicator is steady green: Fully charged

5. Inflating Operation

Air Hose Install

Air Hose Install

Connect the end of the hose with nut to the air pump pipe interface and tighten it counterclockwise

Air nozzle Install

Air Nozzle Install

When inflating, select an appropriate air nozzle, put the air nozzle into the other end of the hose, and fix it clockwise

6. Pressure Detection

Measured Pressure Value When the air pump is started, the number on the inflation pressure detection object display screen is the measured pressure value after the air pipe connecting

7. DC Start

Using the car charging wire connect the cigarette lighter electric port with the product DC hole. Long press the switch key (U) to start the machine. The cigarette lighter can be used to power the product.

8. Application

Scenario switch Short press the working mode key to select four inflatable scene modes, which are:

Scene Mode	Reference Default Values	Adjustable Range
Tent Mode	6PSI	1-8PSI
Surf Board Mode	13PSI	1-16PSI
Swimming Ring Mode	4PSI	1-4PSI
Custom Mode	6PSI	1-25PSI

9. Pressure Value Preset

After long press (U), you can switch the pressure display unit
Unit conversion formula 1PSI=6KPA

10. Application Scenario switch

Short press +/-: adjust the preset pressure value +/-0.5PSI

Long press +/-: can quickly adjust the preset pressure value

Note: The scene switch and the preset pressure value will be saved automatically. When you use it next time, just switch the scene and the preset pressure value will be set automatically.

11. LED Light

Long press to turn on the light, and long press again to turn off

12. Inflation Pressure Reference

In order to ensure safety, please read the instructions or other ways to check the air pressure required by the inflatable items before inflating, to avoid personal injury caused by over-inflation explosion.

Swimming Ring

The swimming ring should be inflated to 70%-80%, leaving a certain expansion space, the inflating volume is appropriate when using it without obvious depression after the inflation, do not inflate too much. The inflation pressure is related to the load weight. For more detailed pressure advice, please refer to the instruction manual of the relevant supplies.

Malfunction clearing

Malfunction	Troubleshooting
Slow Inflation	1. Check whether the battery is insufficient 2. Check the air hose for air leaks 3. Check whether the connecting parts at both ends of the air hose are tightened 4. Check inflated items for air leaks
It has been turned on but cannot inflate	Check whether the inflating mode is correct Select custom mode to adjust preset values from 1-25 psi
The preset pressure cannot be turned up or down	Check whether the inflating mode is correct Select custom mode to adjust preset values from 1-25psi
Inflation is normal but the pressure is shown to be 0	1. Low pressure products such as balloons are not within the measurable range of this equipment. 2. In the case of empty tire, the tire pressure value can be shown only by inflating the tire for a short period of time.
After twisting the air nozzle, the pump has shut down automatically	It will automatically shut down in three minutes. Long press the start button to start up again.
There is air leakage when connecting the air hose	Tightened the air hose
The color of the power indicator in the inflatable state is different from that in the standby state	There is an obvious voltage drop during the discharge process for the power lithium battery, which leads to the color inconsistency between the indicator light in the charging state and the standby state. This phenomenon is not a fault.
The power indicator is off after charging	Replace the safe charging cable and adapter to charge again

Smart Air Pump