


Multifunction ECU P25


Tips: Operating voltage: 11V-18V (12V/ 200mA)

After the product is powered on, language selection is made first, then system selection (OBD / GPS), after 5 seconds of no operation it automatically enters the last selected system

Appearance Function:

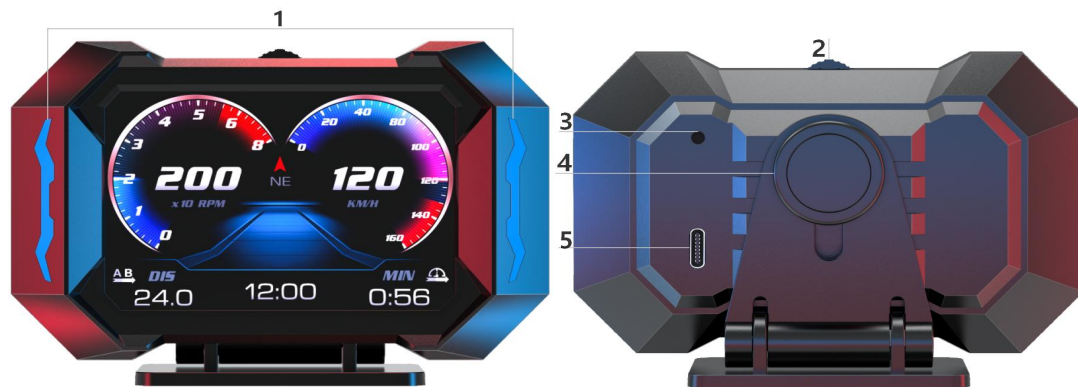

1. Ambient Light: Varies with engine speed or vehicle speed

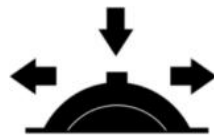

2. Dial Button:

Short press vertically (click)

- ① Switch the display interface
- ② Lock setting item

Long press vertically (press and hold for 2 seconds)

- ① Enter the setting menu
- ② After the parameter value is adjusted, long press to save and exit

Left dial

- ① Switch the function of the display interface
- ② Switch setting items in the setting menu
- ③ Adjust parameter values in the setting item
- ④ Calibrate the slope (operate on the slope meter display interface)

Left dial (press and hold for 2 seconds)

- ① Switch the ambient light colour
- ② Turn off the ambient light

Right dial

- ① Switch the function of the display interface
- ② Switch setting items in the setting menu
- ③ Adjust parameter values in the setting item

Right dial (press and hold for 2 seconds)

- ① Switch the ambient light colour
- ② Turn off the ambient light
3. Photosensitive Component
4. Swivel Bracket
5. OBD Line Interface

Abbreviation for Display Function:

ECT	Engine Temperature	VLT	Voltage	FUE	Fuel Consumption
		MAP	Inlet Pressure	A/F	Air-Fuel Ratio
RPM	Revolutions-per-Minute	MIN	Driving Time	RTC	Real Time Clock
AVG	Average Fuel Consumption	DIS	Driving Distance	ELD	Engine Load
KM/L	Fuel Consumption Unit	OIT	Oil Temperature	ASL	Altitude
TPS	Throttle Position Sensor	TCP	Turbo Pressure	IAT	Inlet Temperature
CVT	Transmission Temperature	DIR	Driving Direction	ODO	Total Mileage



Voltage



Fuel Consumption



Driving Direction



Driving Distance



Water Temperature



Average Fuel Consumption



Oil Pressure



Driving Time



Oil Temperature



Engine Load



KM/L



Revolutions-per-Minute



Transmission Temperature



Inlet Temperature



Altitude



Air-Fuel Ratio



Turbo Pressure



Total Mileage



Clock



Speed



Inlet Pressure



Satellite Status




Throttle Position Sensor

Setting Mode:

Press and hold the dial button vertically for 2 seconds to enter the setting menu, move left and right, and then briefly press the dial button to select the setting item; after entering the setting item, move the dial button left and right to adjust the parameter value, and finally press and hold

the dial button vertically for 2 seconds to save and exit

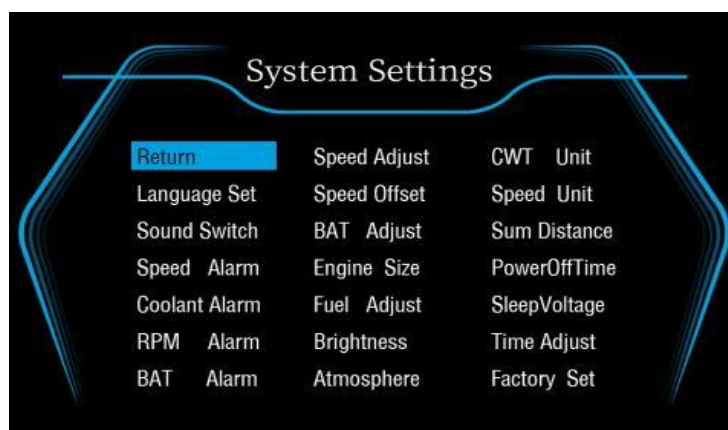

Select the System Language: English / Simplified Chinese / Traditional Chinese / Thai / Japanese / Korean / Russian / Arabic / Malay / Spanish / German / French

System Sound Setting: ON turn on alarm sound / OFF turn off alarm sound

Reminder of Overspeed Driving: Alarm when the vehicle speed exceeds the set value (the default parameter value is 150 km/h, and the setting range is 5-200 km/h)

Engine Temperature Alarm: Alarm when the water temperature exceeds the set value (the default parameter value is 120°C, and the setting range is 50-200°C)

Engine Speed Alarm: Alarm when the speed exceeds the set value (the default parameter value is 6000R/min, and the setting range is 1000-8000R/min)

Voltage Alarm Setting: Alarm when the voltage is lower than the set value (the default parameter value is 10.5V, and the setting range is 10.0-15.0V)

Speed Error Adjustment: If there is an error in the speed value displayed by the product and the vehicle dashboard, the product parameter value can be adjusted (For example, the vehicle displays 100Km/H, the product displays 105Km/H, the parameter value can be adjusted to 102%)

Speed Reset Setting: The vehicle speed does not return to zero after stalling (For example, if the product displays 5Km/h, the parameter value can be adjusted to 6km/h, and the speed will return to zero)

Voltage Error Adjustment: If there is an error in the voltage displayed by the HUD and the car dashboard, calibrate the parameter value, and if HUD has been repeatedly restarted without shutting down after the car is turned off, please adjust the parameter to 95%

Engine Displacement Setting: If there is an error in the displacement between the product and the vehicle, fine adjustments can be made based on the vehicle displacement (For example, if the vehicle displacement is 3.6L, adjust the parameter value to 3.6L)

Fuel Consumption Data Adjustment: If there is an error in fuel consumption between the product and the vehicle, the product parameter value can be fine-tuned (For example, when the fuel consumption of the product is 0.2L higher than that of the vehicle, adjust the parameter value to 98%)

Brightness Adjustment: "AUTO" refers to automatic light sensitivity, and "1-8" refers to manual adjustment range

Ambient Light Setting: RPM control color changing ambient light / SPEED control color changing ambient light / RED / GREEN / BLUE / YELLOW / BLUE-GREEN / PURPLE / OFF

Temperature Unit Setting: °C Celsius °F Fahrenheit

Speed Unit Setting: km/h MPH

Statistical Mileage Adjustment: The total mileage of both the product and the vehicle is synchronized

Shutdown Delay Setting: The default parameter value is 10 seconds, and the setting range is 5-300 seconds

Shutdown Voltage Setting: When the product cannot be shutdown, the parameter value can be adjusted to 13.2V / 13.6V (Switch to COM mode for automatic start and stop or hybrid vehicles)

System Time Adjustment: The default time zone is GMT+8 (Beijing Time), with an adjustment range of 30 minutes/time

Factory Data Reset: Briefly press the dial button vertically to save and exit

Switch / Turn Off the Ambient Light

On any display interface, press the left dial button for 2 seconds to switch the color of the ambient light or turn off the ambient light

Slope Meter Calibration

First switch the product to the slope meter display interface, then place the product horizontally, and finally press the dial button once to calibrate it

Time Calibration

Press and hold the dial button vertically to enter the setting menu, and then right dial to switch to the setting item "System Time Adjustment". Move the dial button left and right to adjust, the adjustment range is 30 minutes/time, and then press and hold the dial button to save and exit

Performance Test

Acceleration test: The acceleration time required for a vehicle speed from 0 to 100 km/h, which is a power test for the vehicle

Braking test: The time and distance used in the braking process after the vehicle speed exceeds 100km/h. This function is a performance test for braking

Troubleshooting Setting

Scan fault code: Scan the vehicle for faults and display fault information

Clear fault code: When the vehicle has a fault code displayed, briefly press the dial button vertically to clear the fault code

FAQ for OBD System:

1. There is no display on the screen and there is no power supply

Please check whether the OBD cable is damaged or replace the vehicle for testing

2. The product is powered on, and the screen only displays voltage

Please switch to the GPS system (within 5 seconds of the product being powered on, right dial the dial button to select the GPS system)

[HUD products are only applicable to OBD2 and EOBD (OBD2 and EOBD are only used for vehicles manufactured after 2008)]

3. Incorrect vehicle speed

① Please check whether the speed unit is correct km/h or MPH (please refer to the speed unit settings in the setup menu)

② If the speed unit is correct, fine tune the speed (please refer to Speed Error Adjustment in the setting menu)

4. Unable to shut down

Enter the system setting, switch to the shutdown voltage setting, and adjust the parameter value to 13.2V / 13.6V (the product will automatically shut down after three minutes of vehicle shutdown)

5. Automatic shutdown of the product during driving of the automatic start and stop or hybrid vehicle

① Enter the system settings, switch to the shutdown voltage setting, and then adjust the mode to COM

② Enter the system settings, switch to the shutdown delay setting, and adjust the parameter value to 300 seconds (the product will automatically shut down after five minutes of vehicle shutdown)

③ Please switch to the GPS system (within 5 seconds of the product being powered on, right dial the dial button to select the GPS system)

6. Operation error leading to product crash

① Enter the system setting, switch to factory reset, briefly press the dial button vertically to save and exit

② Please switch to the GPS system (within 5 seconds of the product being powered on, right dial the dial button to select the GPS system)

7. Restart repeatedly after turning off the ignition, and HUD do not turn off. Please enter the system settings, adjust the voltage error, set the parameter value as 95%, save your settings and exit.

FAQ for GPS System:

1. There is no display on the screen and there is no power supply

Please check whether the OBD cable is damaged or replace the vehicle for testing

2. No vehicle speed display

After the product is powered on, the satellite icon flashes to indicate that it is in a search state. Please move the vehicle to an open road to receive the signal. After the satellite icon stops flashing and displays the number of satellites, the product can be used normally

3. The speed is still displayed after the car stops

When driving to places such as underground parking lots, tunnels, and overpasses that cause unstable signals, there may be some deviation in the data displayed by the product. Driving the vehicle to an open road surface can restore normal operation

4. The product cannot be automatically turned on or turned off during driving

Enter the system setting, switch to the shutdown voltage setting, and adjust the parameter value to 12.8V / 13.0V

5. Unable to shut down

Enter the system setting, switch to the shutdown voltage setting, and adjust the parameter value to 13.5V (the product will automatically shut down after three minutes of vehicle shutdown)

6. Inaccurate satellite time

Enter system setting, switch to system time adjustment, and adjust the parameter value to local time zone, with an adjustment range of 30 minutes/time

7. Driving direction display error

When there is no vehicle speed, the satellite cannot identify the driving direction of the vehicle. Only when the vehicle speed exceeds 5Km/H can the product display the driving direction normally