

Thumb Sports Camera

4K WiFi



Instruction Manual

It's ultra-slim and has an integrated look design.This product can be used for awide range of purposes and it's an essential recording medium for vehicle data recording,mountain climbing, skiing,cycling,parachuting,diving,fishing,hunting,and other fields.This manual explains how to use this video camera in detail,and it provides you with detailed information on the use, operation,safety precautions as well as technical specifications of this product.Please read this manual carefully before using the camera and keep it properly for your reference.

We sincerely hope that this product wil meet your requirements and serve you for a long time

Product overview:


This product is a high definition digital video recording device with mini size and waterproof,tailored to market demand. It has avariety of industry-leading features including digitalvideo recording,photo-shooting,high-speed USB data transmission, allowing you to record your happy life at anytime anywhere.

I.Product features:

- Super mini portable size,easy to carry
- Life waterproof function
- Video recording while charging
- Automatic Loop record
- Support high capacity TF card
- PC webcam
- Built-in vibrating motor
- UHD Video quality
- With WIFIfunction,it can connect to the mobile phone to watch
- With Magnetic attraction

Note:1 .It supports video recording while charging
2.When using TF card more than 32GB,there is no other data in the card to avoid lost the data.


II.Mobile App installation connection:

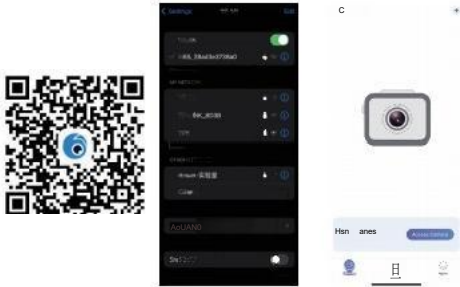

- Download and install Viidure APP
a.IOS is downloaded from the Apple Store by searching Viidure.
b.For foreign android systems,searching Viidure on GooglePlay to download.
C.For Chinese android systems,downloading Viidure from the app store and installit.
- In standby state,consecutively press the WIFI button twice,it switches to WIFI mode.The green light flashes quickly,waiting for connection.The camera will automatically shut down without connecting within 3 minutes.
- Open the App,enter the mobile phone WiFi setting to connect the WiFi name beginning of"H88",the password is "12345678"

4.After connecting the WiFi successfully,the green light is always on.Click the camera icon in the middle of APP and enter the actual operation of the camera.

II.Product main structure:

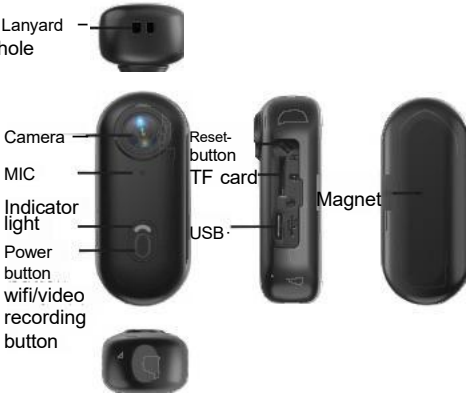

IV.Video and photo operation:

- Long press the power button,the product vibrates once,the blue light is always on,the camera is on standby state,short press the video button once,the product vibrates once,the blue light flashes slowly to start recording.Short press the video button once again and vibrate once to stop the video and save the document

- Without TF card when connecting to the computerit can be used as a webcam.
 - Video recording while charging mode:connect the power supply or car charging source,will automatically power on,short press the video button to start recording.
- Note:When using recording while charging mode,please shut down and save the file before quitting USB.Otherwise, the video file willnot be saved.
- Battery charging:the red light is on when charging,the red Light is out after being fully charged.


VI.Inserting and removing TF card:



- Insert the TF card into the card slot as indicated until its'fixed.
 - Press down the TF card and wait until it pops out.then remove the card.
- Cautions:
- Please insert the card in the right direction into the device to avoid damage.
 - If the card is incompatible with the device,Please insert it

- In WiFi mode,click the photo button of the app once to take a photo.
- Long press the power button,vibrate once and light goes off then shut down.
- standby state:
a;In standby mode,the blue light remains on,and the camera automatically shuts down after 3 minutes without any operation
b;(When there is no TF card)In standby mode,the blue light flashes,and the camera vibrates every 3 seconds.After 3 minutes,the camera automatically shuts down.After turning on WIFI,the blue and green lighs flash,and the camera vibrates once every 3 seconds.After 3 minutes,the camera automatically shuts down.

V.Use method:

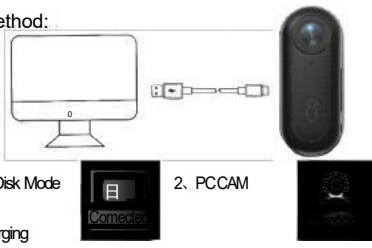

- U-disk /webcam mode:after connecting the computer with the data cable,you can play the video files in the TF card and delete unnecessary files.
- again ortry a new card.
- Please use a genuine C10 class high-speed card.

VII.Time Setting:



- Time display is default for this product.Follow the instructions as below:
- f user needs to remove the time display on the camera.After connecting the camera to the computer.Open the root directory, Find and edit the time document file.
Format:year.month.day hour:minute:second N3(eg:2024-01-0123:59:59N3)
Save and exit the file,the time setting is completed.And it will not be displayed next time when you turn on the camera.
 - The user needs to modify the time displayed on the camera. After connecting the camerato the computer, Open the root directory,Find and edit the time document file.
Format:year.month.day hour:minute:secondY3(eg 2024-01-01 23:59:59Y3)
Save and exit the file,the time modification is now completed. And time will be displayed next time when you turn on the camera.
- Note:"Y"represents time display,
"N"means no time display,
"3"means the loop video recording and every 3 minutes to save a file,

(can be set up for 1-9 minutes,not in this range,the camera loop in 3 minutes by default.)

VII.Reset:



When the product is crashed and can't work normally, please short press the reset button to power off.

IX.Technical Specifications:

Video Resolution	3840*2160
Video code	H.265
Video Format	MP4
Picture Format	JPG
Memory Card	TF card
Interface	Type-C
battery	5V 2A