BIC

Bridge Inventory and Condition Utility Program

User Guide


April 2010


Table of Contents

Installing BIC	3
The BIC Interface	5
Starting a Bridge Encoding Session	6
Bridge Data Entry	7
Resuming a Bridge Data Encoding Session	11
Generation of Import Files	12
Importing data to RBIA through Confirm	18
Understanding Confirm's Warnings and Errors for Import Files	30
Tracking Bridge Update Progress	36
Updating Bridge Inventory and Condition Pictures	38

Installing BIC


Simply-double click *BIC_installer.exe*

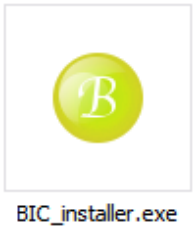

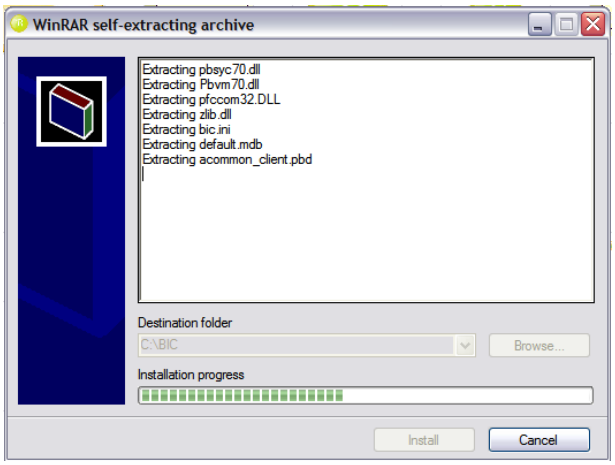

A shortcut will be placed on the user's Desktop and, Start Menu.



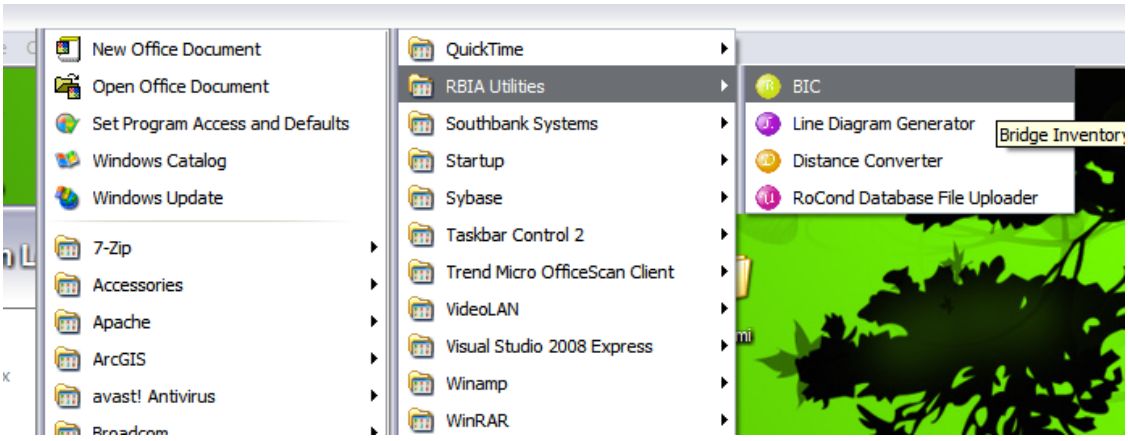


Reminder!
BIC installer can be downloaded at

http://roadandbridge/confirm_utilities/ApplicationSetupManuals/biac_ClientSetupReadMe.htm

The workstation must be connected to the DPWH network in order to visit the site.


The BIC Interface

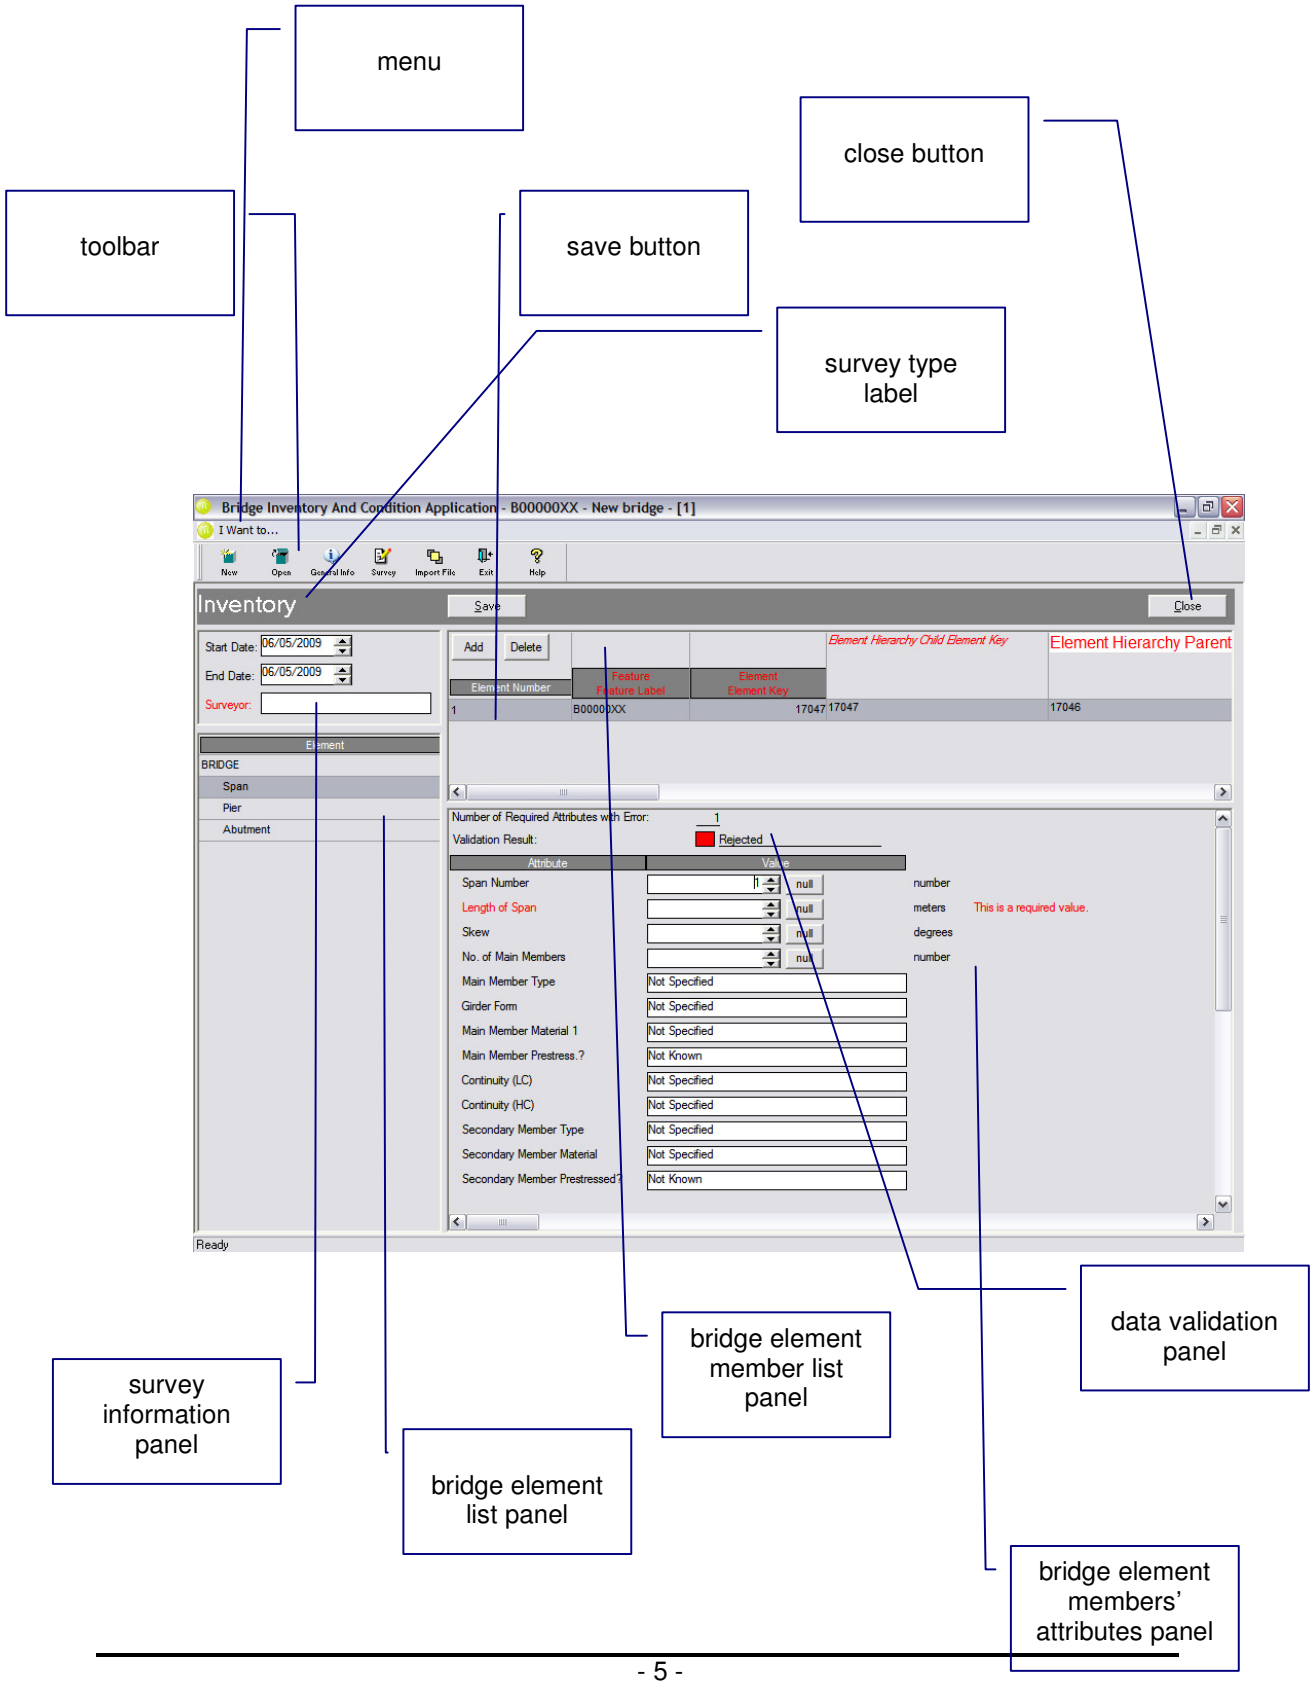


Starting a Bridge Encoding Session

Users can create three types of bridge encoding sessions:


- Inventory
- Major maintenance
- Routine maintenance

By pressing 

in the toolbar, user will be asked to indicate the *bridge id* and type of data encoding session.

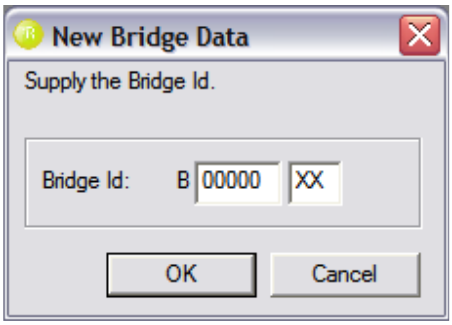

New bridge data window

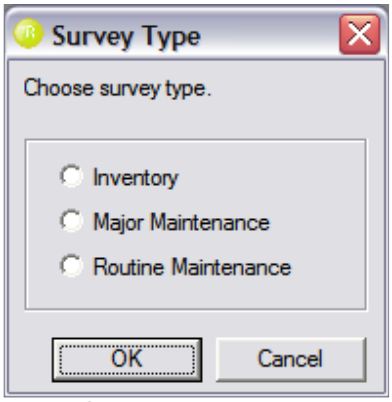


Survey type window

Note!
BIC remembers and opens the last session being worked upon resuming. If BIC is not able to resume the previous session, it automatically prompts the user to start a new one.


Bridge Data Entry

Each element of a bridge when encoding *inventory* or *major maintenance* data has their own set of attributes. The attributes are found in the *bridge element members' attributes panel*, located at the center of the interface, taking up most of the space.

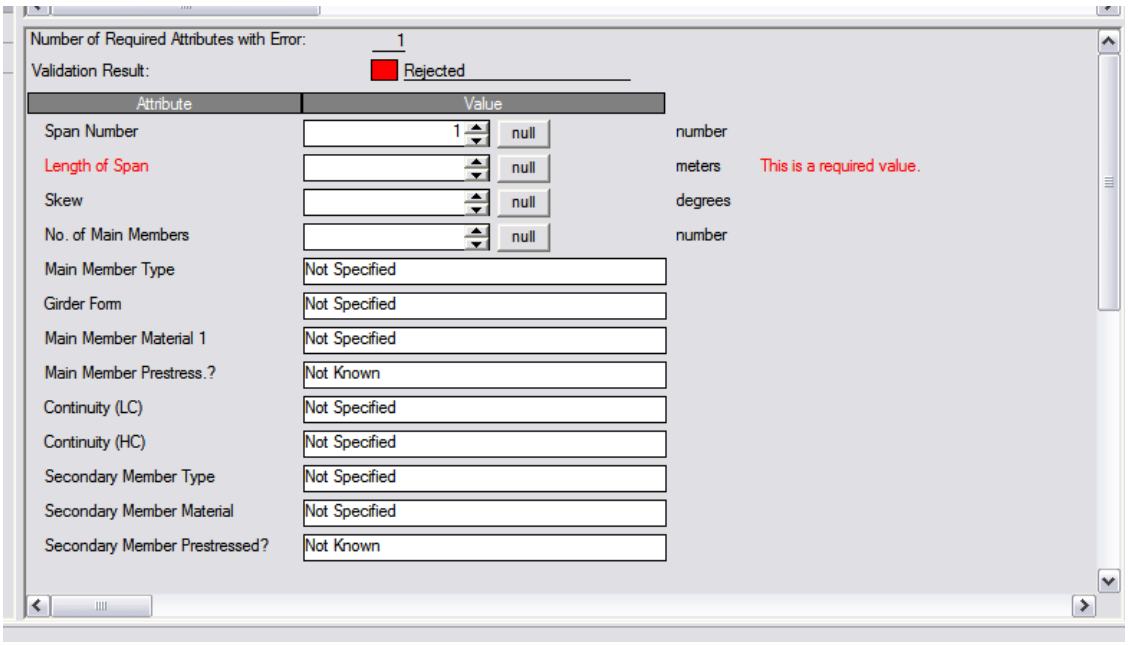


Bridge element members' attributes panel

In order to toggle among the elements, use the *bridge element list panel*.

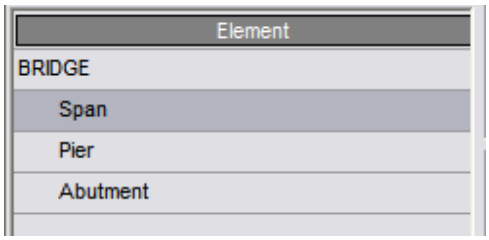

Bridge element list panel


For elements containing more than one member like *abutments*, use the *bridge element member list panel* to switch among members.

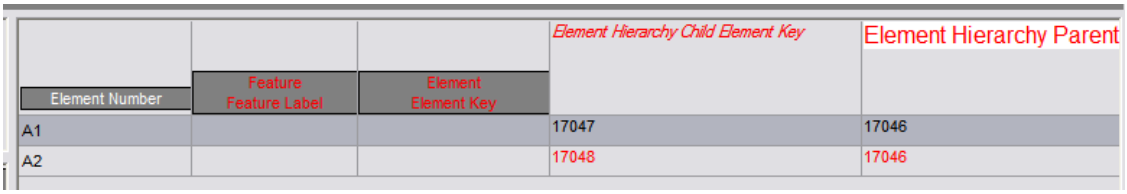

Element Number	Feature Feature Label	Element Element Key	*Element Hierarchy Child Element Key*	Element Hierarchy Parent
A1			17047	17046
A2			17048	17046

Bridge element member list panel

BIC uses four types of data encoding in order to aid in data entry consistency.

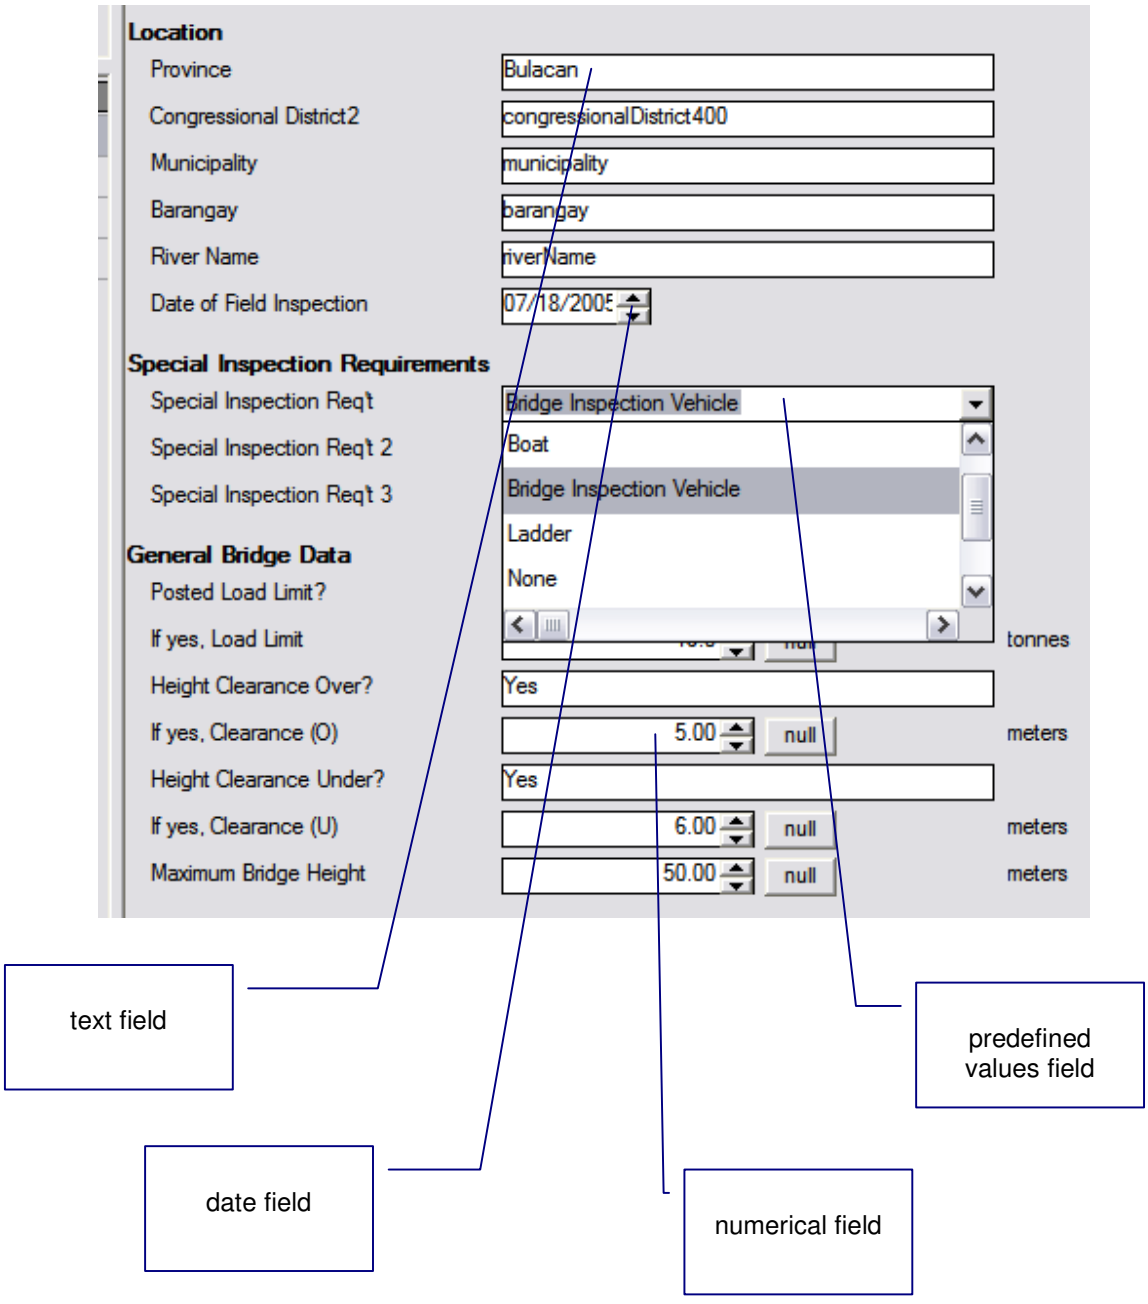


Users may still directly type their entry when interacting with a predefine values field, however, the text typed must match any of the options provided by the field.

There is no single direction or flow in encoding bridge data. Element attributes may be inputted in any order the user wants.


Important!
For numerical values, some attributes are not allowed to have a value of zero (0). Pressing the null button beside a numerical value is suggested to set a non-existent value for an attribute.

Use the *survey information panel* to set the *survey dates* and *surveyor name*. This is particularly important for *major* and *routine maintenance* data.

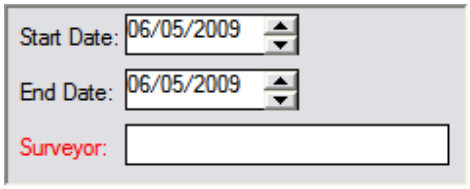


Survey information panel

Inventory bridge data requires *general attributes* to be filled up. These are not shown initially, and can be accessed by pressing the General Info toolbar button.

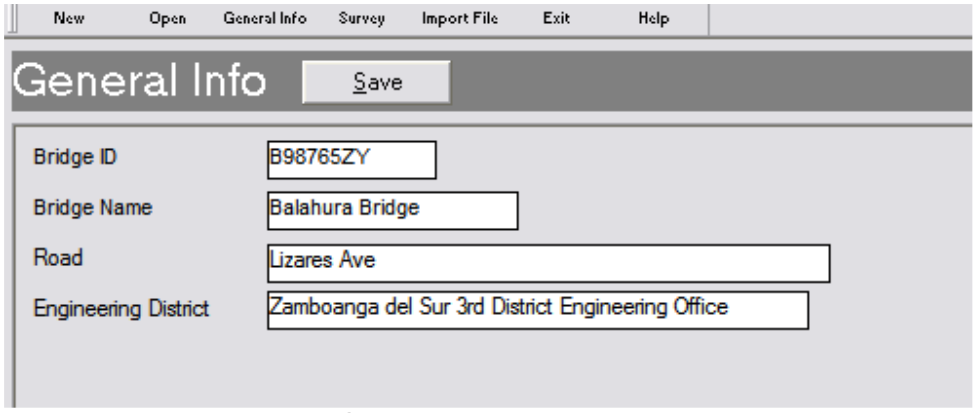


General information panel

If user attempts to end a bridge inventory data encoding session without filling up the *general information attributes*, BIC will remind user of the possible oversight.

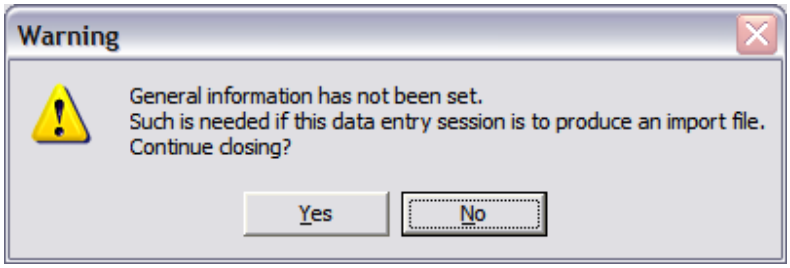


Warning dialog for an unset general attribute situation

To return back to the *bridge element members' panel*, simply rearrange the windows, or press the 

toolbar button.


When saving using the 

button, BIC evaluates the date entered and shows its assessment using the *data validation panel*.



Validation panel showing rejected status

An accepted assessment however, does not yet guarantee passing through RBIA's own data assessment.




Validation panel showing accepted status

Resuming a Bridge Data Encoding Session

BIC automatically opens the last session a user was working on. Users can switch to another session by pressing the 

toolbar button.

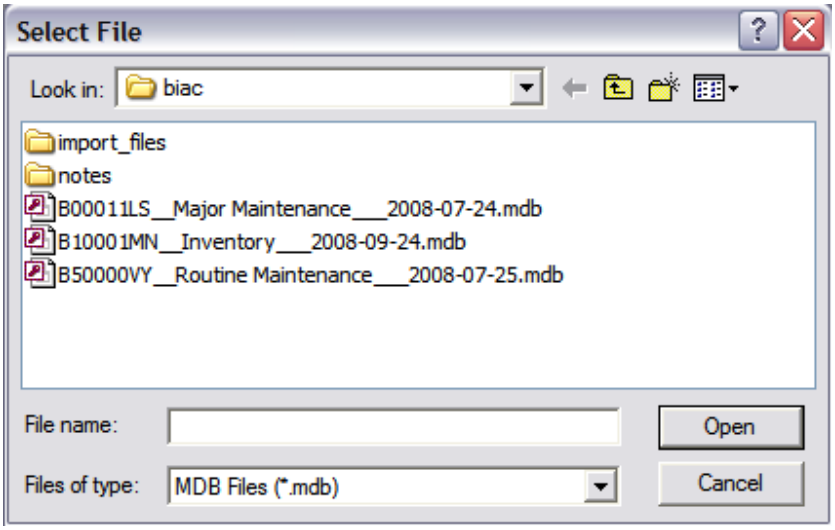

File chooser dialog for resuming a session

Note!
You may only open one bridge encoding session at a time.


Generation of Import Files

BIC being an alternative data entry system for bridges, must provide some way to make possible for the encoded data to be transferred or uploaded to RBIA. Using Confirm's *Import* feature, *import files* can be generated, which are the ones that will be used as input for the said feature.


To start generating import files, press the 

toolbar button.

The *Import* dialog will appear.

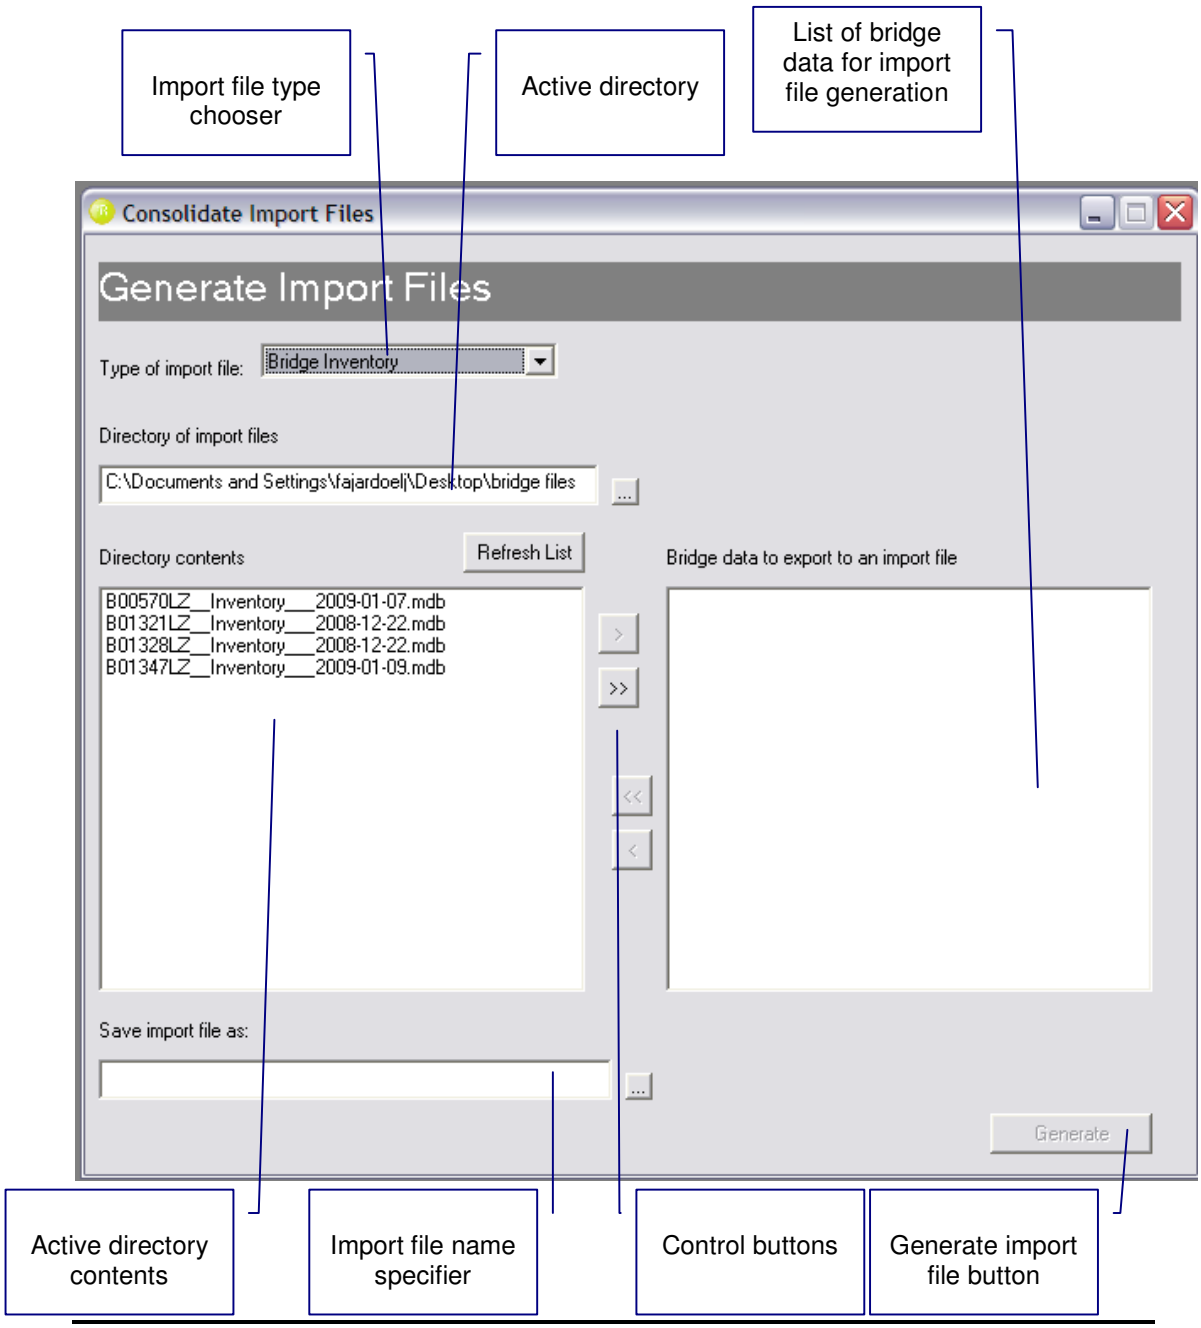


a. **Import file type chooser** - choose what of the three types of import file will be generated. Import file types are:
   - Inventory
   - Routine maintenance
   - Major maintenance

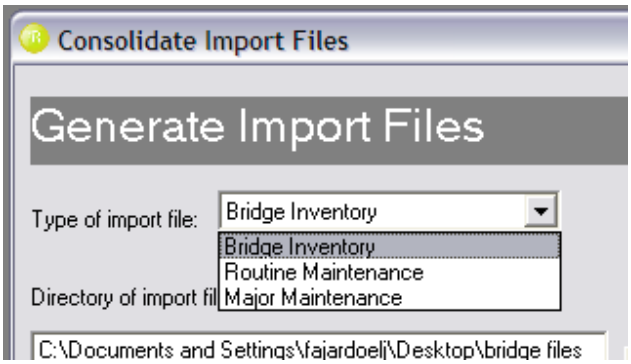


List of import file types

b. **Active directory** - specify the directory where the bridge *mdb* data files are located.
   - Press the ... button to choose a directory, or the directory address can be directly typed using the textbox

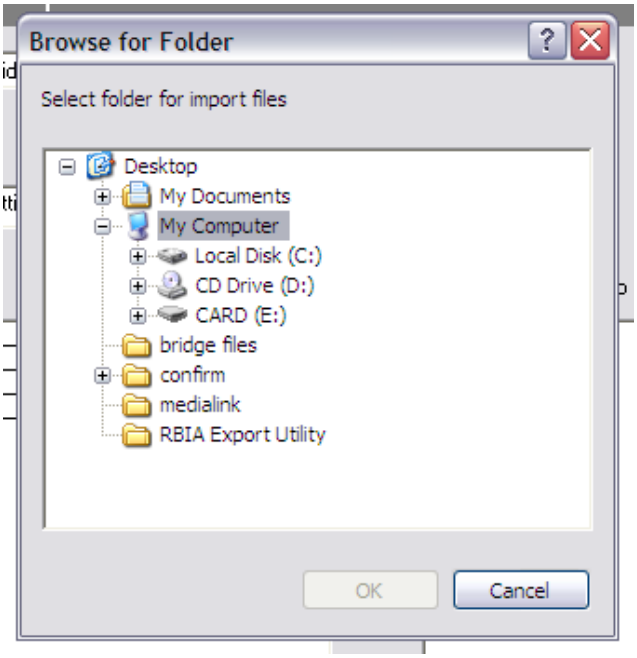


Folder chooser dialog

c. **Active directory contents** - shows the content of the directory specified, and filtered according to the type of import file to be generated.
    - If type of import file is changed, the contents will change as well to reflect the new import file type selection.

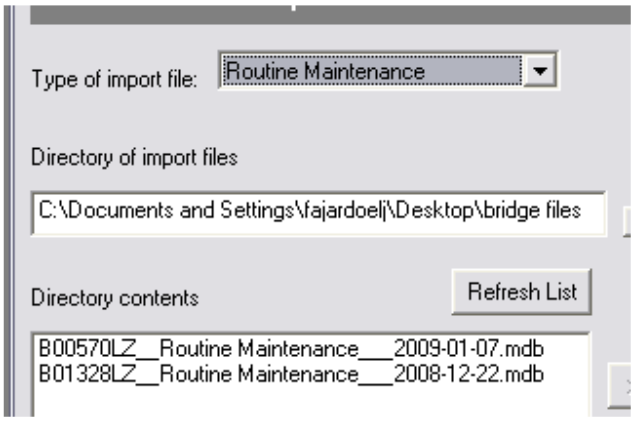

If routine maintenance is chosen

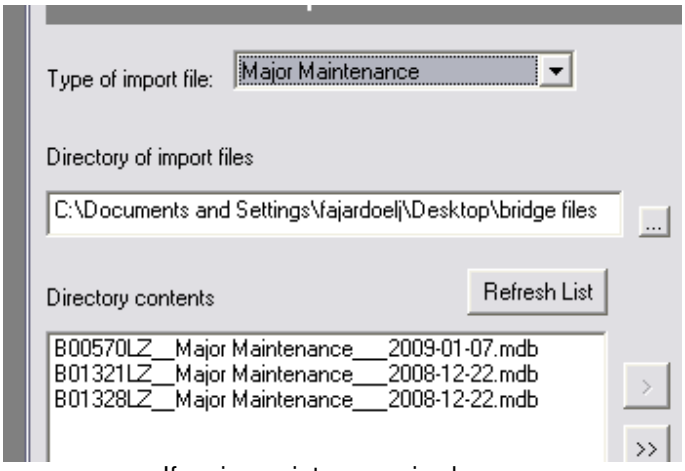

If major maintenance is chosen


- Using the list shown, by clicking, choose one, or some, or all the *mdb* files that an import file is to based upon.
- Click a highlighted bridge file in order to unselect it.

d. **Control buttons** - in order to add bridge files chosen in the *directory contents* list, or remove bridge files to the *bridge data to export to an import file* list, use the control buttons.

-  transfer highlighted bridge files from the *directory contents* list to the *bridge data to export to an import file* list
-  transfer all bridge files, highlighted or not, from the *directory contents* list to the *bridge data to export to an import file* list
-  transfer highlighted bridge files from the *bridge data to export to an import file* list to the *directory contents* list
-  transfer all bridge files, highlighted or not, from the *bridge data to export to an import file* list to the *directory contents* list

e. **List of bridge data for import file generation** - this list will show the finalized list of bridge data files for import file generation chosen by the user. This will grow as more bridge files are chosen by the user.
   - Same as above, the user may highlight bridge files displayed here in order to modify the list, in case some entries have to be removed.


f. **Import file name specifier** - specify the file name of the import file and the directory where it is wanted to be placed.
   - The address and filename may be directly typed using the textbox provided, or use the corresponding  button.

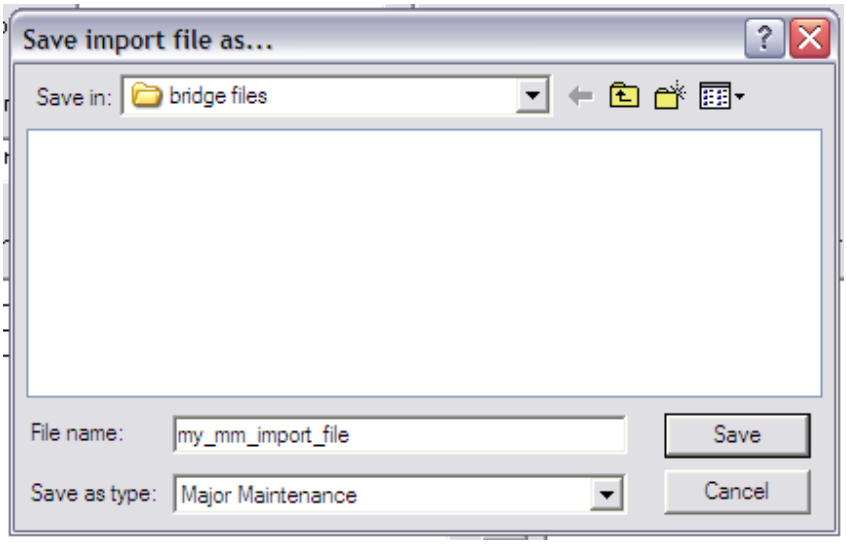

Import file name save dialog

- The *Save as type* will change depending on the type of import file to be produced.

g. **Generate import file button** - press the *Generate* button when all of the cogs have been set. If the button is disable or un-clickable, then something must have been left out, making the generation process not ready for the activity.
    - Different types of import files will generate different extensions
        - Inventory import files
            - Two files will be generated, a *.bie* and a *.bif*. For example, if the filename specified is *imaginarydeo_1st*, then two inventory import files will be produced *imaginarydeo_1st.bie* and *imaginarydeo_1st.bif.*
        - Routine maintenance
            - One import file with extension of *.bmr* will be generated. For example *imaginarydeo_1st.bmr*.
        - Major maintenance
            - One import file with extension of *.bmm* will be generated. For example *imaginarydeo_1st.bmm*.
    - Make sure that a *file generation success message* is received.

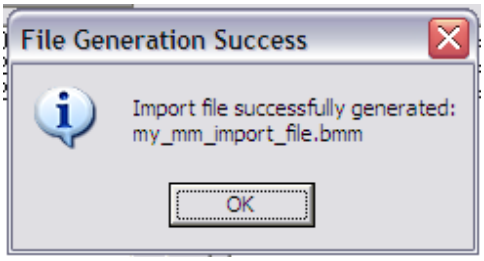


Success message for major maintenance import file generation

    - The import file produced will contain all the relevant bridge data from the list chosen by the user.

One import file (or one set of two import files, in case of inventory import files) can represent all the bridge data of the BMS Coordinator's region. Or one (set) import file can represent only one bridge data. However, to better manage the handling of import files when uploading them to the RBIA, bridge grouping by district engineering offices is recommended.

Segregating inventory import files into new bridges and existing bridges is also strongly recommended. New bridges means bridges that do not exist yet in the RBIA and is to be created with the import files, while existing bridges are those that already exist with their corresponding import files meant to update their attributes.

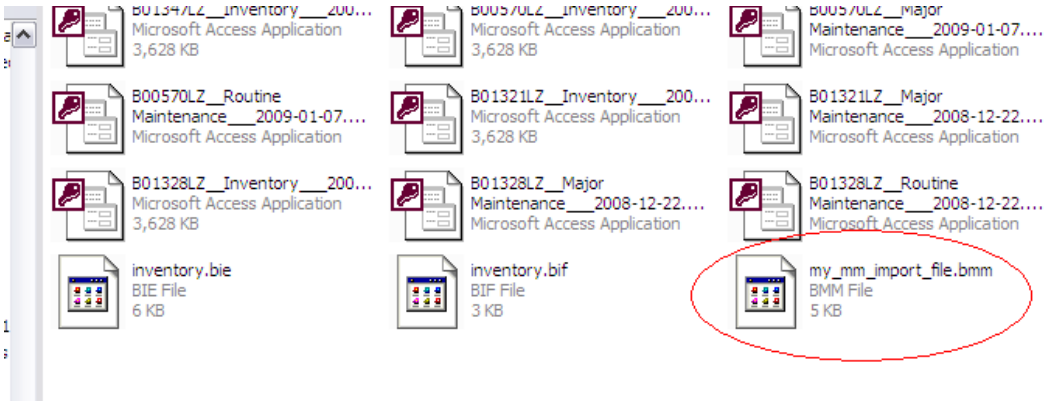

Import file generated as seen in Windows Explorer


Importing data to RBIA through Confirm

Open Confirm and login in with your account using the *RBIA Live* or *PMS-BMS* profile.


For inventory import files:

To **add new** bridges, navigate to:

main → features → feature utilities → import features (interactive)

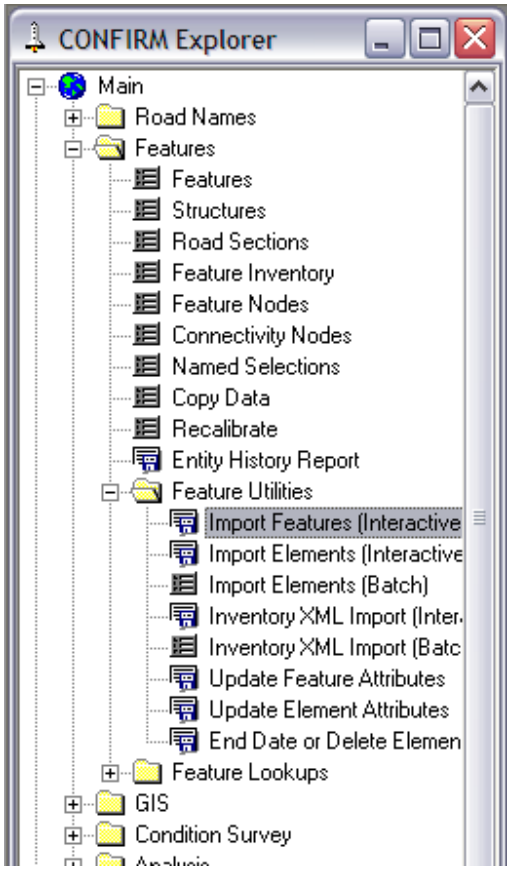


Confirm Explorer showing the item for *Import Features (Interactive)*

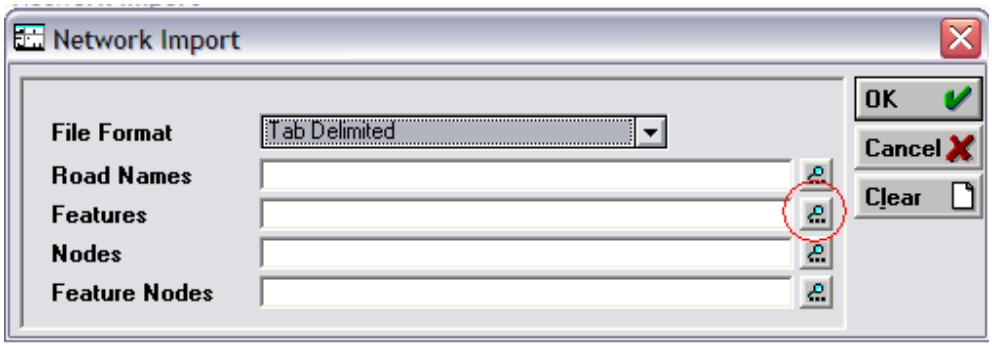


Network Import dialog

Press the  button corresponding to *Features* and browse for the *.bmf* file.

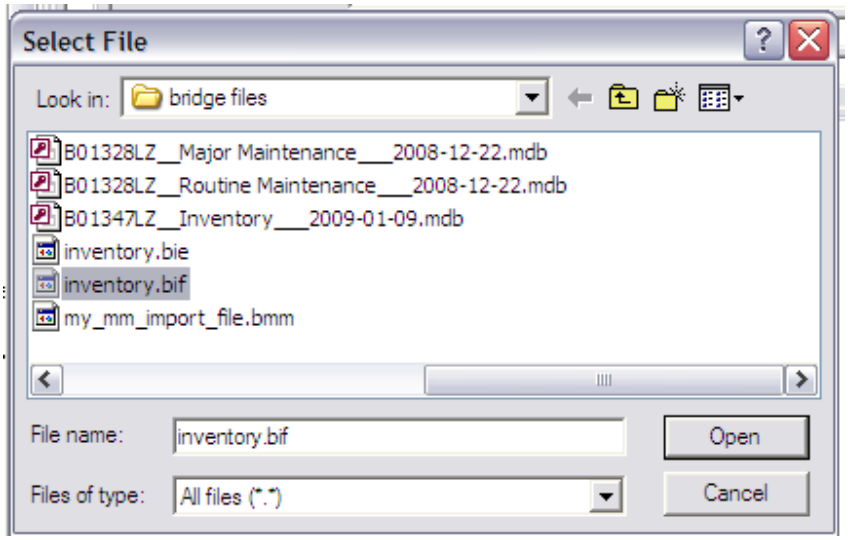


Select inventory feature import file dialog

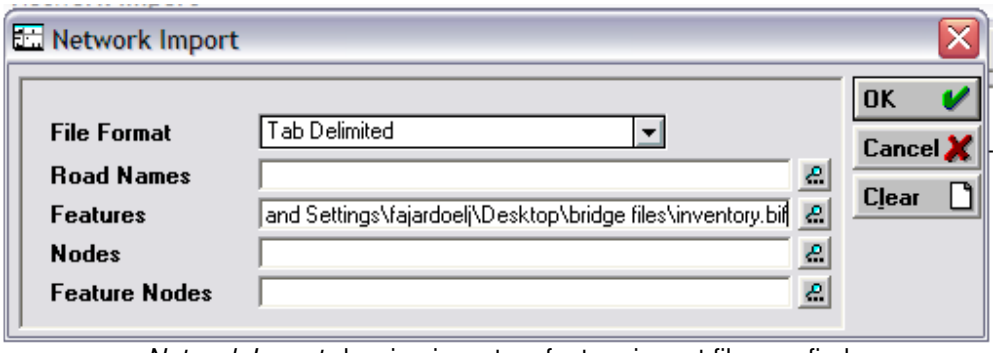


Network Import showing inventory feature import file specfied

Press *OK*. Wait for the progress bar to finish.

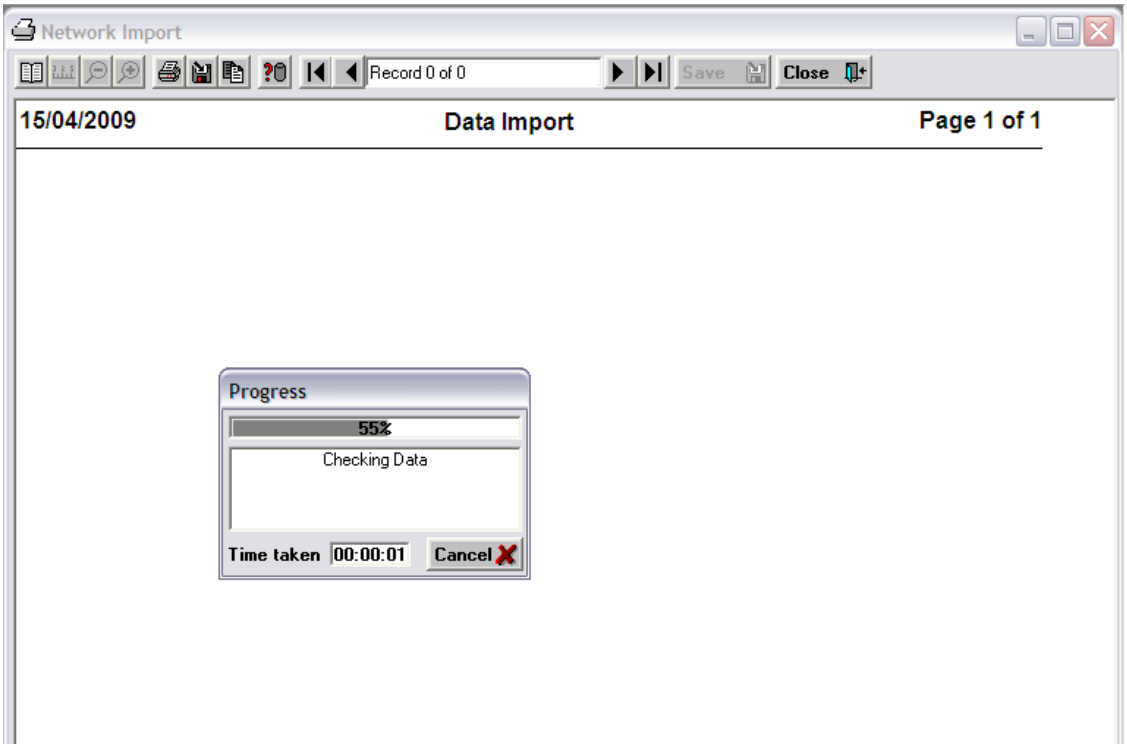


Confirm validating inventory bridge data against RBIA's rules

This revalidates the data. After the final validation, if no error messages are received, press the *Save* button.

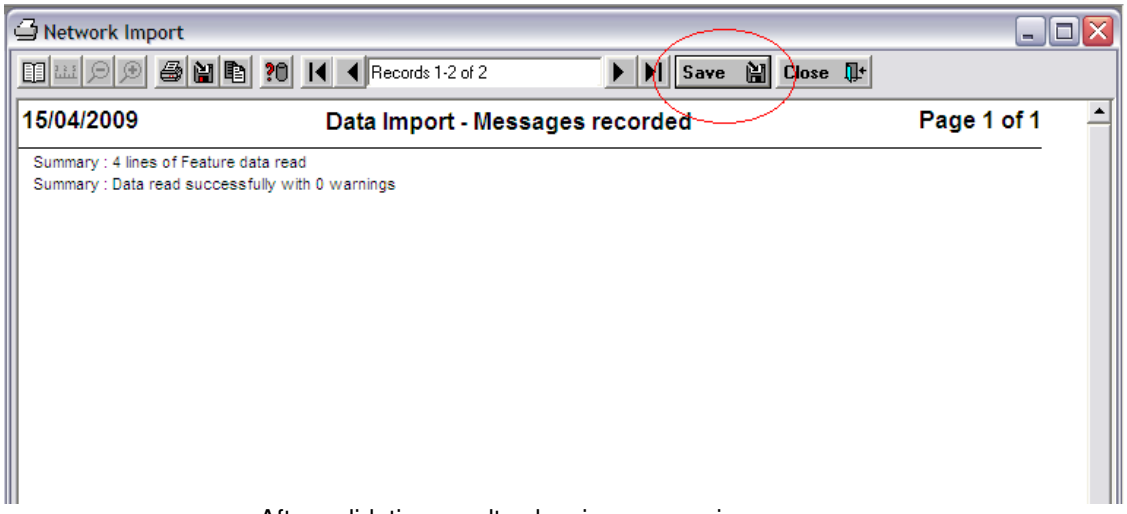

After validation results showing no warnings or errors


Another progress bar appears, showing the saving progress. This might take a long time, depending on the network conditions.

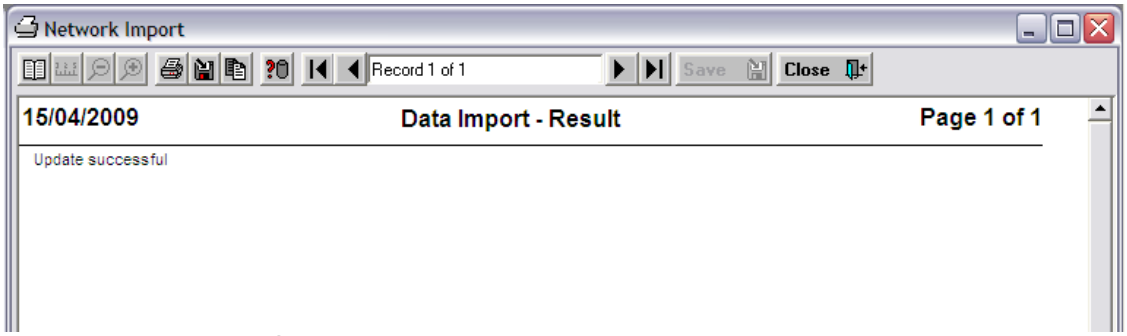


Screen showing successful data uploading to RBIA

Afterwards receiving the success screen above, navigate to

main → features → feature utilities → import elements (interactive)

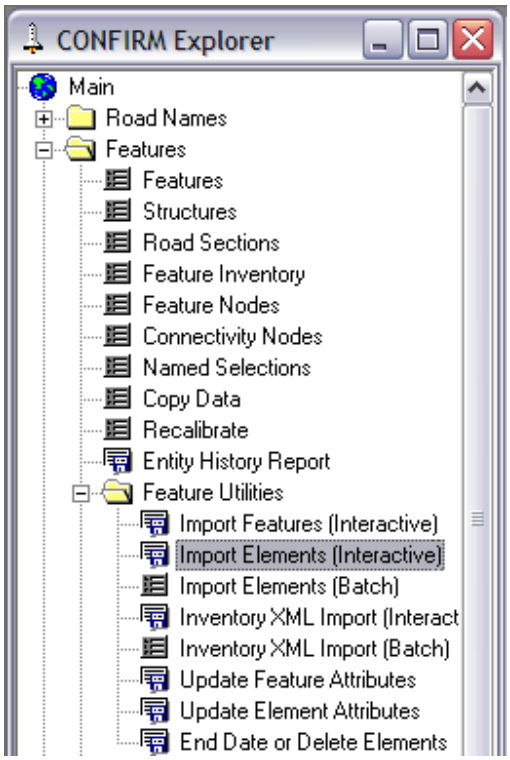

Confirm Explorer showing *Import Elements (Interactive)* item

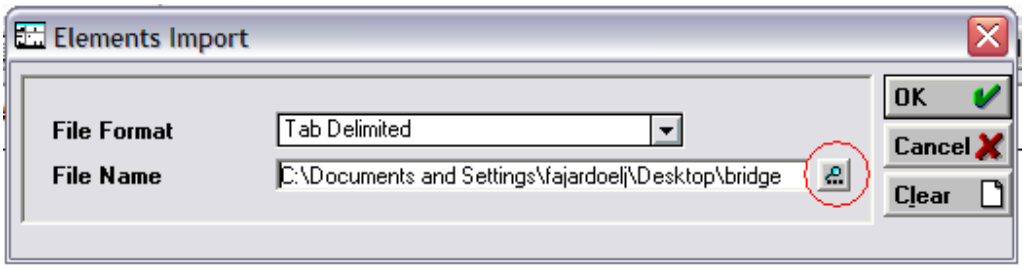

Elements Import with inventory element import file name filled

Browse the *.bmf*'s corresponding *.bme* file. Press *OK* and wait for the progress bar to finish data validation. If no errors were encountered afterwards, remember to press the *Save* button.


To **modify** or **browse existing** bridges:

The process is the same as adding new bridges, except for the following:


- Only data contained in the *.bme* can be updated. Those in the *.bmf* cannot be updated, therefore, the first step where Confirm's *import features (interactive)* module is used cannot be used correctly for this purpose.
- Data contained in the *.bme* corresponds to the attributes in the bridge's elements. Though these can be modified, only updating or adding new bridge elements are supported. To delete invalid bridge elements, the bridge must be browsed using the standard method in Confirm and the element can only be deleted from there.
- *.bmf* files contain the attributes such as the bridge name, id, and road location. These can only be modified when the bridge is browsed in Confirm the standard way.
-

The standard way is by navigating to:

main → features → structures

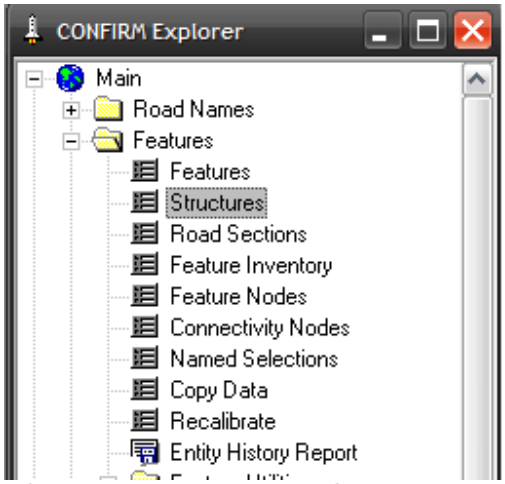


Confirm Explorer showing *Structure* item

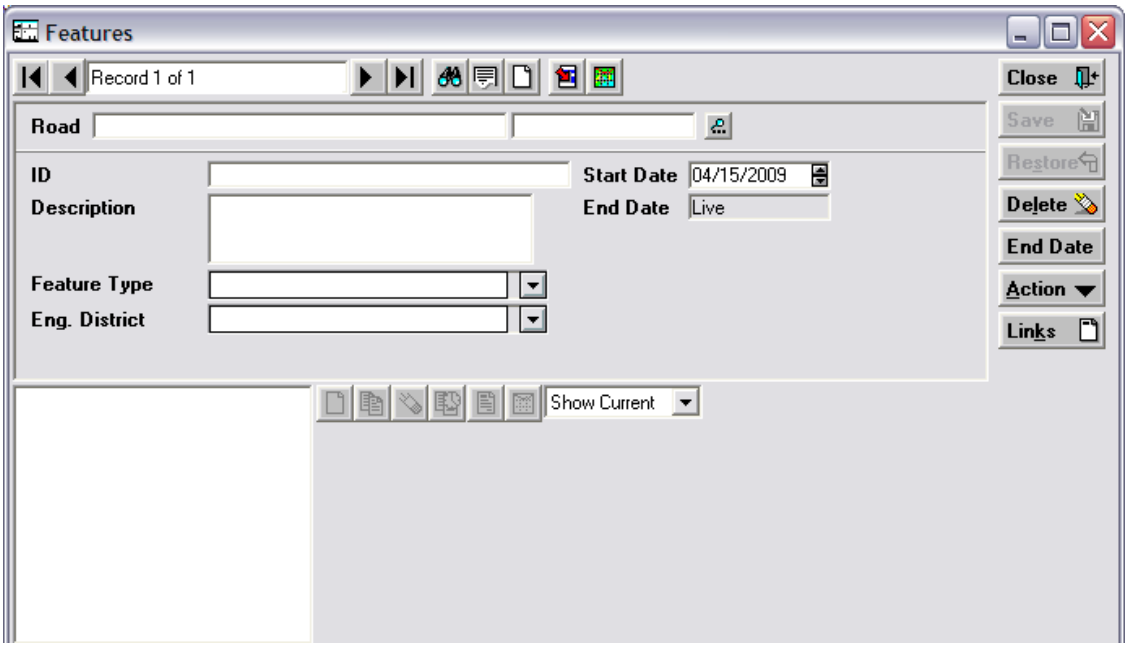

Confirm's *Feature* graphical interface

Use the bridge id or search for the bridge to edit bridge manually.

Reminder!
The Active From attribute of each element of each bridge must be manually updated to the **present date** by browsing the bridge using Confirm.

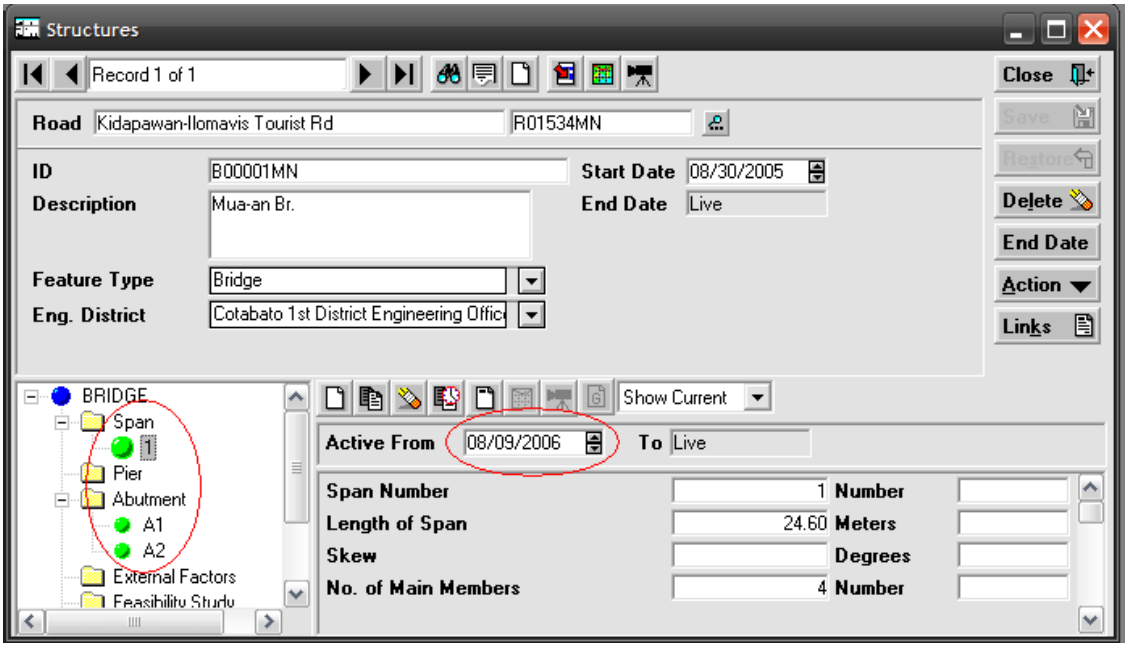


The Active From date of each element must be updated manually


For routine and major maintenance import files:

Navigate to:

main → condition survey → import visual surveys (interactive)

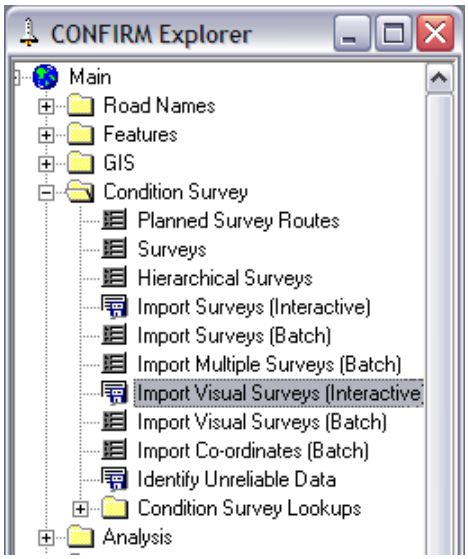


Confirm Explorer showing *Import Visual Surveys (Interactive)* item

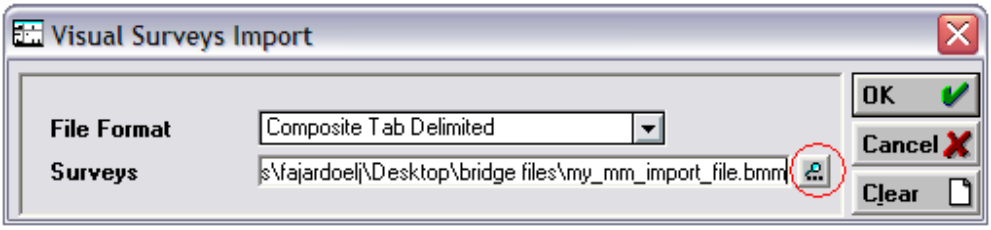


Visual Surveys Import dialog with the survey import file name filled

Important!

Make sure that the *File Format* is set to *Composite Tab Delimited*. Browse for either the routine *.bmr* or major *.bmm* maintenance files with the button. Press *OK* and a progress bar for data validation will appear.

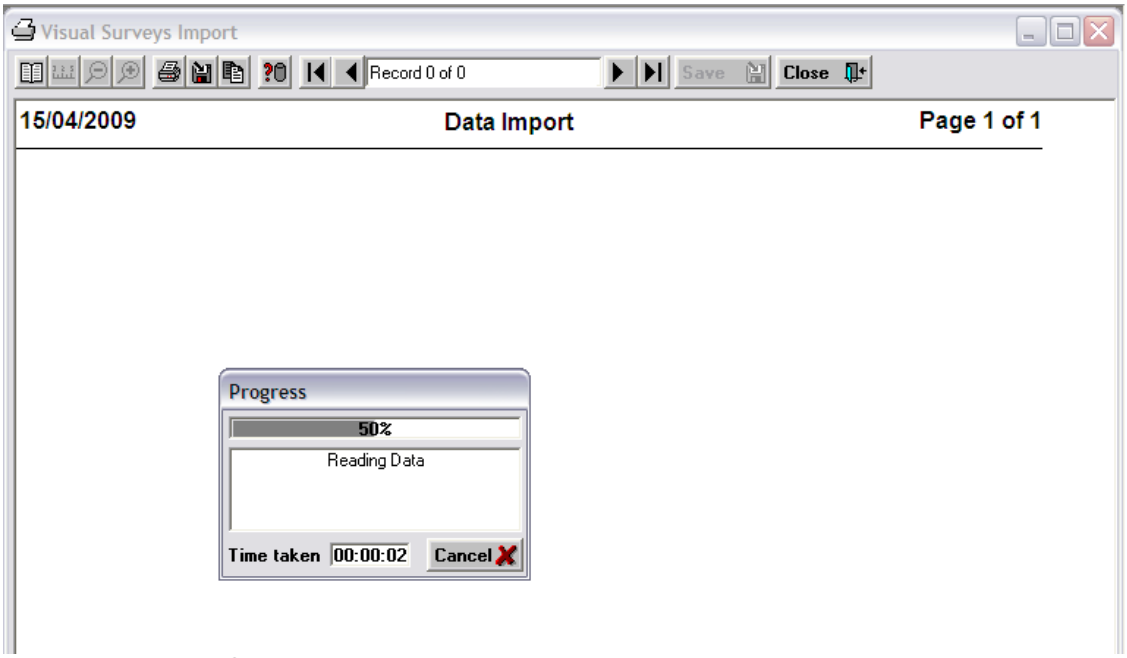


Confirm validating imported survey data against RBIA rules

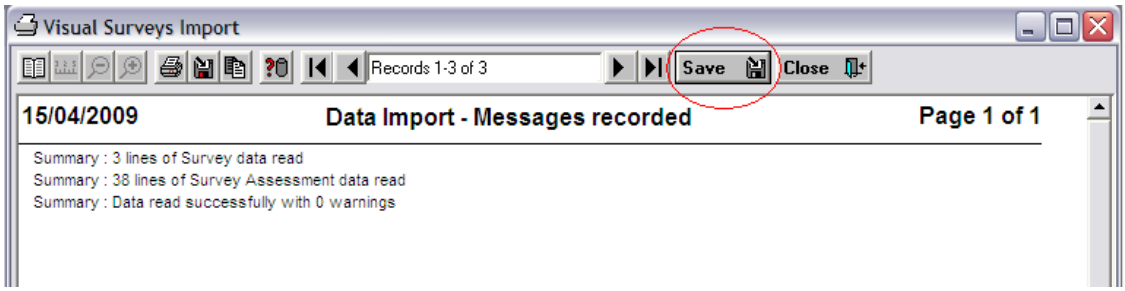


After validation results showing no warnings or errors

Press *Save*. Another progress bar appears showing the progress of saving.

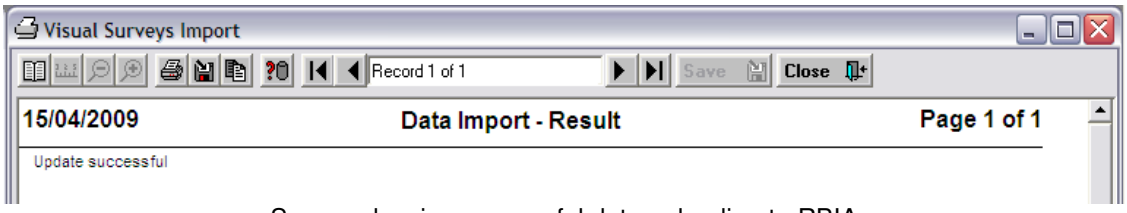


Screen showing successful data uploading to RBIA


Note!
When bridge inventory or maintenance data has been successfully imported to RBIA, the user can view imported data through the *Features* and *Hierarchical Surveys* functions of Confirm.

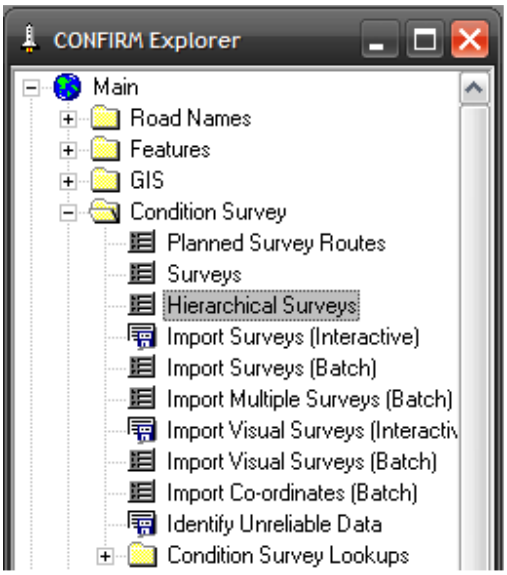

If you know the Survey Number of the survey data, just type it in the Survey Number text box and press Tab.

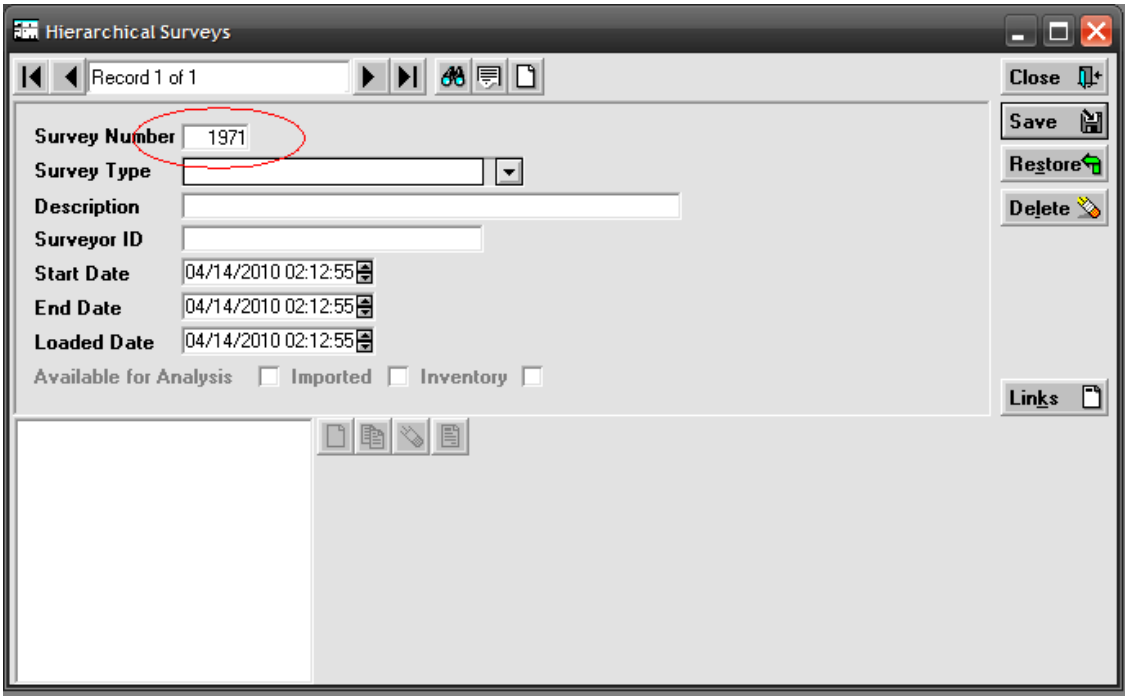


A blank survey form with survey number 1971 typed.

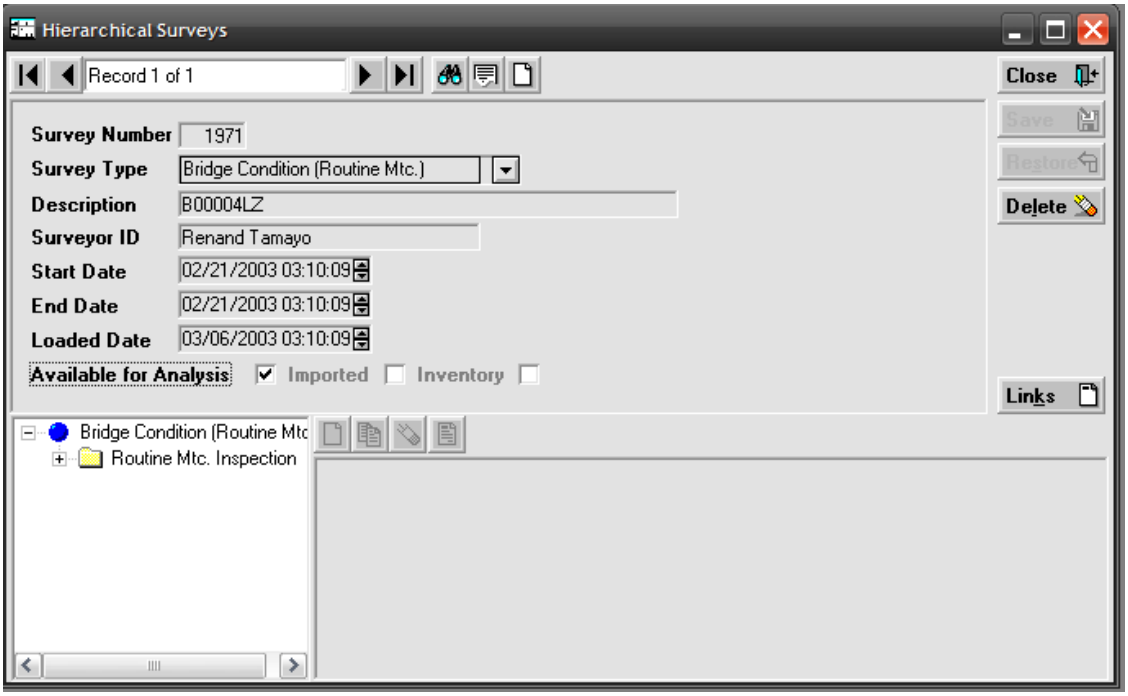


The remaining fields are automatically filled after pressing Tab if the survey number corresponds to a valid survey data.

If the Survey Number is not known, the bridge condition survey can be searched for instead by pressing the Search button . The bridge id must be typed in the *Desc. Contains* text box to narrow the results to the concerned bridge.

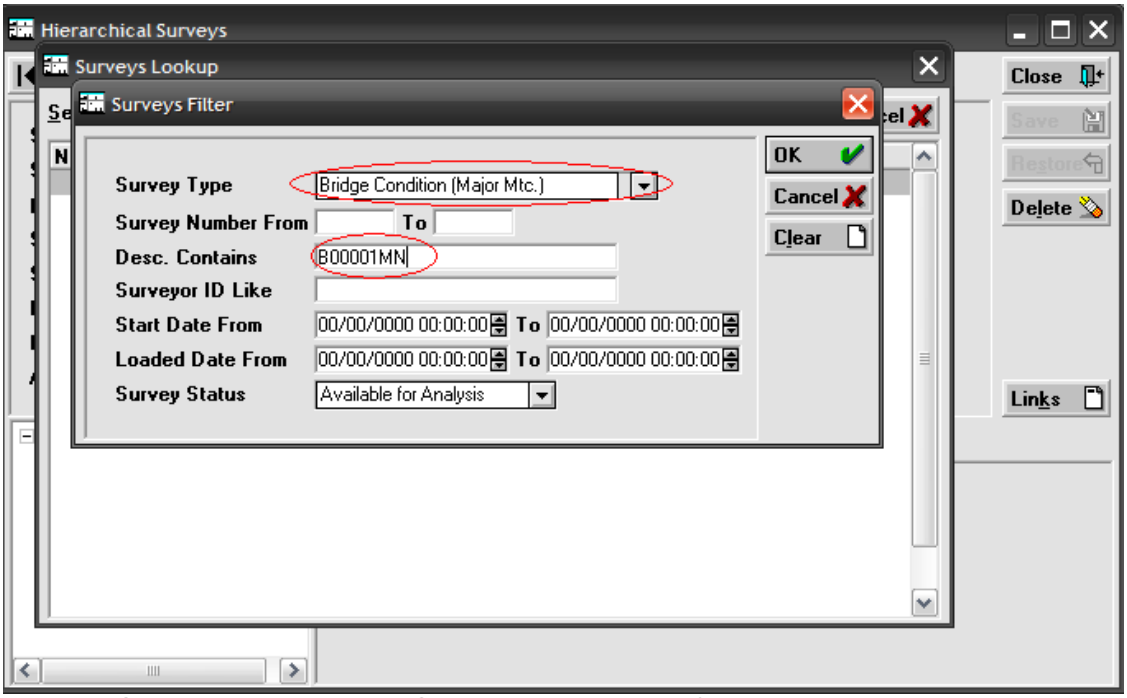

The Surveys Filter dialog with Survey Type and Desc. Contains filled with relevant data.

Press OK and a list of relevant returns will be brought up. Choose the appropriate survey to view by highlighting a choice and pressing OK or simply by double-clicking the choice.

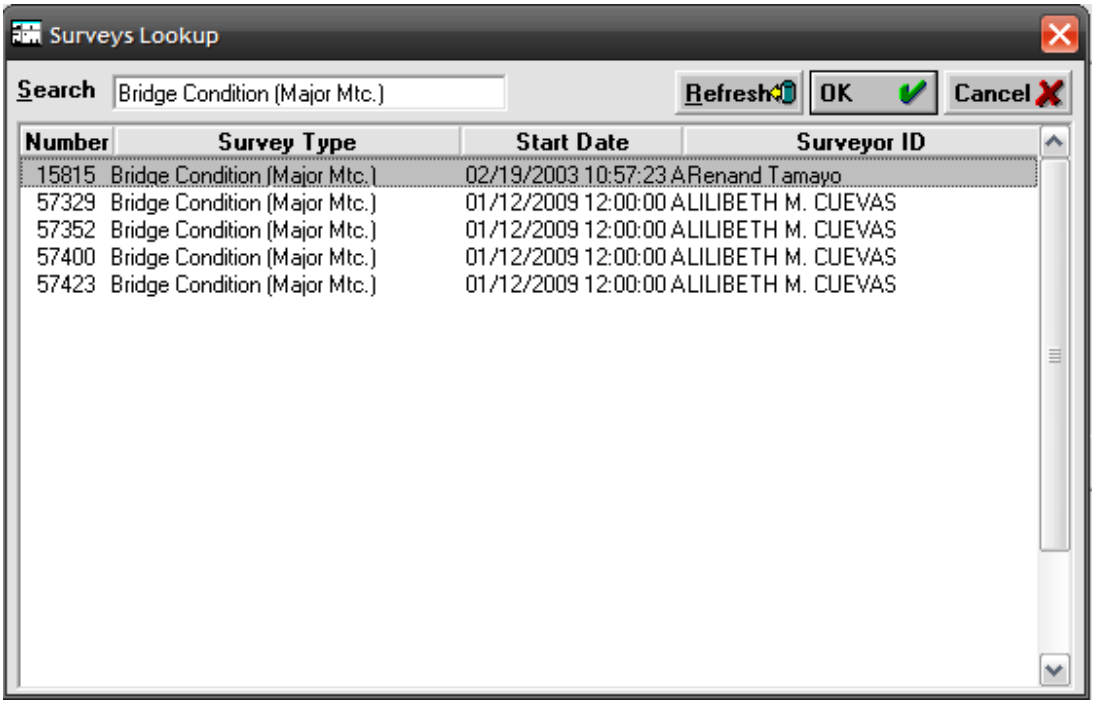

The Lookup list showing matching survey filter data

Browsing for uploaded inventory and condition data is required for updating bridge pictures.

Understanding Confirm's Warnings and Errors for Import Files

Importing data without a hitch is an ideal way of importing data. However, in the event that a user receives either warnings or errors after RBIA validation, proper action must be taken place in order to correct data.

Note!
Having a single error detected by Confirm disables the save button, which make users unable to save data to RBIA. Warnings, on the other hand, will still let the user save their data, but these should be treated with caution, as continuing to do so might endanger the quality of data.

For *.bif* files:

Sample error:
Line 00001 : Feature **B12570LZ** 11/25/2008 : Feature 'B12570LZ 11/25/2008' already exists in the database
Line 00002 : Feature **B12321LZ** 1/12/2008 : Feature 'B12321LZ 1/12/2008' already exists in the database
Line 00003 : Feature **B12328LZ** 11/24/2008 : Feature 'B12328LZ 11/24/2008' already exists in the database
Line 00004 : Feature **B12347LZ** 2/12/2008 : Feature 'B12347LZ 2/12/2008' already exists in the database
Summary : 4 lines of Feature data read
Summary : Data not read successfully - 4 errors/warnings recorded

The bridge ids displayed, bolded in this example, should identify the bridge inventory *mdb* in question.

For *.bie* files

Sample error:
Line 00008 : Element **B00570LZ** BSPANIARD at 0 : Element Type 'BSPANIARD' not found in the database
Line 00016 : Feature **B00570LZ** : Warning - 1 existing Elements end dated
Line 00017 : Element Attribute **B00570LZ** BPIER : Invalid value '9000' for Pier Height
Line 00024 : Element Attribute **B00570LZ** BPIER : Invalid value 'ITS COMPLICATED' for Pier Type
Line 00050 : Element Attribute **B01347LZ** BPIER : Invalid value '-4.2' for Pier Height
Line 00056 : Element Attribute **B01347LZ** BPIER : Invalid value 'SPIKE' for Pier Type
Summary : 58 lines of Element data read
Summary : Data not read successfully - 6 errors/warnings recorded

The bridge ids displayed, bolded in this example, should identify the bridge inventory *mdb* in question.

For *.bmm* and *.bmr* files


Sample error:
Line 00007 : Survey Assessment BCSPAN at 0 : Warning - No linking Element identified for 1
Line 00008 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for LOW
Line 00009 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for HIGH
Line 00010 : Survey Assessment BCSPAN at 0 : Warning - No linking Element identified for 2
Line 00011 : Survey Assessment BCSPAN at 0 : Warning - No linking Element identified for 3
Line 00012 : Survey Assessment BCPIER at 0 : Warning - No linking Element identified for 1
Line 00013 : Survey Assessment BCPIER at 0 : Warning - No linking Element identified for 2
Line 00015 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for LOW
Line 00016 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for HIGH
Line 00017 : Survey Assessment BCSPAN at 0 : Warning - No linking Element identified for 1

Line 00019 : Survey Assessment Attribute Height, Deck to Ground (Left) : Invalid value '1.2' for Height, Deck to Ground (Left)
Line 00019 : Survey Assessment Attribute Height, Deck to Ground (Right) : Invalid value '1.4' for Height, Deck to Ground (Right)
Line 00019 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for LOW
Line 00020 : Survey Assessment BCABUT at 0 : Warning - No linking Element identified for HIGH
Line 00021 : Survey Assessment BCSPAN at 0 : Warning - No linking Element identified for 1

Identify the line number where an error occurred. For this sample, warnings and errors occurred at lines 7 – 13, 15 – 17, 19 – 21. Use Line 0019 for this sample.


Open the import file that produced this error on a spreadsheet like Microsoft Excel. As the *.bmm* or *.bmr* file is a tab-delimited text file:

Choose *Delimited* as the *Original data type*. Press *Next*.

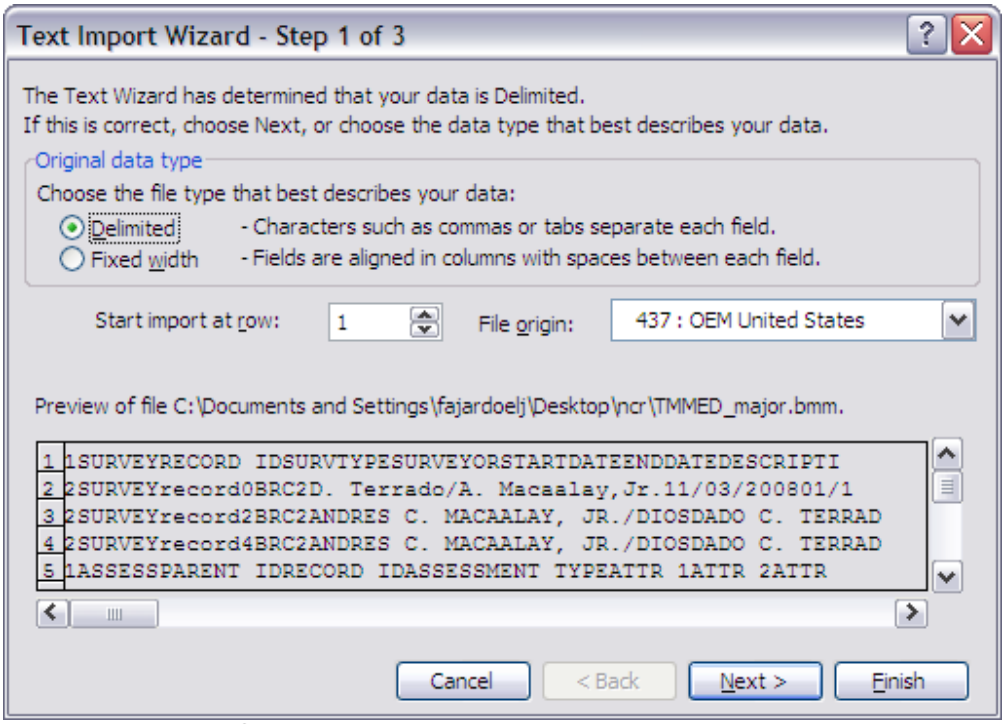


Step 1 of Microsoft Excel's Text Import Wizard

Make sure *Tab* is checked in the *Delimiter* list. Press next.

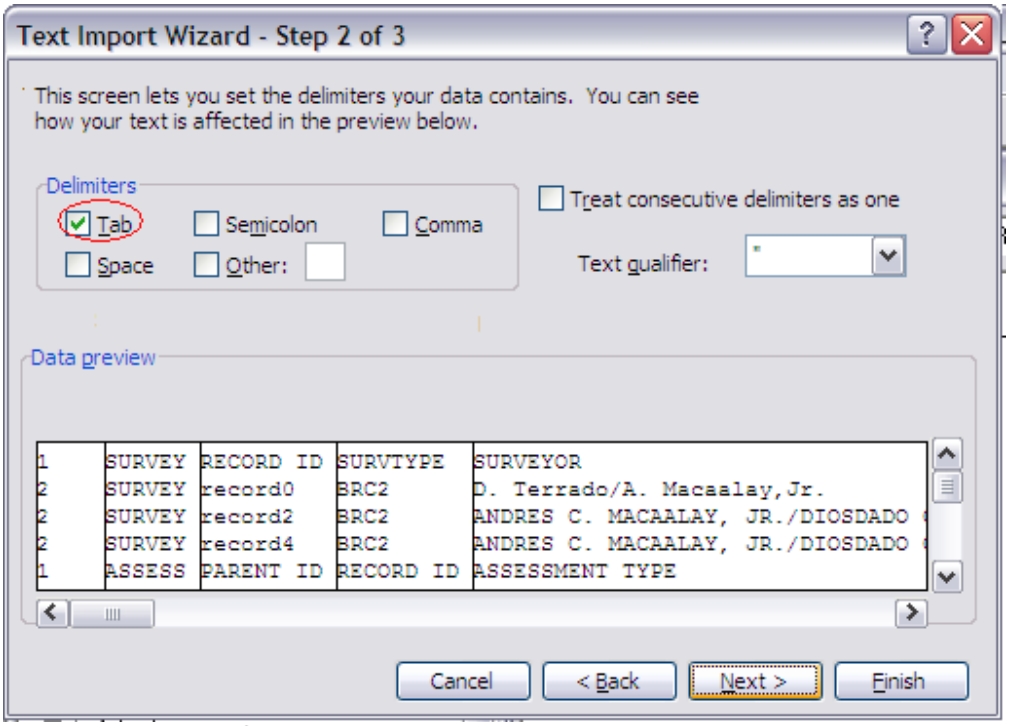

Step 2 of Microsoft Excel's Text Import Wizard

Press *Finish*.

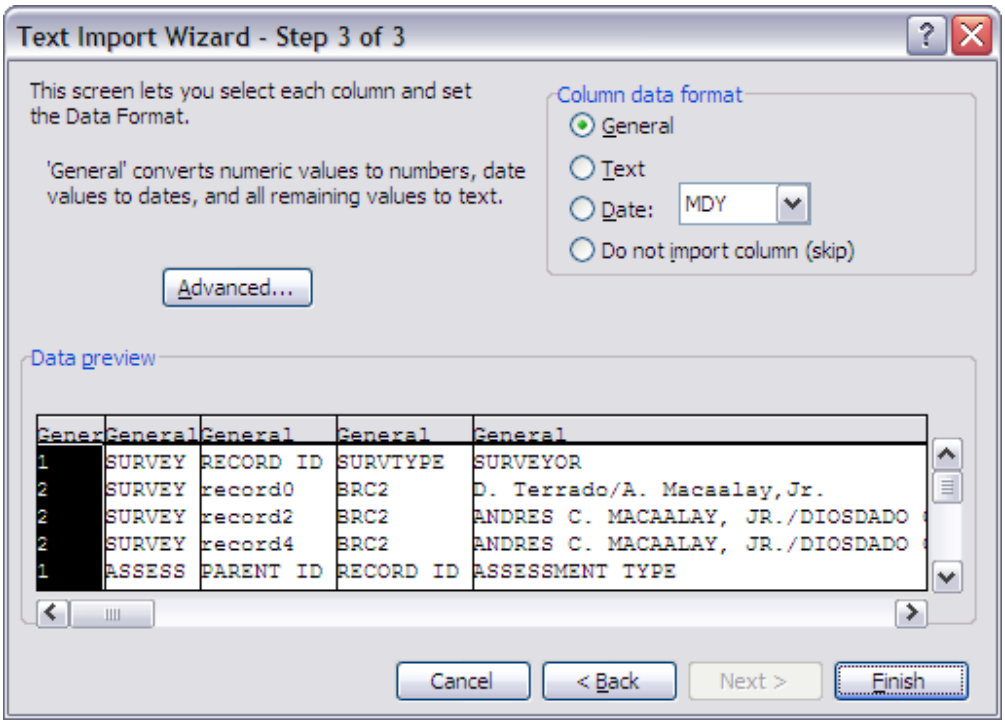

Step 3 of Microsoft Excel's Text Import Wizard

The contents of the *bmm* file will be displayed. Go to Line 19.

5	1	ASSESS	PARENT ID	RECORD ID	ASSESSMENT TYPE	ATTR 1	ATTR 2	ATTR 3	AT
6	2	ASSESS	record0	record1	BR2	B01738LZ	P	MAJOR	Br
7	2	ASSESS	record1		BCSPAN	1	2	F	RD
8	2	ASSESS	record1		BCABUT	LOW	4	4	
9	2	ASSESS	record1		BCABUT	HIGH	3.5	3.5	
10	2	ASSESS	record1		BCSPAN	2	2	F	RD
11	2	ASSESS	record1		BCSPAN	3	2	F	
12	2	ASSESS	record1		BCPIER	1	4	4	
13	2	ASSESS	record1		BCPIER	2	4	4.1	
14	2	ASSESS	record2	record3	BR2	B01744LZ	G	MAJOR	Br
15	2	ASSESS	record3		BCABUT	LOW	2.3	2.3	
16	2	ASSESS	record3		BCABUT	HIGH	2.3	2.3	
17	2	ASSESS	record3		BCSPAN	1	2	F	RD
18	2	ASSESS	record4	record5	BR2	B01765LZ	G	MAJOR	Br
19	2	ASSESS	record5		BCABUT	LOW	1.2	1.4	
20	2	ASSESS	record5		BCABUT	HIGH			
21	2	ASSESS	record5		BCSPAN	1	0	F	

A BMM's contents displayed in Microsoft Excel, with line 19 highlighted

On the *Parent ID* column, determine the *parent id* of the row.

5	1	ASSESS	PARENT ID	RECORD ID	ASSESSMENT TYPE	ATTR 1	ATTR 2	ATTR 3
6	2	ASSESS	record0	record1	BR2	B01738LZ	P	MAJOR
7	2	ASSESS	record1		BCSPAN	1	2	F
8	2	ASSESS	record1		BCABUT	LOW	4	4
9	2	ASSESS	record1		BCABUT	HIGH	3.5	3.5
10	2	ASSESS	record1		BCSPAN	2	2	F
11	2	ASSESS	record1		BCSPAN	3	2	F
12	2	ASSESS	record1		BCPIER	1	4	4
13	2	ASSESS	record1		BCPIER	2	4	4.1
14	2	ASSESS	record2	record3	BR2	B01744LZ	G	MAJOR
15	2	ASSESS	record3		BCABUT	LOW	2.3	2.3
16	2	ASSESS	record3		BCABUT	HIGH	2.3	2.3
17	2	ASSESS	record3		BCSPAN	1	2	F
18	2	ASSESS	record4	record5	BR2	B01765LZ	G	MAJOR
19	2	ASSESS	record5		BCABUT	LOW	1.2	1.4
20	2	ASSESS	record5		BCABUT	HIGH		
21	2	ASSESS	record5		BCSPAN	1	0	F

PARENT ID of line 19 identified

For this sample, the *parent id* is *record5*. Look at the *record id* column.

5	1	ASSESS	PARENT ID	RECORD ID	ASSESSMENT TYPE	ATTR 1	ATTR 2	ATTR 3
6	2	ASSESS	record0	record1	BR2	B01738LZ	P	MAJOR
7	2	ASSESS	record1		BCSPAN	1	2	F
8	2	ASSESS	record1		BCABUT	LOW	4	4
9	2	ASSESS	record1		BCABUT	HIGH	3.5	3.5
10	2	ASSESS	record1		BCSPAN	2	2	F
11	2	ASSESS	record1		BCSPAN	3	2	F
12	2	ASSESS	record1		BCPIER	1	4	4
13	2	ASSESS	record1		BCPIER	2	4	4.1
14	2	ASSESS	record2	record3	BR2	B01744LZ	G	MAJOR
15	2	ASSESS	record3		BCABUT	LOW	2.3	2.3
16	2	ASSESS	record3		BCABUT	HIGH	2.3	2.3
17	2	ASSESS	record3		BCSPAN	1	2	F
18	2	ASSESS	record4	record5	BR2	B01765LZ	G	MAJOR
19	2	ASSESS	record5		BCABUT	LOW	1.2	1.4
20	2	ASSESS	record5		BCABUT	HIGH		
21	2	ASSESS	record5		BCSPAN	1	0	F

RECORD ID column highlighted

Identify the line that contains *record5* as the *record id*, and identify the lines corresponding bridge id, denoted by the *attr 1* column.

5	1	ASSESS	PARENT ID	RECORD ID	ASSESSMENT TYPE	ATTR 1	ATTR 2	ATTR 3
6	2	ASSESS	record0	record1	BR2	B01738LZ	P	MAJOR
7	2	ASSESS	record1		BCSPAN	1	2	F
8	2	ASSESS	record1		BCABUT	LOW	4	4
9	2	ASSESS	record1		BCABUT	HIGH	3.5	3.5
10	2	ASSESS	record1		BCSPAN	2	2	F
11	2	ASSESS	record1		BCSPAN	3	2	F
12	2	ASSESS	record1		BCPIER	1	4	4
13	2	ASSESS	record1		BCPIER	2	4	4.1
14	2	ASSESS	record2	record3	BR2	B01744LZ	G	MAJOR
15	2	ASSESS	record3		BCABUT	LOW	2.3	2.3
16	2	ASSESS	record3		BCABUT	HIGH	2.3	2.3
17	2	ASSESS	record3		BCSPAN	1	2	F
18	2	ASSESS	record4	record5	BR2	B01765LZ	G	MAJOR
19	2	ASSESS	record5		BCABUT	LOW	1.2	1.4
20	2	ASSESS	record5		BCABUT	HIGH		
21	2	ASSESS	record5		BCSPAN	1	0	F

Line 18 identified as having the wanted record id, with its corresponding bridge id, B01765LZ, highlighted

For this sample, B01765LZ is identified as having the *record id* of *record5*. The bridge id identifies the major maintenance mdb file in question.

The above example shows lines 5 to 21 the columns ordered as:

1 – ASSESS – PARENT ID – RECORD ID – ASSESSMENT TYPE – …

But that is actually the second set of columns. Line 1 has the first set of columns.

	A	B	C	D	E	F	G	H
1	1	SURVEY	RECORD ID	SURVTYPE	SURVEYOR	STARTDATE	ENDDATE	DESCRIPTION
2	2	SURVEY	record0	BRC2	D. Terrado/A. Macaalay,Jr.	11/3/2008	1/15/2009	
3	2	SURVEY	record2	BRC2	ANDRES C. MACAALAY, JR./DIOSDADO C. TERRADO	11/3/2008	1/15/2009	
4	2	SURVEY	record4	BRC2	ANDRES C. MACAALAY, JR./DIOSDADO C. TERRADO	11/3/2008	1/15/2009	
5	1	ASSESS	PARENT ID	RECORD ID	ASSESSMENT TYPE	ATTR 1	ATTR 2	ATTR 3
6	2	ASSESS	record0	record1	BR2	B01738LZ	P	MAJOR
7	2	ASSESS	record1		BCSPAN	1	2	F
8	2	ASSESS	record1		BCABUT	LOW	4	4
9	2	ASSESS	record1		BCABUT	HIGH	3.5	3.5
10	2	ASSESS	record1		BCSPAN	2	2	F
11	2	ASSESS	record1		BCSPAN	3	2	F
12	2	ASSESS	record1		BCPIER	1	4	4
13	2	ASSESS	record1		BCPIER	2	4	4.1
14	2	ASSESS	record2	record3	BR2	B01744LZ	G	MAJOR
15	2	ASSESS	record3		BCABUT	LOW	2.3	2.3
16	2	ASSESS	record3		BCABUT	HIGH	2.3	2.3
17	2	ASSESS	record3		BCSPAN	1	2	F
18	2	ASSESS	record4	record5	BR2	B01765LZ	G	MAJOR
19	2	ASSESS	record5		BCABUT	LOW	1.2	1.4
20	2	ASSESS	record5		BCABUT	HIGH		
21	2	ASSESS	record5		BCSPAN	1	0	F

The BMM file, showing the row contents of the first set of columns

Lines 1 – 4 have their header ordered as

1 – SURVEY – RECORD ID – SURVTYPE – …


If an error refers to the first batch of rows headlined by the set of headers at row 1, **then one must refer to the *record id* column of the row with error instead since it has no *parent id* column**. Once the *record id* value of the row is identified, the row with the same *record id* in the next set of rows (with the second set of headers) should be identified to determine the bridge id of the major or routine maintenance *mdb* file in question.

As an example, if line 2 was identified having an error, its *record id* is *record0*. The row that shares the same *record id* in the next set of rows is row 6, having the bridge id B01738LZ.

Tracking Bridge Update Progress

Reports are provided to update the user with a tabulation that can be used to track the bridge update progress.


main → reporting → data queries

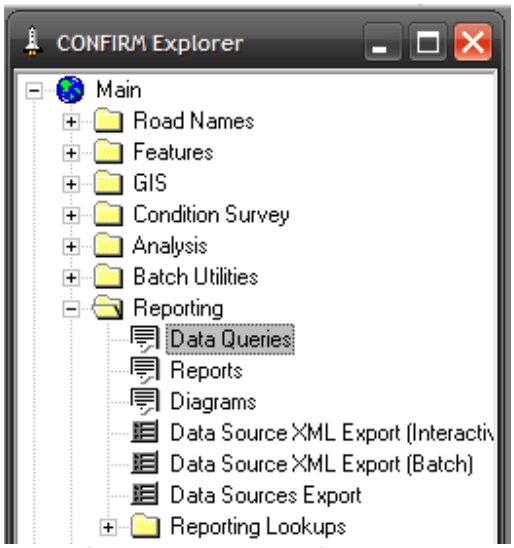

Data Queries item in the Confirm Explorer

Double-click the Data Queries item and use the following data source queries

- BMS - Bridge Data Upload Update
  - Marks updated bridge inventory and condition data

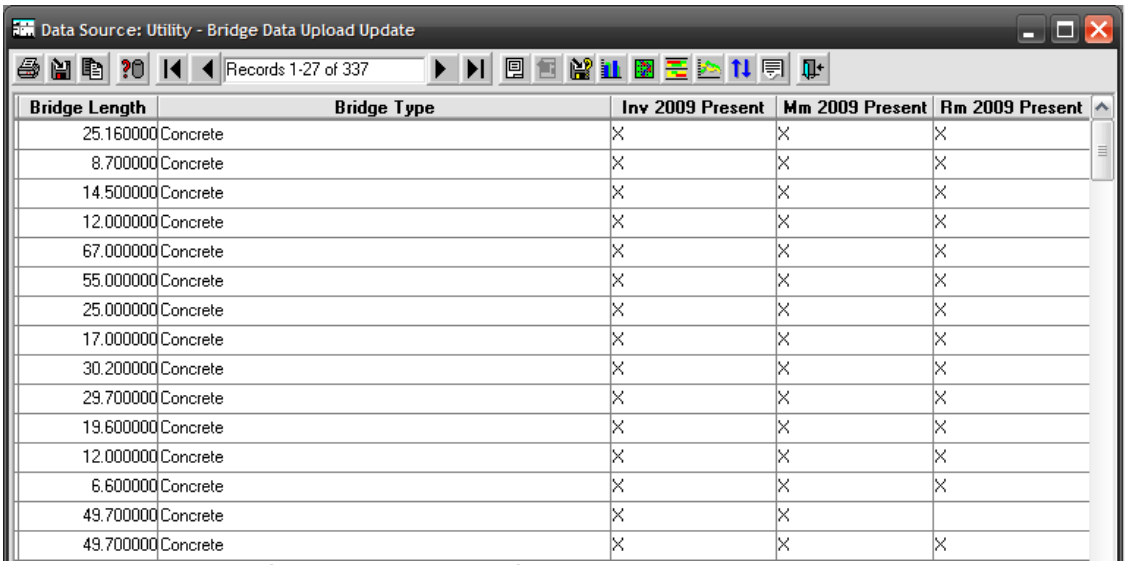


Bridge Length	Bridge Type	Inv 2009 Present	Mm 2009 Present	Rm 2009 Present
25.160000	Concrete	X	X	X
8.700000	Concrete	X	X	X
14.500000	Concrete	X	X	X
12.000000	Concrete	X	X	X
67.000000	Concrete	X	X	X
55.000000	Concrete	X	X	X
25.000000	Concrete	X	X	X
17.000000	Concrete	X	X	X
30.200000	Concrete	X	X	X
29.700000	Concrete	X	X	X
19.600000	Concrete	X	X	X
12.000000	Concrete	X	X	X
6.600000	Concrete	X	X	X
49.700000	Concrete	X	X	
49.700000	Concrete	X	X	X

Sample report for BMS – Bridge Data Upload Update

- BMS - Bridge Data Upload Update Count

- Marks with an 'X' updated bridge inventory and counts number of condition data instances uploaded. Use this to determine how many major and routine condition data surveys have been uploaded for a bridge.

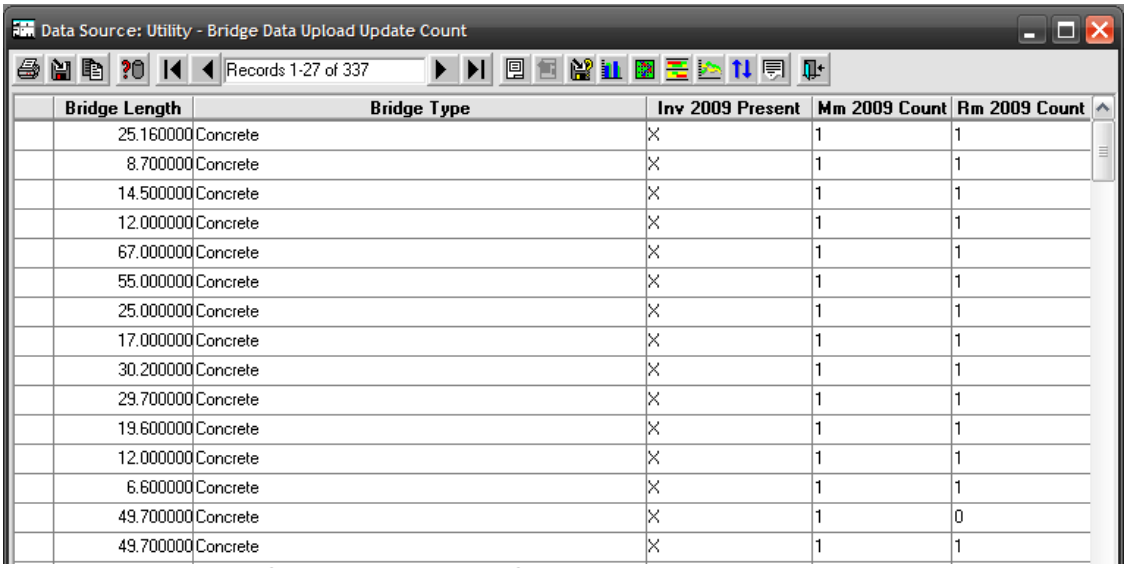

Data Source: Utility - Bridge Data Upload Update Count

Records 1-27 of 337

Bridge Length	Bridge Type	Inv 2009 Present	Mm 2009 Count	Rm 2009 Count
25.160000	Concrete	X	1	1
8.700000	Concrete	X	1	1
14.500000	Concrete	X	1	1
12.000000	Concrete	X	1	1
67.000000	Concrete	X	1	1
55.000000	Concrete	X	1	1
25.000000	Concrete	X	1	1
17.000000	Concrete	X	1	1
30.200000	Concrete	X	1	1
29.700000	Concrete	X	1	1
19.600000	Concrete	X	1	1
12.000000	Concrete	X	1	1
6.600000	Concrete	X	1	1
49.700000	Concrete	X	1	0
49.700000	Concrete	X	1	1

Sample report for BMS – Bridge Data Upload Update

Updating Bridge Inventory and Condition Pictures

An uploader has to be logged in as BMSUSER1 in the Windows logon prompt in order to have access to the photo folder of BMS. The workstation that will be used must also be connected to the DPWHNET network.

Note:
Obtain the BMSUSER1 password from the BMS Manager. Seek help with your Network Administrator if logging in the BMSUSER1 fails.



Login screen with the bmsuser1 credentials filled in

Verify if the Z:\BMS_PHOTOS folder is present. This is where the pictures will be stored and linked with Confirm.

Uploading the Inventory and Condition Photos

The BMS_PHOTOS folder has the following as its subdirectory hierarchical structure:

```
Z:\BMS_PHOTOS\<Region>\<District>\<Bridge ID>\<Inventory or Condition>\<year>
```

For example, if 2010 inventory pictures for B00056LZ are to be uploaded, the photos must be placed at:

```
Z:\BMS_PHOTOS\Region III\Batangas 1st District Engineering Office\B00056LZ\Inventory\2010
```

Likewise, if 2011 condition pictures for B00453MN are to be uploaded, the photos must be placed at:


```
Z:\BMS_PHOTOS\Region XII\ Zamboanga del Norte 1st District
Engineering Office\B00453MN\Condition\2011
```

The directory structure must be followed by each BMS Regional Coordinator to ensure consistency in the placing of photo data. Uploading of photos is simply a matter of *copy-pasting* the picture files to the correct directory or folder.


Linking Confirm with Uploaded Inventory and Condition Photos

Once all photos have been uploaded (pasted) open Confirm and browse each bridge's inventory and condition data. For instructions on how to browse bridge data in Confirm, please refer to the *Importing data to RBIA through Confirm* section of this manual.

Press the *Links* button to bring up the *Document Links* window.

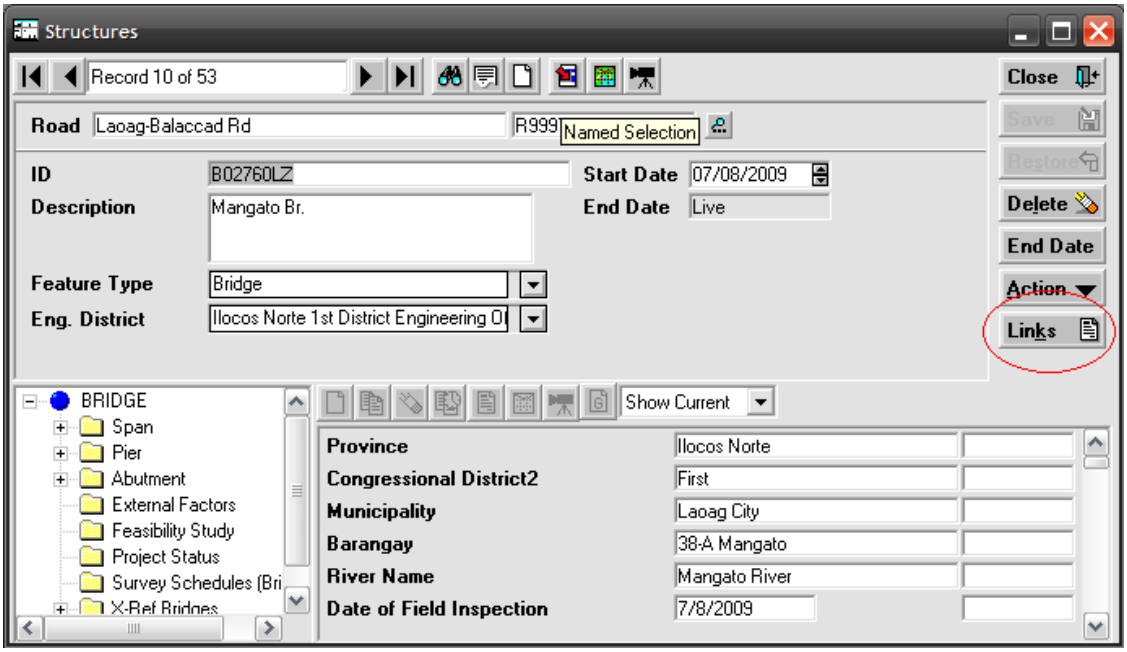


Links button position in inventory

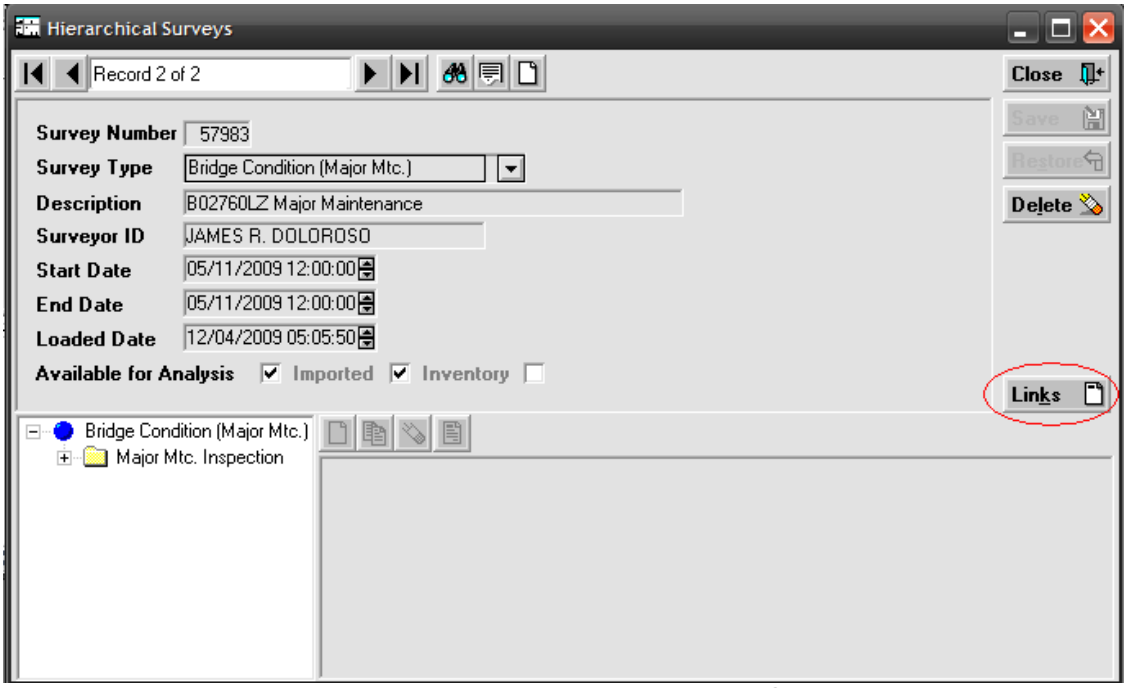


Links button position in Major and Routine Surveys

Some bridges may already have document links existing from previous BMS activities. Press the *Clear* button to create another document link and press the browse button to begin browsing for a photo.

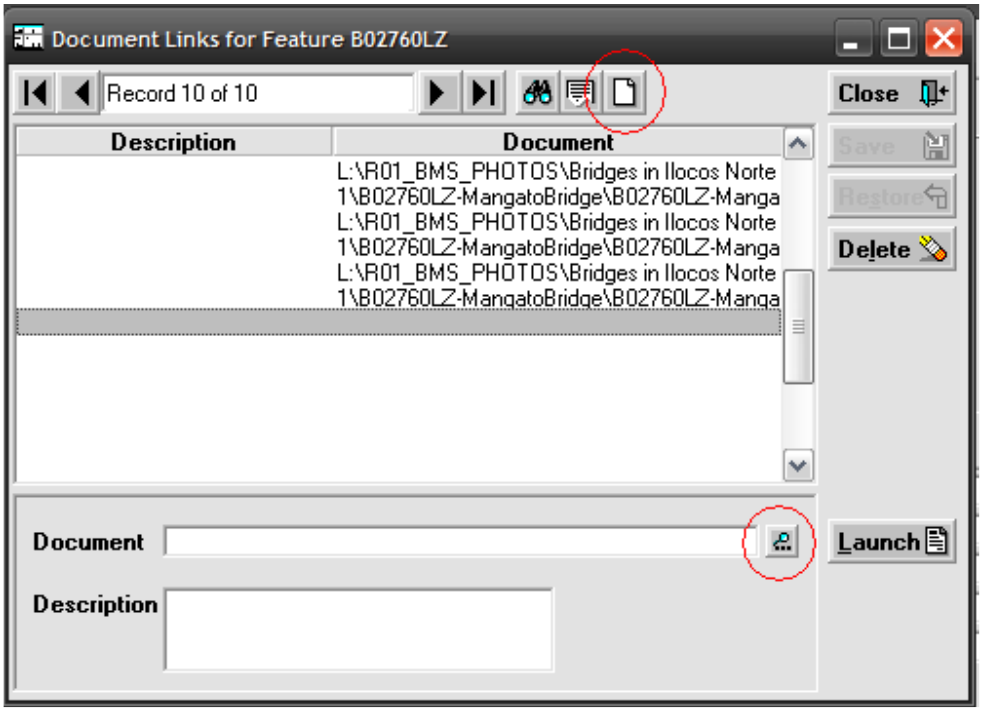


The Document Links window for B02760LZ showing older documents (pictures) already linked with the bridge. The Clear and Browse buttons are encircled.


Locate the photo uploaded in the Z:\BMS_PHOTOS\ folder and press ok. The address will be reflected in the Document text box. Add the necessary description for the picture and press Save.

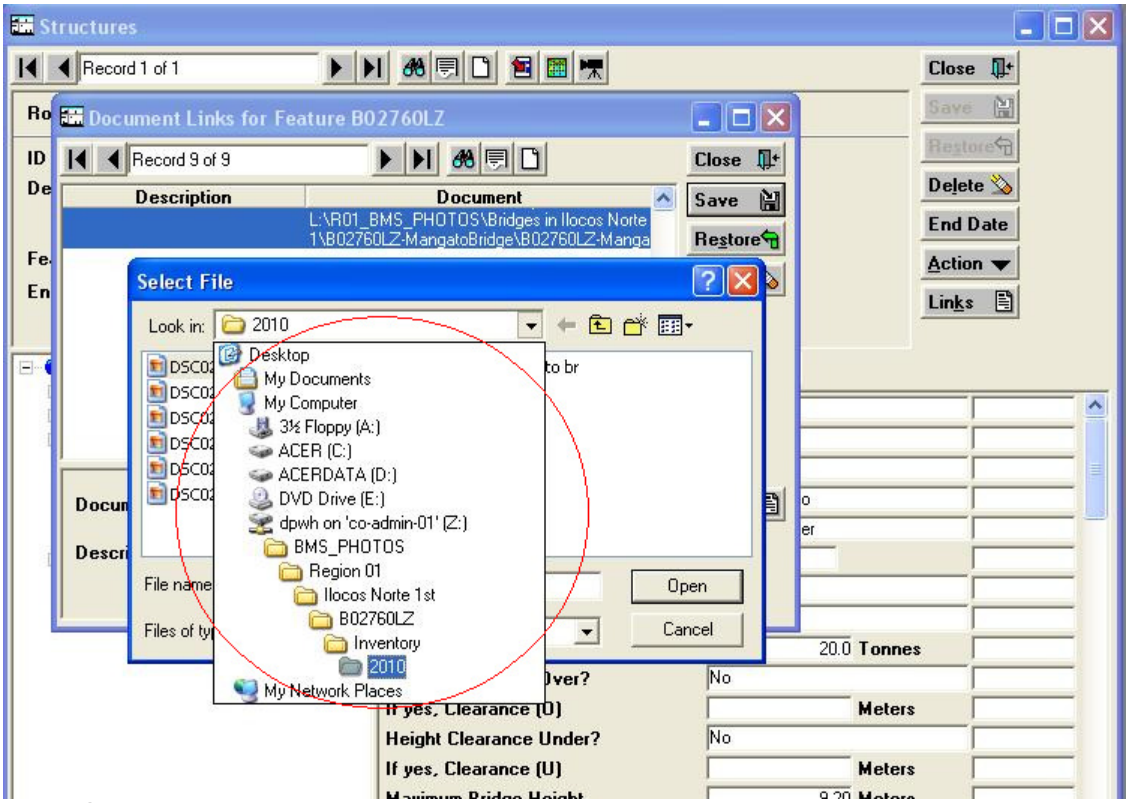

The Select File dialog with the appropriate directory chosen in the Look In box for B02760LZ's inventory photos

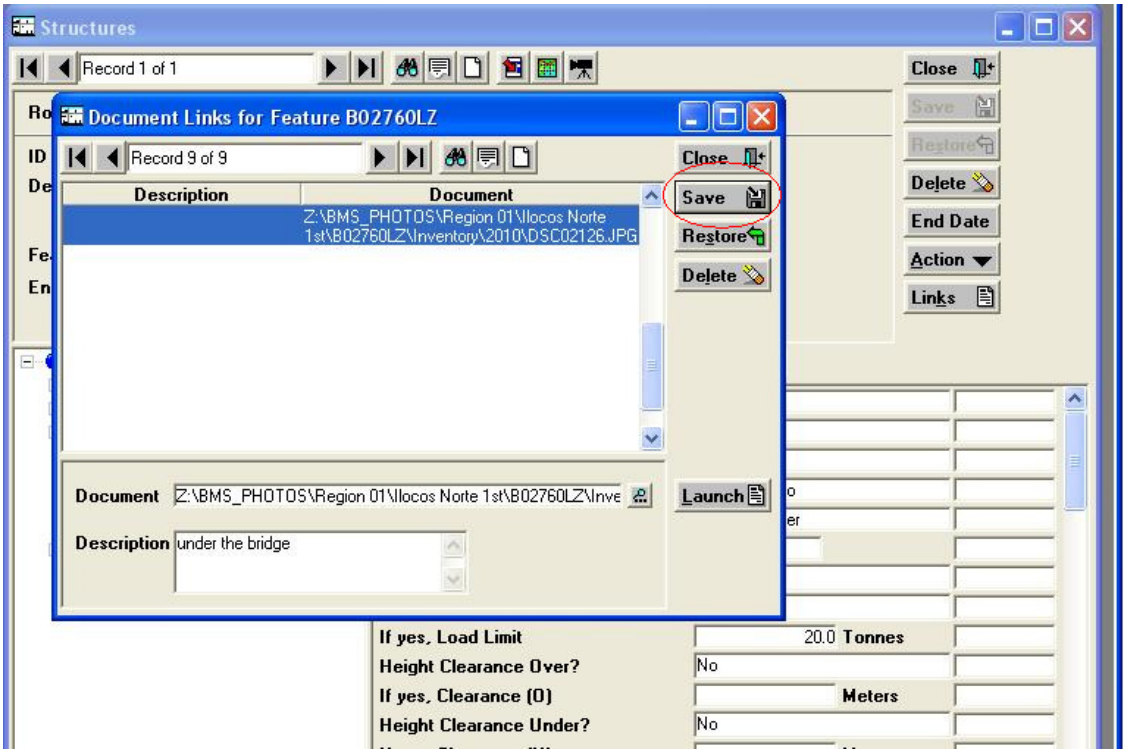


The photo's address reflected in the Document text box after being chosen in the Select File dialog. The Description box is also filled up with meaningful text. Don't forget to save.

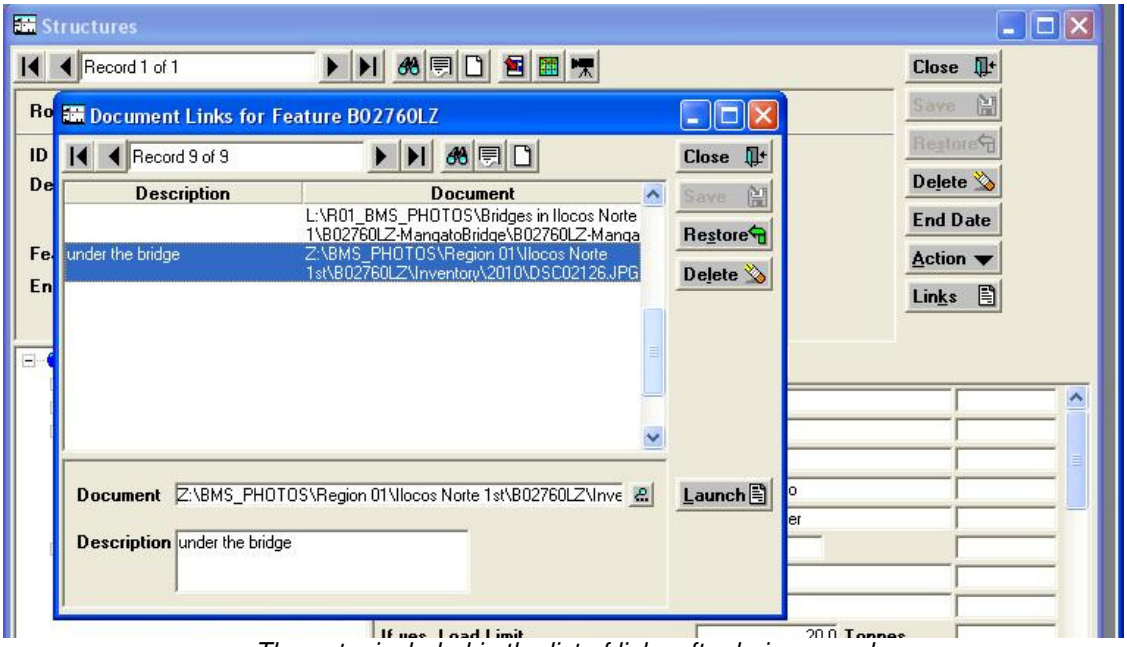

The entry included in the list of links after being saved

To verify if the file is linked, press the Launch button. This will open the specified picture file to be launched with the workstation default image handling program. Repeat the linking process for each update photos of each bridge.

Reminder:
While it is possible to update bridge inventory and condition data using a workstation not configured to connect by default to DPWHNET, using a connected one will offer more convenience, especially when dealing with photographs.

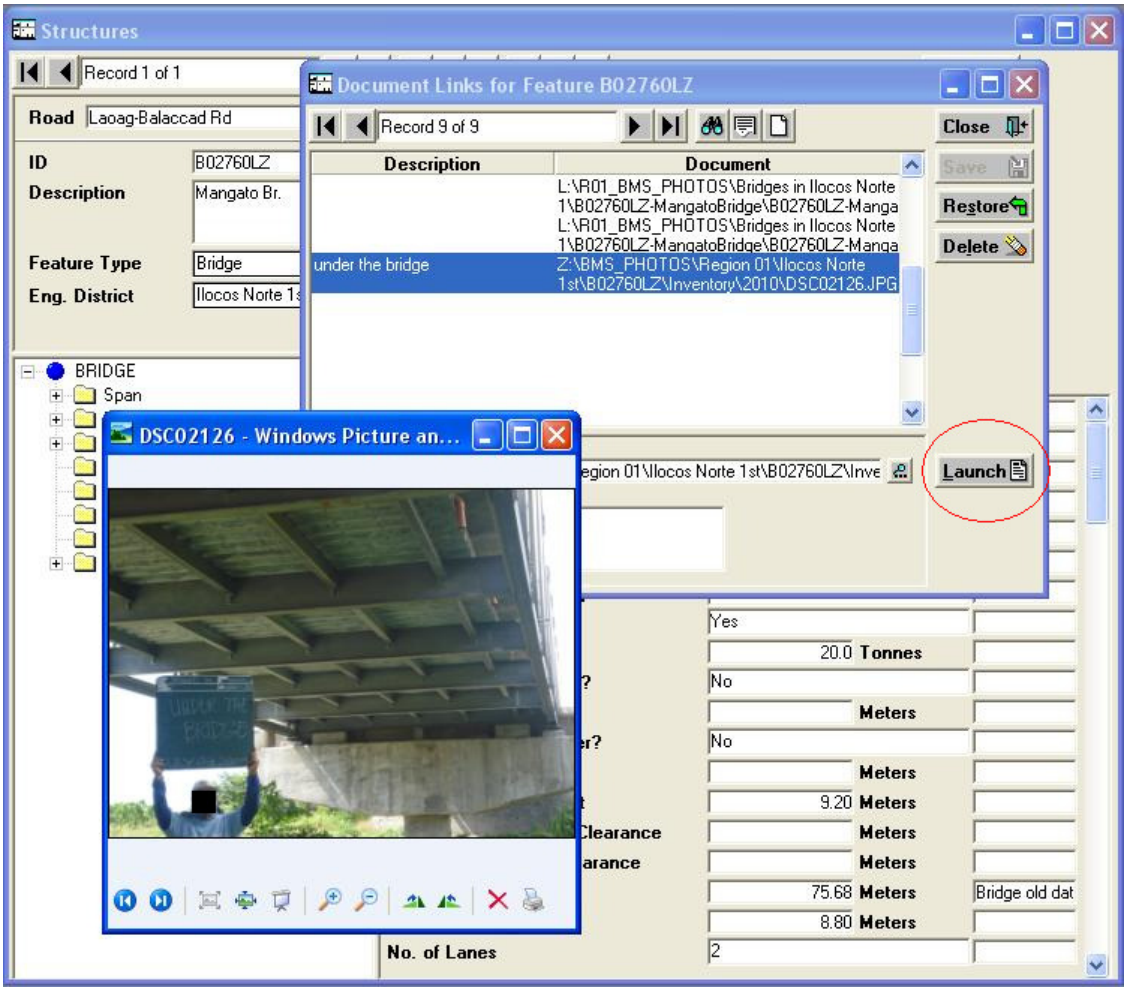

The photo launched with an image handling program when Launch button is pressed

Version Changes

April 15 2009

- bic installer download address changed
- corrected instruction in browsing inventory data
- added instruction for modifying active from date
- added instruction for browsing condition data
- added tracking bridge update progress section
- added updating bridge inventory and condition pictures

June 2009

- first version