# Introduction to the HBV model

Matteo Giuliani, Jon Herman January 15, 2014

# Introduction to the HBV model

# Matteo Giuliani, Jon Herman January 15, 2014

# Contents

1	The	HBV rainfall-runoff model	2					
	1.1	Model calibration	3					
	1.2	Model simulation	4					
	1.3	Input data	4					
<b>2</b>	The code implementation							
	2.1	The snow function	5					
	2.2	The soil function	6					
	2.3	The discharge function	7					
	2.4	The routing function	7					
	2.5	The backflow function	7					
$\mathbf{A}$	The	Hamon potential evapotransiration	8					

## 1 The HBV rainfall-runoff model

The Hydrologiska Byråns Vattenbalansavdelning (HBV) model (Bergström, 1976; Bergström et al., 1995) is a lumped rainfall-runoff model developed for operational flood forecasting in Sweden. The model is composed by a cascade of four storage units, as shown in Figure 1. It requires two inputs, namely precipitation P and temperature T. The output of the model is the discharge  $Q_{sim}$ . Note that the model requires the computation of actual evapotranspiration, which is obtained from potential evapotranspiration data, estimated through the Hamon method (see Appendix A).

The HBV model relies on the five state variables reported in Table 1 and the 12 parameters reported in Table 2 (the order of them is the one used in the associated code). The ranges suggested were found in previous studies on 12 watersheds in United States (see Herman et al. (2013)). The current version of the model can be used in two ways, namely *calibration* and *simulation*, as described in the next sections.

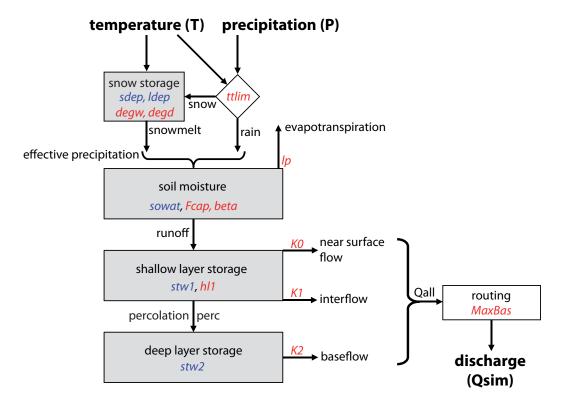


Figure 1: HBV model schematics: storage elements are gray shaded, model states and model parameters are shown in blue and red, respectively.

Table 1: HBV states.

State	Description
sow at	soil water storage
sdep	snow store
ldep	depth of liquid in the snow store
stw1	soil storage - shallow layer
stw2	soil storage - deep layer

Table 2: HBV parameters.

Parameter	Units	Description	Range
$K_2$	[day]	withdrawal rate from deep layer	(10; 20,000)
$K_1$	[day]	withdrawal rate for shallow	(1; 100)
		layer overflow	
$K_0$	[day]	withdrawal rate from shallow	(0.5; 20)
		layer (interflow)	
MaxBas	[hour]	length of hydrograph routing	(24; 120)
		transformation	
degd	[mm/(day °C)]	degree day factor (snowmelt rate)	(0; 20)
degw	[°C]	base temperature above which	(-3; 3)
		melt occurs	
ttlim	[°C]	temperature threshold below	(-3; 3)
		which freezing occurs	
perc	[mm/day]	percolation rate into deep layer	(0; 100)
β	[-]	distribution of soil stores	(0; 7)
lp	[-]	limiting soil moisture at which	(0.3; 1)
		PET takes place	
$F_{cap}$	[mm]	maximum soil moisture storage	(10; 2,000)
hl1	[mm]	maximum shallow layer storage	(0; 100)

#### 1.1 Model calibration

The calibration on the HBV model aims to estimate the best values for the 12 parameters (see Table 2), given a time series of observations for both model input (i.e., temperature and precipitation) and model output (i.e., discharge). Given the complexity and non-linearity of the modeled processes, the HBV calibration can be a difficult operation. To guarantee a good calibration, the model can be connected to the MOEA Framework (www.moeaframework.org), a free and open source Java library for developing and experimenting with state-of-the-art multi-objective evolutionary

algorithms (MOEAs). The CalHBV.java file provides the link between the model to the Java library. This allows the user to run the model calibration with the algorithms available in the MOEA Framework, such as NSGAII,  $\varepsilon$ -MOEA, or GDE3.

By default the calibration is performed by minimizing the root mean square error (RMSE), defined as the sum of squared residuals over a given time horizon H:

$$RMSE = \sqrt{\frac{1}{H} \sum_{i=1}^{H} (\bar{Q}_i - \hat{Q}_i)^2}$$
 (1)

where  $\bar{Q}$  and  $\hat{Q}$  are the observed and simulated flows, respectively. Other metrics can be considered (e.g., Diskin and Simon, 1977).

To run the calibration, besides the compilation of the HBV model, the user has first to compile the java class:

javac -classpath MOEAFramework - 1.16 - Executable.jar : . CalHBV.java and then to run the generated java program:

java -classpath MOEAFramework-1.16 - Executable.jar: CalHBV At the end of the HBV calibration, the best parameterization is printed in the terminal along with the corresponding RMSE.

#### 1.2 Model simulation

The simulation of the HBV model aims to estimate the discharges, given a time series of model input (i.e., temperature and precipitation) observation and the values of the model parameters (e.g., stored in the file *hbv\_param.txt*). To run the simulation of the HBV, the user does not need the Java files. Once the model is compiled, the user runs a simulation as follows:

./SimHBV input\_file output\_file < hbv\_param.txt where input\_file is the file containing the observations of temperature and precipitation (see Section 1.3) and output\_file is the name of the file where the simulated flows will be saved.

## 1.3 Input data

The input data should be format shown in the *example\_data* directory, shown in Figure 2.

The file header contains information about the watershed (i.e., name, area, and geographic coordinates used for the estimation of the evapotranspiration) along with the number of time-steps and a flag which identifies the type of temperature data, namely daily average (i.e., 1) or daily minimum and maximum (i.e., 2). The data are organized by columns as follows:

- 1. year
- 2. month
- 3. day
- 4. mean areal precipitation (mm)
- 5. daily streamflow discharge (mm)
- 6. daily average air temperature (Celsius)
- 7. daily maximum air temperature (Celsius)
- 8. daily minimum air temperature (Celsius)

Actually, the model requires only daily average temperature. If these data are available, the file will contain only 6 columns. Otherwise, it has seven columns and the average is computed within the model. Examples of both types of input file are contained in the *example\_data* directory. When the model is used for simulation purposes (with no calibration), the observations of the discharges are not needed. All the data in the corresponding column (i.e., the fifth one) can be set equal to zero.

# 2 The code implementation

The core of the HBV model implementation is the  $calc\_HBV()$  function, which performs the simulation of the main rainfall-runoff processes with a daily time step. This function first initializes the HBV states and fluxes to zero. It then assigns the model parameters, which are taken as input (i.e., organized in an array of doubles). Finally, it sequentially runs the five functions described in the next subsections. The structure of the  $calc\_HBV()$  function is shown in the Pseudocode 1.

#### 2.1 The snow function

The aim of this function is to estimate the effective precipitation for the current day t. Depending on the average temperature of the current day  $T_{avg}(t)$ , the corresponding precipitation can be snow (if  $T_{avg}(t) < ttlim$ ) or rain (otherwise).

Moreover, if the temperature is greater than the parameter degw, the snow is melting. The snow melt is defined as

$$smelt(t) = (T_{avg}(t) - sdep(t)) \times degd$$
 (2)

```
# Gage information
<WATERSHED NAME>
                     GUADALUPE RIVER NR SPRING BRANCH, TX
<GAGE_LATITUDE>
                     29.860600
                                     # Gage latitude in decimal degrees
<GAGE_LONGITUDE>
                     -98.382800
                                     # Gage longitude in decimal degrees
<DRAINAGE_AREA>
                     1315.000000
                                     # Drainage basin area in square miles
<TIME_STEPS>
                                     # Number of time steps of data
                      20454
<TFMP DATA>
                                     # Type of temperature data (1=daily average, 2=min and max)
# Data column format
<DATA_FORMAT_START>
1 year
  month
  day
  mean areal precipitation (mm)
  daily streamflow discharge (mm)
  daily average air temperature (Celsius)
  daily maximum air temperature (Celsius)
  daily minimum air temperature (Celsius)
<DATA_FORMAT_END>
# Data
<DATA_START>
   1.9480000e+03
                   1.0000000e+00
                                    1.0000000e+00
                                                     0.0000000e+00
                                                                     1.7300000e+00
                                                                                      6.3500000e+00
                                                                                      5.2888500e+00
   1.9480000e+03
                   1.0000000e+00
                                    2.0000000e+00
                                                     0.0000000e+00
                                                                     1.7310000e+00
   1.9480000e+03
                   1.00000000e+00
                                    3.0000000e+00
                                                     0.0000000e+00
                                                                     1.7300000e+00
                                                                                      1.0300000e+01
                                                                     1.7290000e+00
   1.9480000e+03
                   1.0000000e+00
                                    4.0000000e+00
                                                     0.0000000e+00
                                                                                      1.0613900e+01
   1.9480000e+03
                   1.0000000e+00
                                    5.0000000e+00
                                                     0.0000000e+00
                                                                     1.7290000e+00
                                                                                      1.0538900e+01
     .9480000e+03
                     .0000000e+00
                                                     0.0000000e+00
                                                                                      1.0716700e+01
```

Figure 2: Example of a file containing the input data formatted for the HBV model.

where sdep(t) is the current snow storage. The melted snow eventually contributes to the effective precipitation and is removed to the snow storage sdep(t).

#### 2.2 The soil function

The aim of this function is to estimate the soil storage of the shallow layer for the current day t. If the soil moisture storage sowat(t) is greater than the maximum capacity  $F_{cap}$ , the runoff  $Q_{runoff}$  is equal to the effective precipitation plus the excess of soil moisture storage with respect to  $F_{cap}$ . The soil moisture storage is therefore equal to its maximum capacity. Conversely, if  $sowat(t) < F_{cap}$ , a portion of the effective precipitation goes into the soil storage and only the remaining part contributes to  $Q_{runoff}$ .

Then, the function estimates the actual evapotranspiration AET(t) and compares it with the soil moisture storage. If there is enough water in the soil, the volume AET(t) evaporates. If AET(t) > sowat(t), all the water evaporates and sowat(t) = 0. Finally, the soil storage of the shallow layer stw1(t) is updated:

$$stw1(t) = stw1(t-1) + Q_{runoff}$$
(3)

#### Pseudocode 1 The calc\_HBV() function.

**Inputs**: an array of 12 parameters

#### **Initialization**:

Set HBV states and fluxes to 0. Assignment of model parameters.

#### **Iterations**:

- computation of effective precipitation (snow function)
- set runoff depth (soil function)
- computation of discharge (discharge function)
- routing (**routing** function)
- update to the next time step (backflow function)

## 2.3 The discharge function

The aim of this function is to compute the discharge  $Q_{all}(t)$ , which depends on the near surface flow  $Q_0$ , the interflow  $Q_1$ , and the baseflow  $Q_2$  (eq. 4). These three contributions depend on the soil storages stw1(t) and stw2(t) in the shallow and deep layer, respectively. The flow  $Q_0$  is observed only if stw1(t) > hl1. The interflow  $Q_1$  is generated only if there will be water in the shallow layer after having removed  $Q_0$ . If a volume is still present in the shallow layer (i.e.,  $stw1(t) - Q_0 - Q_1 > 0$ ), this water percolates from the shallow to the deep layer. Finally, depending on the deep layer storage stw2(t), the baseflow  $Q_2$  is estimated.

$$Q_{all}(t) = Q_0 + Q_1 + Q_2 \tag{4}$$

# 2.4 The routing function

The aim of this function is to transform the discharge  $Q_{all}(t)$  using the parameter MaxBas for routing. This transformation is performed by a triangular weighting function, which eventually estimates the final flow  $Q_{sim}(t)$ .

#### 2.5 The backflow function

This function reinitializes to zero the arrays used for the routing depending on the parameter MaxBas.

# A The Hamon potential evapotransiration

The potential evaportanspiration is computed according to the Hamon method (Hamon, 1961) and depends on the average temperature  $T_{avg}$  and the location (i.e., latitude) of the catchment according to the formulation reported in eq. 5

$$PET = k \times dL/24 \times \frac{e_s}{T_{avg} + 273.2} \tag{5}$$

where k = 715.5, dL is the daytime length (which depends on the day of the year and the location), and  $e_s$  the saturation vapor pressure (which depends on the average temperature).

### References

- Bergström, S. (1976). "Development and application of a conceptual runoff model for scandinavian catchments." Report no., SMHI Report RHO7, Norrköping.
- Bergström, S., Singh, V., et al. (1995). "The hbv model.." Computer models of watershed hydrology., 443–476.
- Diskin, M. and Simon, E. (1977). "A procedure for the selection of objective functions for hydrologic simulation models." *Journal of Hydrology*, 34(1), 129–149.
- Hamon, W. (1961). "Estimating potential evapotranspiration." Transactions of the American Society of Civil Engineers, 128(1), 324–337.
- Herman, J., Reed, P., and Wagener, T. (2013). "Time-varying sensitivity analysis clarifies the effects of watershed model formulation on model behavior." Water Resources Research, 49(3), 1400–1414.