ONELAP SUPPORT HELP DOC

If you are facing any issue for which there is no solution available in this do then contact support team leader first and if the team leaders have no solution then ask the team leader to contact following person from the tech team

1. Sagar Sir(First escalation)
2. Vivek Sir (Second escalation)
3. Vishal Sir (Last escalation)

Everybody has to fill the following template to report any issue.

Template 1
Issue

1. Issue Description
2. User detail if any
3. Device detail if any
4. Screenshot or video

Template 2
Urgent Issue

1. Issue Description
2. User detail if any
3. Device detail if any
4. Screenshot or video

Onelap

Refund Policy

Eligibility: Refunds are issued within 20 days under the following conditions:

1. When an incorrect product is delivered (e.g., Onelap Micro instead of Onelap Go, or vice versa).
2. When the product is damaged or defective upon delivery (a video of the package being opened is required as proof).

Replacement Policy

Eligibility: Replacements are provided when:

- The product is within the warranty period.
- The product is not physically damaged due to external factors such as water, fire, etc.

Onelap

Location Fluctuations/ Satellite Fluctuations / Static Drifts

Problem

The GPS shows a wrong or jumping location.

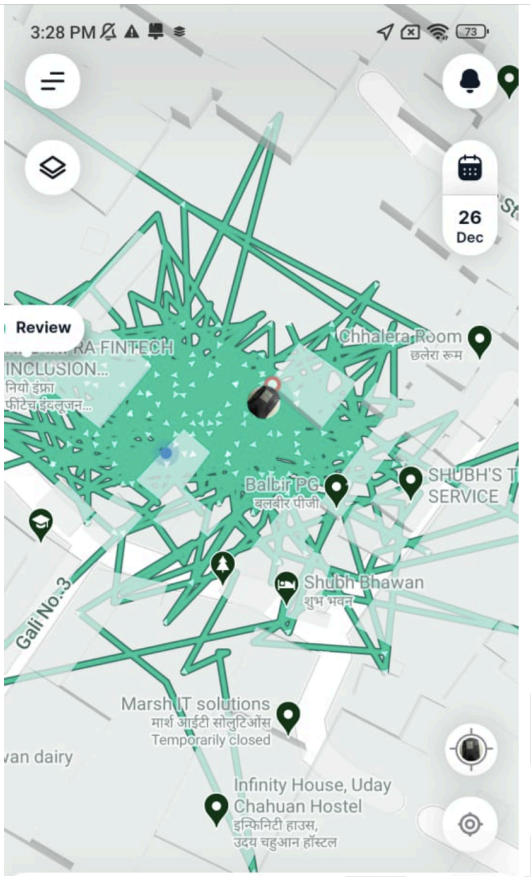

What is Happening?

GPS works best under open sky.

Whenever your device goes under hibernation/battery saving mode. It disconnects itself from satellite and network, so as to save battery. Now when you move the device or device detects movement then it tries to connect to satellites. The device can connect to more than 20 satellites for almost correct location. So it starts connecting to as many satellites as it can, starting with 1 satellite then 2,3,4 upto 22 satellite. So a fluctuation or a location which is way far from your actual device location is a result of less number of satellites connected in the beginning. The device will give you almost the correct location after a few seconds or minutes eventually.

This is normal in GPS and with every machinery in the industry. The device tries to stay connected to satellites, even if only a few are available. Locations fetched by Phones using Google Maps work in a similar way.

Please check the below video in which the the GPS indicator is moving back and forth in the Google Maps App that clearly shows that it takes time for GPS to get the exact location after

waking up and the device relocates itself every time it wakes up, so there will be lot of locations sent by device to the server while it fetching the location by calibrating itself in identifying the almost precise location.

Check this screen recording of Google maps with the industry's best android phone. **(Samsung S24)**

🎬 Location jumping in the phone.mp4

The location may jump or change a lot in places with frequent movement, such as:

1. When the vehicle is touched or handled often.
2. When the device is kept in a bag that is moved or shaken a lot.

In these cases, the device's sensor turns on and tries to update the location. Even with only three satellites, it tries to guess the location, which can sometimes be far from the actual position. Still, the GPS is strong enough to give a location within 100 meters, even indoors.

This behavior is called **satellite fluctuation**.

2. But there is not too much fluctuation in my phone compared to Onelap GPS

I totally agree with you. The GPS works for more than a day unlike a typical phone which has around 4000 to 5000 mah battery. The GPS device goes to hibernation mode to save battery. When it turns on then it tries to connect with the satellite again starting from 0. If the device is connected to at least 3 satellites then it will give you a location. Which could be very far from the device's actual location because 3 satellites are not enough to provide the actual location, but GPS location of GPS is more important than the actual location of device in theft cases. As the number of satellites increases up to 20 then it will give you a location within 5 metres in open sky.

So Phone is always On so it is always connected to satellite. The GPS turns into hibernation to save battery so it needs to connect to satellite again starting from 0.

Below is the short answer

Phones always stay on, which helps it to always be connected with GPS satellites for stable location. The dedicated GPS tracker like Onelap saves battery by hibernating, so they restart connections from 0 causing initial jumps in location until it connects to enough satellites for accuracy. This trade-off gives trackers longer life but need time to connect with enough satellites for almost accurate location

Comparison with Phone and Onelap GO GPS tracker

Onelap

The tracking of phone is very poor compared to Onelap GPS tracker. Please check the below video for instance

Onelap Official video to share with customer

How to fix Inaccurate Jumping locations?

Why Does This Happen?

1. The device is in a bag that moves or shakes frequently.
2. The vehicle or bag is touched or moved a lot.
3. The device has been inactive (in sleep mode) for a long time and activates with movement.
4. The GPS device is under or inside a metal surface (like a toolbox or bootbox) which make it difficult to connect to most of the satellites as Metal box is a hindrance for the GPS to connect to satellites
5. The location has weak satellite signals, like basements, within houses or offices, narrow streets, in between high rise buildings, within forests etc.
6. The GPS chip inside the device is faulty.

How to Fix or Reduce This?

1. Reduce Sensitivity of the Device:

To minimize unnecessary fluctuations due to minor touches or movements, you can reduce the sensitivity of the device. This will help prevent the device from being triggered by low-intensity movements, For e.g. shifting the device from one spot to another.

Steps to Reduce Sensitivity

1. **Send the Command:**
   Use the following command to adjust the sensitivity:
   `<SPBSJ*P:BSJGPS*g:80>`

Onelap

2. **Adjust the Value:**
    - Start with a sensitivity value of **80**.
    - If the sensitivity is already set below 80, increasing it to 80 or higher will make the device less reactive to minor movements.
    - Gradually increase the value beyond 80 if needed until the device becomes less sensitive to static drift (unwanted location changes in low-movement environments).

What This Means

- **Low-Movement Environments:** In situations like moving the device in a bag from one place to another, reducing sensitivity prevents the device from frequently searching for satellites unnecessarily.
- **Custom Adjustments:** Continue increasing the sensitivity value in small increments if static drift persists. Please check the diagram below

Command to change sensitivity

<SPBSJ*P:BSJGPS*g:80>

Important Note

- **Delayed Location Updates:** Lowering sensitivity might result in delayed location updates if the device fails to detect movement immediately when it starts moving. This trade-off is important to consider based on your specific use case. **So Its best to ignore such position updates or alerts as it is more critical for device to fetch location even if its far from current location**

2. Restricting Position Upload in Wired Devices

For the latest wired devices (with a hardware code value greater than 5), you can configure the device to stop sending location updates when the vehicle ignition is turned off.

Onelap

How to Restrict Position Upload

1. **Send the Command:**
   Use the following command to enable this functionality:
   `<SPBSJ*P:BSJGPS*AOU:0>`
2. **What It Does:**
   - The device will no longer upload location data if the ignition is turned off.
   - This helps reduce unnecessary position updates in situations where the vehicle is stationary.

Important Considerations

- **No Location in Case of Towing:**
  If the vehicle is stolen by being towed (without turning on the ignition), the device will not send any location updates.
  This is a limitation of this configuration, as the device assumes no movement when the ignition is off.
- **Critical Alerts:**
  - While this setting reduces unnecessary alerts, it may result in missing important updates during scenarios like towing theft.
  - For this reason, it is often better to allow location updates, even if the position might seem far or static.

Recommendation

It's advised to carefully evaluate whether to enable this setting based on your specific use case. For example:

- If reducing false alerts is more important, you can enable this setting.
- If detecting theft (such as towing) is critical, it's better to allow the device to upload location updates regardless of the ignition state.

3. Changing Anti-Theft Radius to Reduce False Alerts

If you still get false anti-theft alerts after lowering the sensitivity, you can fix it by increasing the **anti-theft radius**. This means the device will ignore small movements inside the new larger radius.

How to Change the Radius

1. **Use the Anti-Theft Radius Parameter:**
   Update the `antiTheftRadius` in the device settings.
   - The default radius is **100**. You can change it to a bigger value, like **150 or 200.**
2. **What It Does:**
   - The device will ignore small location changes or fluctuations within the new radius.
   - This reduces false alerts caused by minor movements.

Important Points

Onelap

1. **Delay in Alerts:**
    - Increasing the radius will cause a delay in detecting real theft or large movements, as the device needs a bigger change in position to trigger an alert.
2. **Not for Pocket Devices:**
    - This feature doesn't work for pocket devices. It is only available for other types of devices like wired or wireless ones.

Tip

Start by slightly increasing the radius (e.g., from 100m to 150m) and check if false alerts stop. Adjust further if needed.

4. Other solutions

1. **Place it properly:** Make sure the device is upright, with the Onelap logo facing up.
2. **Restart the device:**
    - Try restarting or resetting the device using RESET# command
    - If problems continue, update the software (firmware) of the device.

Onelap

Reply to customer to help them understand

Reply 1

Sir, the GPS device you are using is designed to balance accuracy and battery efficiency. To save battery, the device goes into **sleep mode** when it's not actively in use. This helps extend the battery life to over **20 days** and, in some cases, up to **2 months**, depending on how often it's activated.

When the device wakes up, its main job is to detect your location. It starts by connecting to at least **3 satellites**, which gives a rough location. Sometimes, this initial location can be off by more than **100 meters**. However, if the device manages to connect to **more satellites (e.g., 10 or more)**, it begins a process called **calibration**. During this time, the device adjusts its position to get closer to the actual location of your vehicle or bag.

This calibration process may result in multiple location points appearing on the map, even if your vehicle or bag hasn't moved. These points reflect how the GPS is fine-tuning itself to provide the most accurate position. This behavior is completely normal and necessary for the GPS to deliver both **precision** and **long battery life**.

and lastly share them this video

How to fix Inaccurate Jumping locations?

Reply 2 (If user is not understanding)

It's important to understand that GPS is a **space satellite technology**, and we cannot expect it to provide street-level precision. It is designed to give a location within a **nearby area**, which is why you might see small or Big variations.

and lastly share them this video

How to fix Inaccurate Jumping locations?

onelap

ACTIVATION RELATED:-

Issue-
The user raised this issue after signing up for his account and the application showed him the below conditions
- In the case of a wired device - First, install the device into your vehicle then move for 4-5 km and check if it works or not.
- In the case of wireless devices - Install the device and then move for 1-2 km in the open sky.

REASON-
The reasons are as follows -

1. Check the wiring of the wired device and make sure that the device is getting proper 12v current and both yellow and red light is glowing/blinking.
2. Check whether their device is on/off.
3. In wireless devices check if their yellow and red light is getting stable or not.
4. Check their sim status whether it is active or not.
5. Check if the user has inserted a personal sim

SOLUTION-
The solution is as follows -

1. Make the sim active if it is in an inactive state.
2. Do the correct wiring and make sure that the device is getting proper 12v current and both yellow and red light is glowing/blinking.
3. Keep the device in an open sky or go for a short drive.
4. Check the device lights if they can not glow properly and Go for a replacement after discussing with any senior executives.
5. Over personal sim please send APN and server commands also check the sim should not be of Jio company

Onelap

Device stuck / Not updating the location

If the user is reporting that their device is moving but it's not updating in the app or on the web.onelap.in then it means the device location is stuck.

The device can stop updating the location for the following reasons.

1. Device wiring is loose
2. Fuse present in the wiring of GPS tracker is blown **(Wired Device)**
3. Device is turned off from the switch in case of **(Wireless Device)**
4. Device battery is discharged **(Wireless device)**
5. User is using his personal sim and recharge of the sim is over
6. The company provided sim is inactive/ Permanently deactivated/ Suspended/ in Safe Custody
7. The device recharge is over
8. The device is having issue with the network in the area
9. Incorrect wiring like attached the ignition wire to the battery positive

REASON-
The reasons can be as follows -

1. Remote Area (There may be some issue with the sim network availability)
2. The device might be OFF or wired disconnected in the wired device.
3. Geographical condition (That area would be covered with tall buildings, trees, mountains, etc which can create hurdles to getting plenty of Satellite networks)

4. There might be some issues with the sim card.
5. Device hardware may have some issues.

6. There could be a wiring issue in the wired device case.

7. If the user is using his personal sim in his GPS, the sim card's recharge could be over.

8. In wired device cases, there could be an issue with the black fuse of the red wire, current might not be flowing through both the ends of the fuse due to which the device might not be getting proper current.

SOLUTION-
The solution can be as follows -

1. Send the Basic server command and check the GP value, If the device receives the command and the GP value is NO then follow-
   (1) Purge the sim and Set the APN.

   (2) Check With different SIM cards, if it works with different SIM cards then there might be some issue with the network or SIM also check the ticket track, if the

Onelap

customer has reported the same issue many times then change the SIM card.

2. If the device can not receive the commands then follow the

(1) Check the device lights if the device is wireless (if both lights are glowing dimly then re-insert the sim card and keep the device in an open sky for 3-5 min, once both lights are stable, the device will start tracking)

(2) Check the wirings if they are removed then re-connect them and re-insert the sim card and also set the APN at the same time.

(3) If the wiring is okay and still there are no lights in the GPS, kindly ask the user to check the current of the GPS if the device is getting proper 12v current or not, if the device is getting proper current and still there is no lights in the device, kindly replace it.

(4) If the wiring is okay and still there are no lights in the GPS, kindly ask the user to check the current of the GPS if the device is getting proper 12v current or not, if the device is not getting current even when the wiring is okay, check the black fuse in red wire of the GPS and check if the current flow is 12v on both sides of the fuse or not, if the current is not the same on both sides,ask the user to cut off the fuse and connect the red wire directly and then the lights should start glowing in the device. (you can ask any of your seniors for help in this case as it could be a little confusing).

3. If the device is receiving commands and not sending any replies then-

(1) Make sure that the same sim is inserted in the GPS on which you are sending commands.

(2) If the sim is the same and still the device is not sending any response, make sure that the sim has an active plan.

(3) In the case of a personal sim, this could happen when the user’s sim does not have an active plan on the sim card.

4. If the device is not receiving commands but the lights are glowing-

(1) Check if the lights directly go stable after turning on the GPS and it does not blink at all. Arrange a pickup in this case to get the device checked.

(2) If one of the lights is blinking and one is totally off -

The red light is not glowing at all, in wireless, ask the user to turn off the device and then turn it on again and make sure that a proper sized sim card is inserted in the proper way. (If the red light blinks and gets off after few seconds, the sim might not be working, for confirmation check with another sim and issue a new sim if the device starts working with another sim)

In wired cases, ask the user to disconnect the device from the power source and turn off the switch in the device and make sure that the sim is inserted properly and it is of the proper size. Then ask the user to connect the device again with the power source. (If the red light blinks and gets off after few seconds, the sim might not be working, for confirmation check with another sim and issue a new sim if the device starts working with another sim)

If the yellow light is not glowing at all, try to connect and disconnect the device and arrange a pickup if the light still does not glow at all.

Please check this diagram

DIAGRAM-Device-stuck-diagnosing.pdf

Engine Cut Off Issue: When the user can not remotely TURN ON and TURN OFF the engine using the Onelap Mobile Application.

REASON-
The reasons can be as follows -

1. Wrong connection (Check if the user has made wrong wirings)
2. Relay fault (check the relay wiring is correct and it's not burned or damaged)
3. Device fault
4. Device firmware issue.

SOLUTION-
The solution can be as follows -

1. Check if the user has made the wrong wirings.

How to check if wirings are wrong

(start your vehicle and pull out the relay plug if the vehicle gets off that means connections are fine, also check by connecting the relay's yellow wire to the earthing, the vehicle should get off)

2. If the wirings are perfect and the vehicle can get off by pulling the relay then send RELAY# command and check the relay status, if the status can get changed then there must be some issue with the relay and if the relay status can not be updated it means the device is not able to give commands to the relay in this case replace the device.

3. Add gt06.alternative in device attributes and add the value as false if this attribute is not available in the device attributes field.

Onelap

4. Send **RELAY,0#** to turn on and **RELAY,1#** to turn off the engine. Check if it is working with commands or not. Also check if the device is responding in any other language or in english. If the device is replying in Chinese, update the firmware of the device.

Voice Monitoring Issue: The device does not receive the call or the device is not picking up the call automatically. (goes switched off or out of network) Also, the voice is not clear.

REASON-

The reasons are as follows -

1. WCM(Call Monitoring) is not ON
2. The device is placed far from the voice object or placed in a narrow-spaced place or maybe in the actual sim is not in-network coverage.
3. The device is not picking up the call automatically and the call is ringing continuously, kindly get its firmware updated with the latest version.

SOLUTION-

The solution is as follows -

1. Send WCM, ON# command to activate voice monitoring feature for 24*7 (will give less battery backup if customer calls frequently over the GPS)
2. Ask to keep the device where the device can get the proper sound.
3. If the user is still not able to use the feature then pick up the device and get it checked at the office.

What if customer asks why the company provided sim won't work to monitor the voice

SOLUTION-

You have to inform the customer that the sim card provided by Onelap is a non-KYC m2m sim card which is only used for data and not voice.

Stoppage Issue: The stoppage point in the app shows somewhere else instead of showing where it was stopped in actuality.

REASON-

The reasons are as follows -

1. Stoppages are created based on the following parameters
    1. Speed Threshold 20 km/hr (default)
    2. Parking Duration 3-5 min (default)

2. This might be wrong because of satellite fluctuation.
3. Due to the device stuck.
4. Due to the wrong location packet.

SOLUTION-

The solutions can be as follows -

1. Please change the parameters according to the user's speed (Use **speedThreshold** in device attributes to change the number of stoppages based on 1 movement type of vehicle)

2. Use **minimalParkingDuration** in device attributes to add stoppage with less than 5 minutes of wait. The value of this attribute should be set in **seconds**. *The **minimum** and **maximum** values of the parameter are **2min and 5 min respectively**. Any value less than **2 minutes and more than 5 min** will set the stoppage duration to **5 min by default.***

3. **minimalTripDuration** in device attributes to reduce the time of the trip to get a stoppage of the shorter trip by the user. The value can only be changed **within the 2min and 5 min range**. Any range bigger or shorter than that will be ignored and previously used value will be used in that case.

4. Check if any fluctuations are happening, tell the user about the fluctuation, and make him understand.

Charging issue: When the battery percentage does not increase and the charging light can not glow.

REASON-

The reasons are as follows -

1. The charging port may be damaged.
2. The device might be off or stuck(in case it will show the last updated battery percentage instead of showing current percentage)
3. The charging cable or the adaptor might be faulty.

SOLUTION-

The solution is as follows -

1. Check if the charging port is damaged(ask for photo, video) then ask the user to get it repaired by any local mobile shop, if he denies this then pick up the device and repair that. (ask for charges if the device is out of warranty and confirm the charges with your seniors)

2. If the red light can glow then ask the user to re-insert the sim card and turn on the device, check if the device can update the location if the device is stuck then ask to keep the device in an open sky and wait to the updated location once the device has updated the location, it must update the battery status also.

Timezone Issue:

Timezone issues can be identified by looking at the time field of the Device state. If it has a difference of fewer than 24 hours and the last update of the device is received within 5 mins then you need to check whether the satellite of the device is stable. The stability of the satellite can be checked by looking at the Device’s state field. If it is more than 10 then you can consider it to be stable.

Now, look at the difference between the time field of the Device state and the last update written beside the Device Name field. If it is more than ~1 hour then it could be a timezone issue.

onelap

SOLUTION- Set the appropriate timezone by using the timezone command. (check the device type and send the command accordingly)

Commands are as follows-
For device types 101,102,103,104,01,02,03,05,07,08,09 (GMT,E,0,0#)
For device types 4 (GMT,+0:0##)
For Old SAM device(GMT,E,5,30#)

Battery drain issue in Onelap GO:

The device battery drops down quicker than usual and cannot last up to 3-4 days. (it depends on the use of the device).

REASON-
The reasons are as follows -
1. The user may be using a fast charger to charge the device.
2. The battery can drain quickly if the user uses a voice monitoring feature.
3. Battery backup varies from customer to customer depending upon the frequency of movement of the vehicle. Some customers' vehicles move for several km and some for only a few km.
4. Battery drops quickly when the path has many turns (path used for tracking)
5. Device batteries can have an issue.

SOLUTION-
The solution is as follows -
1. Ask the user to use a normal charger to charge the device (5 volts, 2 ampere chargers)
2. Tell him that the battery will drop quickly if he is using the voice monitoring features in an idle state as the device has to be online for a long time.
3. If the user is driving his vehicle more then the battery will drop down quickly. (tell him that it depends on the uses of the device)
4. Check the summary of the device and if the device did not move much then the battery is getting down quickly, pick up the device and replace the battery(ask for 1400-1500rs for battery change if the device is out of warranty)

The company says if you move per day 30-40km and do not use the voice monitoring feature much then it can give you 20-30 days of battery backup means the device can move 1000 to 2000km in one charge (depending on the GPS is newly purchased or it's old)

5. The device uses more battery when tracking has more turns(the device has to connect with the satellite very frequently when the tracking path has more turns and connecting the satellites uses more battery)

Update IMEI Info or Device is already added:

While scanning the Device IMEI, it gives an error that **Opps IMEI needs to update, Contact customer support.**

REASON-
1. The device is mapped with another number.
2. The device is mapped with the user number only however the recharge is over and the user is trying to re-map the device.
3. The device is mapped with the user number only however the user tries to scan that again to his number. (maybe because it was not showing updated locations)
4. User maybe scanning wrong barcode(written on device box or something else)

SOLUTION-
1. Ask for the device's IMEI number and device invoice to verify with the customer that he is the legal owner of the device and if the device is showing already added with any different number. If the user can provide the requested information then we delete the device IMEI from the existing number and ask the user to add the device with his number. (Take Abhijeet's help to delete the IMEI)

2. Use the **find user details** section to check if the device is added with any number. If days are showing in **(-)**and the device is disabled it means the recharge for the particular device is over. Asked the user to recharge the device and asked them to login as he does not need to add that.

3. Use the **find user details** section to check if the device is added with any number or with his number. Tell him that his device is already added to his number and ask him to **log in** instead of **signing up**.
4. Ask the user to scan the **IMEI written on the device, not** the one written on the box.

Wrong Data: The tracking data shows wrong in analytics or reports.
REASON-
1. The device did not track anything due to the device stuck.
2. It can show the wrong data because of satellite fluctuation.
3. Check the vehicle speed, data can vary based on speed.
4. Check the ignition wire, if that is not connected.

SOLUTION-
1. If the analytics is showing 0 then this must be because of device stuck or the device is off. Follow the device stuck solution for this.
2. If data is wrong because of satellite fluctuation then tell the user about the fluctuation and take action required in the fluctuation case.
3. Check the vehicle speed if that is below stoppage speed then the showing data will be wrong as running data is calculated in stoppage. Add the speedThreshold attribute in device

Onelap

attributes and add the speed value based on user tracking speed. (need to check with Vishal sir)

5. Check if the ignition wire is not connected, ask the user to connect the ignition wire.

Vibration alert: Vibration alerts come when the device senses any vibration or if the device senses any changes in location without the ignition being turned on. We can also say that the vibration alerts are a way to notify the user that their vehicle is being moved without the ignition getting turned on or in the ignition off state.
REASON-

1. When the orange wire of the GPS is not connected: As the device is not able to sense the ignition if it is getting turned on or not, according to the device the ignition is in an off state as the orange wire is not sensing any current because it is not connected with the main ignition wire of the vehicle.
2. When the device is not bound with any plastic tie (it moves from its place a lot it happens)

SOLUTION-
1. Ask to check the ignition wire, if that is not connected then ask the user to connect that.
2. Ask to bind the device with a plastic tie or tape.

Overspeed Alert: If the average speed in the last 3 minutes of travel is more than the specified limit in the app Device then Overspeed alert is triggered.

Device removal alert: Device removal alert comes when device does not get enough power supply(12V) or power source of the device is removed.

SOLUTION-
1. Ask user to check if vehicle battery is drained.
2. It trigger when red or black wire of the device is removed.
3.Device removal alert does not come when device default battery is dead(not in working condition)

Commands with specification:

<SPBSJ*P:BSJGPS*T:015.206.134.137,5023> (Server command to get the status of the GPS)

<SPBSJ*P:BSJGPS*C:0005> (Refresh rate command, it is used to change the refresh rate of the device to 5 seconds)

APN,AIRTELIOT.COM# (APN command for company provided Airtel m2m sim card)

APN,airtelgprs.com# (APN command for personal airtel sim card)

<SPBSJ*P:BSJGPS*A:m2misafe> (APN command for company provided Vodafone m2m sim card)

APN,internet# (APN command for personal VI sim card)

<SPBSJ*P:BSJINI> (command to factory reset the device)

WCM,ON# (for enabling voice monitoring feature 24/7)

RESET# (for rebooting the device)

Onelap

- Information about IPs
- Wiring explanations
- Difference between antitheft and safe zone
- How to share device location with other
- Online and offline issues.

Objective:
To troubleshoot and resolve the notification sounds not coming through the Onelap application on a mobile.

Notification issue-(types of notification issues)
1. The notification sound does not come.
2. Notification does not come in a notification tray.

3. Notification is not saved in the notification section

REASON- Below are the reasons for notification sound

A. Media or notification sounds are on silent
B. Notifications are disabled for the Onelap application
C. Sound profiles are on silent or meeting mode

Solutions-
1. Check using control if the user and you can receive the notification. If you and the user both can receive the notification with sound it means everything is ok and the user will receive the notification on time.

If you receive the sound but the user can not receive it then check the following settings-

: *Check App Notification Settings*

1. *App Notification Settings (Android/iOS):*
   - Go to *Settings > Notifications*.
   - Locate the Onelap app and ensure that:
     - *Allow notifications* is enabled.
     - *Sounds* are enabled.
     - Notification category settings have sound enabled.

2. *In-App Notification Settings:*
   - Open the app.
   - Navigate to *Settings > Notifications* (or similar within the app).
   - Ensure that notification sounds are enabled for all relevant notification types.

Onelap

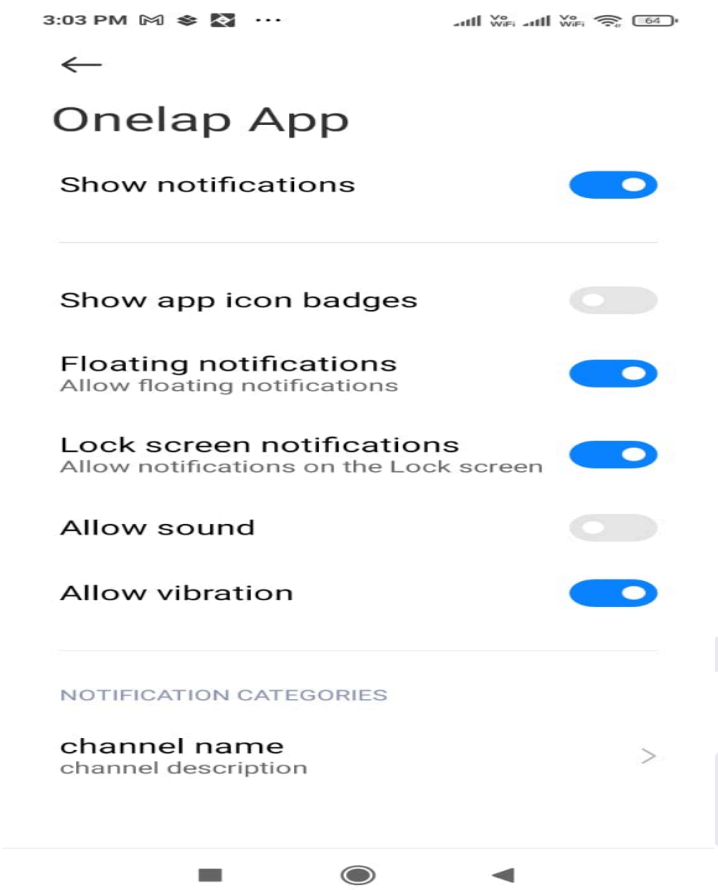

Check Device Sound Settings

1. *Check Volume Levels:*
   - Make sure the device's *Media* and *Notification* volumes are turned up.
   - Confirm the device is not in *Do Not Disturb* or *Silent* mode.

2. *Check for Sound Profiles:*
   - Ensure no sound profile (such as "Silent" or "Meeting" mode) is active that could block notification sounds.

3 *Check Do Not Disturb Settings:*
   - Go to *Settings > Sound > Do Not Disturb* (Android) or *Settings > Focus* (iOS).

- Confirm that Do Not Disturb isn't preventing notifications from sounding.

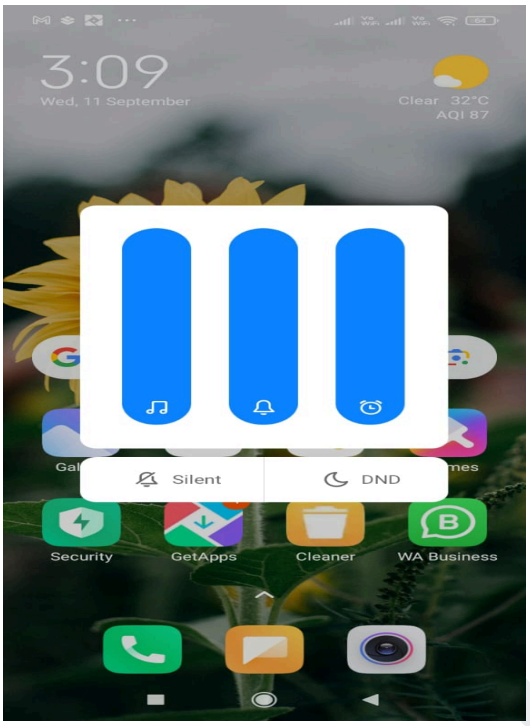

Check for Third-Party Interference

1. *Check Battery Optimization Settings (Android):*
   - Go to *Settings > Battery* or *Settings > Apps*.
   - Locate the app and ensure that it is *not optimised* for battery usage, as this can suppress notifications.

2. *Check for Other Apps Blocking Notifications:*
   - Verify that no third-party apps (such as security, task managers, or notification-blocking apps) are preventing the app from playing notification sounds.

3. Check display over other app settings and allow the display over other apps
4. Allow notifications on the lock screen
5. Allow floating notification
6. Change the sound if it is selected as NONE.

Onelap

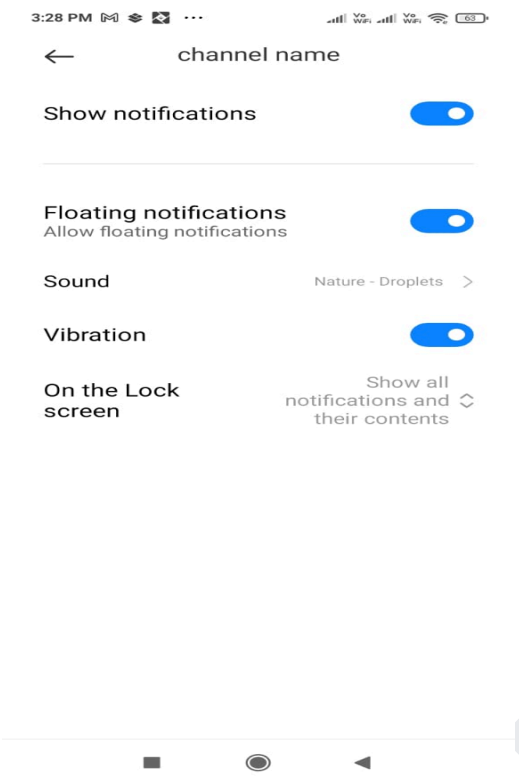

Clear App Cache/Data

1. *Clear Cache (Android):*
   - Go to *Settings > Apps > [App Name] > Storage > Clear Cache*.
   - Test to see if notification sounds are restored.

2. *Clear Data (Android):*
   - *Caution:* Clearing data will reset the app's default settings.
   - Go to *Settings > Apps > [App Name] > Storage > Clear Data*.

Onelap

- Open the app again, log in, and check if the issue is resolved.

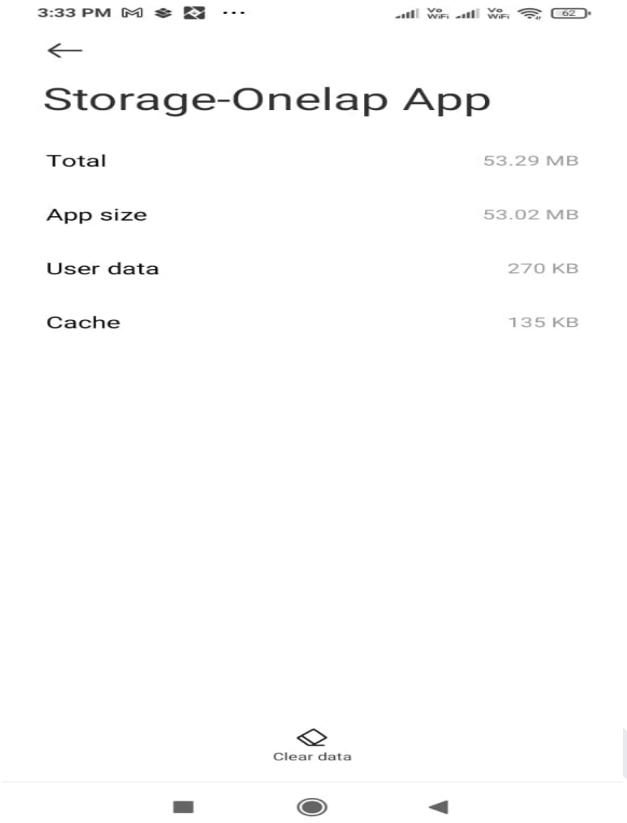

Reinstall the App

1. *Uninstall the App:*
   - Long press the app icon and select *Uninstall*.
   - Alternatively, go to *Settings > Apps > [App Name] > Uninstall*.

2. *Reinstall the App:*
   - Download and install the latest version of the app from the respective app store.

3. *Test the Notifications:*
   - Log in to the app and check if the notification sounds are now working.

4*the power consumption in micro device is about 40mA in active mode and about 4mA in sleep mode

Onelap

APP

Distance

Runtime calculation

(Runtime + actual idle time)

We can add eligible.factor.speed.runtime as an attribute in device to calculate runtime of wireless device based on the speed of the device. And the green icon will also consider the same to decide its visibility in the app. The default value are as following for different wireless models

1. **GO**

Speed Default Value > **8 KM/hr**

2. **Pocket**

Speed Default Value > 8Km/hr

In case of wired device there is no need to consider **eligible.factor.speed.runtime** to calculate runtime as wired devices are expected to be installed with the ignition wire.
But the green icon shown in the application will consider this factor to decide its visibility.

1. **Micro/Micro plus**

If hardware code is one of the following
OL_MICRO
SAM_GPS
MAX_GPS
UNKNOWN
OL_MICRO_PLUS
And
Ignition is ON

Then runtime will be calculated irrespective of the speed of device.
The default value for wired device is **8 KM/hr.**
The green icon will be shown based on the **eligible.factor.speed.runtime value.**

Note: Add "**eligible.factor.speed.runtime**" key in Device attributes to override default value

Icon Colors For Devices In App

1. Grey Color - When Device is Offline.
2. Red Color - When Device is Stopped but device is online
3. Green Color - Device is Running but device is online
4. Yellow Color - Device is Idle but device is online
5. Antitheft Icon when Anti Theft is ON.

Color representation on web.onelap.in

Green color: The device is online and online means that the device has sent a packet in the last 2 minutes.

Onelap

Red Color: The device is offline. The connection between device and server is broken i.e. the device and server are not connected anymore. Offline also means that there is some error on server or server was restarted.
Yellow Color: The device is in an unknown state. It means the device has not sent any packet to the server in the last 2 minutes. But there is still a connection between the server and the device.

Idle Time

It is based on ignition wire so devices having ignition wire attached to **ignition wire of vehicle and current speed of the device should be less than 7** are only eligible for the idle time.
Wireless device doesn't have an ignition wire so idle time is not visible.

Device type explanation
Battery is visible in GO and Pocket devices in ranges like 20-40%, 40-60%, etc.

M2M Sim description

5755201222123 **13 Digit**
M2m can send or receive SMS on only four whitelisted numbers.

1. 7529941378
2. 8785897557
3. 9810477629
4. 22XXXXXXX

M2m sim can access internet on only four whitelisted IPs.

1. **(15.206.134.137) with DNS Web.onelap.in**
2. **Manufacturer ip**
3. **Testing ip 1**
4. **Testing ip 2**

These 4 ips and contact numbers are dynamic to a specific 13-digit sim.

Activation flow of SIM
Initially we are aware of the Sim card Serial number which is 19 to 20 digits. For e.g.
8991119018546716766

And this sim is assigned a 13 digit contact number once they are sent for activation.

Then a whitelisting request is sent which starts with SMS whitelisting followed by IP whitelisting which results in proper activation of sim.

Onelap

Antitheft and Stoppages

Antitheft

Antitheft Custom radius parameter.
Use **antiTheftRadius** in device attributes to change **default 100m radius** of antitheft.
Note: Antitheft is not available in pocket device.

Stoppages

Parking Duration 5 min
Speed Threshold 20 km/hr

Use **speedThreshold** in device attributes to change the number of stoppages based on 1 movement type of vehicle.

Use **minimalParkingDuration** in device attributes to add stoppage with lesser than 5 minutes of wait. The value of this attribute should be set in **seconds**. *The **minimum** and **maximum** value of the parameter is **2min and 5 min respectively**. Any value lesser than **2min and more than 5 min** will set the stoppage duration to **5 min by default.***

Overspeed Alerts
If the average speed in the last 3 minutes of travel is more than the specified limit in the app Device then Overspeed alert is triggered.

12 September 2023
You can set overspeed limit on device basis using the device attribute "**speedLimit**". You can set any positive integer value there.

Overspeed Alert disable

You can disable overspeed alert for a particular device by adding attribute in Device attributes **"overspeedStatus"** put the value **false.**

Ignition Alert

1. Add the following attribute to enable the Ignition Off alert.
    a. `ignitionOffAlertEnabled`

Timezone Issue

Timezone issue can be identified by looking at the time field of the Device state. If it has a difference of fewer than 24 hours and the last update of the device is received within 5 mins then you need to check whether the satellite of the device is stable. The stability of the satellite can be checked by looking in the Device's state field. If it is more than 10 then you can consider it to be stable.
Now, look at the difference between the time field of the Device state and the last update written beside the Device Name field. If it is more than ~1 hour then it could be a timezone issue.

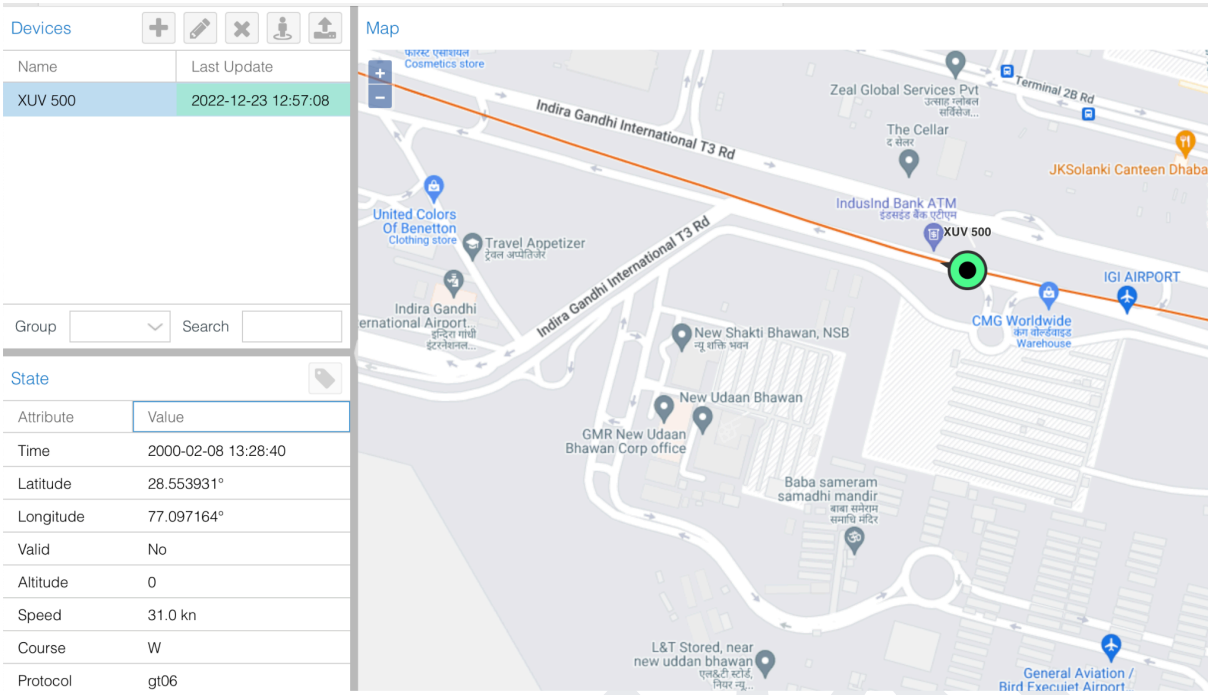

The above screenshot shows the unavailability of the Satellite signal in the device and is not a timezone issue. This is identified by looking at the time field of the Device state. As it is more than a few years (i.e. 2000-02-08 13:28:40) so it means the device is not sending Location update packets.

NEW

Here is how you fix the timezone issue based on the device type

```
if (deviceType == DeviceType.WIRED_1.getDeviceType()) {
   return encodeContent("GMT,E,5,30#");
} else if (deviceType == DeviceType.WIRED_3.getDeviceType()) {
   return encodeContent("GMT,E,0,0#");
} else if (deviceType == DeviceType.WIRED_5.getDeviceType() ||
       deviceType == DeviceType.WIRED_6.getDeviceType() ||
       (deviceType > DeviceType.WIRELESS_101.getDeviceType()) && deviceType
< DeviceType.WIRELESS_200.getDeviceType()) {
   return encodeContent("GMT,E,0,0#");
} else if (deviceType == DeviceType.LT05.getDeviceType()) {
   return encodeContent("GMT,+0:0#");
} else if (deviceType == DeviceType.POCKET_1.getDeviceType()) {
   return encodeContent("GMT,E,8,0#");
}
```

What is Dead state

Onelap Support Akash -> add answer here.

How to put device in dead state

Use Due payment module to update payment notes and add “dead” in the notes.

When can you not put Device in dead state.

The device can’t be put in dead state if the validity is not over.

Server IPs

We have two IPs

1. 139.59.52.240
2. 15.206.134.137

The first ip is mostly set in device type 1 and this IP will not change as it is locked
The second ip is mostly set in device type 4 and above and it can be changed

NEW

Device Testing on BSJ server

<SPBSJ*P:BSJGPS*T:008.217.103.061,6652>
Server IP for device testing on BSJ server
Note: Make sure the IP is whitelisted in the iot sim

Low Battery Alert

Low battery alerts can be disabled by using the following field in the Device attributes.
alertLowBatteryEnabled values true or false

Antitheft duration

Change antitheft duration using **antitheftDuration** attribute by saving in the device attributes.
Multiply the asked duration by 1000 i.e. **30 seconds equal to 30,000**

Device Removal Alert

To turn off device removal alert for individual device you need to add a flag i.e. **deviceRemovedStatus**
Add false value in device attributes and user attributes both to **disable** individual device device removal alerts

Call timeout function

An upgrade task has been added for this device
Added the automatic call hang-up function, enabled by default, time 1200s, unit second
Command: CALL_TIMEOUT# query
CALL_TIMEOUT, N# N is the maximum call duration. When N is greater than 30s, the function is enabled. When it is less than or equal to 30s, the function is invalid

Automated Whatsapp

Onelap

Razorpay

Control

Dashboard

How to diagnose ignition alert of device

1. Device level check using SMS commands.
2. Notification using Postman.
3. App-based check.
4. Server check.

How to check if subscription orders of a device in Control and app payments.

Subscription transfer

1. Move device to dead if subscription is transfered to another device.
2. Move device to undead device only if payment is completed.

control.onelap.in

1. Subscription and Device can not be added in the same cart for an order.

Pocket

1. Lights

a. Blue Light: Blue light indicates network info. If it is blinking it means it's searching for the GPS Signal. And Stable light means connected to the network.

b. Green Light: Green light indicates SIM module info. If it is blinking it means Module is On but not connected.

c. Red light: Red light Indicates battery. Blinking means Device battery is low.

While charging: only red led lights up while charging and green lights up when devices charged 100%

2.Device ON/Off

Onelap

a. Press & hold SOS key to turn ON the device untill all red, green & blue LED lights up
in sequence
b. Hold SOS key and then press key 1 to shutdown the device.

3. Keys

a. Press twice 1,2 & 3 keys to call on the corresponding numbers set on them
b. Press once any key to pick up incoming call
c. Hold SOS key to activate SOS emergency. Device call on those 3 numbers one by one until
it is picked by one of them
d. Hold key 1 to know current network status
e. Hold key 2 to know battery health status
f. Hold key 3 to know time
g. Only those three numbers can call on the device
h. customer need to inserrt his own sim card to enable calling feature
i. batery percentage shows in range.

4. Pocket device add flow
5. how to add whitelist numbers

If call button is not visible in the pocket then add `isCallButtonVisible` as device attributes and add true as the value of the attribute

Command List

1. **Pocket** click here https://drive.google.com/file/d/1qCPmTvYFxIhlBLfxlxwQN_gOhSDgy7iZ/view?usp=share_link

   For your help -

2. SERVER,0,15.206.134.137,5023,0# (server commands)
3. APN,APNNAME# (For vi - APN,m2misafe# and for Airtel APN,AIRTELIOT.COM#)
4. CLOSEPOS,1,1#
5. WTIMER,0#
6. WIFIOFF#
7. WORKSW,OFF#
8. GTIMER,1#
9. TIMER,0,10#
10. SENSOR,ON#

onelap

11. RIOASETAPN,ON#
12. PERIOD,1,1,0,00:00-23:59#
13. PERIOD,1,1,1,00:00-23:59#
14. PERIOD,1,1,2,00:00-23:59#
15. GMT,E,5,30#GM T,E,8,0#
16. SOS,A,Number,B,Number,C,number# - (Example - SOS,A,8882716876#)
17. PARAM# - (for IMEI, HBT, SOS numbers, Timezone etc.)
18. STATUS# -
19. MONITOR# OR JT# - (To enable voice monitoring feature)

SUPERPASS# (for Editing the SOS numbers and Adding any number as sos numbers (For more clarity contact Kabir) Note - Do not give this command to customers

1. Fluctuation issues
2. Connection issue permanent connection issue

PERMANENTLY DEAD STATE

1. Adding the device to permanently dead state will hide the device permanently from the account
2. The device can be added to PDS using the device attribute
3. Add "permanentlyDead" as key of the attribute and "true" as its value
4. The devices for which the subscription is transferred to another device will also move to PDS on their own

ELIGIBILITY OF NOTIFICATION

The devices which are added in PDS (PERMANENTLY DEAD STATE) will not receive any eligible notification unless needed in some cases.

TIME CONSTRAINT ON SHARED DEVICES

If the vehicle should be viewable to parent between 8am to 2 pm then following will be the values.
1. viewerStartHour: 8
2. viewerEndHour: 14

NOTE: The time constraint is bound to work within a day range and between two days. In simple words you can not include two dates 28 jun and 29 june with time constraints. The time constraints can be set for one day only.

Latest Version of devices

Orelap

Latest wired device version:
SDK:8955_V1.122022/07/08 11:21:01,APP:KM12AREZ419V3S11205#230608_Jun 8 2023_11:36:13,GPS:UC6226NIS,G1B1,VE310E1,R3.2.20.0

This is the latest wireless device version :
A5E-3#EZ419#V3#V11TA (221202)(144B68B),Dec 2 2022,15:54:17,MAUI.11C.W13.52.SP3.V2.TA(6112042),2019/06/11 20:42,STM8L_V5.2,1E9A75

VLTD certificate/ AIS 140 Certificate/ certificate to show in RTO office

The certificate required by RTO or any other govt authority for permit in India is not provided by Onelap. As Our devices are sold for personal use only and not for commercial purpose. The commercial vehicle need to install AIS140 devices which are sold separately at the cost of 1000 rupee and need approval from RTO office with certificate. Onelap Micro or GO are not AiS140 certified device but are sold for personal use only

How battery notification works

1.This notification will come when the device is less than 20% charged and the device is put on charging. It will not come on when the device is more than 20% charged.

2. If the device again goes below 20% and the customer starts charging the device again, then this notification will come for example if customer charge his device 10% to 40% and now it drop down 40% to 20% if the customer charge his device now then he will get the notification.

3. If the device is removed with 20% charge and it is put back on charging after some time (when the battery of the device was the same as when it was removed from charging) then it will not give you the notification as the

How does Vibration alert work and how to turn them off?

The triggering of a vibration alarm requires two conditions to be met:

1. The equipment is in a fortified situation; 2. The vibration alarm is turned on and reaches the set threshold and time.

A=ON/OFF, enable/disable vibration alarm, default to enable vibration alarm

G=vibration threshold, (setting range: 100<G ≤ 3000, unit: mg; default: 500mg)

T=vibration detection time, (setting range: detection time 1 ≤ T ≤ 10, unit: s; default: 3s)

Example: SENALM,ON,600,3,0 (vibration alarm on, vibration value 600mg, duration 3 seconds, device will upload vibration alarm to platform)

M=0/1/2, alarm upload method

0: GPRS, only upload alarm data to the platform; (By default, upload in this way)

1: SMS+GPRS, upload alarm data to the platform+send alarm SMS to the set SOS number

Onelap

How to turn off vibration notifications

Simply add **vibrationAlertEnabled** with false value in device attribute to turn them Off
This will also stop storing the events of vibration

Lights Indications

Red GSM Indicator Light:

1. Flashing quickly (100ms frequency): GSM initialization
2. Flashing slowly (2s off, 100ms on): GSM signal reception is normal
    a. Incomplete or incorrect parameter settings
    b. Device protocol is not compatible with the platform
    c. Device IMEI number is lost
3. Steady on: GPRS is online
4. Off: No GSM signal/No SIM card/Entering low power mode

Yellow GPS Indicator Light:

1. Flashing quickly (100 millisecond frequency): GPS signal searching
2. Steady on: GPS has located
3. Off: GPS is in sleep mode/Not working

Shiprocket Manager contact details and issues escalation emails

KAM Name:Nixon Andrew Vincent
KAM Email:nixon.vincent@shiprocket.com
KAM Phone No: 8929892501

Level II Escalation: agarwal.akshay@shiprocket.com.
Level III Escalation: silver.escalations@shiprocket.com

Power consumption of Wired GPS Devices

Only valid for Device Type 6 or more in wired category
At 12V, the power consumption is about 40mA in active mode and about 4mA in sleep mode

Onelap

Static Drift / Sensitivity of device

For the static drift problem of the KM12AR device, you can try the command **<SPBSJ*P:BSJGPS*AOU:0>** to prevent the device from uploading location data when ACC is turned off

For the static drift problem of the Wireless device, you can send the command **<SPBSJ*P:BSJGPS*g:80>** to prevent the device to get activate if the sensitivity is lesser than 80. So the device won't try searching for satellite in a lesser moving environment like putting bag from one place to another. You can keep increasing the value from 80 to other until there is lesser static drift. This can also result in late location if the device could not sense the movement when the device started moving

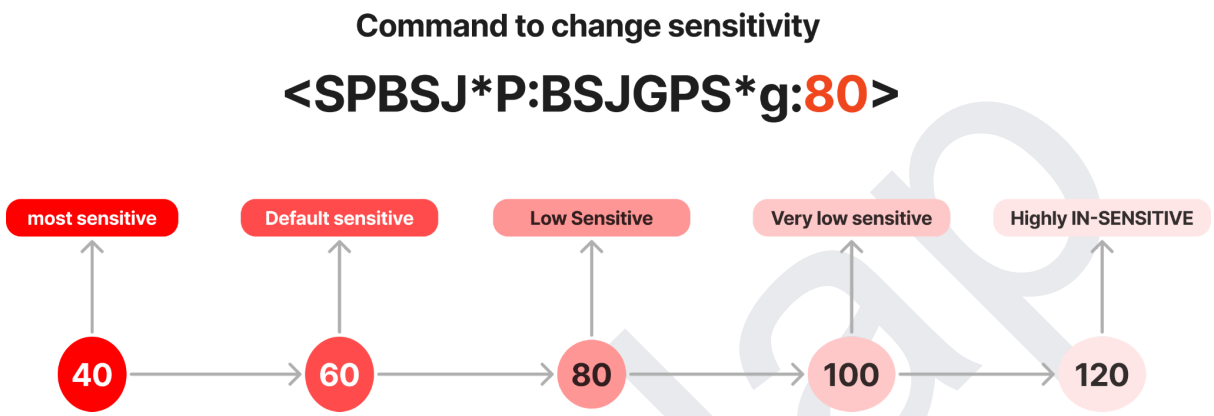

How to change address in the order?

Open Order details in Control and scroll down in the detail panel and choose the below icon

1. Now a link is sent to the customer and is also copied to your clipboard
2. Ask the customer to change the address or create a new address and choose the newly added address
3. You can also paste the link in web address and follow the step 5 by yourself on customers behalf
4. Now ask the operation team (Deepak and etc.) to update the shipment again so that a new AWB will be generated based on the new address entered.

Announcements

17 June 2023

1. **Update to these IP list if device type is greater than or equal to 5 for IP whitelisting**

"15.206.134.137",
"47.113.58.88",
"120.25.232.237",
"52.80.18.70" (china)
52.66.88.246 (webtest)

2. **Don't tap on replacement required if the same device is sent back to customer**

08 July 2023

1. If any Packet is lost then make sure to get refund from shiprocket and all updates.

1. Raise a ticket on Shiprocket
2. Take all updates.
3. When refund is done from shiprocket then proceed a refund to the customer.

20 July 2023

We have changed our plan for 100 SIM cards, these all sim cards are from sheet 1 filled with green color. If anyone finds an unknown issue with those devices kindly contact Shubham sir.

20 July 2023

How battery notification works

21 JULY 2023

1. Latest Version of devices
2. Icon Colors For Devices In App
3. VLTD certificate/ AIS 140 Certificate/ certificate to show in RTO office
4. Check **minimalParkingDuration** attribute in **Stoppage** section.

24 Aug 2023
Why do we use 2G sim card for our GPS-

There are a few reasons to use 2g sim card

1. 2G spectrum has good network connectivity in india- in the ruler part of India where 3g, 4g spacturm networks are not available where we have good connectivity of 2G networks.

2. Availability in low cost- There will be only 2-3sec difference in update with 3g,4g sim cards which may cost double to the customer as 3g,4g plans are higher

Onelap

24 Aug 2023

User will see their “dead” devices on the main screen of the application so that they can recharge easily. If they click on “ I WILL RECHARGE LATER” then this screen will not appear again.

If any user asks you for the recharge then you need to put the value true in “showDeadDevicesPrompt” in user attributes and ask him to recharge through the application.

This screen will pop up after each device recharge ends

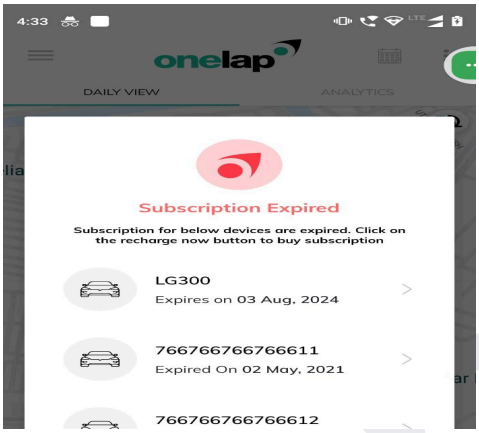

Links sent via Wati for subscription can be opened in Browser, Android app or ios app.
The link is
www.onelap.in/b/#/recharge.

If the subscription is not updated after a successful payment and the payment status is captured then send the same link to the user again to complete the order by filling the billing address.

25 Sept 2023

You can add Speed widget on top left corner in app using **isSpeedVisibleOnMap** in device attribute.

The speed will be visible only if the current speed is greater than .

eligble.factor.speed.runtime attribute value. If the eligble.factor.speed.runtime is not present in the device attribute then the default value of 5 km/hr will be used for comparison with current speed.

2 nov 2023

If call button is not visible in the pocket then add `isCallButtonVisible` as device attributes and add true as the value of the attribute

For First activation date

we can assume the first location packet date as the activation date.

Question: How to find the first location packet?

Answer: We can use web.onelap.in to find the first location packet through reports and by using that we will get the first location of the device that was sent to the server.

Question: Whart is the power consumption of the Micro model from a vehicle battery when the GPS is in active mode and sleep mode?

Answer: the power consumption in the micro device is about 40mA in active mode and about 4mA in sleep mode.

Onelap

How to find Negative Reviews

Use following parameters in find user details

1. Add username
2. If the user bought the device recently then
    1. Add Date range for validity for e.g. if the review is posted on 1 Jan 2025, so **start date** will be 1 July 2025 and end date could be 2 months later than the reviewed date 2 Feb 2026.
3. If the user has been using the device for some period now
    1. The user is complaining about the lesser validity.
        1. Offset the validity depending upon the lesser months that the user has mentioned.
    2. The user is complaining about any other issue related to device or something
        1. Check if the user has mentioned the usauge time of the device.
4. Look for the model of the device: wireless or wired, add the micro or go in the attributes of the filter
5. If verified purchase then look at the column of the searched rows in the list and don't add the MOD in the attributes as it may not be present there.
6. Look for the complain of the customer int he review and check if the there are few relevant keyword like mentioning of Relay, Airtel sim, Vehicle name in the screenshot, bike or car or truck, related to any labels that exist in the system for e..g satellite issue, Check if the customer has mentioned about customer support which means there exist a ticket of the user.
7. Once the list is shown then grab another list by searching the name in the device name field.
8. Once both the lists are ready then look for any possible order, ticket or lead of the user int he system within that predicted time.
9. Download the ticket in the CSV format with all the details and search the relevant keyword in the sheet

Onelap

About GO Device

Onelap

About GO but in APP

Shared devices

Delete account

Account number 7529941378

Devices with IMEI
1231
1232
1233
1234

When we delete this account then a suffix(At the end of the number) will be added in the account number and Device imei will also be deleted but the account number with the suffix will be added in the IMEI.
When we delete an account it takes 100 seconds time and they are kept in the temporary storage for 100 seconds

Once the account is deleted then the IMEI will be saved like following

1. 1231-7529941378-123w3
2. 1232-7529941378-153e3
3. 1233-7529941378-153w3
4. 1234-7529941378-153h3

Onelap

Versions of Devices

Micro Device:

New Version:
KM12AREZ419V3S11207:
Following changes/fixes:

1. **low-voltage disconnection from the network.**

KM12AREZ419V3S11206:
Current version:
Following changes/fixes:

1. **False triggering of ACC false alarms**
2. **Frequent triggering of low-voltage alarms**
3. **False Power-off alarms**

GO Device:

New version:
A5E-3#EZ419#V3#V13TA
Following changes/fixes:

1. **Fixes the bug where phone calls will get stuck.**

Onelap

Pending SOPs

1. Check the fuse, wire
2. Device stuck checking procedure
3. SOP to avoid selling Micro plus
    a. User bought micro and now to get to know that Micro plus comes with engine access
4. Create SOP to buy the Relay (Recommend them to avoid install it, if not agreeing then only create the order)
5. **Create SOP to handle cases like Battery drain.**
    a. Micro
        i. 11 volt
    b. GO
6. Create SOP to instruct installation of Micro and micro plus.
    a. Send installation video by telling them its very easy to install.
    b.
7. SOP to change the registered number if the customer is saying that the registered number is lost.
8. SOP to handle customers who are having permanent sim deactivation.
9. SOP of deletion of device from the account
10. Things to validate before closing a ticket
    a. Call two times in a day from the next 3 days

Onelap

Onelap

Onelap

SMS Commands description

Onelap