Anyware Products User Manual

Table of Contents

QuickStart **2**

PhonePad/PhoneBook 2

Connecting to smartphones 3

Connecting computers/game consoles/Raspberry Pi 6

Connecting to MHL-enabled phones like Samsung DeX 6

AnyConsole Mini 6

Basic Settings **8**

Enable touchscreen for smartphones 8

Switch between gaming mode/work mode 9

Adjust brightness/contrast/volume 9

Adjust output resolution 9

Force Rotate Screen (Full Screen Mode) 11

Connection Indication Bar 11
MTK Compatible Mode 11

Game Settings 12
Add/start a game 12
Customize game hotkeys 12

FAQ 13
I can’t turn on my PhonePad 13
White stripes on the screen 13
Smartphone screen mirroring doesn't work 14
Unstable display when connecting to a laptop using a USB-C cable 14
Touchscreen/USB keyboard/mouse doesn't work 15
Cannot type with a keyboard 15
How to enter full screen when using a portrait mode only app like TikTok? 15
The shift key doesn’t work 16
What's the difference between Smooth/Game/Theater Mode? 16
The Force Rotate Screen function doesn't work 17
The Game Mode doesn't work 17
Cannot establish a Bluetooth connection 17
Speakers not working for Android phones 17
Cannot watch video apps like Netflix 17
Touch control is not accurate 17

QuickStart

PhonePad/PhoneBook

1. Power on

a. PhonePad standard version: Connect PhonePad to power (Use the USB-C power port, not the USB-C input port).


b. PhonePad battery version: Press and hold the menu wheel.

Note: You must use the original 5V/3A adapter or a 30W quick charging adapter to charge your PhonePad.

c. PhoneBook: Press and hold the power key for 3 seconds until the screen turns on.

2. Download the Anyware app by scanning the on-screen QR code or searching *Anyware* in App Store/Google PlayStore.



1
Connect the cellphone to the device
2
Scan code to download, open the APP
3
Bluetooth connection inside the APP

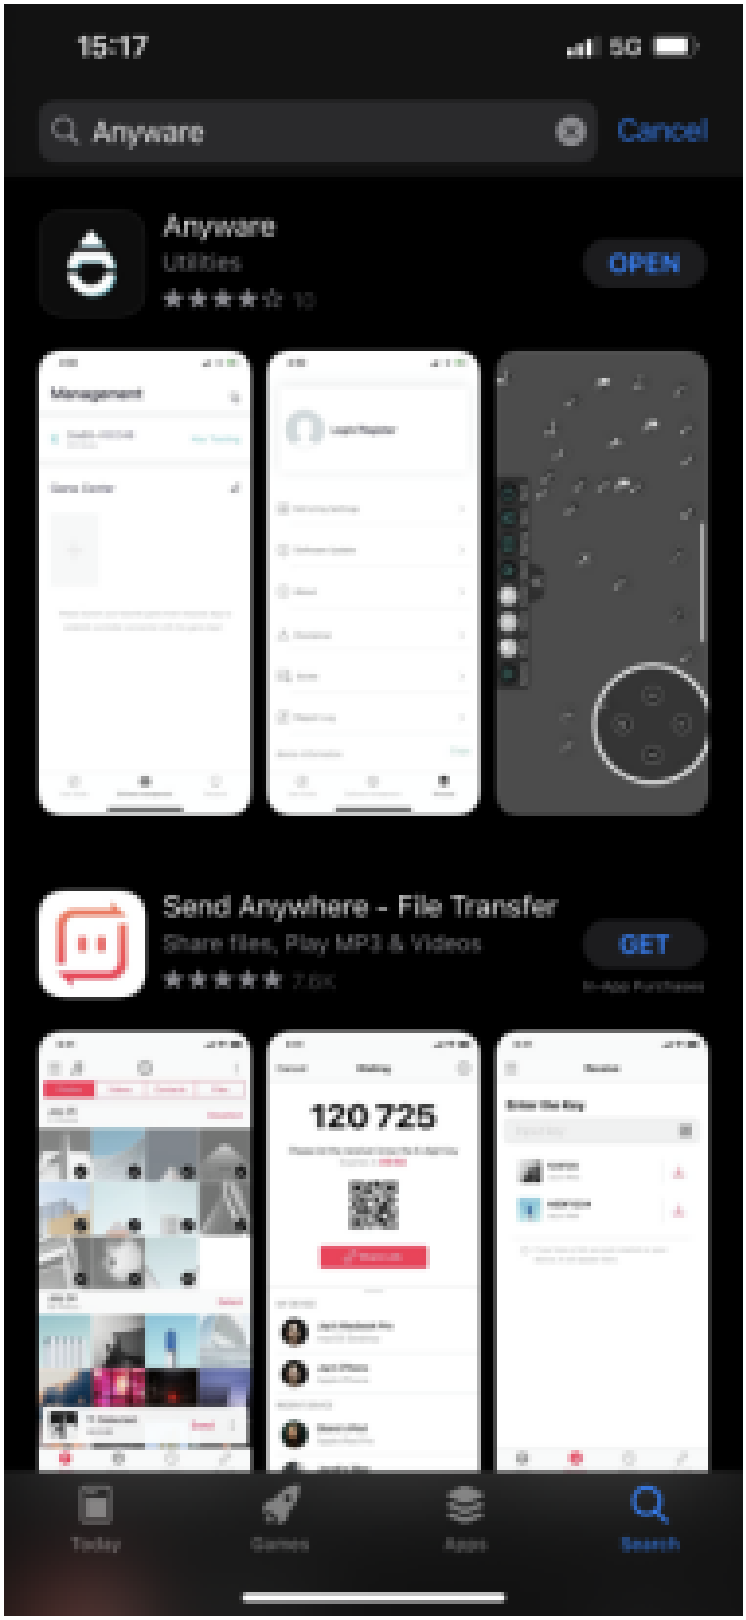
15:17
5G
Anyware
Cancel
Anyware
Utilities
OPEN
Management
Send Anywhere - File Transfer
Share files, Play MP3 & Videos
GET
120 725
Today
Games
Apps
Search

Connecting to smartphones

1. Connect your phone to any USB-A port on the PhonePad/PhoneBook using a certified phone charging cable.

    a. iOS: Tap *Trust* in the pop-up window.

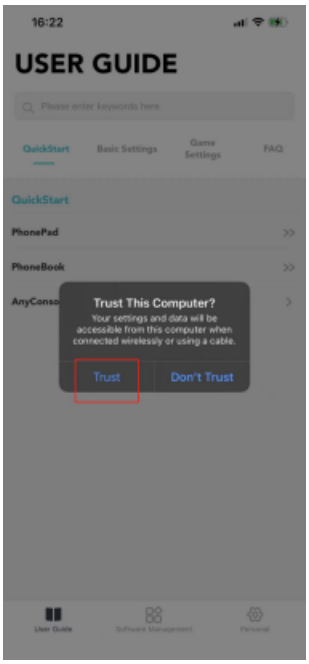

    b. Android: Tap *Cancel* for the *Use USB to* window.



Note: A bad quality or 3-in-1 cable may result in an unstable connection.


Note: iOS device only support 1-point touch control. For best multi-touch experience, please use an Android phone.

2. Open the app and allow all permissions the app requests.

a. Follow the QuickStart guide.



b. Android: Tap ***Start now*** in the pop-up window.

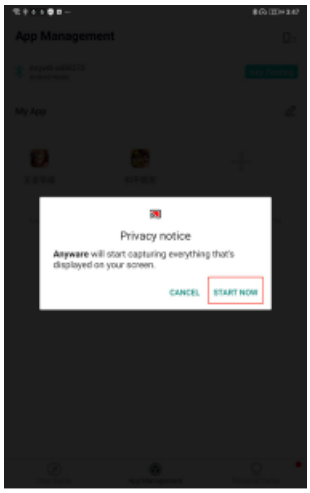

3. Use a keyboard/mouse.

    a. USB keyboard/mouse (recommended for gaming)

        i. Connect your USB keyboard/mouse to any USB port on PhonePad/PhoneBook.

    b. Bluetooth keyboard/mouse (recommended for typing)

        i. Pair the Bluetooth keyboard/mouse directly with your phone.

Note: The native input keyboard is recommended. Some 3rd party keyboard apps don’t support physical keyboards.

Connecting computers/game consoles/Raspberry Pi

Connect your video output device to PhonePad/PhoneBook's video input port (the HDMI port or the USB-C input port).

Note: If you have a no-battery version, you might need to reduce brightness when using it without a power cable. Otherwise, the display will be unstable.

Connecting to MHL-enabled phones like Samsung DeX

Connect your MHL-enabled phone to PhonePad/PhoneBook 's USB-C input port.

AnyConsole Mini


1. **Connect your AnyConsole Mini to power. Please use a 5V/2A or higher power adapter.**
2. **Connect your AnyConsole Mini to a monitor using an HDMI cable.**
3. **Connect your USB keyboard/mouse/controller to the AnyConsole Mini.**

4. Download the Anyware app by scanning the on-screen QR code or searching *Anyware* in Play Store.


5. Connect your Android phone to AnyConsole Mini's any USB port using a certified phone charging cable.

Note: Because to iOS 13.4 update disabled our Bluetooth reverse control protocol, AnyConsole Mini no longer support iOS devices.


6. Allow all permissions the app requests, then click *Start now* to start the mirroring.

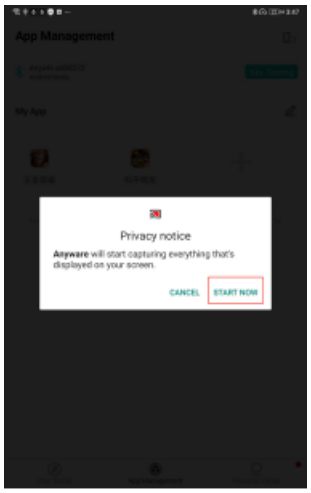

7. In the Anyware app, tap *Connect* to pair with *Anywtk-XXXXXXX*.

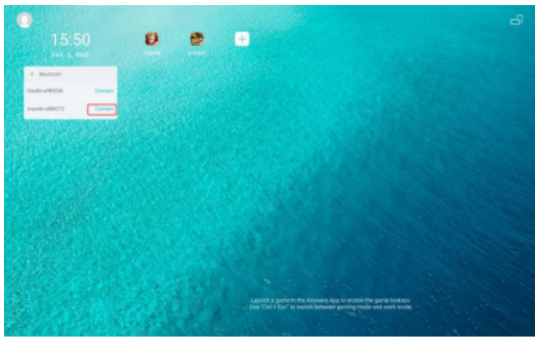

8. In the Anyware app, tap the + button to add a game (always open games from the app).

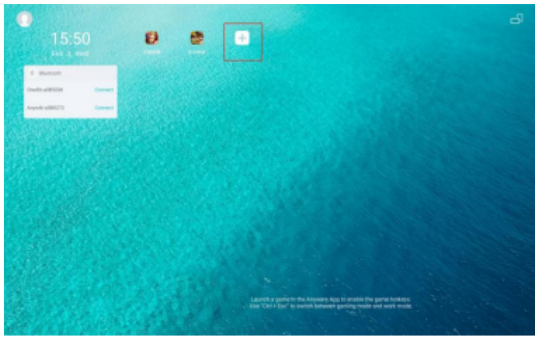


Basic Settings

Enable touchscreen for smartphones

1. Connect your phone to any USB-A port on the PhoneBook using a certified phone charging cable.

2. In the app, go to *Personal* > *QuickStart*, and follow the guide.

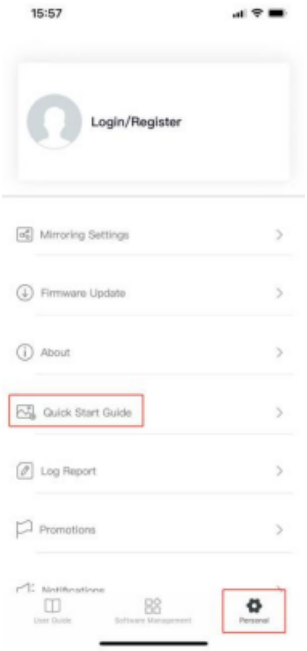

Note: Make sure you have the latest Anywhere app.

Note: A bad quality or 3-in-1 cable may result in an unstable connection.

Switch between gaming mode/work mode

In work mode, you can use the keyboard for typing. The mouse cursor is visible in this model.

In gaming mode, you can use customized hotkeys. For example, you can use WASD to move. The mouse cursor is hidden by default in this mode. Hold Ctrl to use the mouse cursor.


When connected to a keyboard, press Ctrl + Esc to switch mode.

Note: The gaming mode is not available when you are using a Bluetooth keyboard/mouse.

Note: The gaming function is not available for iOS 13.4 and later versions.

Adjust brightness/contrast/volume


In the Anyware app, go to *Personal* > Mirroring Settings > Adjust *Brightness*/*Contrast*/*Volume*.

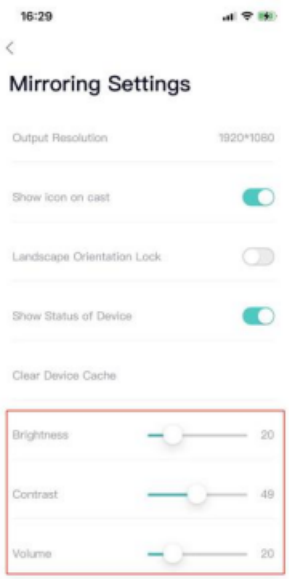

You can also use the menu wheel on right side to adjust brightness/contrast/volume.

Adjust output resolution

In the Anyware app, go to *Personal* > *Mirroring Settings* > *Output Resolution*.

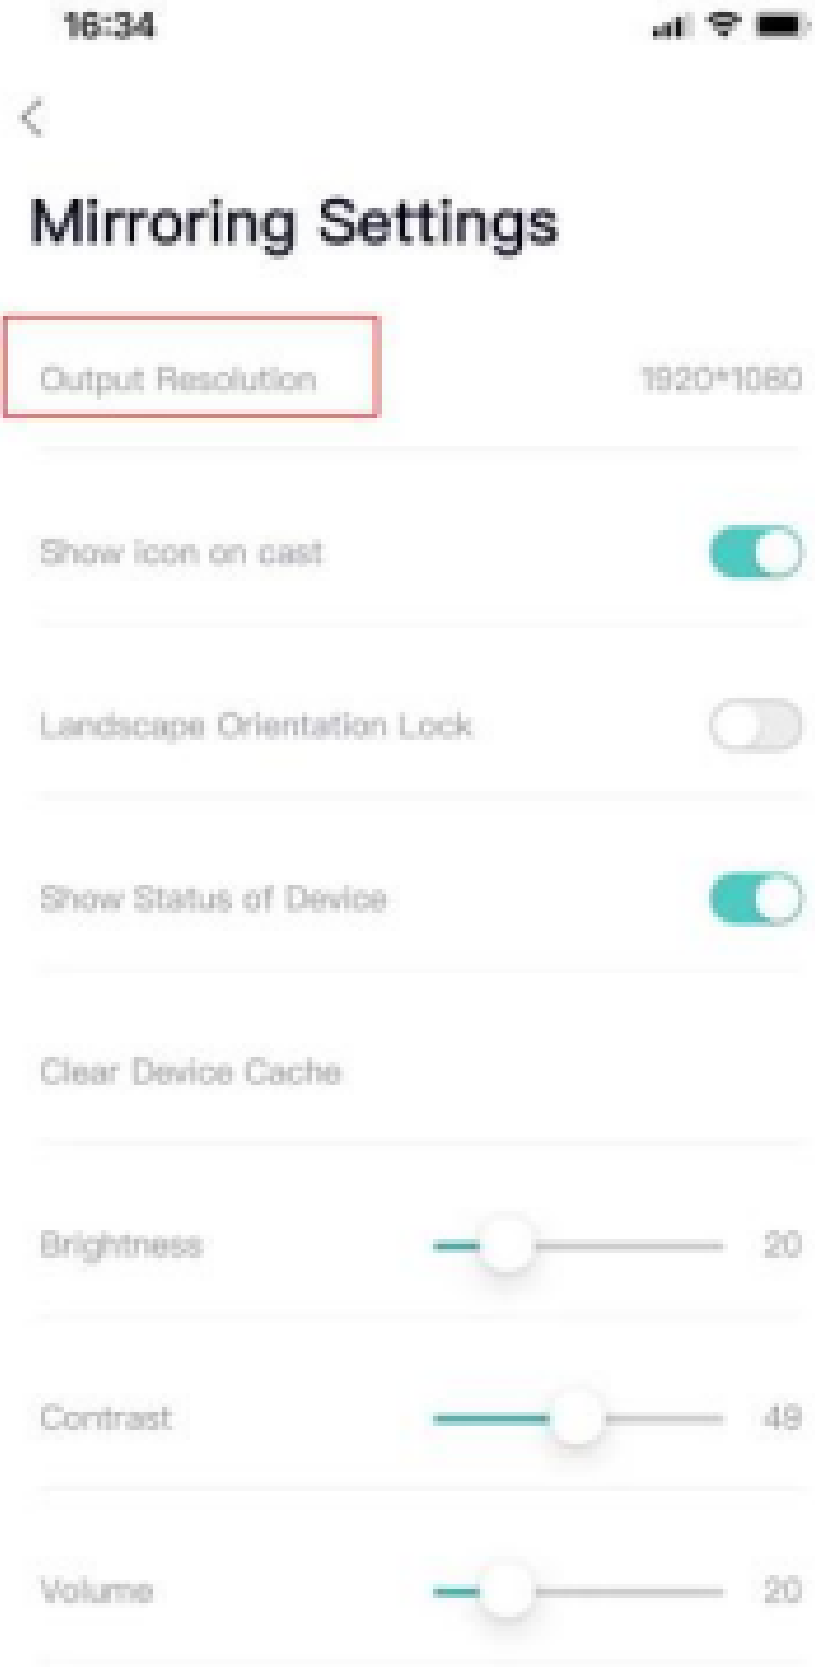

16:34
Mirroring Settings
Output Resolution
1920*1080
Show icon on cast
Landscape Orientation Lock
Show Status of Device
Clear Device Cache
Brightness
20
Contrast
49
Volume
20

Update firmware

Connect your phone to any USB-A port on the Anyware device using a certified phone charging cable.

Connect your phone to the Anyware device's Bluetooth.

In the app, go to *Personal* > *Firmware Update* > tap *Update*.

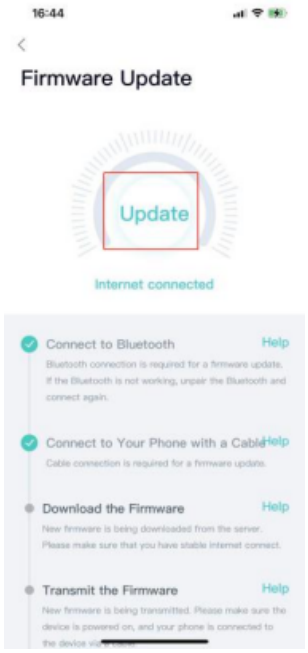


Follow the steps to finish the update.

Force Rotate Screen (Full Screen Mode)

This function lets you rotate the big screen by 90 degrees and allows it to enter full screen when using a portrait mode only app.

In the Anyware app, go to *Personal* > *Mirroring Settings* > enable *Force Rotate Screen*.

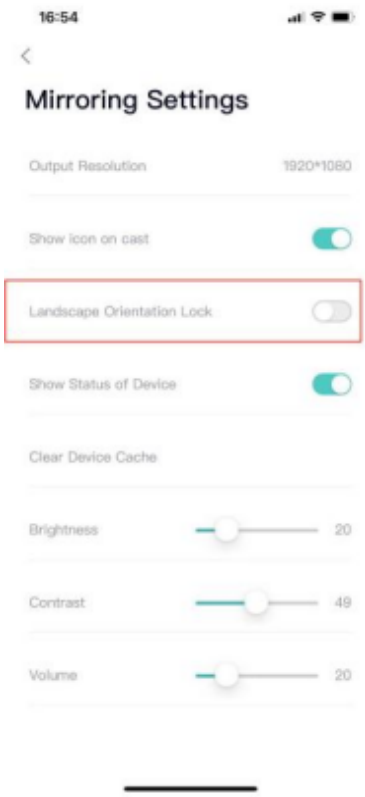

Note: This function is not available when you are mirroring your phone using the USB-C connection.

Connection Indication Bar

The connection indication bar is located at the upper right corner of the welcome screen. The icon will turn blue when a connection is successfully established. The icons represent smartphone Bluetooth connection, keyboard connection, and mouse connection (from left to right).




MTK Compatible Mode

If your phone use MediaTek (MTK) processor, please manually turn on this mode.

Game Settings


Add/start a game

In the Anyware app, tap the + button to add a game (always open games from the app).

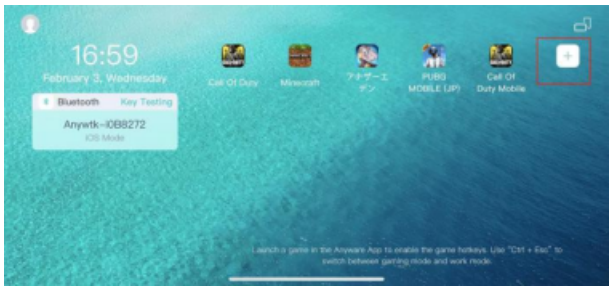


Customize game hotkeys


1. Open the game from the Anyware app.
2. Tap the blue bubble on the left side of the screen.
3. Tap ***Hotkeys*** to open the hotkey customization interface.
    a. Hold and drag ***Button*** to add a new key.
    b. Hold and drag ***Joystick*** to add the WASD control function.
    c. Hold and drag ***Turn*** to add the turn by mouse function.

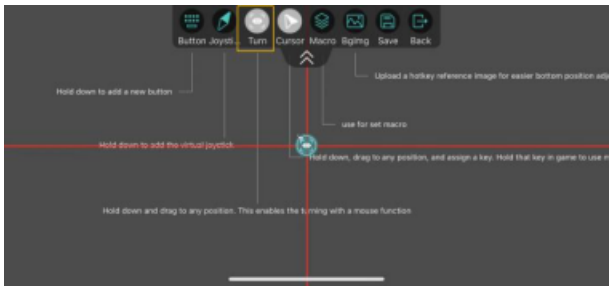

d. Tap on a key and drag to move a key.

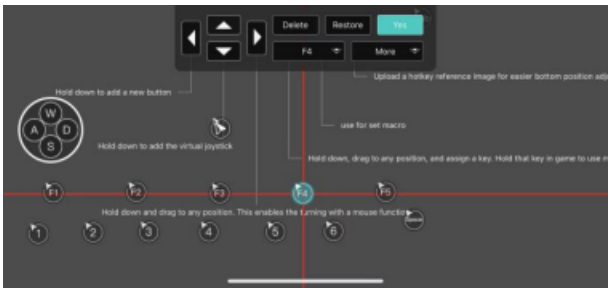

e. Tap on a key and tap DELETE to delete a key.

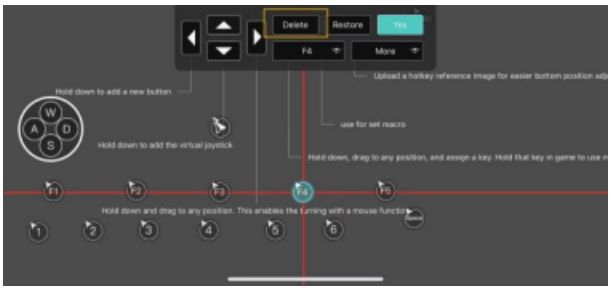

Show/hide hotkeys on the big screen

In the Anyware app, go to *Personal* > *Mirroring Settings* > *Show Hotkeys*.

FAQ

I can’t turn on my PhonePad

1. **Make sure that your PhonePad is charged.**

3. Make sure to use the correct input signal. (You can switch input signal using the menu wheel.)

4. Make sure to use the original 5V/3A adapter or a 30W quick charging adapter.

5. Please use the menu wheel to increase brightness.

6. Battery version: press and hold the menu wheel for 3 seconds.

White stripes on the screen


1. **Make sure that your device's firmware is up to date.**

7. Standard version: Make sure your device is connected to power. (Use the USB-C power port, not the USB-C input port)

8. PhonePad: Make sure that you are using the original 5V/3A adapter or a 30W quick charging adapter.

Smartphone screen mirroring doesn't work

1. **Make sure your Anyware device is powered on.**
2. **Make sure you are using a original 5V/3A adapter or a 30W quick charging adapter.**
3. **Make sure you are using a certified good quality phone charging cable.**
4. **Check your phone settings.**
    a. **iOS: Make sure you tapped *Trust* in the pop-up window.**

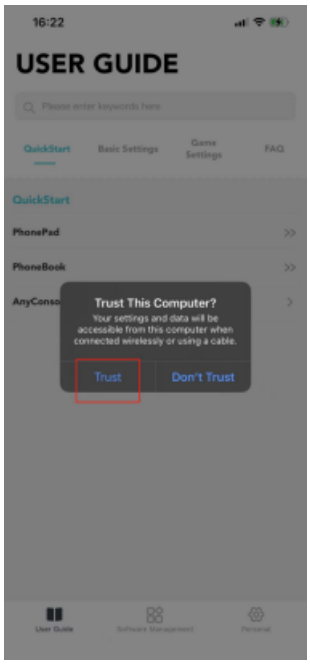

b. Android: Make sure you allowed all permissions the app requested.

5. Reboot your Anyware device, kill the Anyware app, then unplug and replug your phone charging cable.


Unstable display when connecting to a laptop using a USB-C cable

If you have a no-battery version PhonePad, you would have to connect to power at the same time. Otherwise, the display will be unstable.

Touchscreen/USB keyboard/mouse doesn't work

1. Make sure that you have connected your phone to PhoneBook's Bluetooth.

2. Make sure the Bluetooth connection mode (iOS/Android mode) matches your phone.

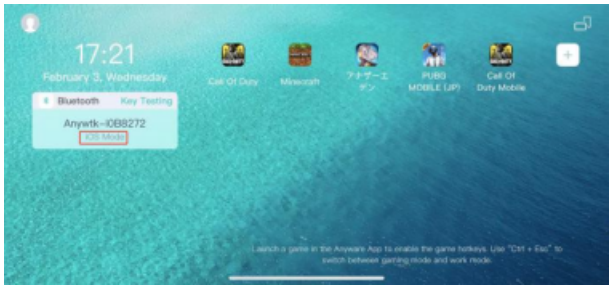

3. Make sure that your Anyware device's firmware is up to date.

4. iOS only

    a. Make sure that you have upgraded to the latest iOS.

    b. Turn on ***Portrait Orientation Lock*** from your phone's Control Center.

c. Go to *Settings* > *Accessibility* > *Touch* > enable *AssistiveTouch*.

d. Go to *Settings* > *General* > *Trackpad & Mouse* > set *Tracking Speed* to lowest.


Note: The touchscreen function is not available for PCs yet.

Cannot type with a keyboard

1. Try using your phone's native input keyboard. Some 3rd party keyboard apps don't support physical keyboard.
2. Your Anyware device is probably in gaming mode, try pressing Ctrl + Esc.

How to enter full screen when using a portrait mode only app like TikTok?


In the Anyware app, go to *Personal* > *Mirroring Settings* > enable *Force Rotate Screen*.

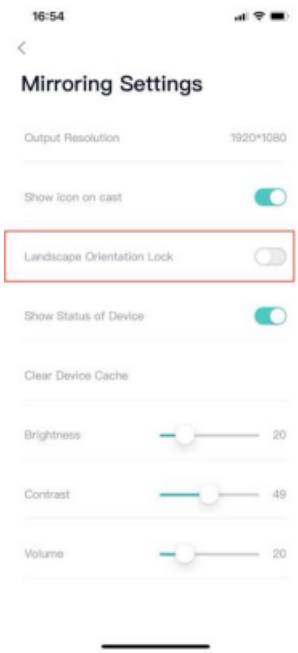

Note: This function is not available when you are mirroring your phone using the USB-C connection.

The shift key doesn’t work

Make sure that your Anyware device’s firmware is up to date.

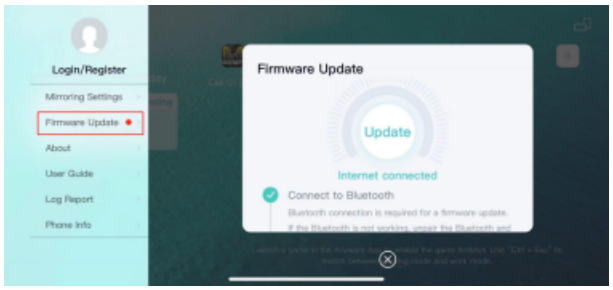

What's the difference between Smooth/Game/Theater Mode?

Smooth Mode: lowest resolution and lowest latency, best for low-end phones.

Game Mode: Low latency and medium resolution, best for gaming.

Theater Mode: High latency and high resolution, best for work and video watching.

The Force Rotate Screen function doesn't work

This function is not available when you are mirroring your phone using the USB-C connection.

The Game Mode doesn't work

The Game Mode is not available when you are using a Bluetooth keyboard/mouse that is directly connected to your phone.

The Game Mode is not available for iOS 13.4 and later versions.

Cannot establish a Bluetooth connection

1. **Make sure your Anyware device's Bluetooth is not connected to another phone.**

2. **Make sure your phone's Bluetooth is on.**

3. **Make sure you are using the original 5V/3A adapter or a 30W quick charging adapter.**

Speakers not working for Android phones

Some Android phones doesn’t support audio via USB cable. You would have to use your phone’s internal speaker or a Bluetooth speaker.

Cannot watch video apps like Netflix

Some apps disabled the screen mirroring support. For example, Netflix killed the support of Airplay and other mirroring protocols in September 2019. You can still use other streaming platforms that support smartphone mirroring, such as YouTube and Twitch.

Learn more:
https://thenextweb.com/apple/2019/04/08/heres-why-you-cant-use-airplay-with-netflix-right-now/

Touch control is not accurate

1. Make sure that your Anyware device's firmware is up to date.
2. iOS only
    a. Make sure that you have upgraded to the latest iOS.
    b. Turn on ***Portrait Orientation Lock*** from your phone's Control Center.
    c. Go to ***Settings*** > ***General*** > ***Trackpad & Mouse*** > set ***Tracking Speed*** to lowest.
3. Please try to unpair your phone and reconnect the Bluetooth.