

PROMPTPARK Installation Tools

คู่มือใช้งานแบบ Step by Step

Local Proxy, HIK LPR Config, Kiosk Installation และ Integration Tools

ภาพรวมเครื่องมือ

PROMPTPARK Installation Tools ใช้สำหรับเตรียมระบบหน้างานตั้งแต่ Local Proxy, กล้อง Hikvision LPR, ตู้ Kiosk ทางเข้า/ทางออก และการทดสอบ integration หลังติดตั้ง

The screenshot displays the PROMPTPARK Installation Tools web interface. On the left is a dark sidebar with the 'PROMPTPARK' logo and 'INSTALLATION TOOLS' text. Below this are four menu items: 'Install Local Proxy' (highlighted with a blue background), 'HIK LPR Config', 'Entrance Kiosk Installation', and 'Exit Kiosk Installation'. At the bottom of the sidebar is 'Integration Tools'. The main content area has a dark background and is titled 'Local Proxy Sites' in yellow. Below the title is a subtitle: 'Select an installed site or create a new local proxy installation.' In the top right corner of the main area is a blue circular button with a white plus sign. The main area contains two sections. The first section is 'Load Existing Proxy', which includes a description: 'Connect to an installed server, read remote .env, and save it as a site profile.' To the right of this description is a green 'Load' button. Below the description are five input fields: 'Site nickname (optional)' (containing 'jpark'), '172.20.9.2', 'jpark', 'password', and '/home/jpark/go_local_prv'. The second section is 'SIXT Rama 9', which features a green 'success' button in the top right corner. Below the title is the ID '1a26010038'. Underneath are two columns of information: 'Server' with the value '172.20.9.3' and 'Lanes' with the value '1 Entrance / 1 Exit'. Below these is 'Last deploy' with the timestamp '2026-04-28 21:30'. At the bottom of this section are three buttons: 'Open' (blue), 'Logs' (grey), and 'Delete' (red).

PROMPTPARK
INSTALLATION TOOLS

Local Proxy Sites
Select an installed site or create a new local proxy installation.

Install Local Proxy

HIK LPR Config

Entrance Kiosk Installation

Exit Kiosk Installation

Integration Tools

Load Existing Proxy
Connect to an installed server, read remote .env, and save it as a site profile.

Load

Site nickname (optional): jpark, 172.20.9.2, jpark, password, /home/jpark/go_local_prv

SIXT Rama 9 success

1a26010038

Server: 172.20.9.3, Lanes: 1 Entrance / 1 Exit

Last deploy: 2026-04-28 21:30

Open, Logs, Delete


เมนูหลักที่ใช้งาน

1. Install Local Proxy: สร้างและ deploy Local Proxy API ไปยัง Ubuntu server
2. HIK LPR Config: ตั้งค่ากล้อง Hikvision LPR ให้ส่ง event เข้า Local Proxy
3. Entrance Kiosk Installation: ติดตั้งและแก้ config ตู้ทางเข้า
4. Exit Kiosk Installation: ติดตั้งและแก้ config ตู้ทางออก
5. Integration Tools: ยิง mock LPR camera event เพื่อทดสอบ API

Install Local Proxy: หน้า Site List

ใช้หน้านี้เพื่อเลือก site เดิม หรือเริ่มติดตั้ง Local Proxy site ใหม่

1. เปิดเมนู Install Local Proxy
2. กด New Install เพื่อเริ่ม wizard
3. ถ้ามี site เดิม ให้กด Open เพื่อแก้ไขหรือ deploy ใหม่

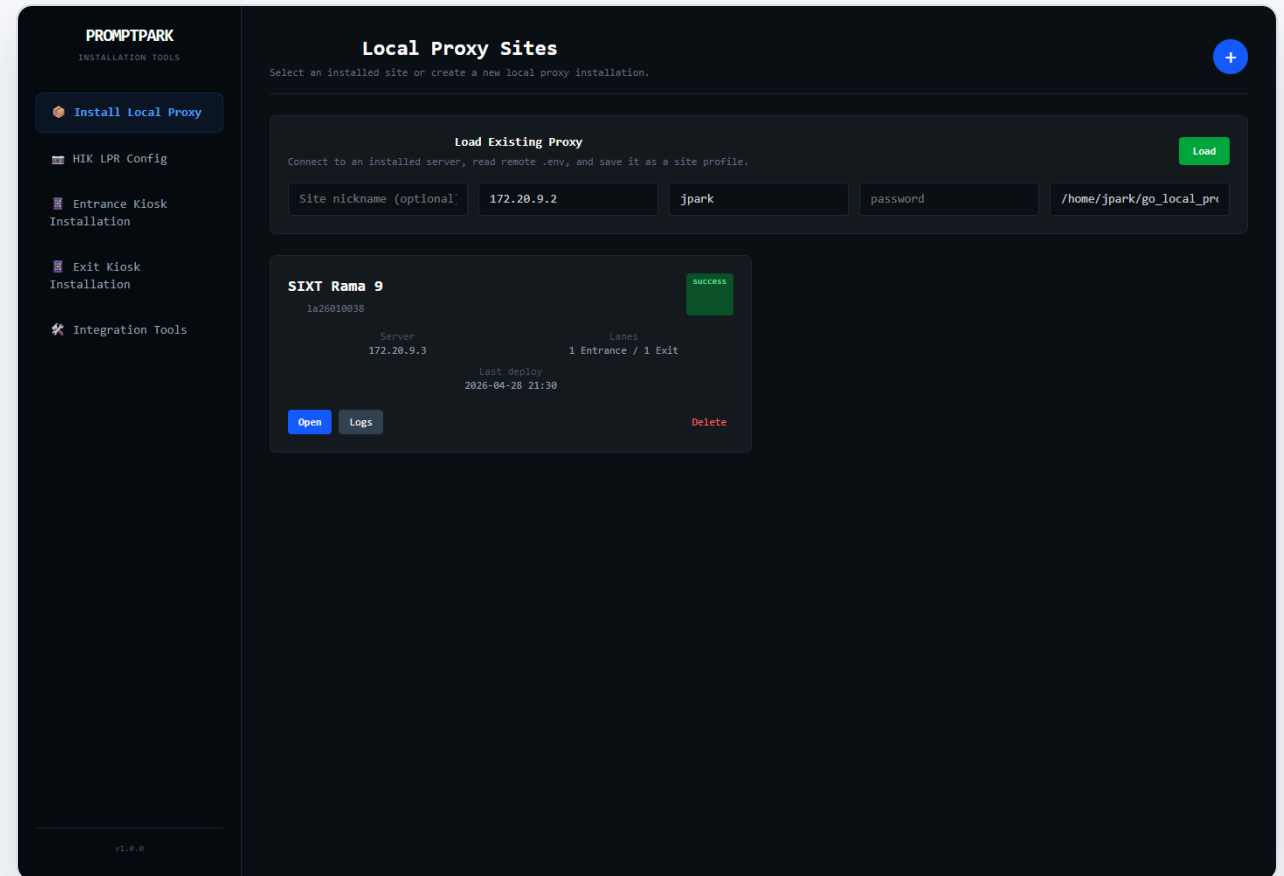

Install Local Proxy: Step 1 Site Data

กรอกข้อมูลหลักของระบบ

1. กรอก Site Nickname
2. กรอก Parking Code
3. ตรวจสอบ Server URL
4. กรอก user/password ของกล้อง
ถ้าต้องใช้

The screenshot shows the 'New Local Proxy Install' form in the PROMPTPARK application. The form is divided into five steps: STEP 1 Site Data, STEP 2 Lanes, STEP 3 Server Check, STEP 4 Deploy, and STEP 5 Logs. STEP 1 is currently active. The form contains several input fields for site configuration, including Site Nickname, Parking Code, Server URL, Camera User, Camera Password, Listen Address, Modbus Port, Modbus Timeout MS, and Modbus Pulse MS. A 'Validation' section shows a 'Ready' status. A 'ENV PREVIEW' section displays the configuration variables that will be used in the environment. The form has a 'Back' button and a 'Next' button.

PROMPTPARK
INSTALLATION TOOLS

Back to sites

New Local Proxy Install

Create config, check the Ubuntu host, deploy, then inspect logs.

STEP 1 Site Data | STEP 2 Lanes | STEP 3 Server Check | STEP 4 Deploy | STEP 5 Logs

SITE NICKNAME: SIXT Rama 9 | PARKING CODE: 1a26010038

SERVER URL: https://api-pms.jparkdev.co | CAMERA USER: admin

CAMERA PASSWORD: | LISTEN ADDRESS: 0.0.0.0:8000

MODBUS PORT: 504 | MODBUS TIMEOUT MS: 2000

MODBUS PULSE MS: 500

VALIDATION: Ready

ENV PREVIEW: SERVER_URL=https://api-pms.jparkdev.co, PARKING_CODE=1a26010038, ADDR=0.0.0.0:8000, CAMERA_USER=admin, CAMERA_PASS=demo-password, MODBUS_PORT=504, MODBUS_TIMEOUT_MS=2000, MODBUS_PULSE_MS=500, MODBUS_SLAVE_ID=1

Back | Next

Install Local Proxy: Step 2 Lanes

เพิ่ม lane ทางเข้าและทางออก

1. เลือกประเภท lane: Entrance หรือ Exit
2. ระบุหมายเลข gate เช่น 01
3. กรอก IP ของ Gate, LPR, LIC, DRI
4. ถ้ามี LED ให้ติ๊ก LED และกรอก LED IP
5. กด Add Lane

The screenshot shows the 'New Local Proxy Install' interface for Step 2: Lanes. The interface is dark-themed and includes a sidebar with navigation options: 'Install Local Proxy', 'HIK LPR Config', 'Entrance Kiosk Installation', 'Exit Kiosk Installation', and 'Integration Tools'. The main content area has a progress bar with five steps: 'STEP 1 Site Data', 'STEP 2 Lanes' (active), 'STEP 3 Server Check', 'STEP 4 Deploy', and 'STEP 5 Logs'. Below the progress bar, there is an 'ADD LANE' section with a dropdown menu set to 'Exit' and a value of '03'. It includes input fields for 'Gate IP', 'LPR IP', 'LIC IP', 'DRI IP', and a checkbox for 'LED'. An 'Add Lane' button is present. Below this, two lane configurations are shown: 'ENT 01' and 'EXT 02'. Each lane configuration displays its Gate, LPR, LIC, DRI, and LED IP addresses, along with a 'Delete' button. At the bottom of the main area are 'Back' and 'Next' buttons. On the right side, there is a 'VALIDATION' section showing 'Ready' and a 'ENV PREVIEW' section displaying the configuration details for the selected lane, including server URL, parking code, camera user/pass, and various Modbus settings.

PROMPTPARK
INSTALLATION TOOLS

Back to sites

New Local Proxy Install

Create config, check the Ubuntu host, deploy, then inspect logs.

STEP 1 Site Data | **STEP 2 Lanes** | STEP 3 Server Check | STEP 4 Deploy | STEP 5 Logs

ADD LANE

Exit 03 Gate IP Add Lane

LPR IP LIC IP DRI IP LED

ENT 01 Delete
Gate: 172.20.9.11 LPR: 172.20.9.31
LIC: 172.20.9.41 DRI: 172.20.9.51
LED: 172.20.9.61

EXT 02 Delete
Gate: 172.20.9.12 LPR: 172.20.9.32
LIC: 172.20.9.42 DRI: 172.20.9.52

Back Next

VALIDATION
Ready

ENV PREVIEW Save Local

```
SERVER_URL=https://api-pms.jparkdev.co
PARKING_CODE=1a26810038
ADDR=0.0.0.0:8000

CAMERA_USER=admin
CAMERA_PASS=demo-password
MODBUS_PORT=504
MODBUS_TIMEOUT_MS=3000
MODBUS_PULSE_MS=500
MODBUS_SLAVE_ID=1

# --- ENT-01 ---
ENT_GATE_01=172.20.9.11
LPR_IN_01=172.20.9.31
LIC_IN_01=172.20.9.41
DRI_IN_01=172.20.9.51
HIK_LED_MAIN_ENT_01=172.20.9.61
# --- ENT-01 ---

# --- EXT-02 ---
EXT_GATE_02=172.20.9.12
LPR_OUT_02=172.20.9.32
LIC_OUT_02=172.20.9.42
DRI_OUT_02=172.20.9.52
# --- EXT-02 ---
```

v1.0.0

Install Local Proxy: Step 3 Server Check

ตรวจสอบ Ubuntu server ก่อน deploy


1. กรอก Server IP
2. กรอก SSH Username และ SSH Password
3. ตรวจสอบ Project Path
4. กด Run Preflight
5. ดูผล OK/FAIL ก่อน deploy

The screenshot shows the 'New Local Proxy Install' interface in the PROMPTPARK application. The interface is divided into a sidebar on the left and a main content area. The sidebar contains links for 'Install Local Proxy', 'HIK LPR Config', 'Entrance Kiosk Installation', 'Exit Kiosk Installation', and 'Integration Tools'. The main content area has a progress bar at the top with five steps: 'STEP 1 Site Data', 'STEP 2 Lanes', 'STEP 3 Server Check' (currently active), 'STEP 4 Deploy', and 'STEP 5 Logs'. Below the progress bar, there are input fields for 'UBUNTU SERVER CONNECTION' with labels 'SERVER IP' (172.20.9.3), 'SSH USERNAME' (jpark), 'SSH PASSWORD' (masked with dots), and 'PROJECT PATH' (/home/jpark/go_local_proxy_api). A 'Run Preflight' button is located below these fields. The 'VALIDATION' section shows 'Ready' in green. Below this, there are four status boxes: 'OK SSH' (Connected as jpark), 'OK Docker' (Docker and compose plugin available v2), 'OK Project Path' (Target path is writable /home/jpark/go_local_proxy_api), and 'OK Port 8000' (Ready for local proxy). At the bottom, there are 'Back' and 'Next' buttons. On the right side, there is a 'VALIDATION' section with 'Ready' in green, and a 'ENV PREVIEW' section showing configuration details like 'SERVER_URL=https://api-pms.jparkdev.co', 'PARKING_CODE=1a26810038', 'ADDR=0.0.0.0:8000', 'CAMERA_USER=admin', 'CAMERA_PASS=demo-password', 'MODBUS_PORT=504', 'MODBUS_TIMEOUT_MS=3000', 'MODBUS_PULSE_MS=500', 'MODBUS_SLAVE_ID=1', and a list of gate configurations for ENT-01 and EXT-02.

Install Local Proxy: Step 4 Deploy

Deploy หรือแก้ไขไฟล์ `.env` บน server


1. ตรวจสอบ validation ให้เป็น Ready
2. กด Deploy สำหรับติดตั้งเต็มรอบ
3. กด Save Remote .env เมื่อต้องแก้ไข config อย่างเดียว
4. กด Redeploy เพื่อ restart docker compose
5. ใช้ Rollback เมื่อจำเป็นต้องย้อน `.env` ล่าสุด

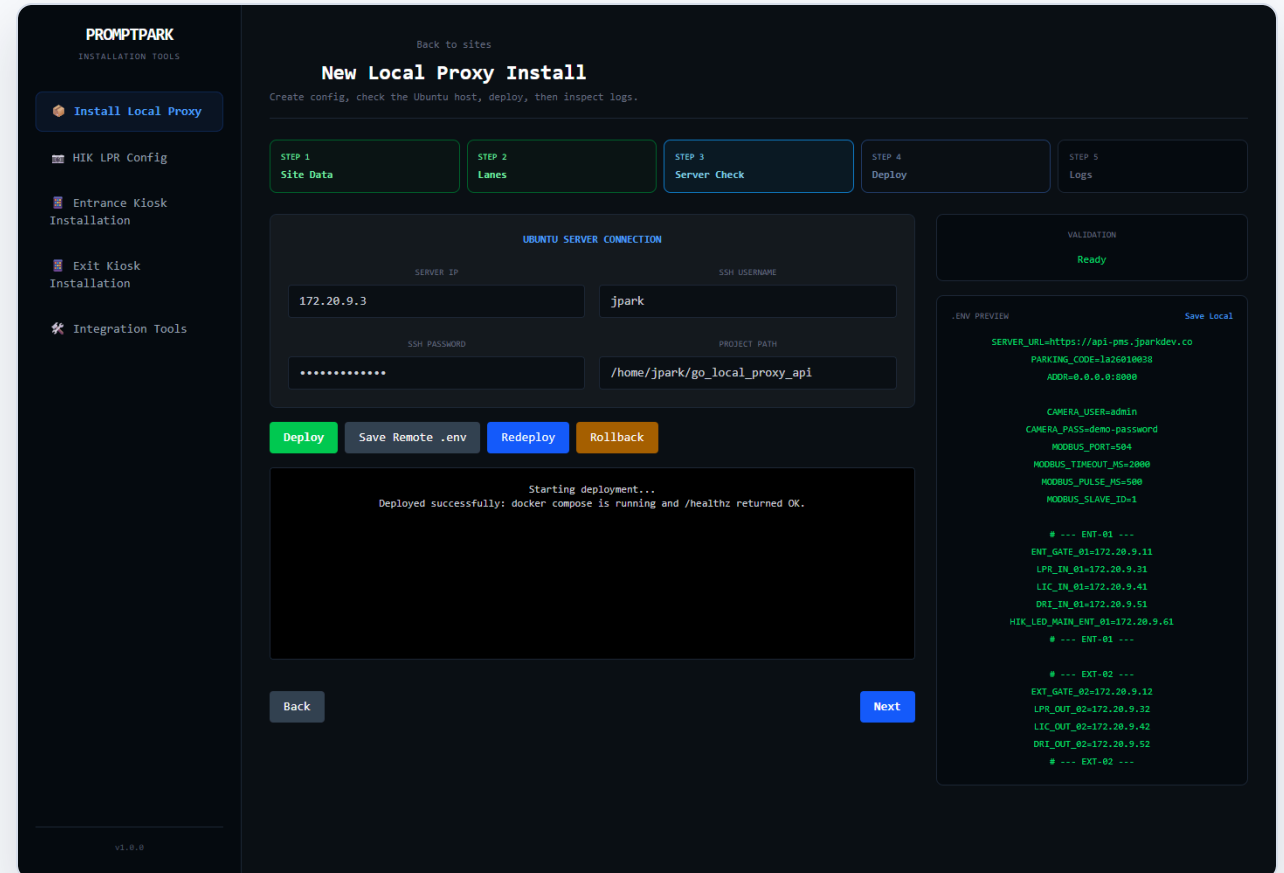

Install Local Proxy: Logs และ History

ใช้หลัง deploy เพื่อตรวจสอบการทำงาน


1. เปิด tab Logs
2. กด Start Logs เพื่อดู docker logs
3. กด Clear เมื่อต้องล้างหน้าจอ log
4. เปิด tab History เพื่อดูประวัติ deploy

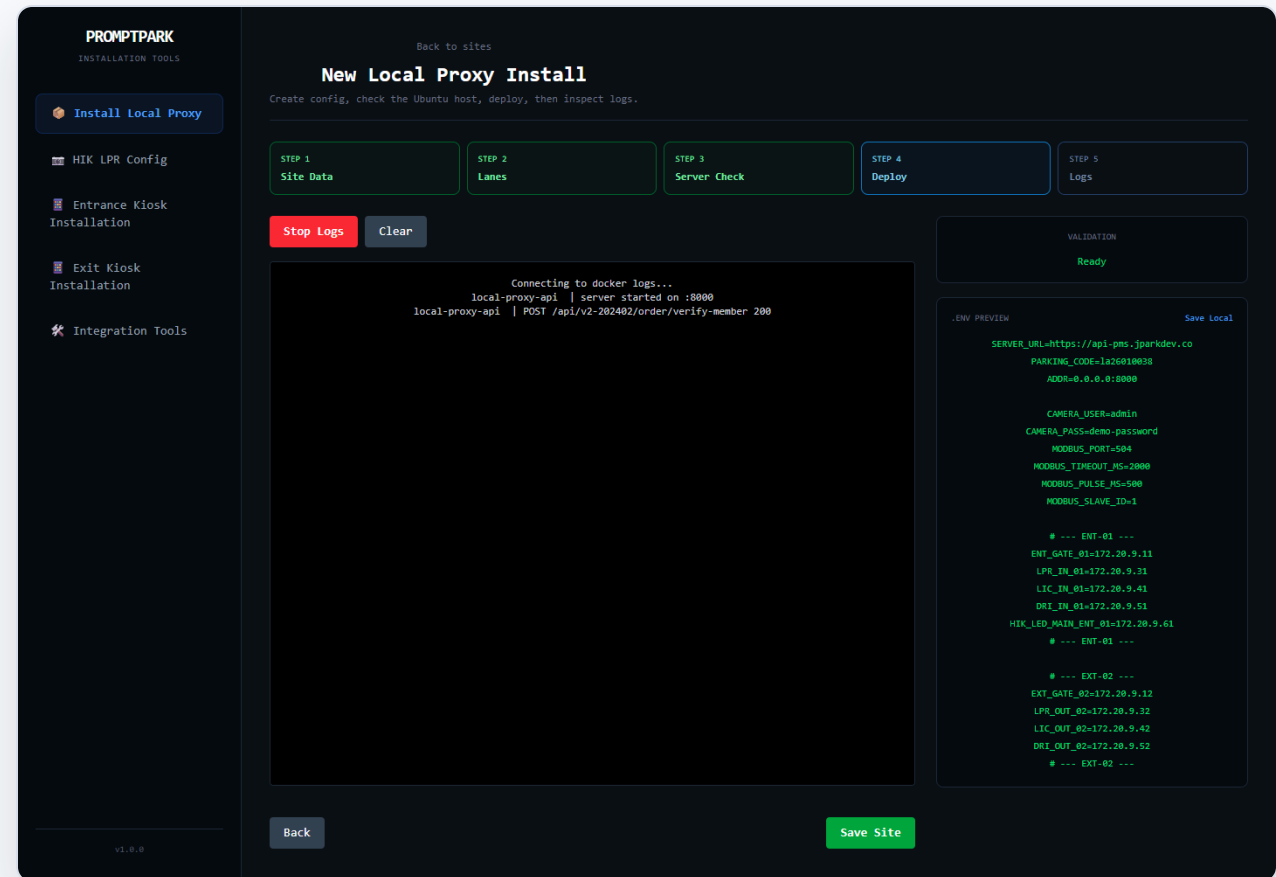

HIK LPR Config: ตั้งค่า Target Server

กำหนด Local Proxy ที่กล้องจะส่ง event เข้าไป


1. เปิดเมนู HIK LPR Config
2. กรอก Local Proxy IP
3. ตรวจสอบ port ปลายทาง ปกติใช้ 8000
4. กด + Add Camera

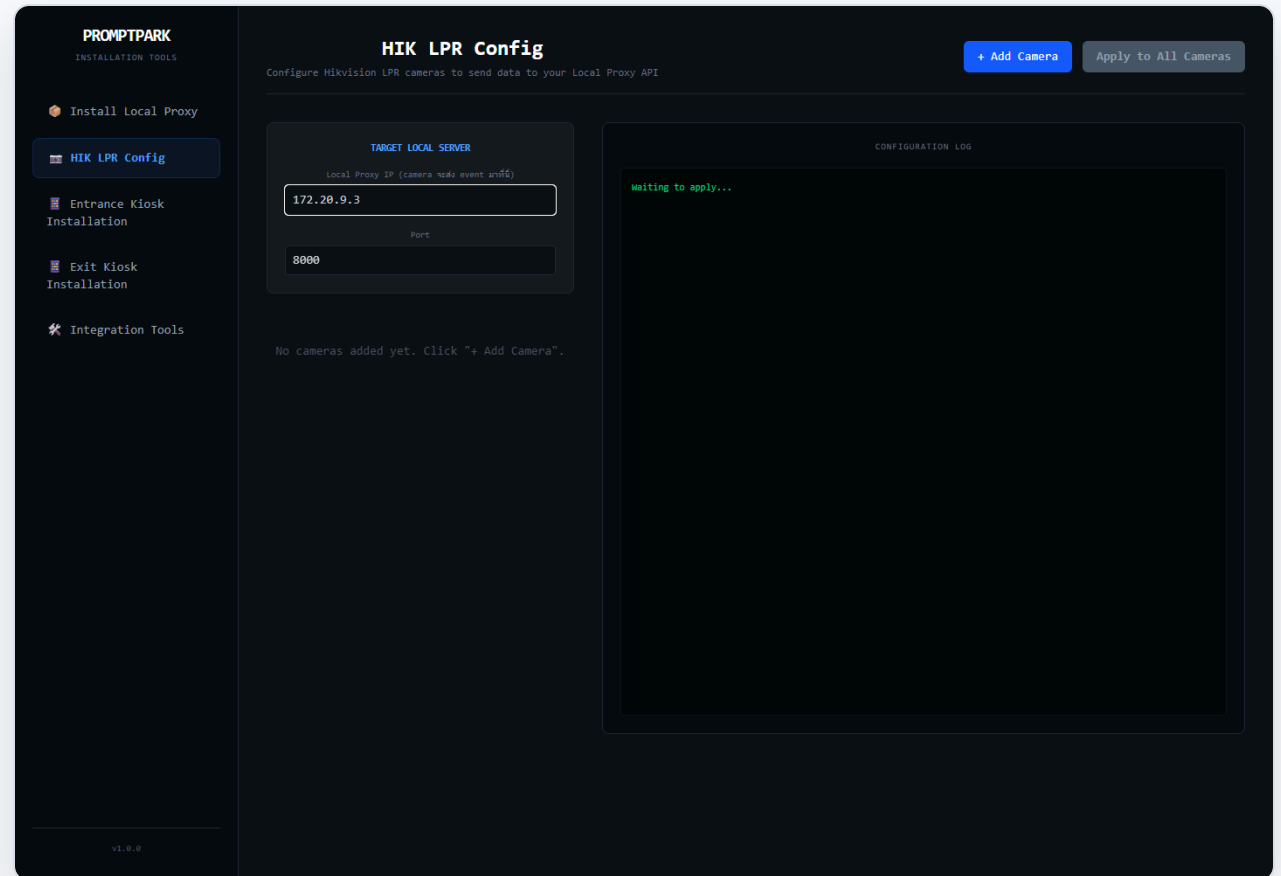

HIK LPR Config: Add Camera

เพิ่มกล้อง LPR แต่ละตัว


1. กรอก Camera IP
2. กรอก username/password ของกล้อง
3. เลือก ENTRY หรือ EXIT
4. กรอก Gate No
5. ตรวจสอบ Target endpoint แล้วกด Add Camera

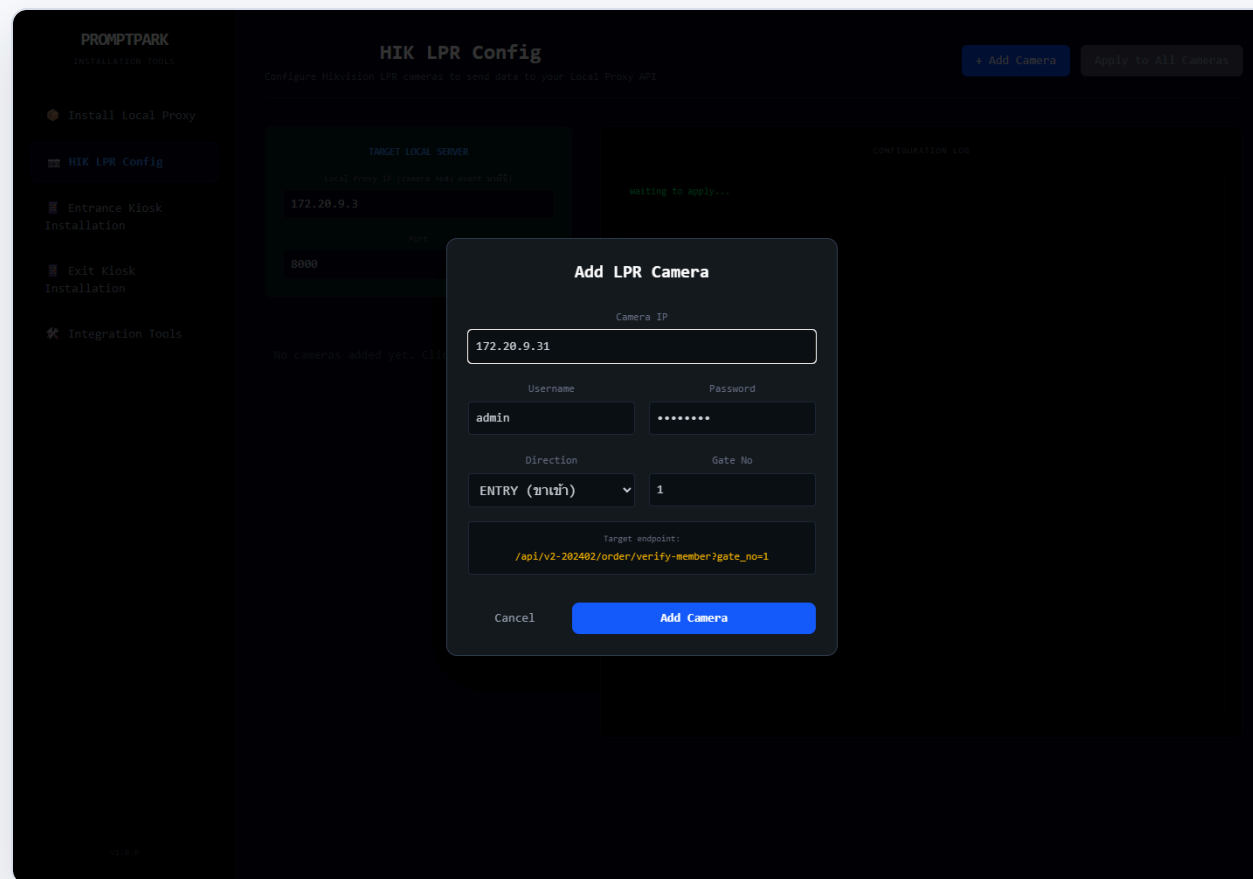

HIK LPR Config: Apply to Cameras

หลังเพิ่มกล้องครบแล้ว ให้ apply configuration


1. ตรวจสอบรายการกล้องด้านซ้าย
2. กด Apply to All Cameras
3. ดู progress และผลลัพธ์ใน Configuration Log

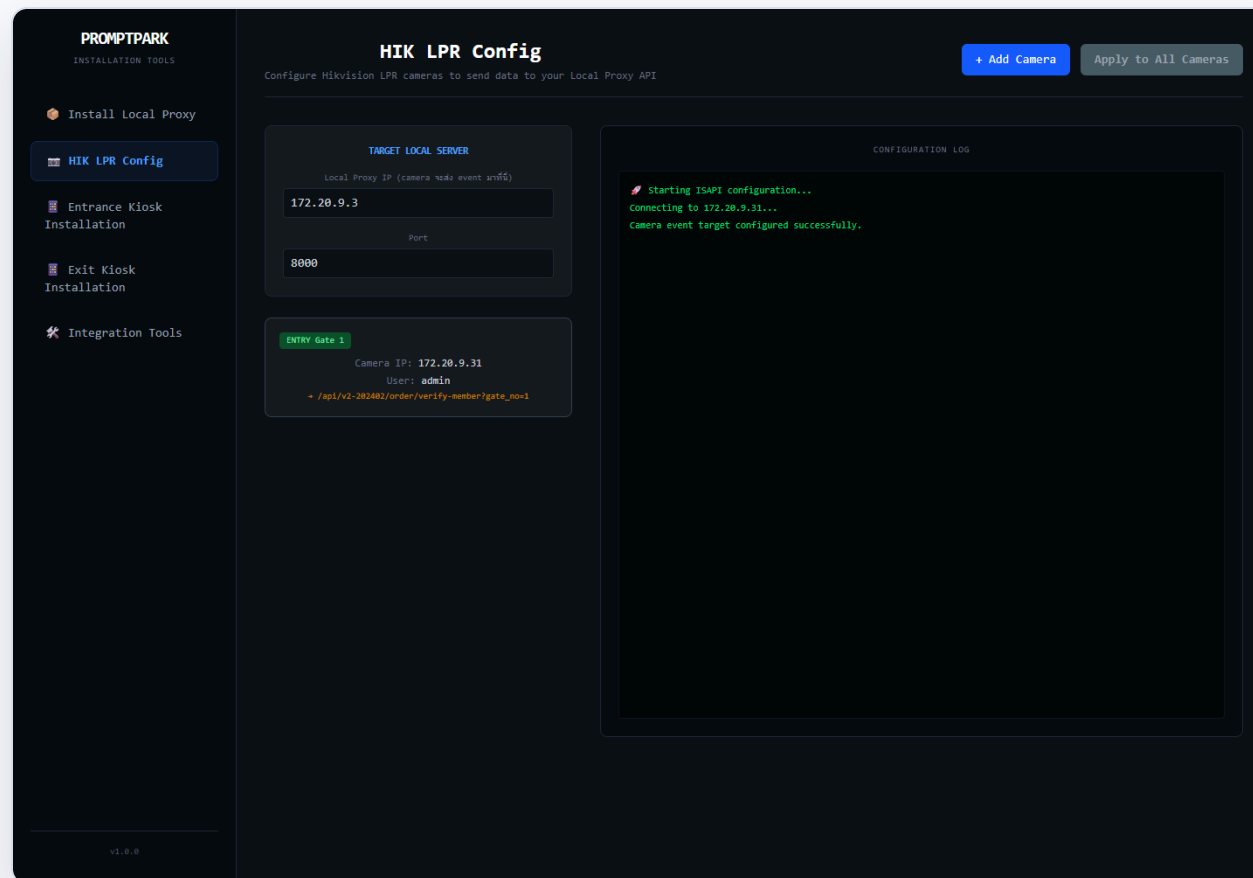

Entrance Kiosk: New Install

ติดตั้งหรือ push config ไปยังตู้ทางเข้า


1. เปิดเมนู Entrance Kiosk Installation
2. เลือก tab New Install
3. กด Browse เพื่อเลือก APK ถ้าต้องติดตั้ง APK
4. กรอก Global Config โดยเฉพาะ Local Server URL
5. กด + Add Device

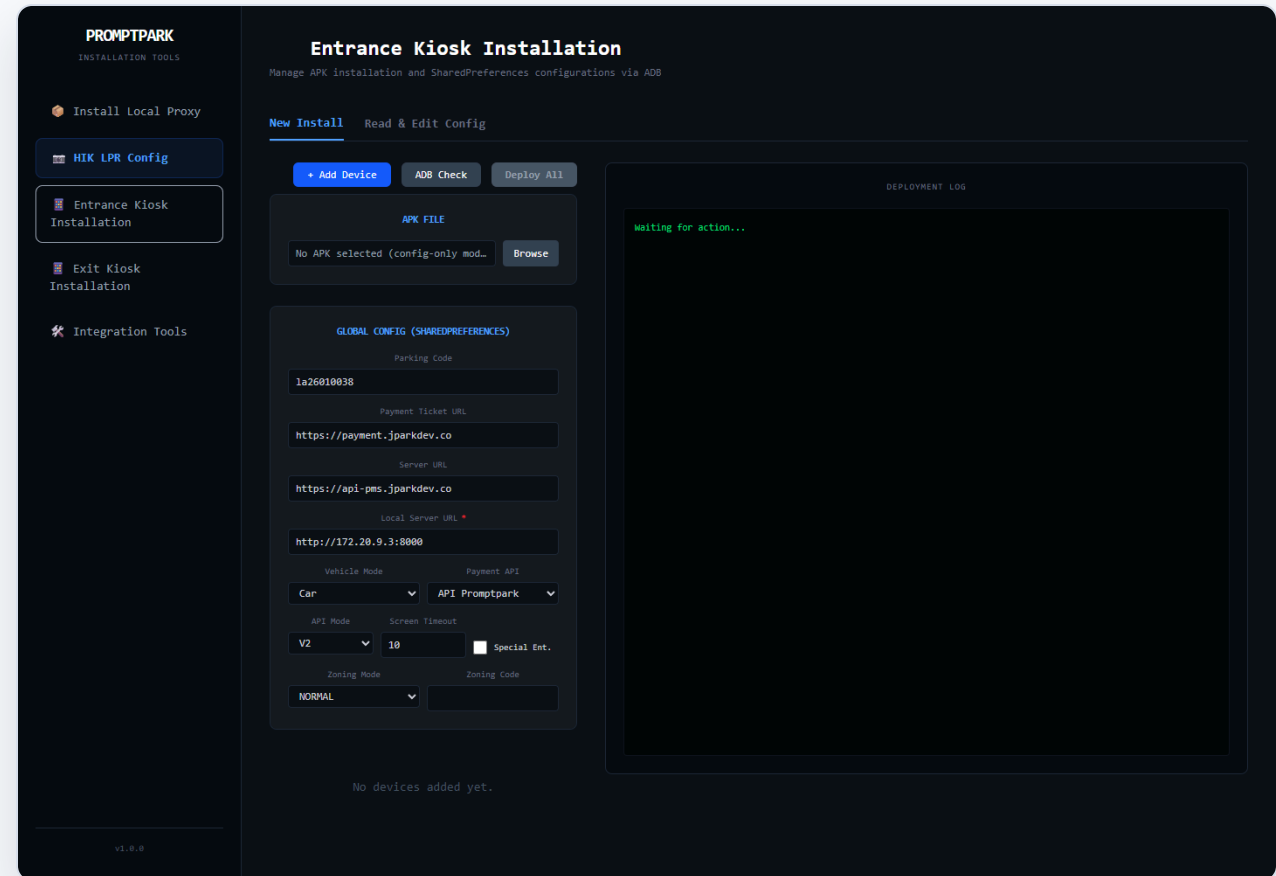

Entrance Kiosk: Add Device

เพิ่มตู้ทางเข้า


1. กรอก IP ของเครื่อง Kiosk ที่เปิด ADB over WiFi
2. กรอก Device Name
3. กรอก Gate No
4. กรอก PLC/Modbus IP
5. กด Add Device

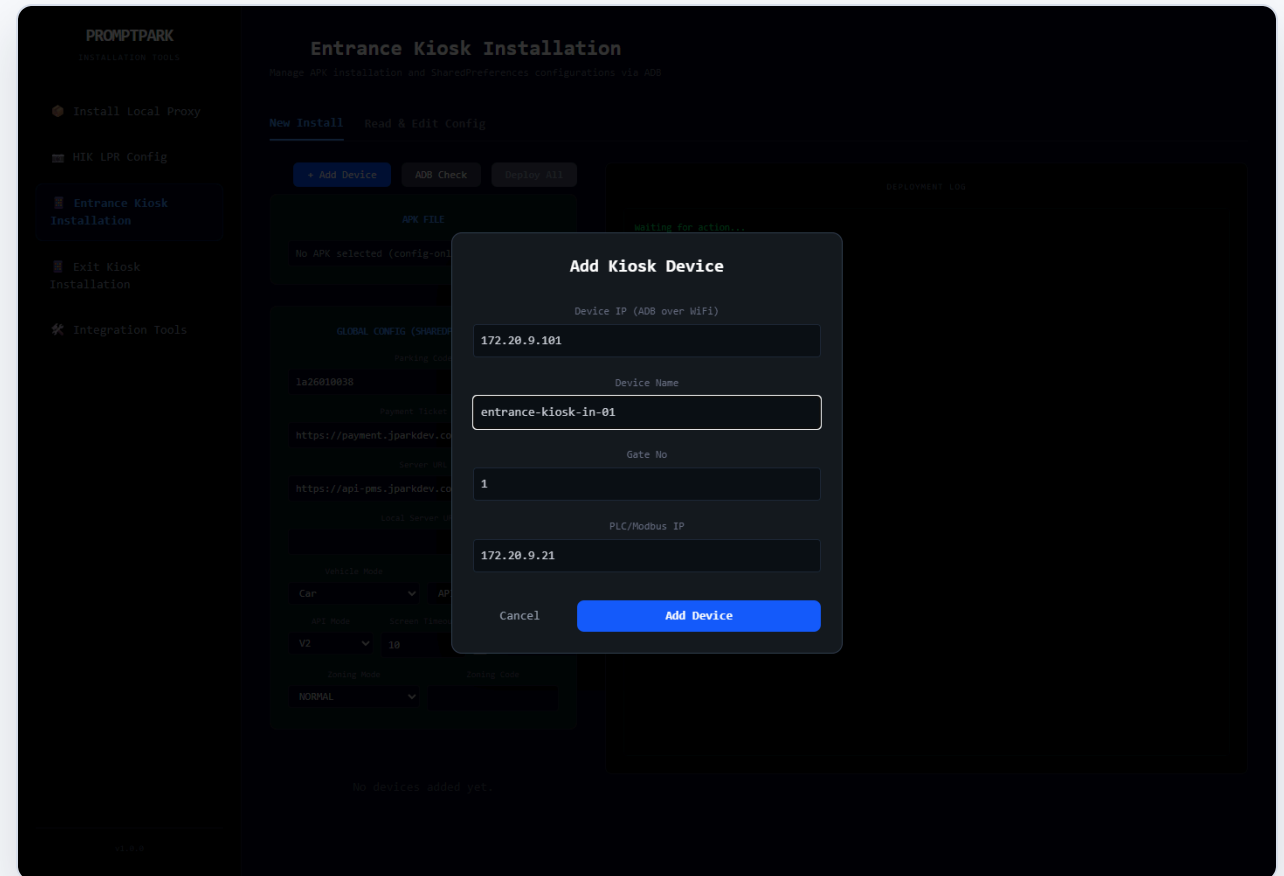

Entrance Kiosk: Deploy และ ADB Check

ตรวจสอบ ADB และ deploy


1. กด ADB Check เพื่อตรวจสอบการเชื่อมต่อ
2. ตรวจสอบรายชื่อ device ที่เพิ่มไว้
3. กด Deploy All
4. ดูผลลัพธ์ใน Deployment Log

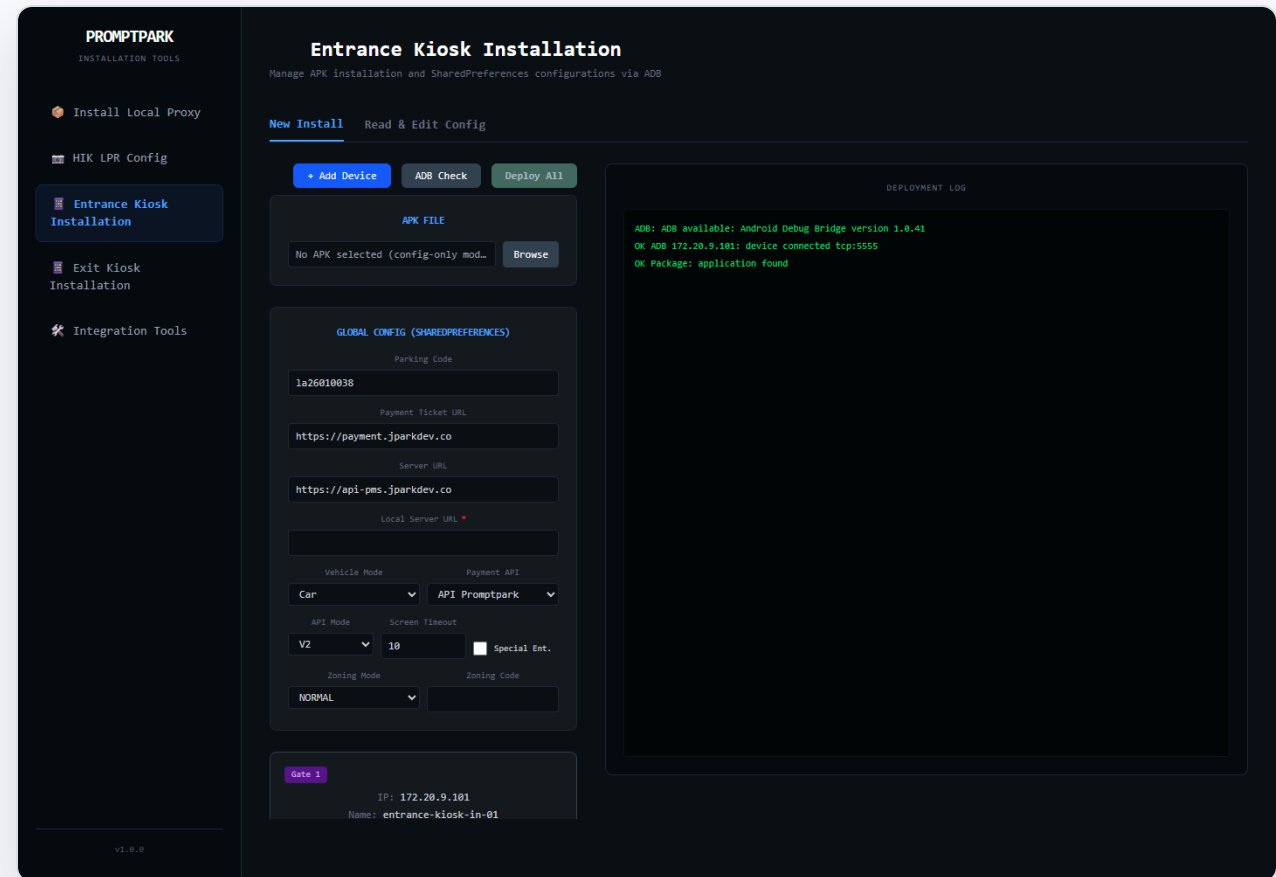

Entrance Kiosk: Read & Edit Config

อ่านและแก้ config จากเครื่องที่ติดตั้งแล้ว


1. เปิด tab Read & Edit Config
2. กรอก Device IP แล้วกด + Add
3. กด Read Configs
4. แก้ค่าที่ต้องการ
5. กด Save Changes

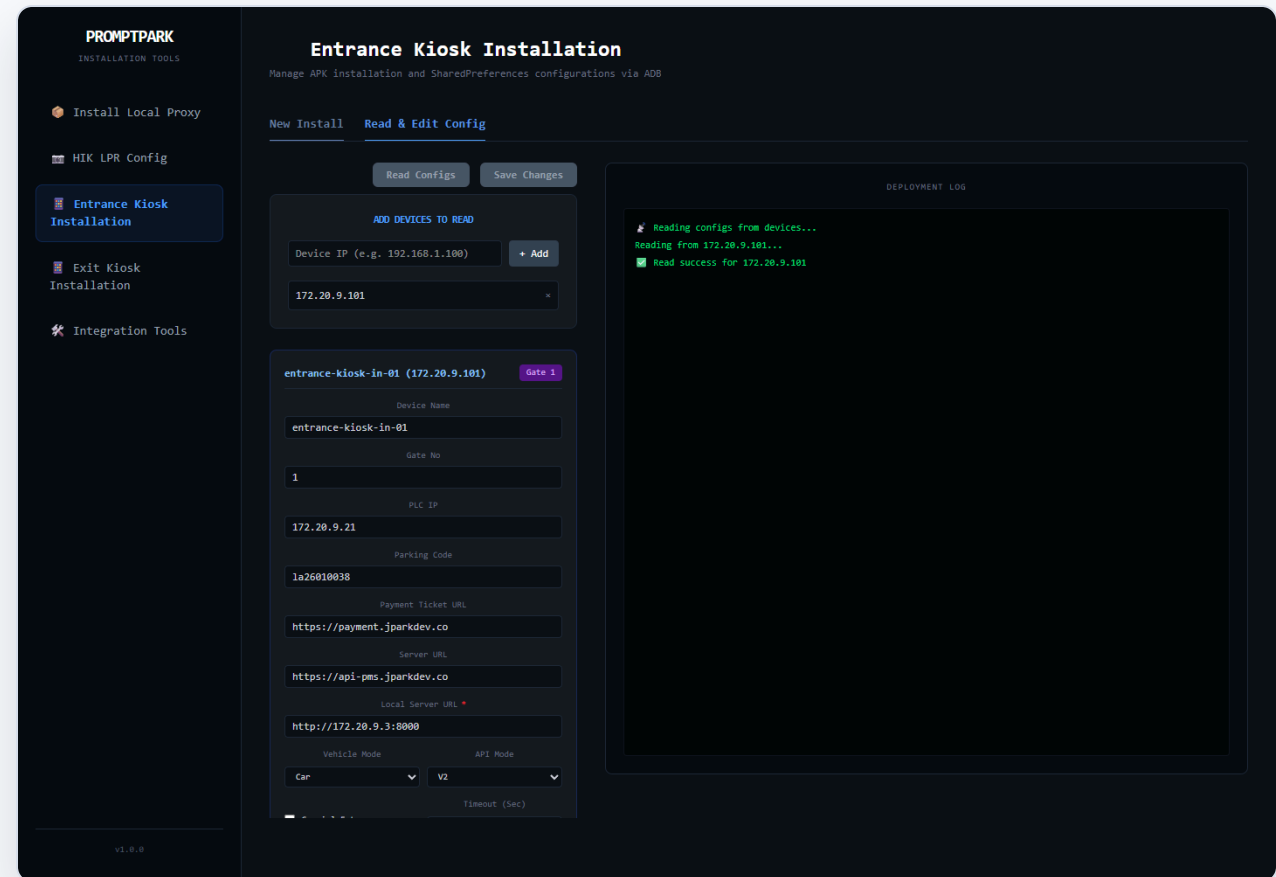

Exit Kiosk: New Install

ติดตั้งหรือ push config ไปยังตู้ทางออก


1. เปิดเมนู Exit Kiosk Installation
2. เลือก tab New Install
3. เลือก Exit APK ถ้าต้องติดตั้ง APK
4. กรอก Global Config และ Local Server URL
5. ตั้งค่า Ticket Mode, Cash/QR และ Zoning ตามหน่วยงาน

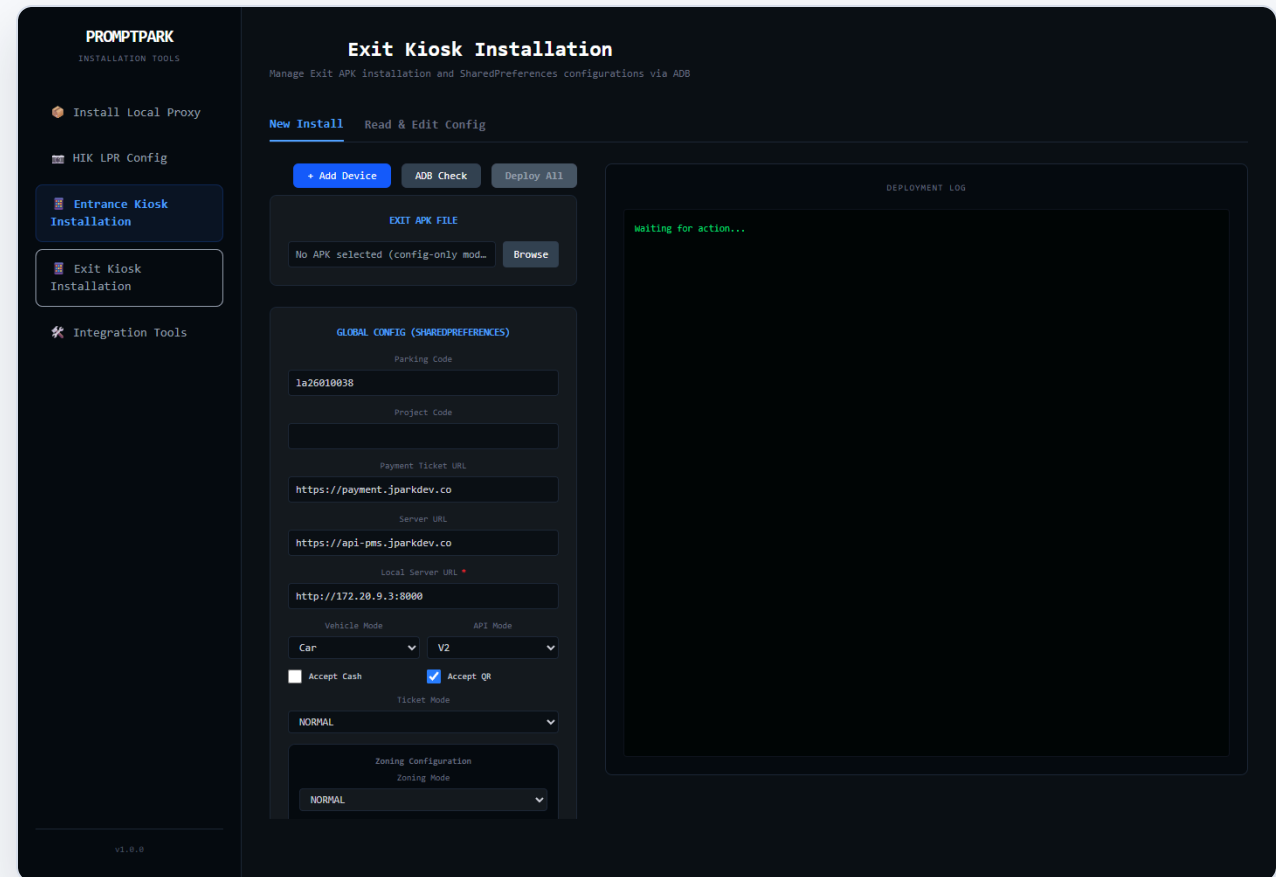

Exit Kiosk: Add Device

เพิ่มตู้ทางออก


1. กรอก Device IP
2. กรอก Device Name
3. กรอก Gate No
4. กรอก PLC/Modbus IP
5. กด Add Device

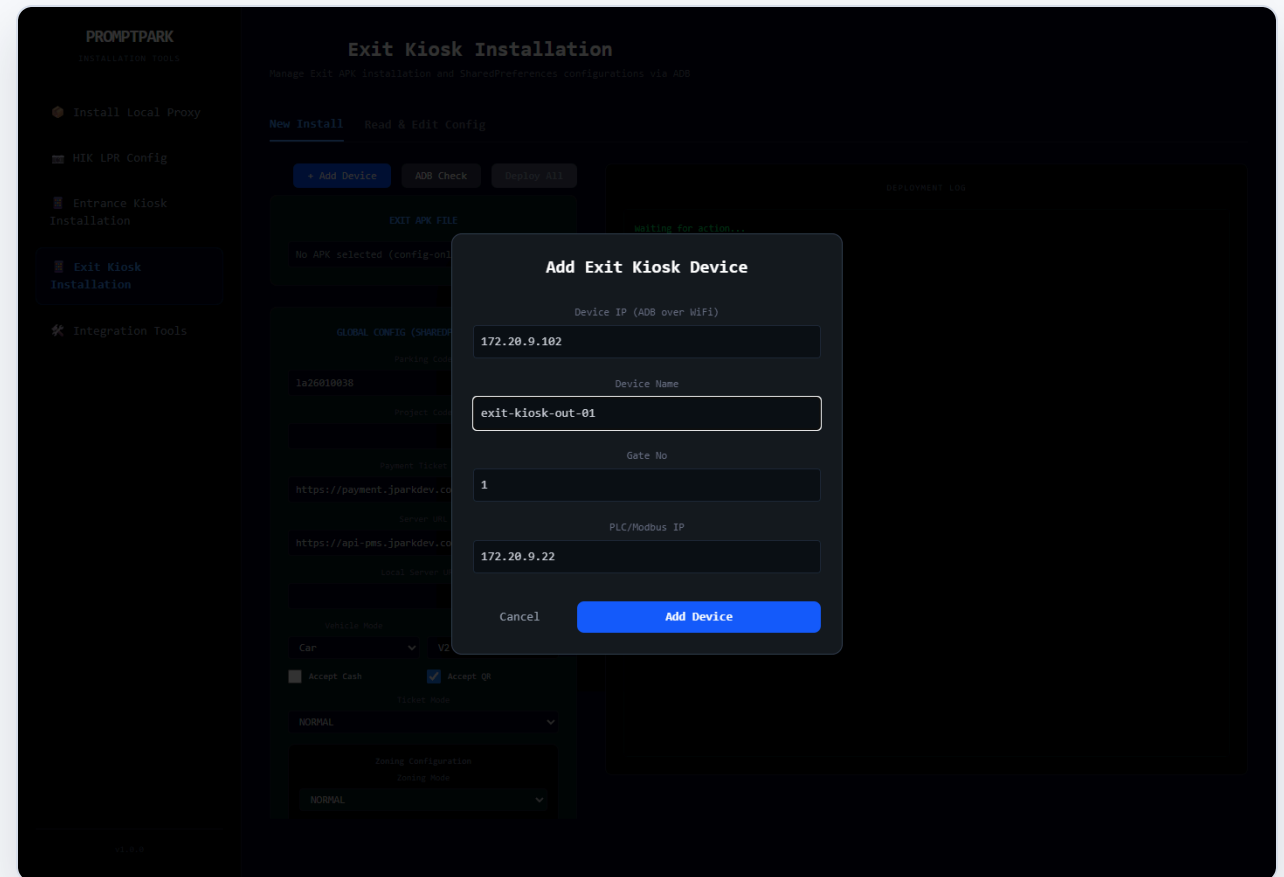

Exit Kiosk: Deploy

ตรวจสอบและ deploy ตู้ทางออก


1. ตรวจสอบ cash/QR และ ticket mode
2. กด ADB Check
3. กด Deploy All
4. ตรวจสอบผลใน Deployment Log

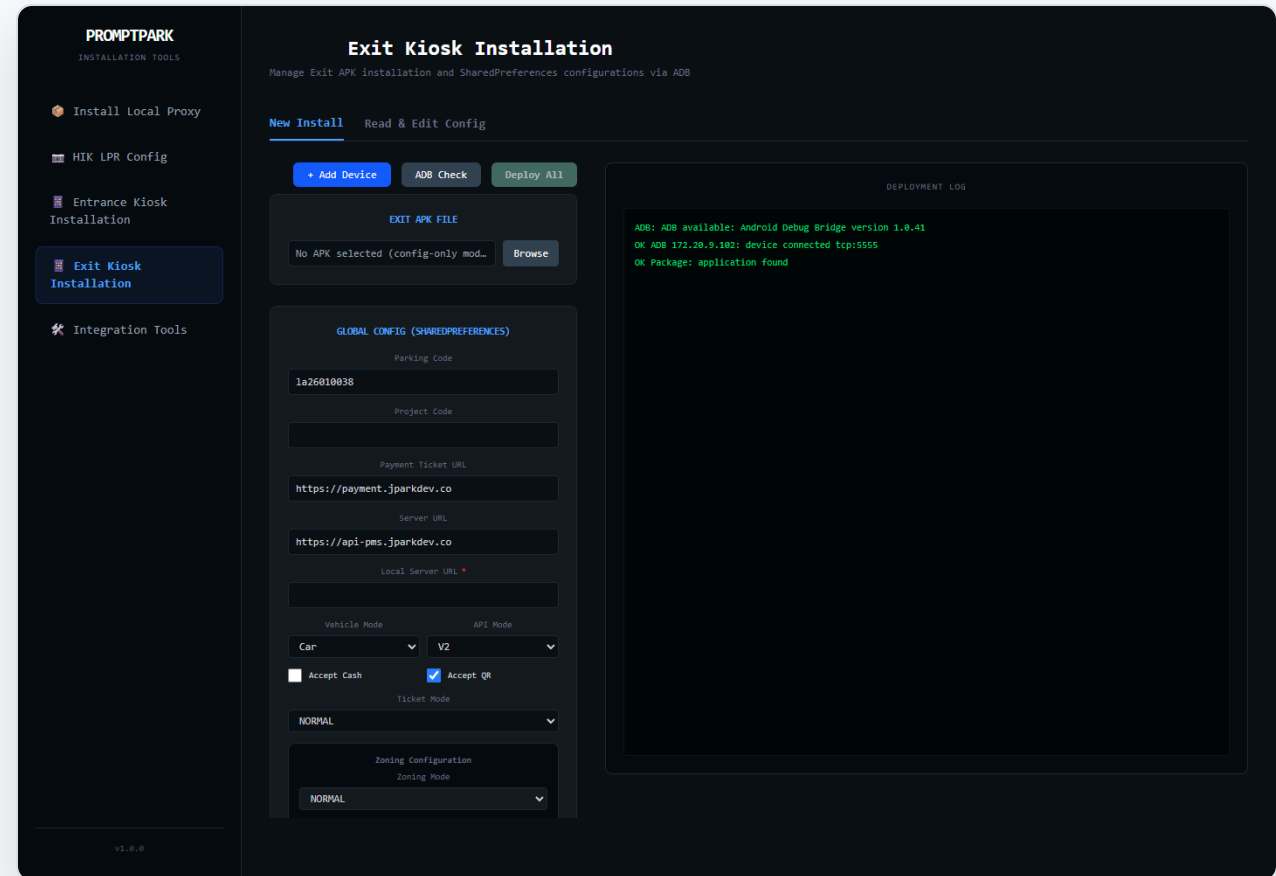

Exit Kiosk: Read & Edit Config

อ่านและแก้ config จากตู้ทางออก

1. เปิด tab Read & Edit Config
2. เพิ่ม Device IP
3. กด Read Configs
4. แก่ค่าที่ต้องการ เช่น Local Server URL, Ticket Mode, Zoning
5. กด Save Changes

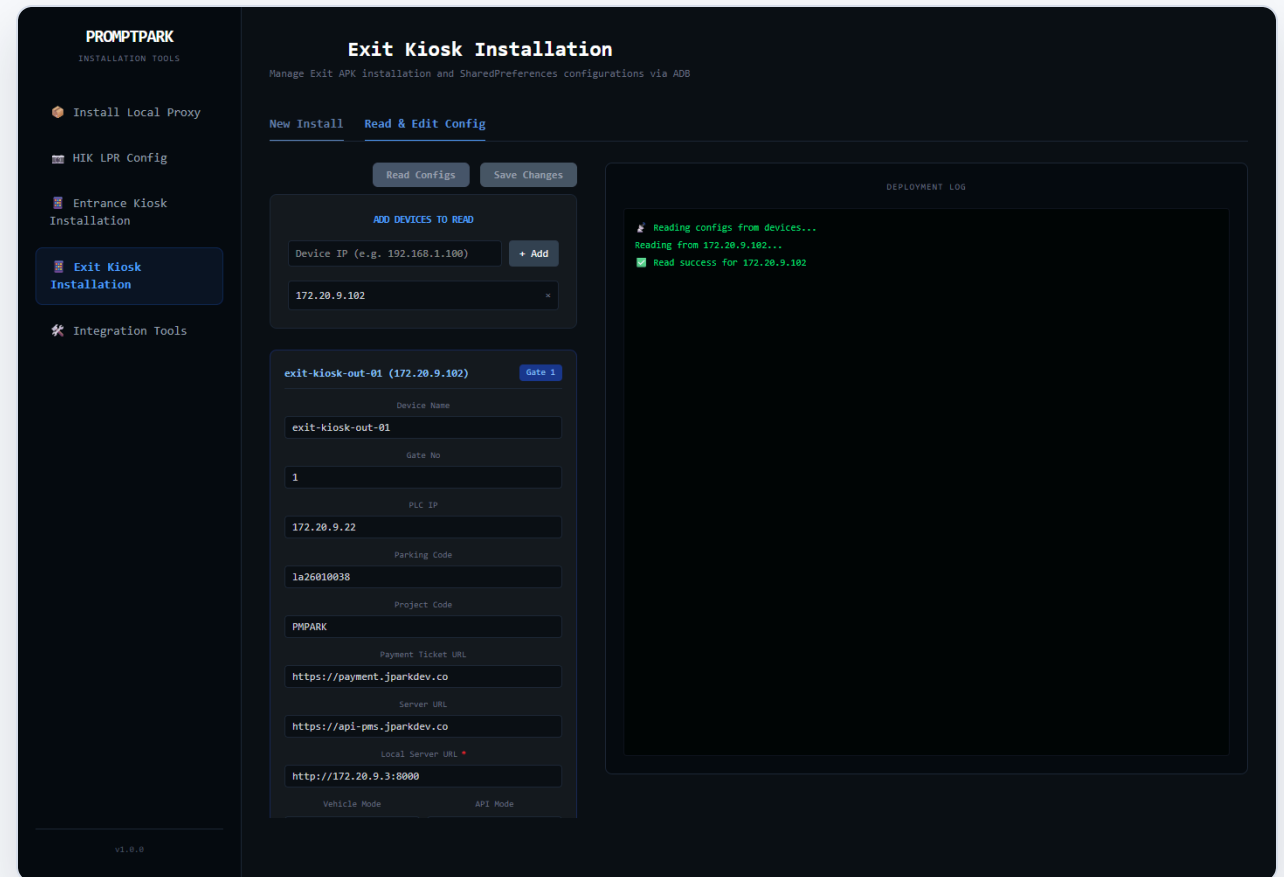

Integration Tools: Mock LPR Event

ใช้ทดสอบ Local Proxy โดยไม่ต้องรอ event จากกล้องจริง

1. เปิดเมนู Integration Tools
2. กรอก Target Endpoint URL
3. กรอกทะเบียนรถทดสอบ
4. กด Send Mock Event
5. ตรวจสอบ response ด้านขวา

The screenshot shows the 'Integration Tools' section of the PROMPTPARK application. On the left is a sidebar with navigation options: 'Install Local Proxy', 'HIK LPR Config', 'Entrance Kiosk Installation', 'Exit Kiosk Installation', and 'Integration Tools' (which is highlighted). The main area is titled 'Integration Tools' with a subtitle 'Mock camera events and simulate payloads to local proxy API'. It contains a form for 'MOCK LPR CAMERA EVENT (MULTIPART FORM)'. The form has two input fields: 'Target Endpoint URL' with the value 'http://172.20.9.3:8000/api/v2-202402/order/verify-member?gate_' and 'License Plate (e.g. nn0001)' with the value 'nn0001'. Below these is a 'Note' section explaining the tool's function: generating a mock anpr.xml, including mock images, and sending them as multipart/form-data. A green 'Send Mock Event' button is at the bottom of the form. On the right, the 'RESPONSE DETAIL' section shows a JSON response:

```
{\n  "status": "ok",\n  "message": "Mock LPR event accepted",\n  "gate_no": "1"\n}
```

Checklist ก่อนส่งมอบงาน

1. Local Proxy deploy สำเร็จ และ healthcheck ผ่าน
2. กล้อง HIK ส่ง event เข้า endpoint ถูกต้องตาม gate
3. Entrance Kiosk มี Local Server URL ถูกต้อง และเปิดไม่ได้
4. Exit Kiosk มี payment/ticket mode ถูกต้องตาม site
5. Integration Tools ยิง mock event แล้วได้ response จาก Local Proxy

หมายเหตุการใช้งาน

- ควรตรวจสอบ IP plan ของ site ก่อนกรอกข้อมูล
- ควรใช้ Preflight ก่อน deploy Local Proxy ทุกครั้ง
- ควรเก็บ log หลัง deploy สำหรับแนบรายงานหน้างาน
- หากแก้ `.env` บน server ควร backup หรือใช้ปุ่มที่มี backup ให้อยู่แล้ว