

Pen Lift Mechanism


Part List

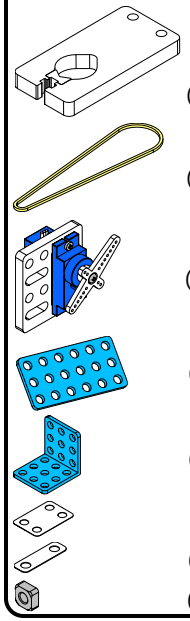

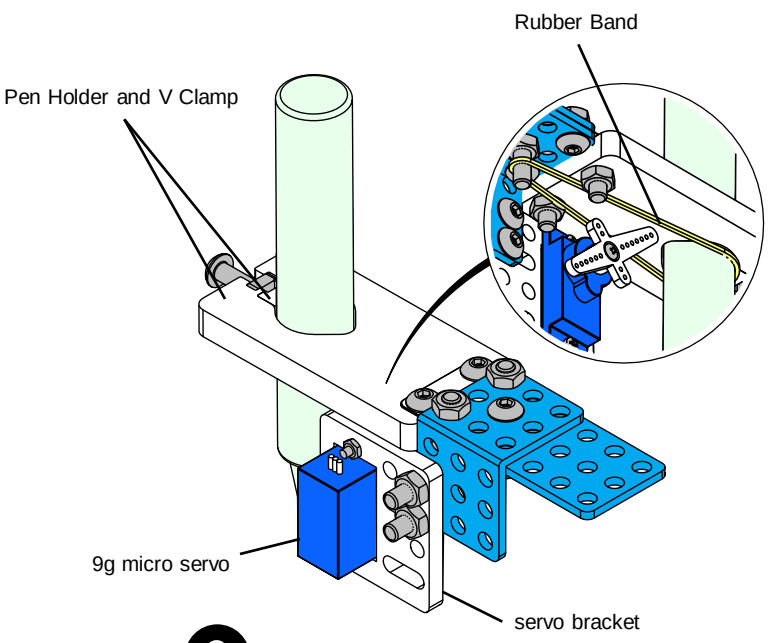


1

M4×14(2)
(2)
2.5mm

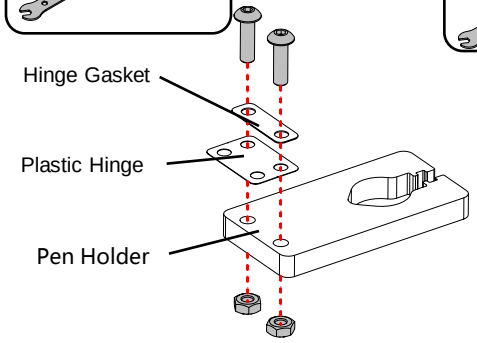


2

M4×14(1)
M4×8(2)
(3)
2.5mm

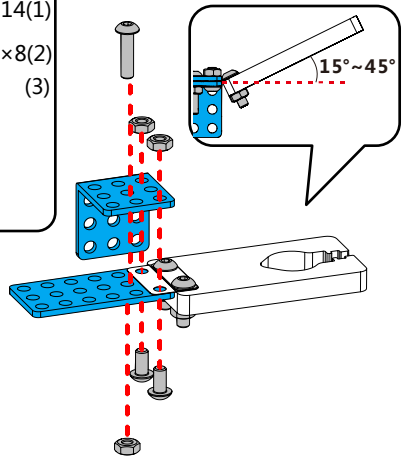

※Make sure the Pen Holder can easily to lift 15°~45°.


3

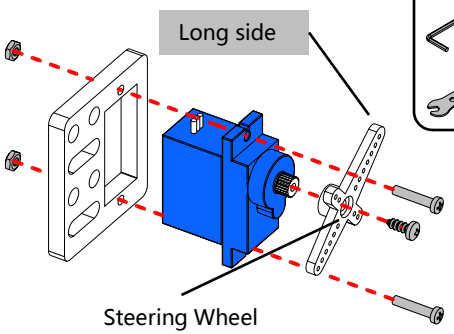

※ You can change the installation of the steering wheel angle to adjust the height of the pen.

4


M4×14(2)
(2)
2.5mm

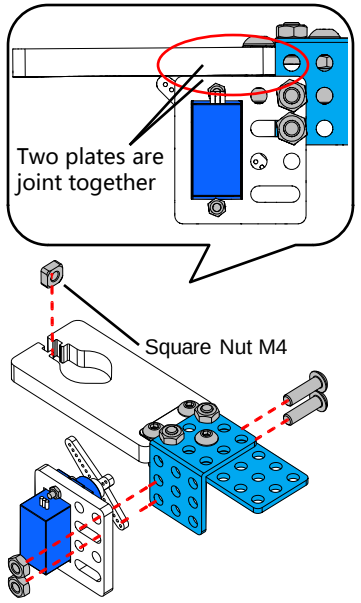

※ Make sure the Pen Holder is supported by the servo bracket when the Pen Holder in the lowest position,this is to relax the Plastic Hinge.


5

M4×16(1)

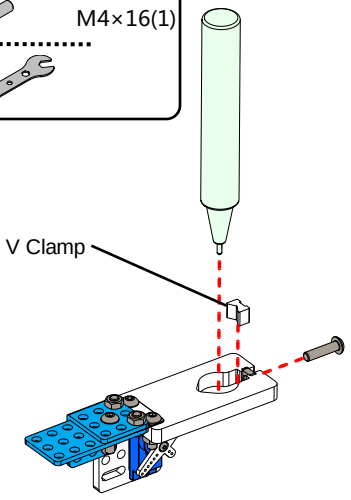


6


(1)

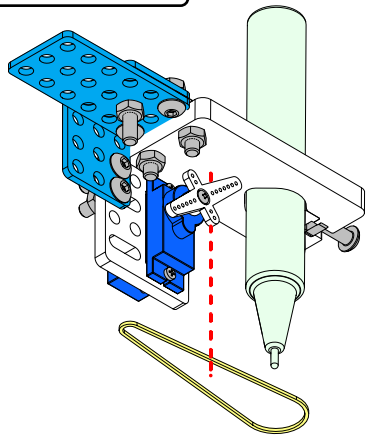


mScara

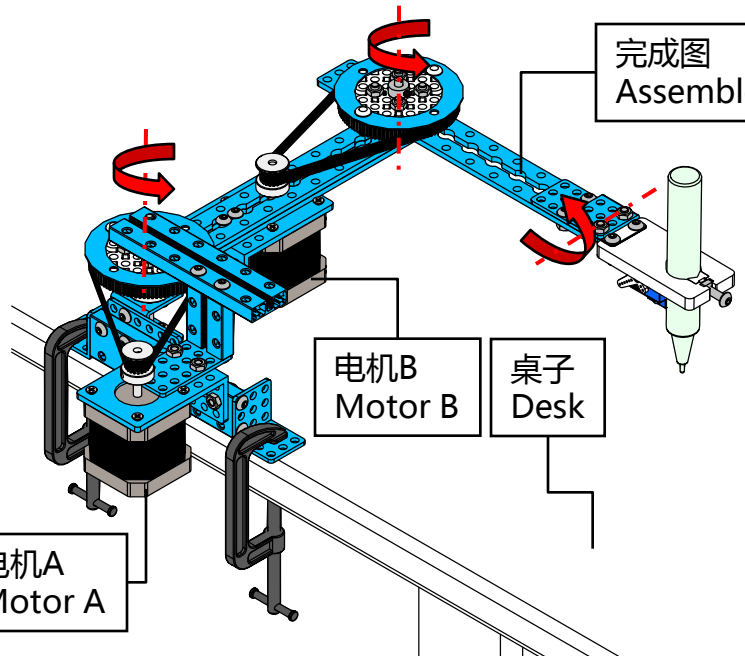


1

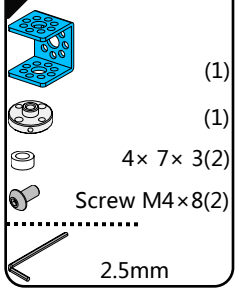


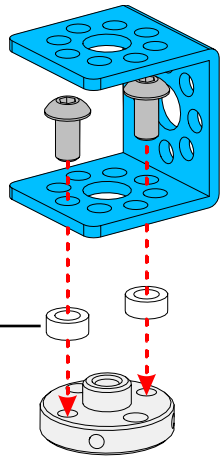


2

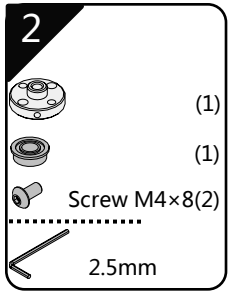


Flange Bearing
4 × 8 × 3

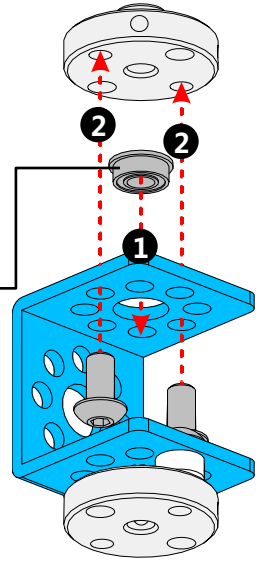


3

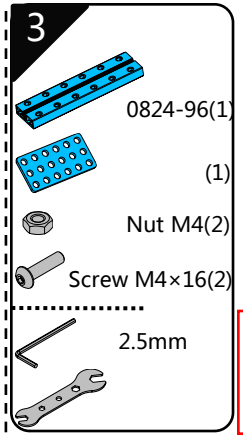


保证零件安装的平齐度。
Ensure the parts installed in the good level.

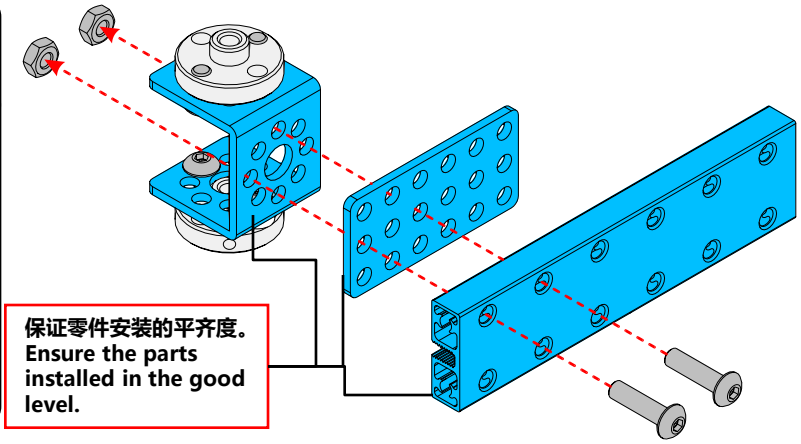


4

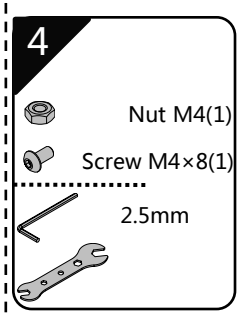


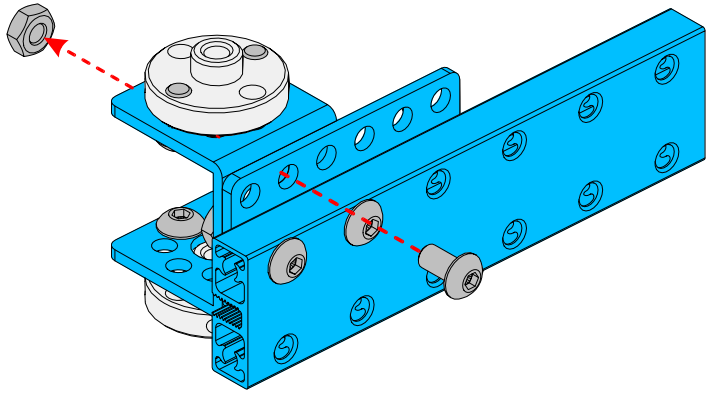

5

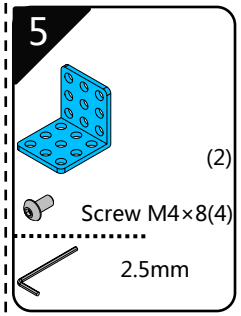


保证零件安装的平齐度。
Ensure the parts installed in the good level.

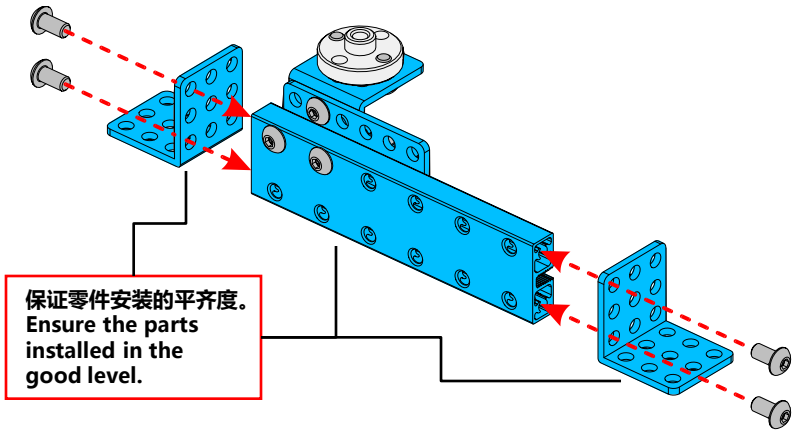

6

(2)

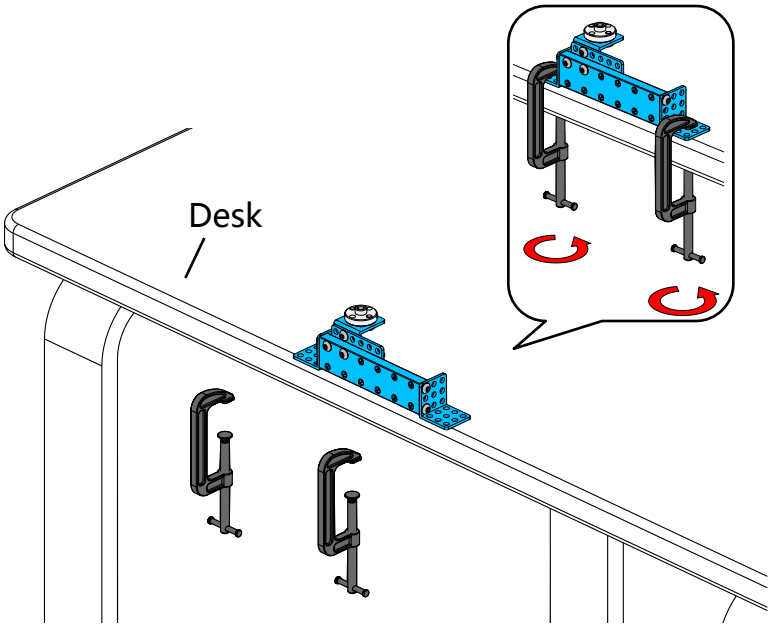



7

4X80(1)

Screw M3×5(2)

1.5mm

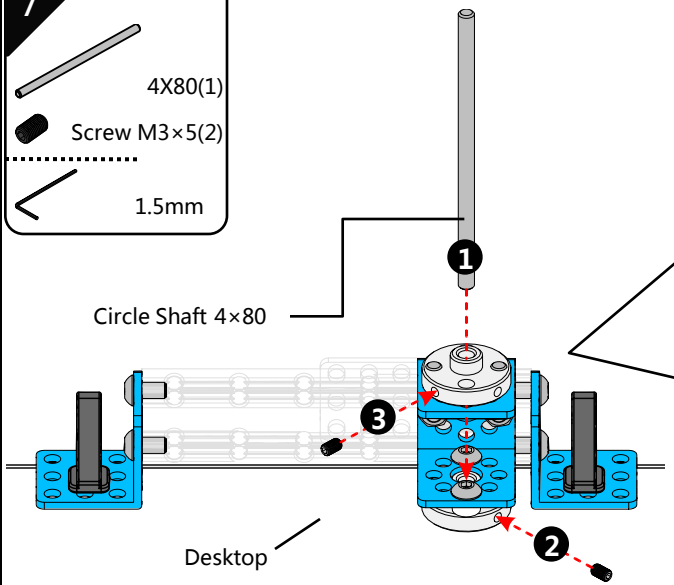

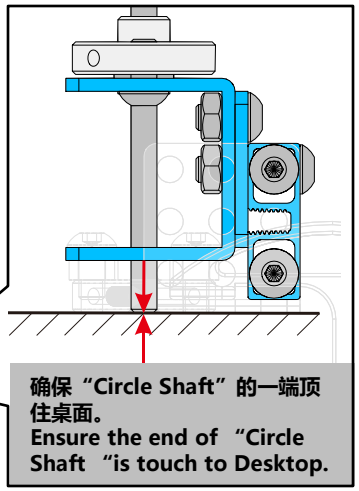

确保“Circle Shaft”的一端顶住桌面。
Ensure the end of “Circle Shaft “is touch to Desktop.

8

(2)

(1)


(1)

(2)

Nut M4(4)


Screw M4×22(4)

2.5mm

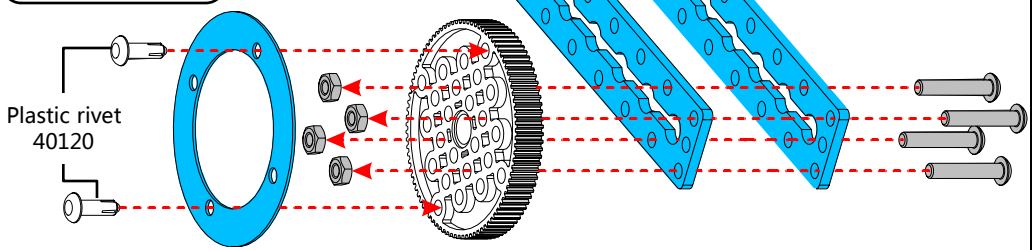

9

(2)

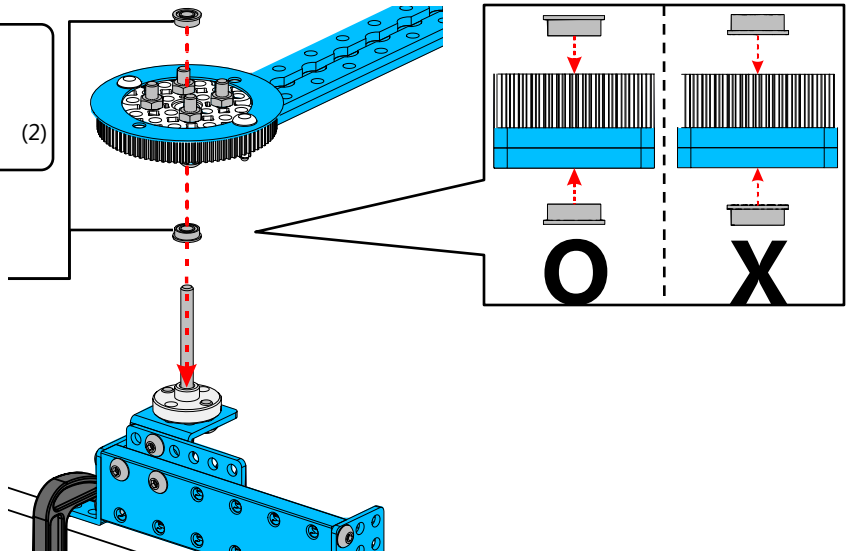

mScara | mEggbot | mSpider | mCar


10

4mm(1)

Screw M3×5(1)

1.5mm

Shaft Collar 4mm

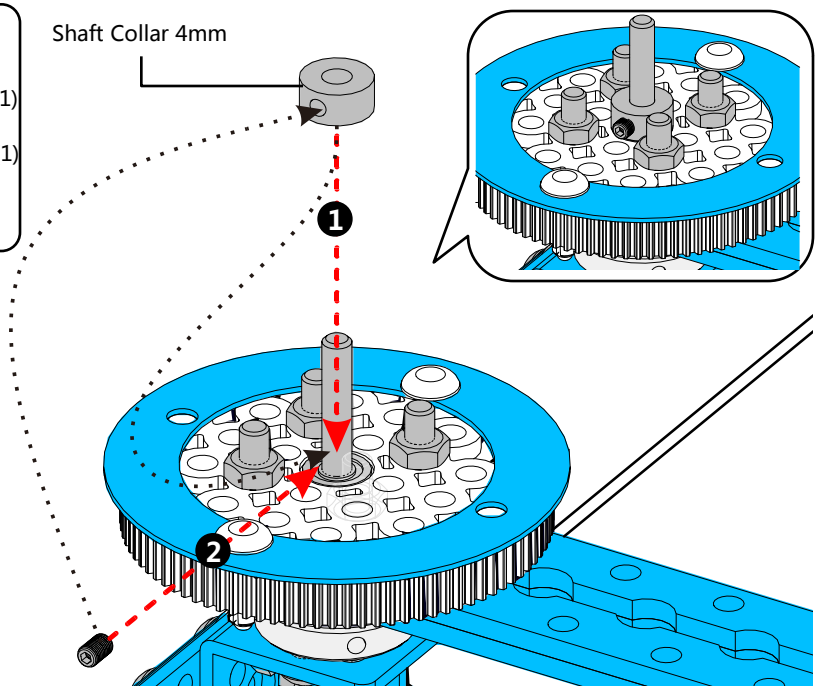


11

(1)

M4 Nut(2)

Screw M4×14(2)

2.5mm

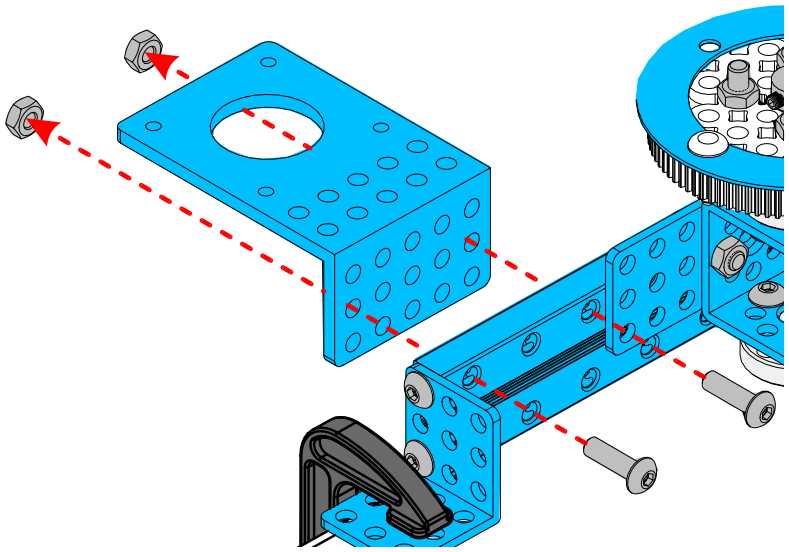


12

(1)

(1)

Screw M4×8(2)

2.5mm

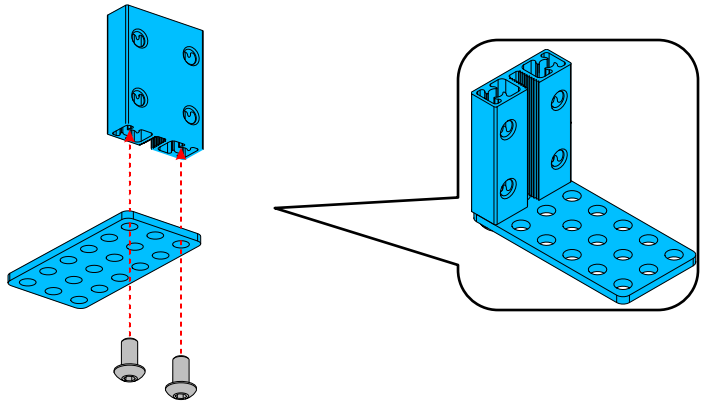


13

M4 Nut(2)


Screw M4×8(2)

2.5mm

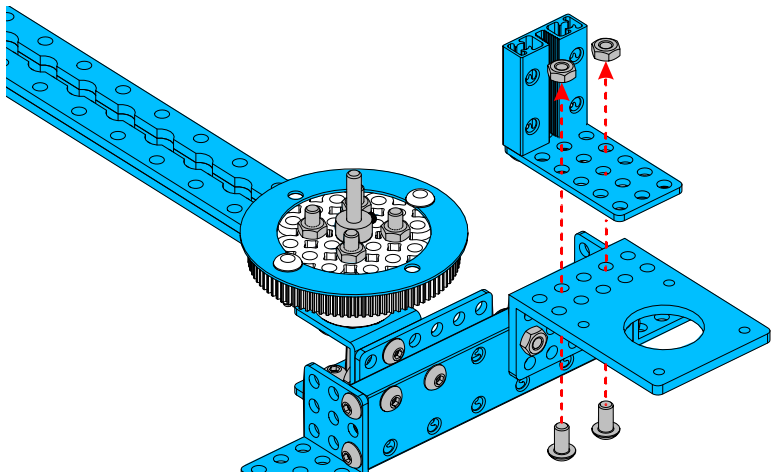

14

112MXL(1)

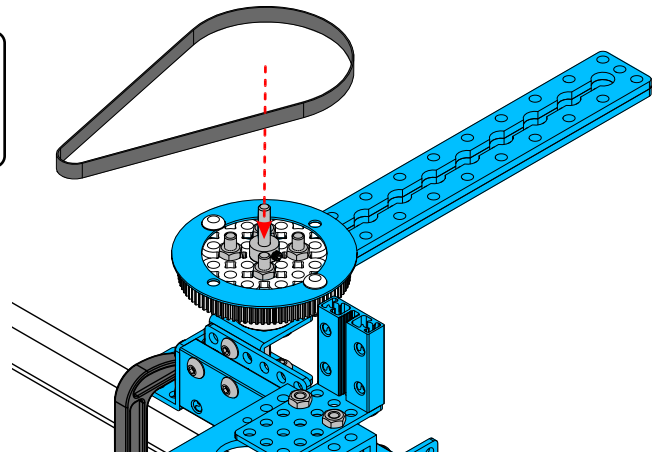


15

0824-96(1)

Screw M4×14(2)

2.5mm

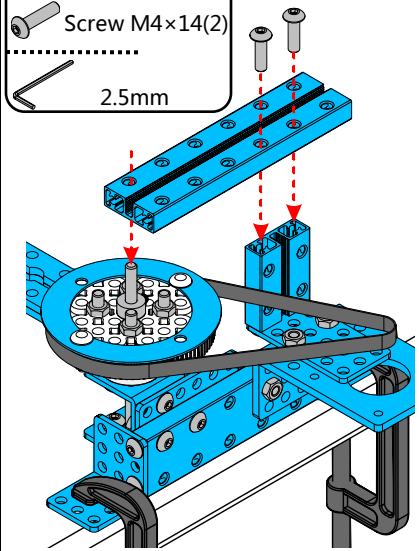

16


(1)

(1)

Screw M3×5(1)


1.5mm


Timing Pulley 18T

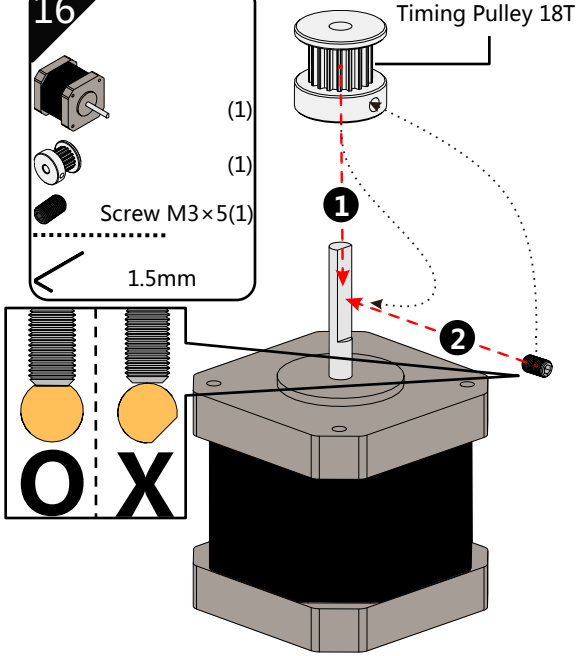

18


Screw M3× 8(4)

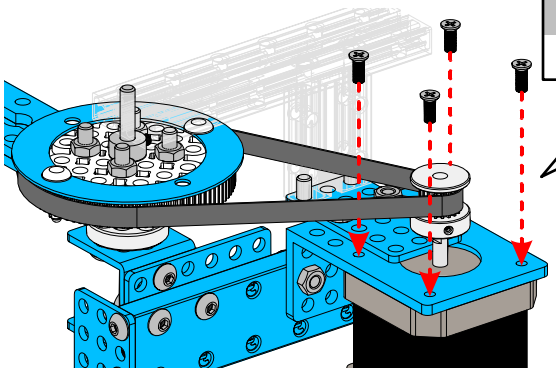


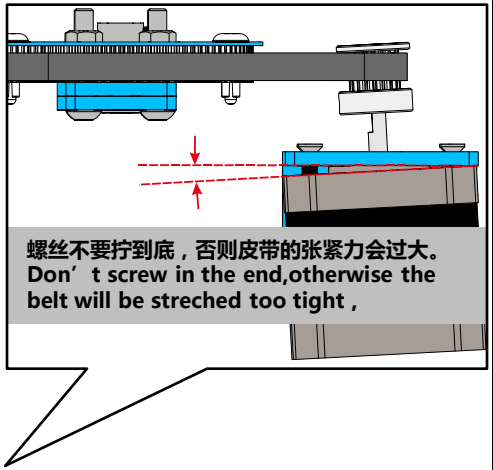

螺丝不要拧到底，否则皮带的张紧力会过大。
Don’ t screw in the end,otherwise the belt will be streched too tight ,

17

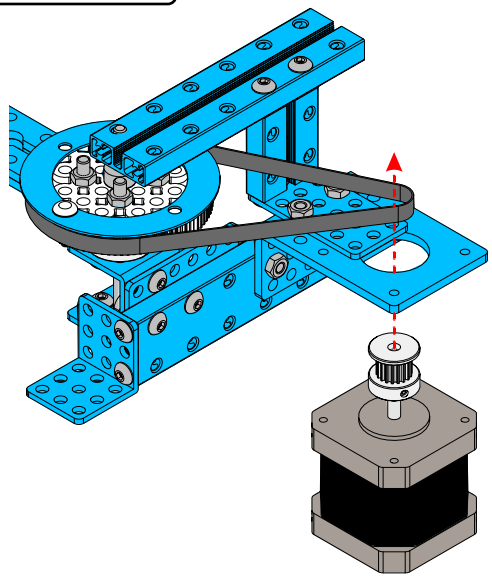


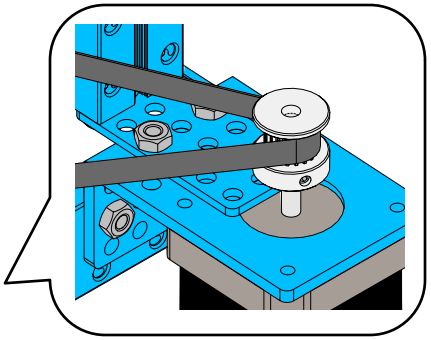

19

(1)

Nut M4(1)

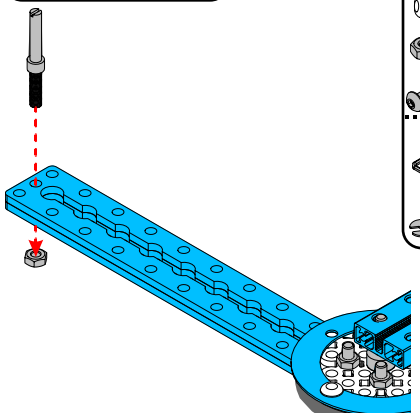

20

(2)

(1)

(1)


(2)


Nut M4(4)


Screw M4×16(4)

2.5mm

Plastic rivet
40120

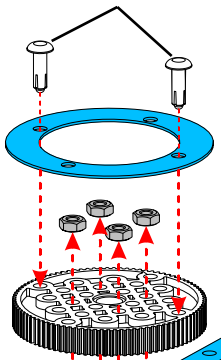


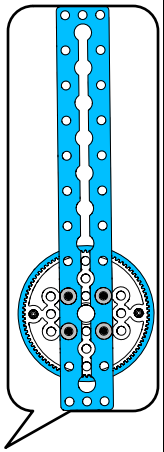


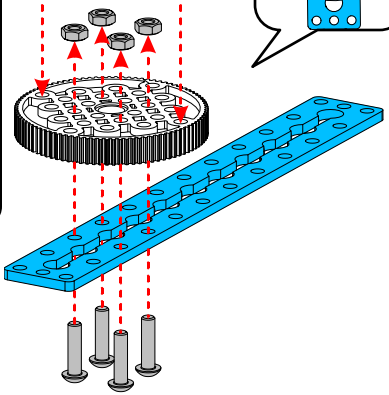

21

(2)

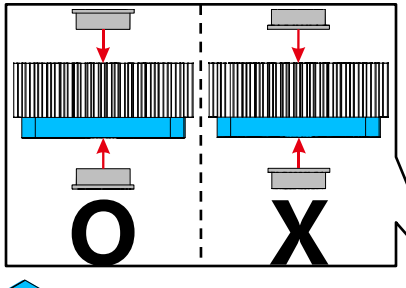

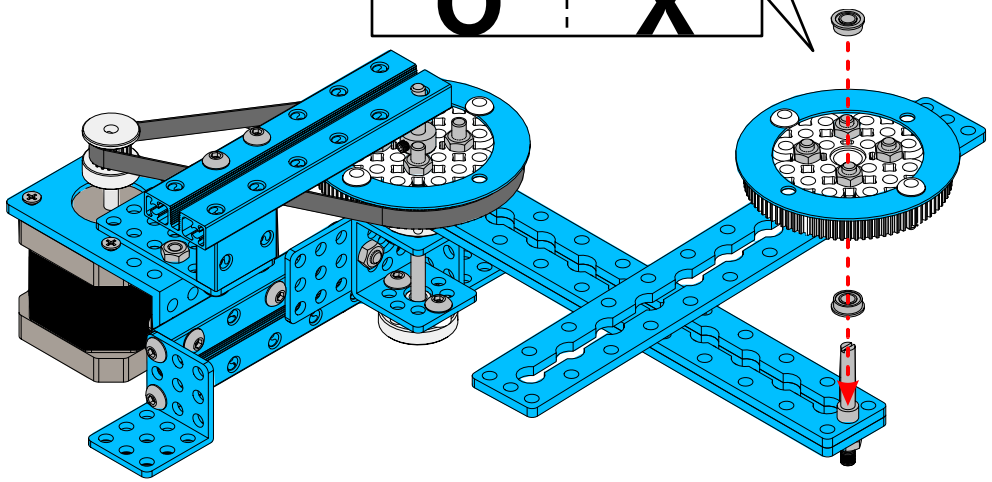

22


4mm(1)


Screw M3×5(1)

1.5mm

Shaft Collar 4mm

(1)

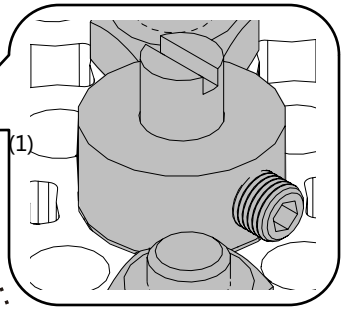

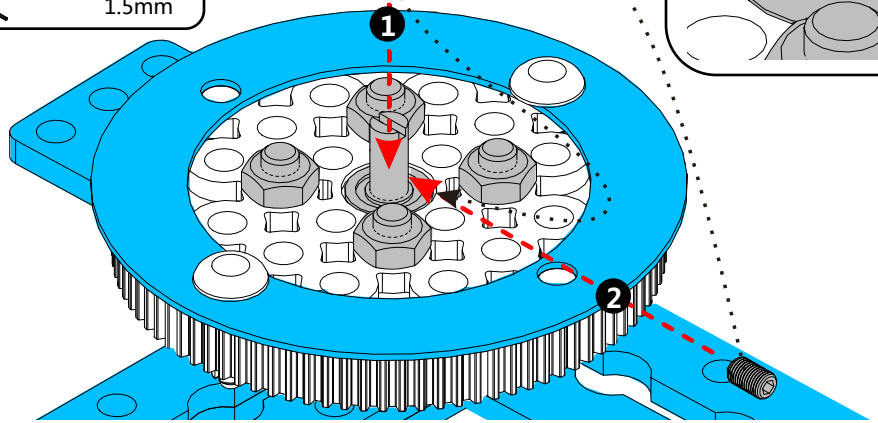


23

(1)

(1)

Screw M3× 8(4)

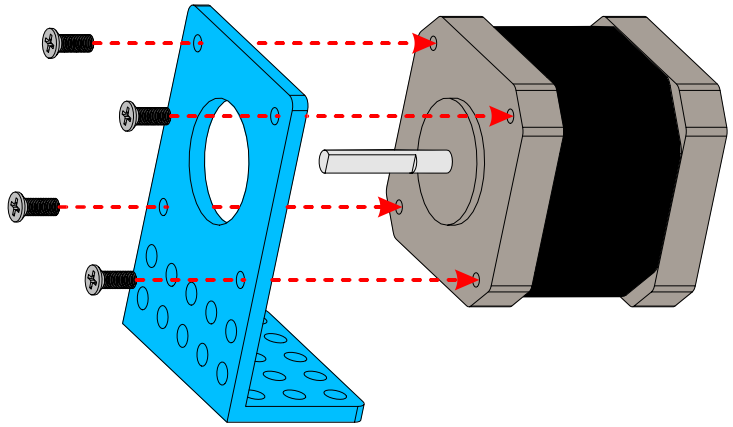


24

112MXL(1)

(1)

Timing Pulley 18T

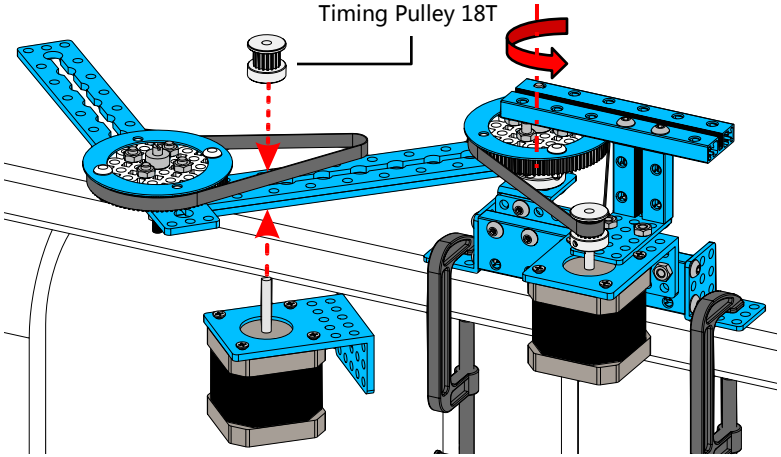


25

M4 Nut(2)

Screw M4×14(2)


2.5mm

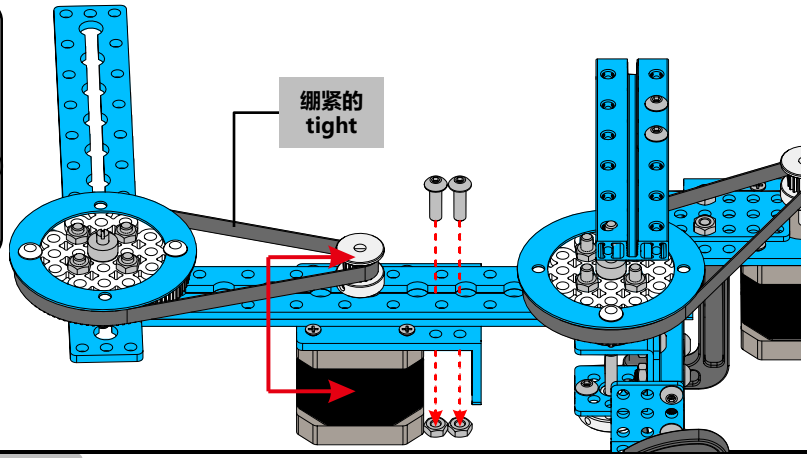

26

Screw M3×5(1)

1.5mm

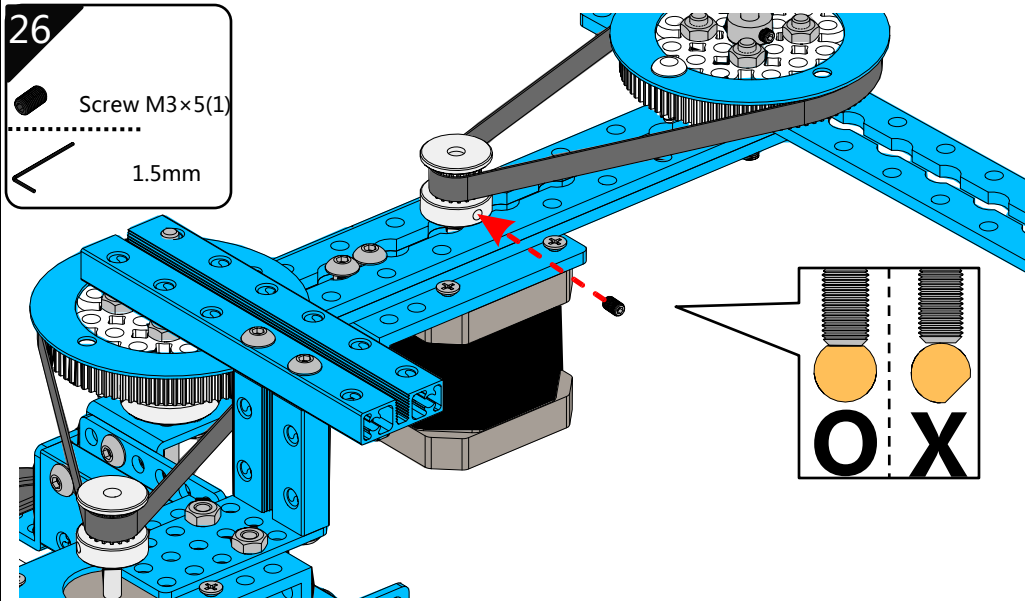


27


M4 Nut(2)

Screw M4×8(2)

2.5mm

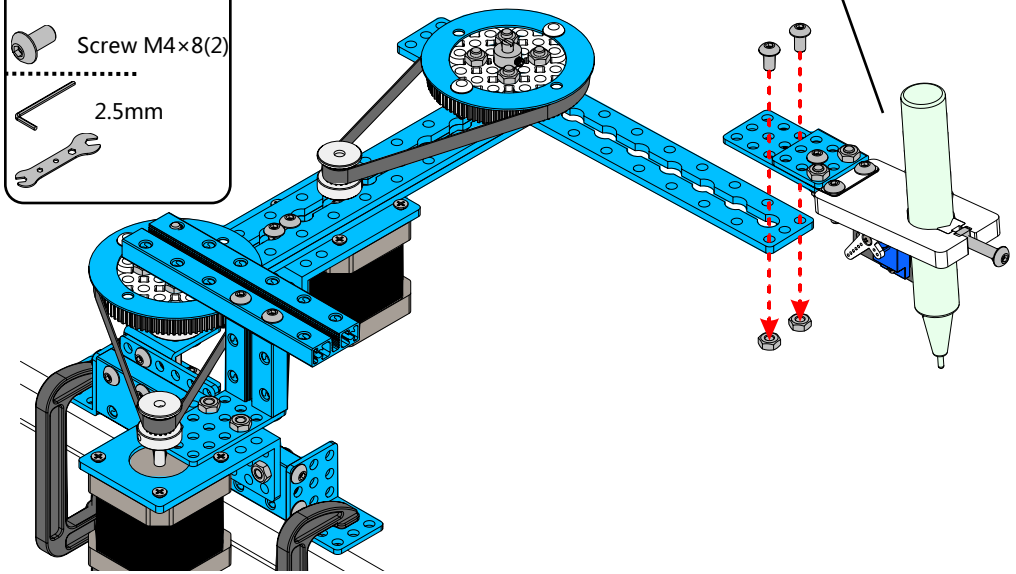

mSpider

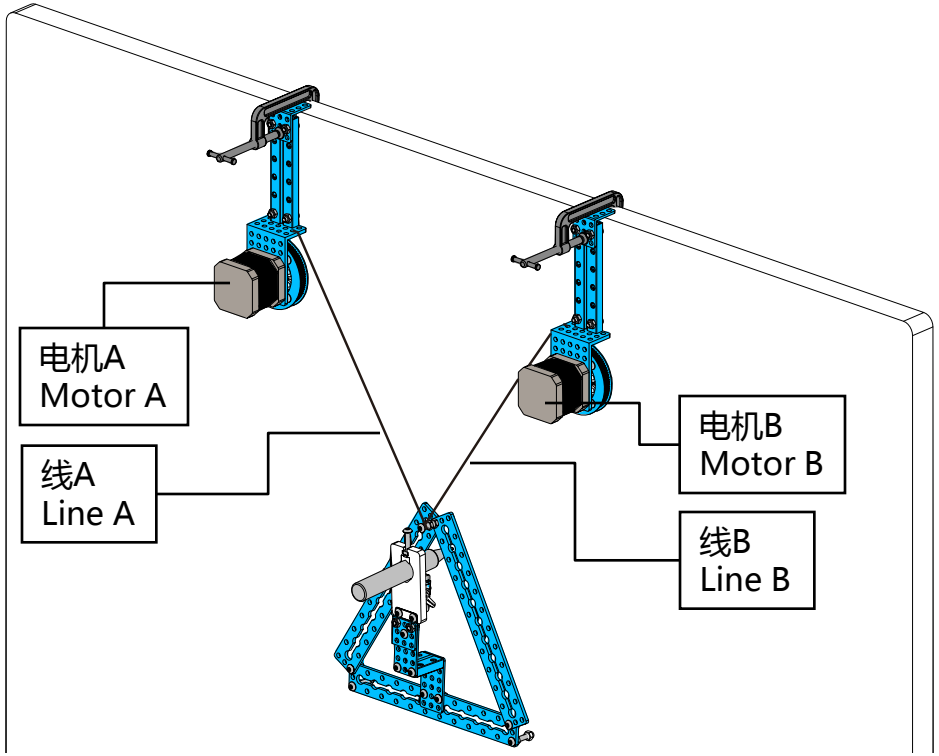

1


(1)

(2)

Nut M4(2)

Screw M4×22(2)

2.5mm

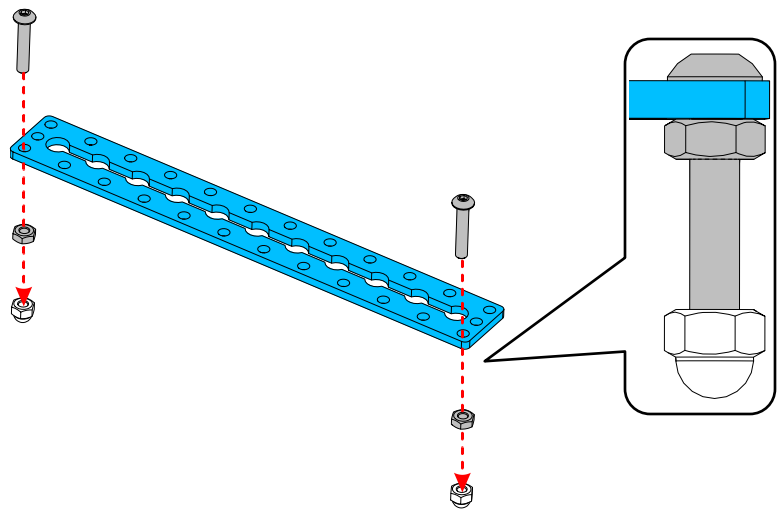


2

(2)

Nut M4(2)

Screw M4×14(2)

2.5mm

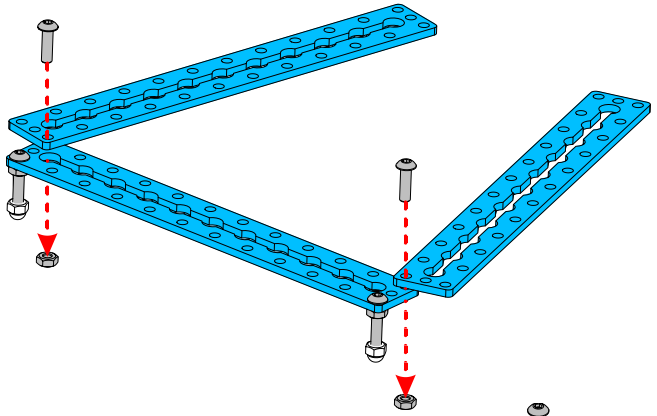


3

(1)

Nut M4(3)

Screw M4×35(1)

2.5mm

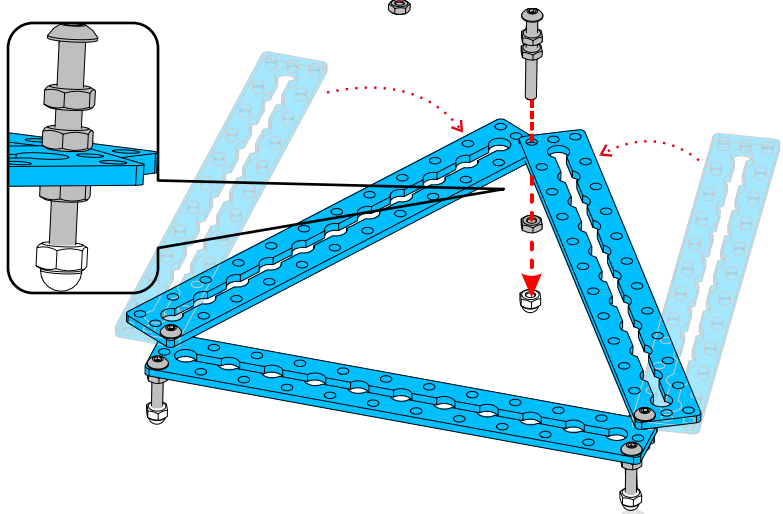

4


(1)

(1)

Nut M4(2)

Screw M4×8(4)

2.5mm

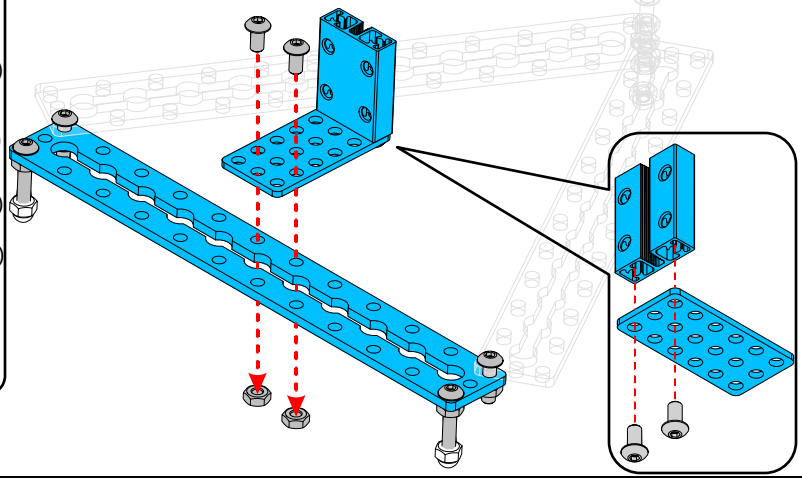


5

Screw M4×8(2)

2.5mm

Pen Lift Mechanism

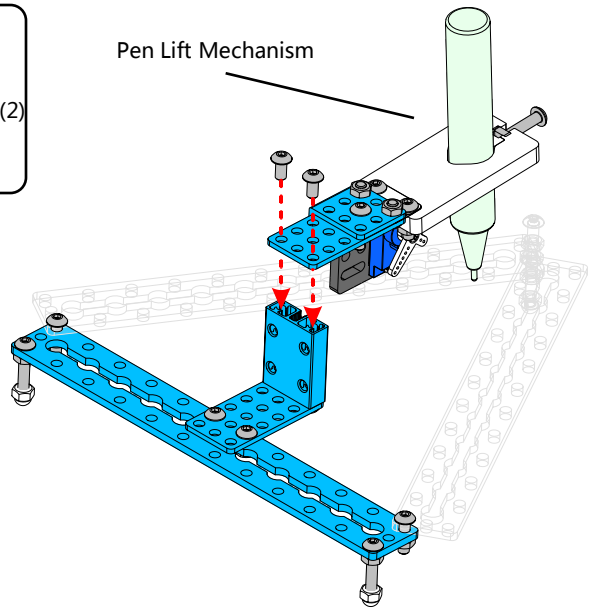

6

0824-96(1)

(1)

(1)


Nut M4(4)

Screw M4×14(4)

Screw M4×8(2)

2.5mm

×2

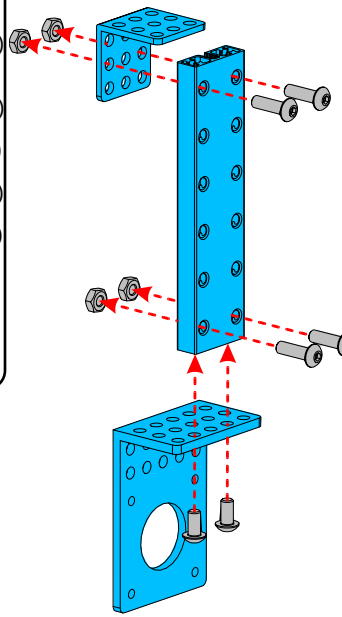


7

(1)

(1)

Screw M3× 8(4)

×2

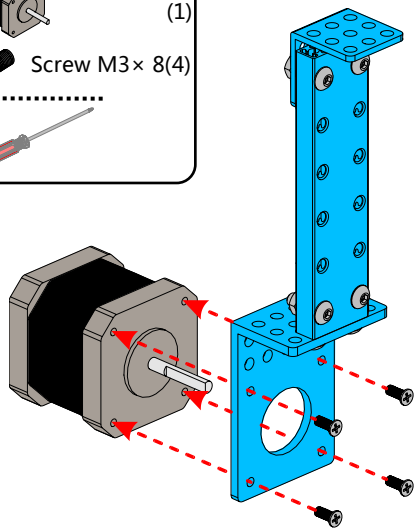

8


(1)

(1)

Screw M4×14(2)

2.5mm

×2

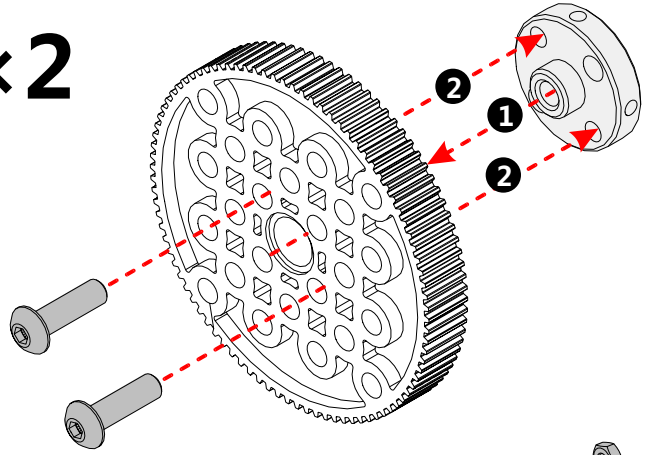

9


(2)

Nut M4(3)

Screw M4×14(3)

2.5mm


×2

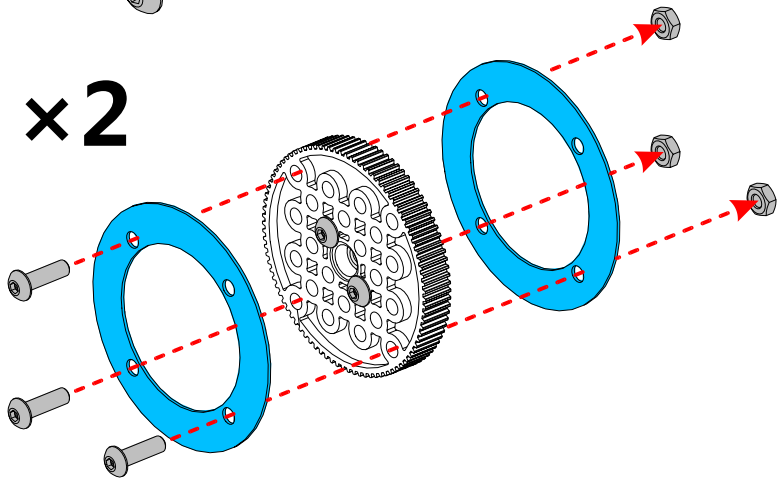

10

2~3m(1)


×2

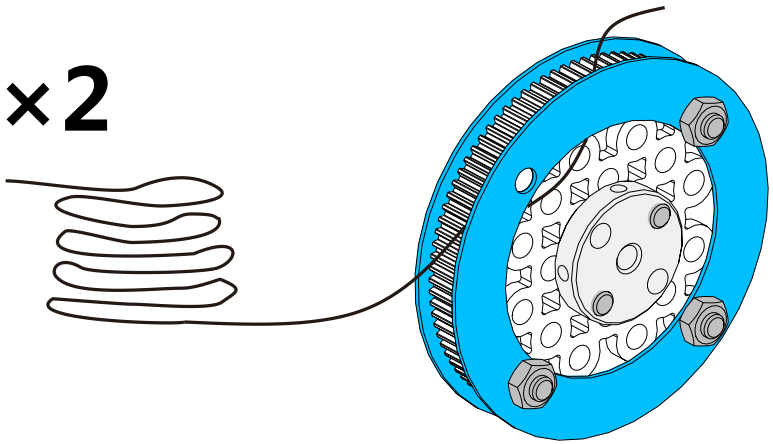

11

Screw M4×14(1)

×2

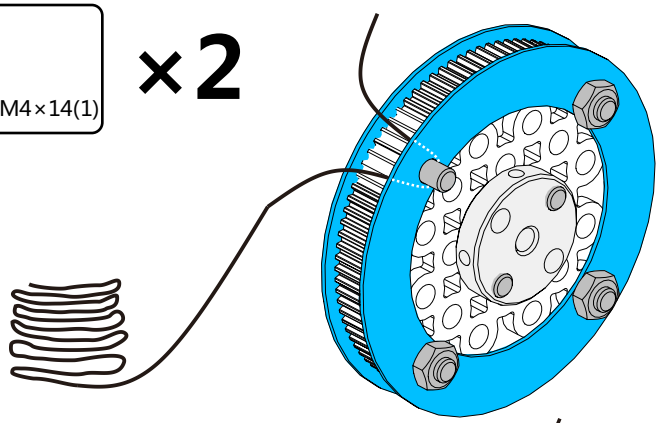


12

Nut M4(1)


2.5mm


×2

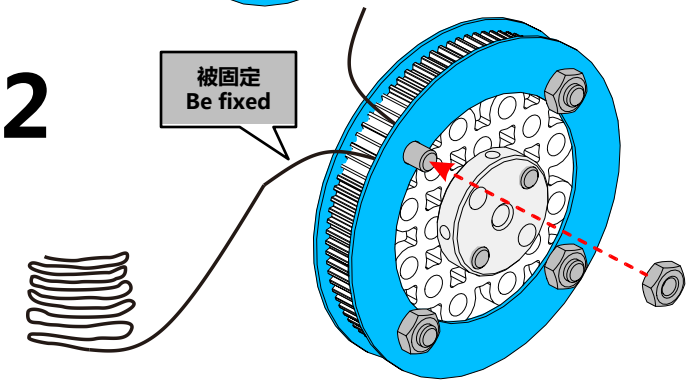


13

×2

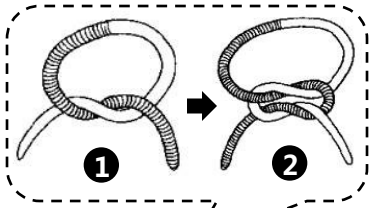

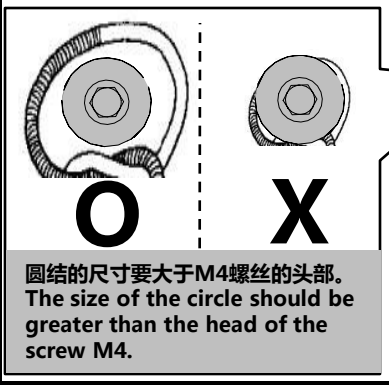

圆结的尺寸要大于M4螺丝的头部。
The size of the circle should be greater than the head of the screw M4.

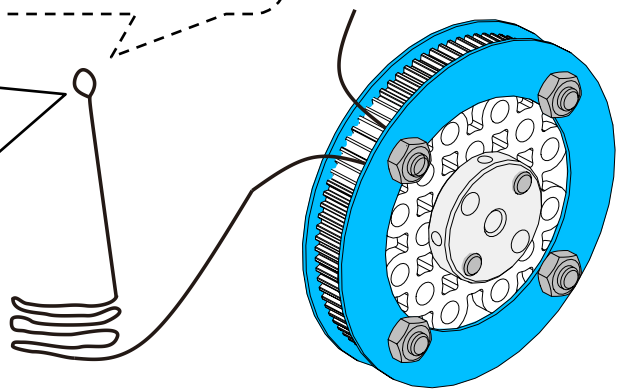


14


Screw M3×5(1)


1.5mm

×2

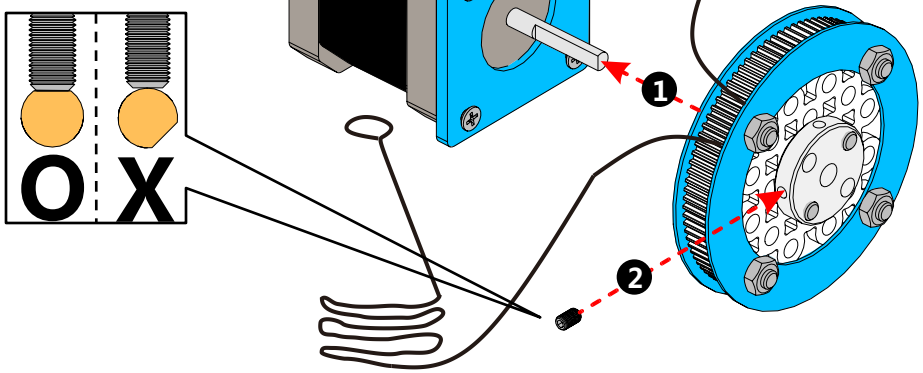



15

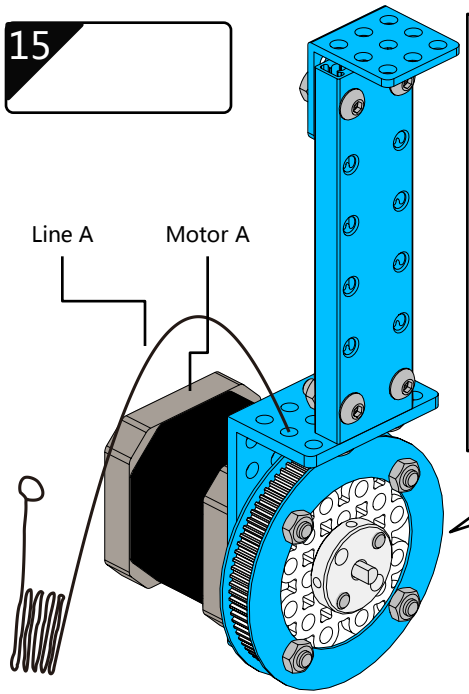

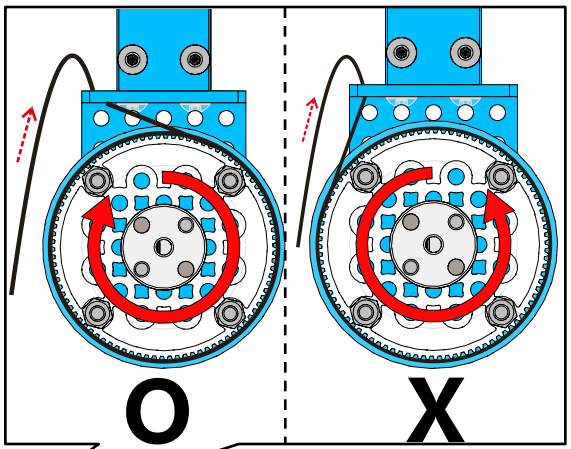


16

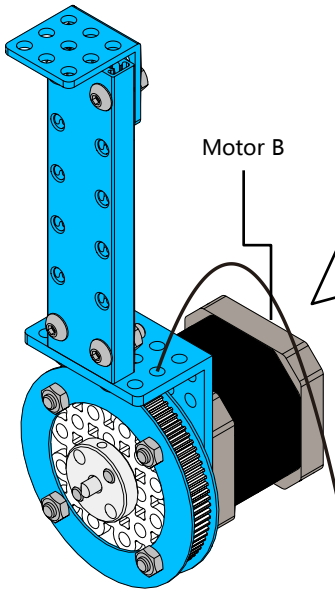

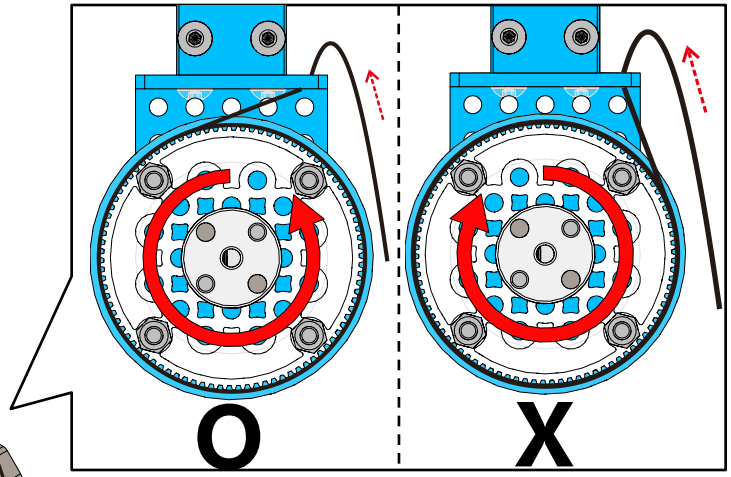





17





(2)

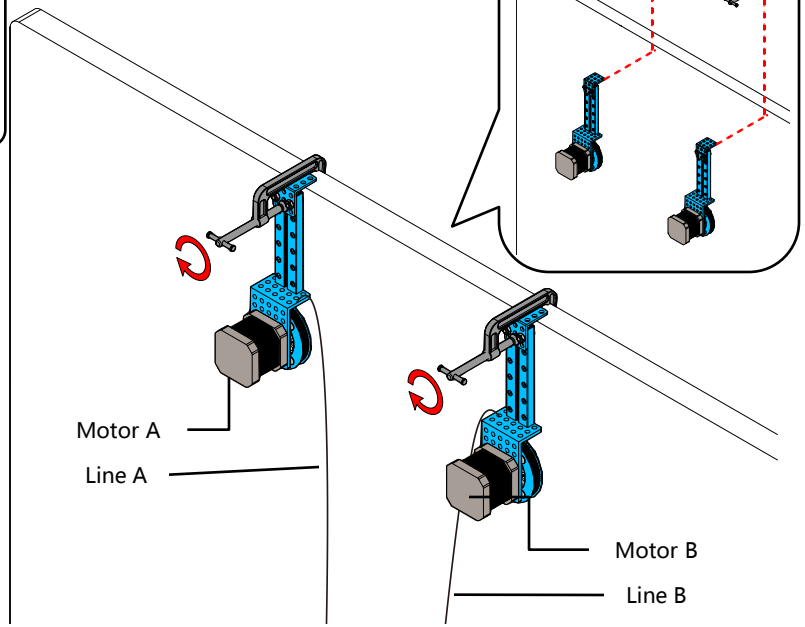


18

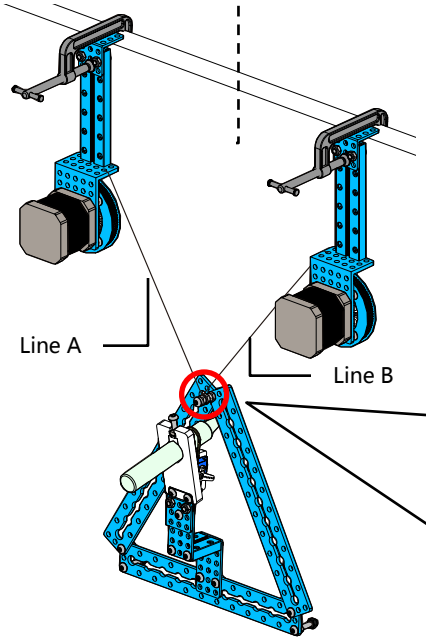

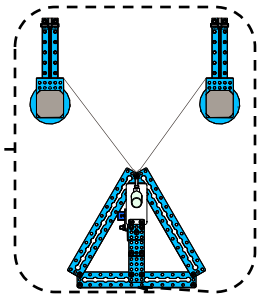


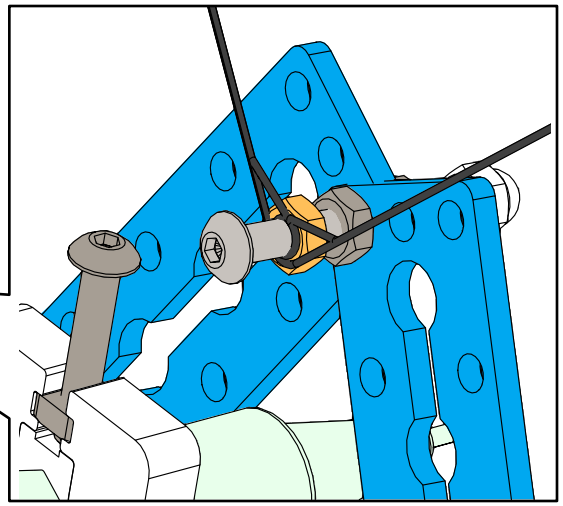


mEggBot

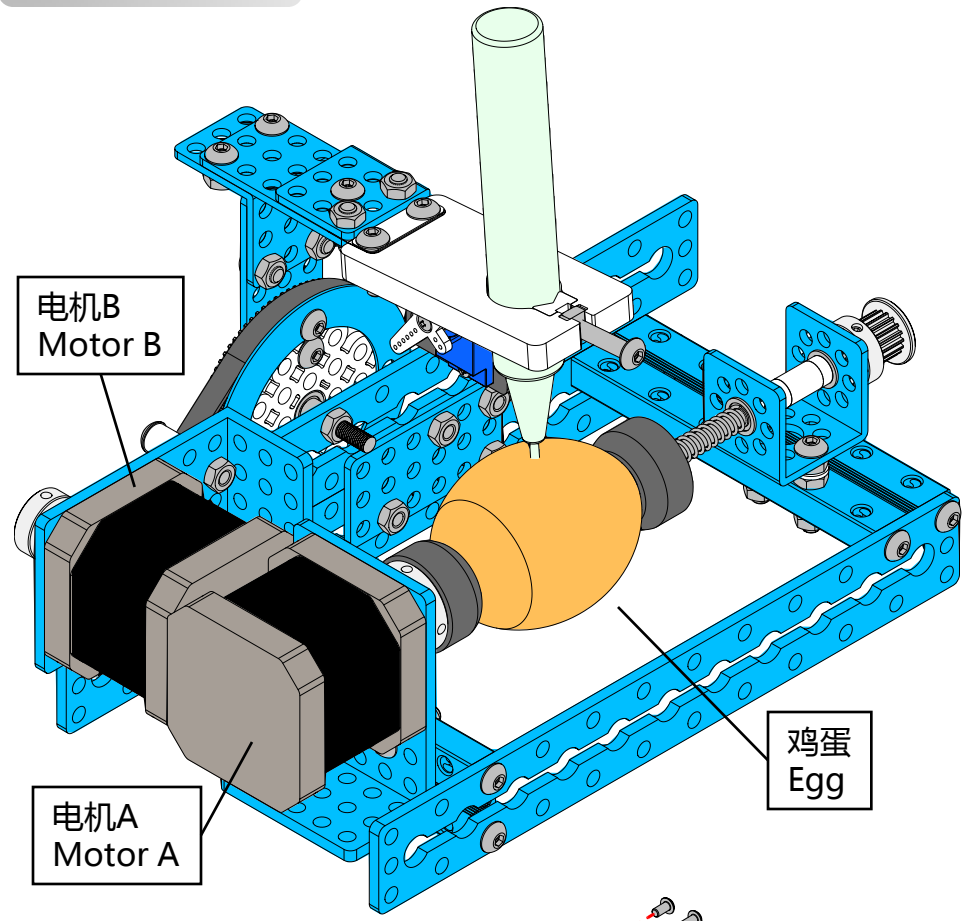



1

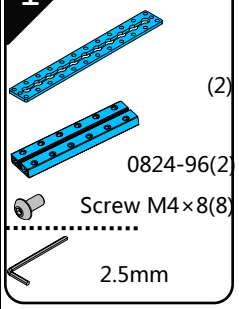

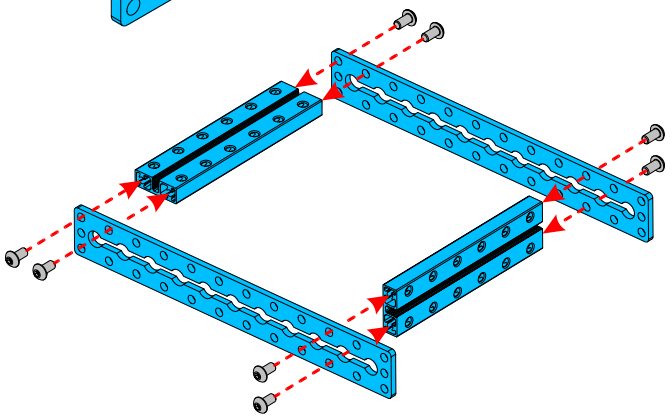



2

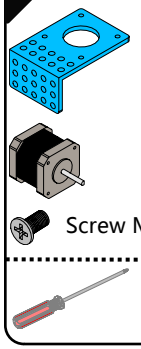

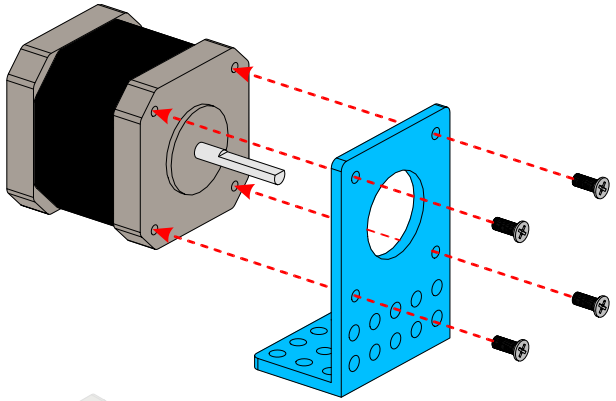



3

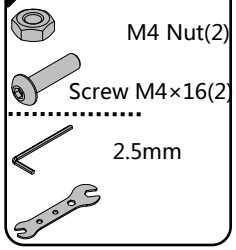


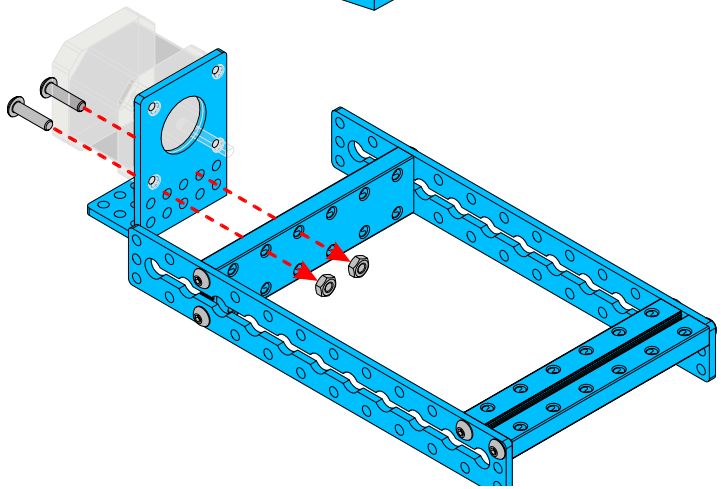



4




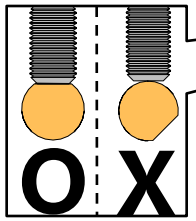


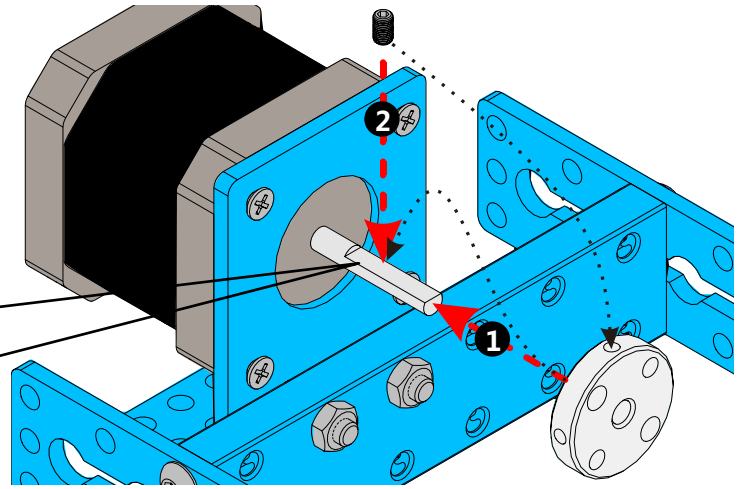


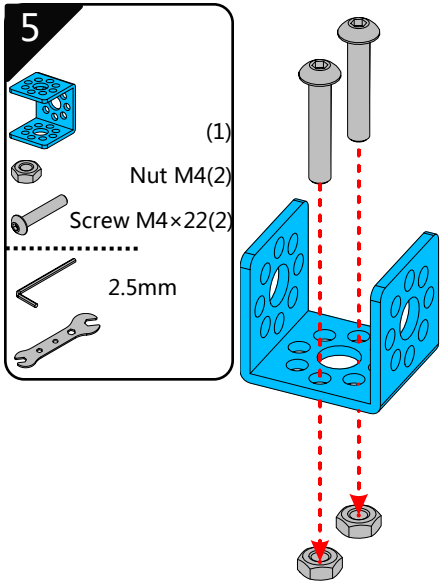

5
(1)
Nut M4(2)
Screw M4×22(2)
2.5mm

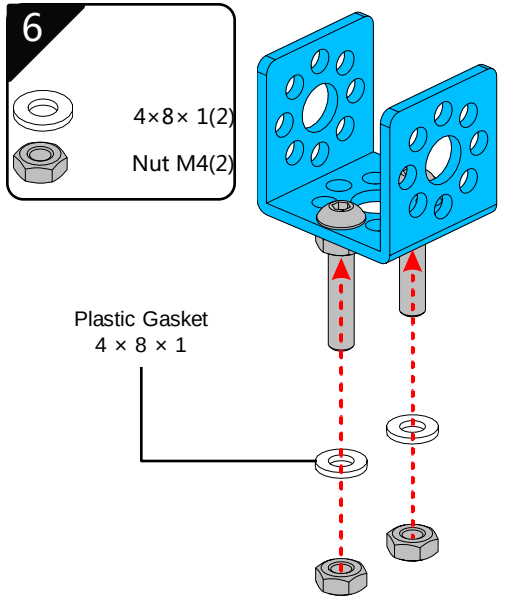

6
4×8× 1(2)
Nut M4(2)
Plastic Gasket
4 × 8 × 1

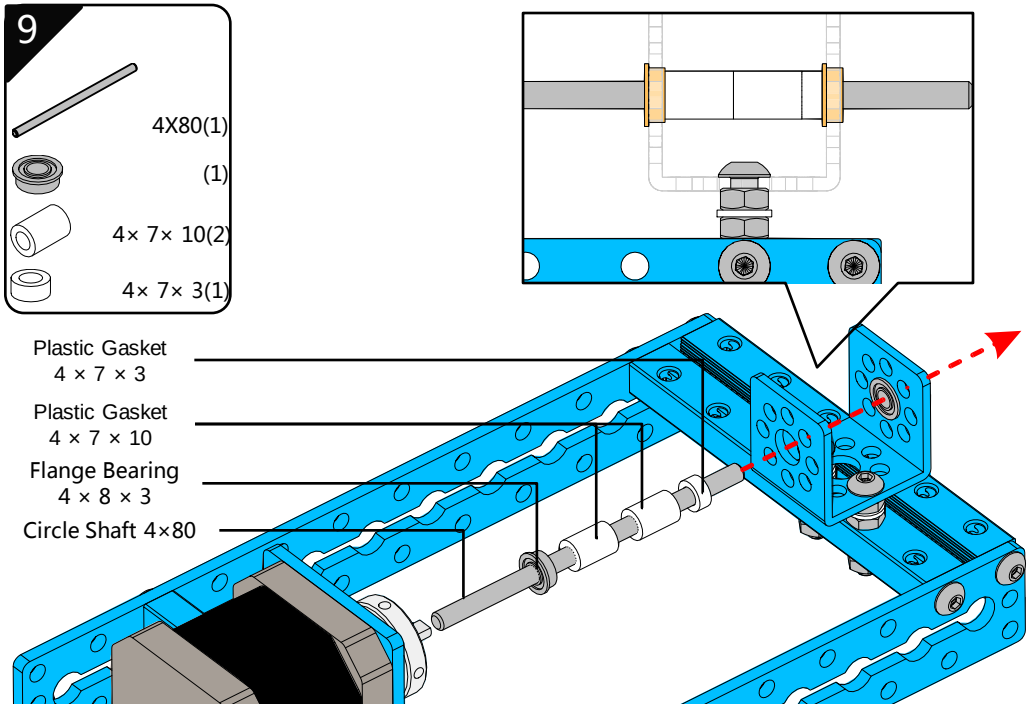
9
4X80(1)
(1)
4× 7× 10(2)
4× 7× 3(1)
Plastic Gasket
4 × 7 × 3
Plastic Gasket
4 × 7 × 10
Flange Bearing
4 × 8 × 3
Circle Shaft 4×80

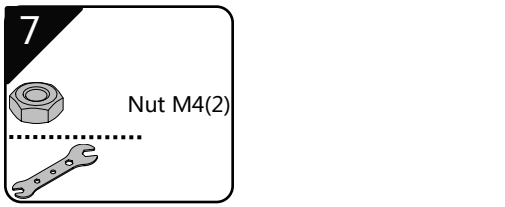
7
Nut M4(2)

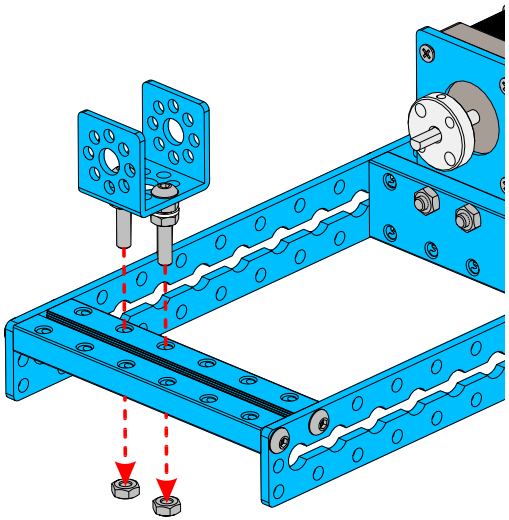

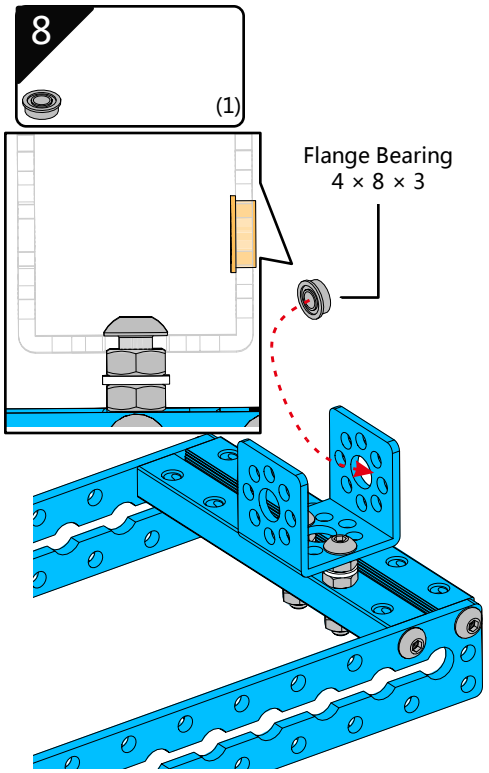

8
(1)
Flange Bearing
4 × 8 × 3

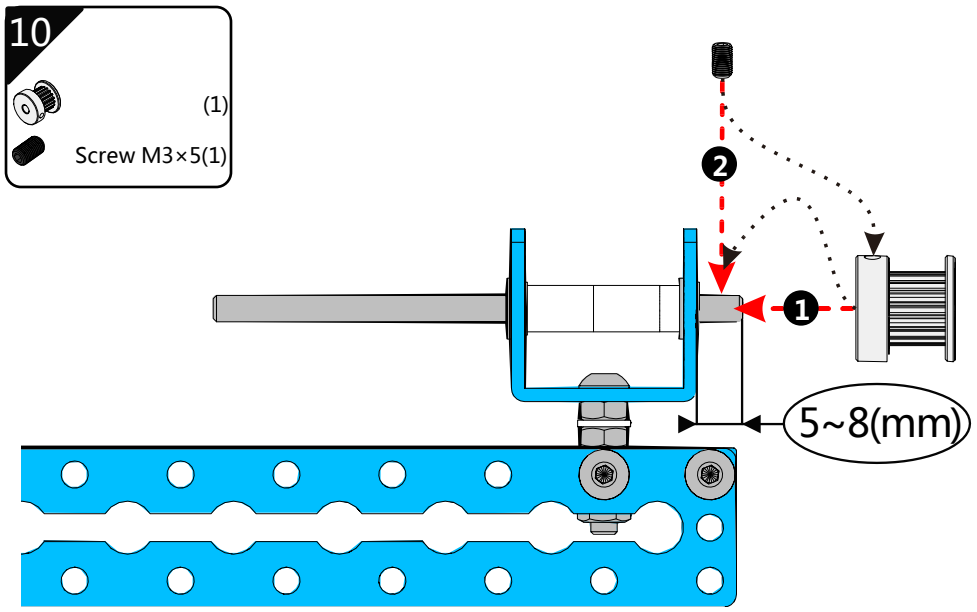
10
(1)
Screw M3×5(1)
2
1
5~8(mm)

11

(1)


4mm(1)

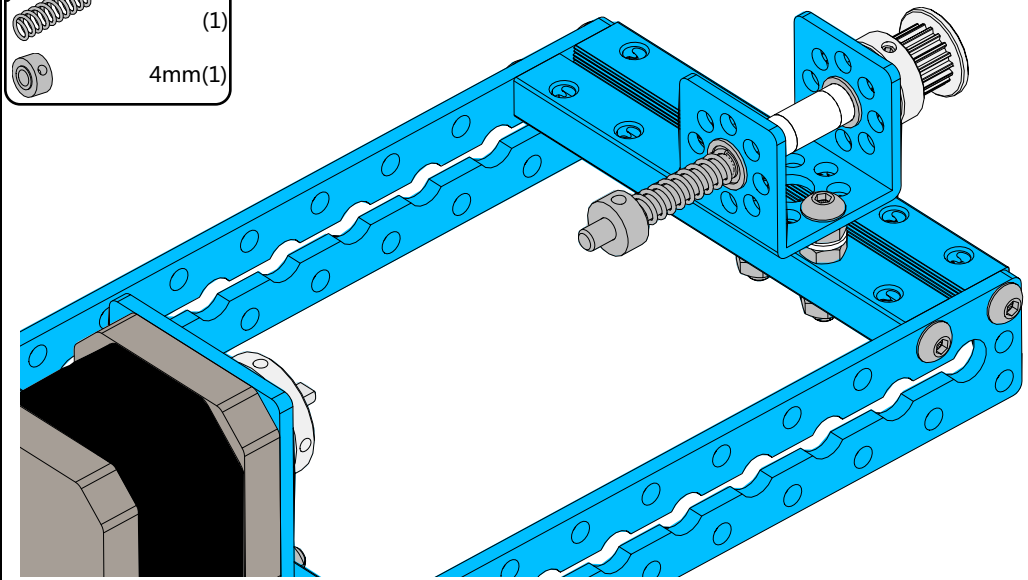

12


Screw M3×5(1)

1.5mm

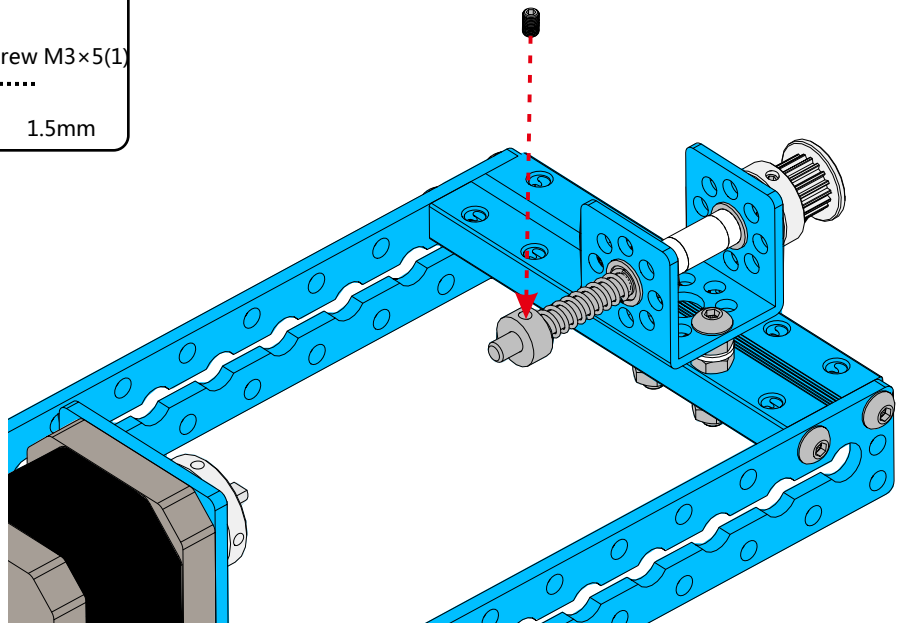

13

(2)

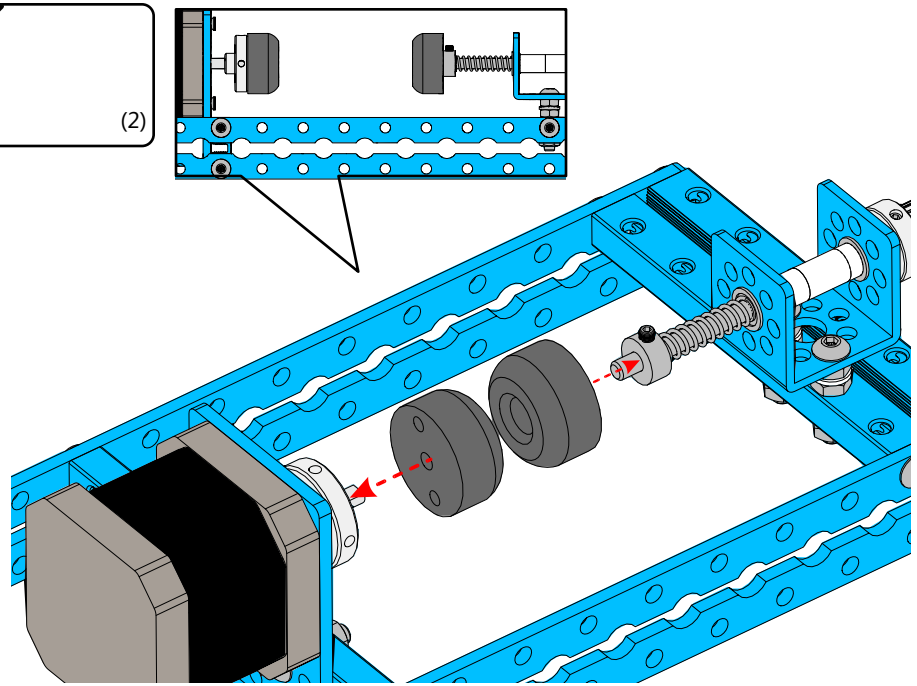


14

M4 Nut(2)

Screw M4×8(2)

2.5mm

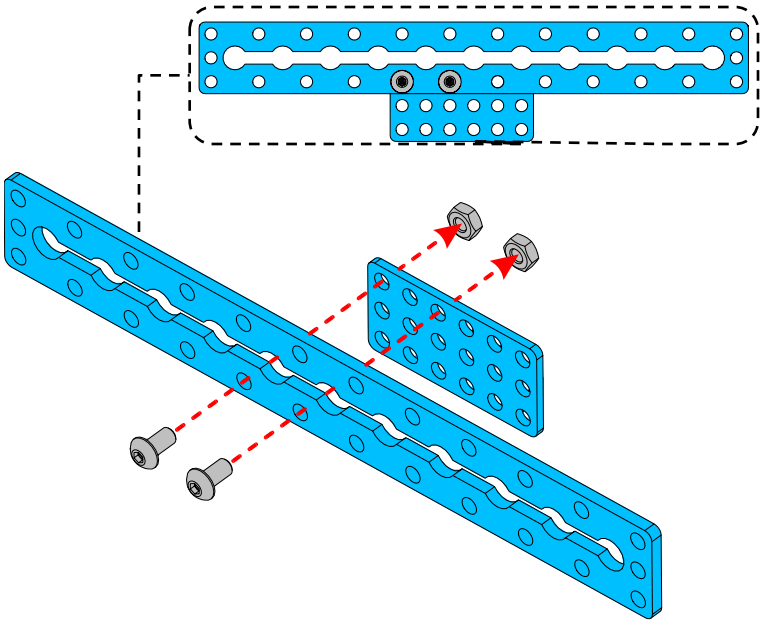



15

M4 Nut(2)

Screw M4×8(2)

2.5mm

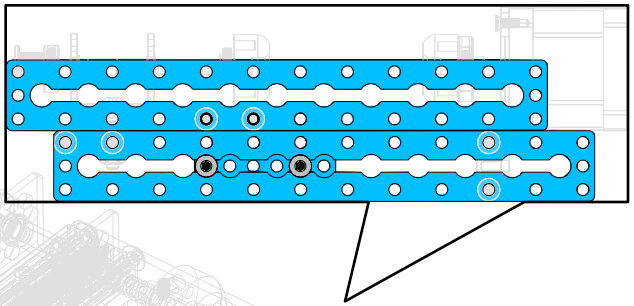

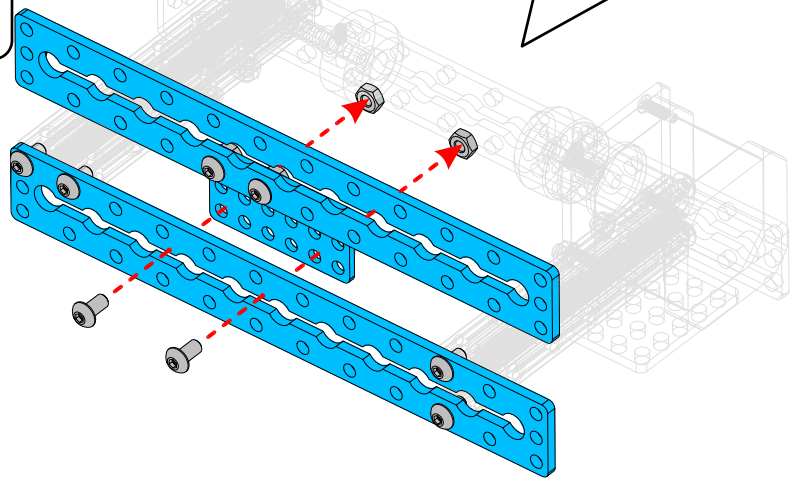


16

(1)

(1)


(2)

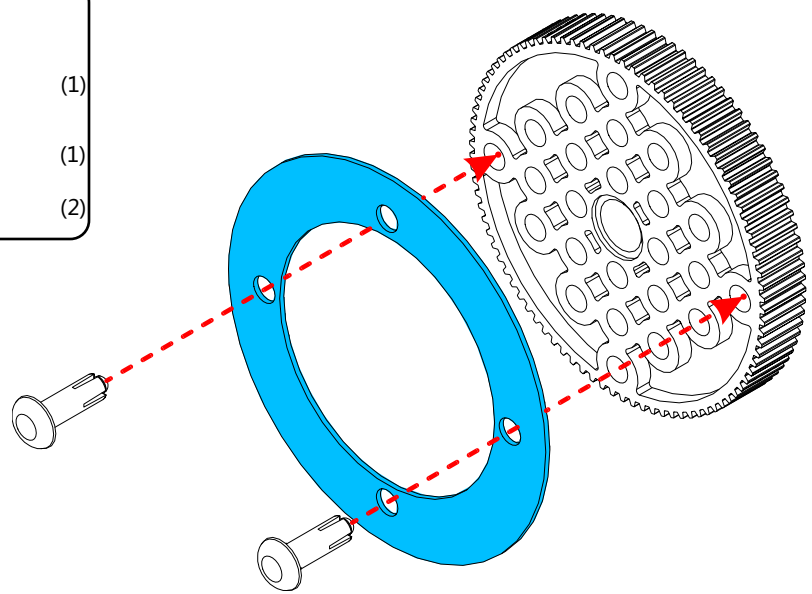

17

(1)

Nut M4(1)

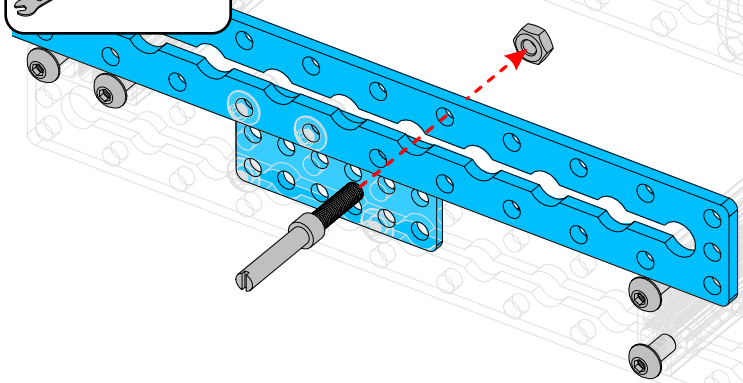


18


(2)

4mm(1)

Screw M3×5(1)

1.5mm

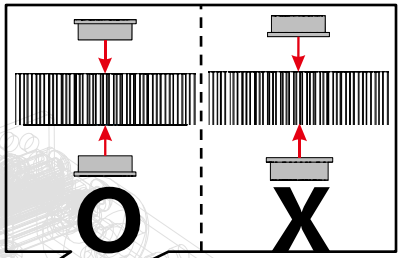

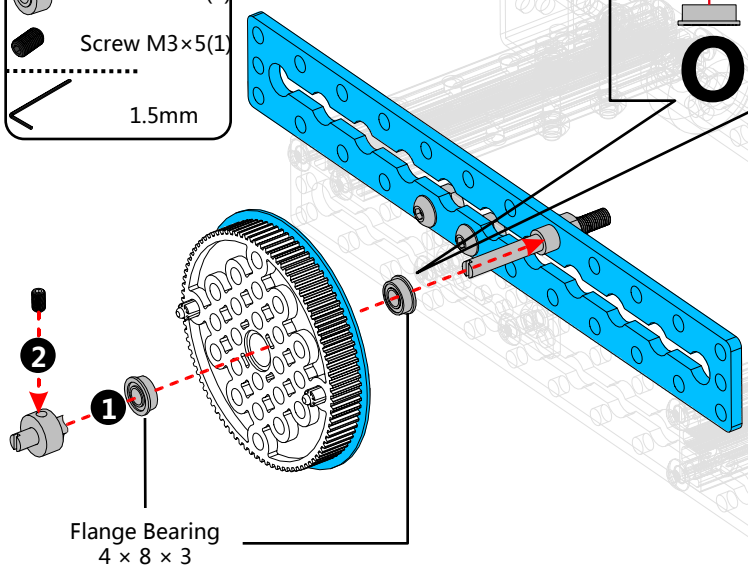

19

(1)


(1)

(1)

Screw M3× 8(3)

Screw M3×5(1)

1.5mm

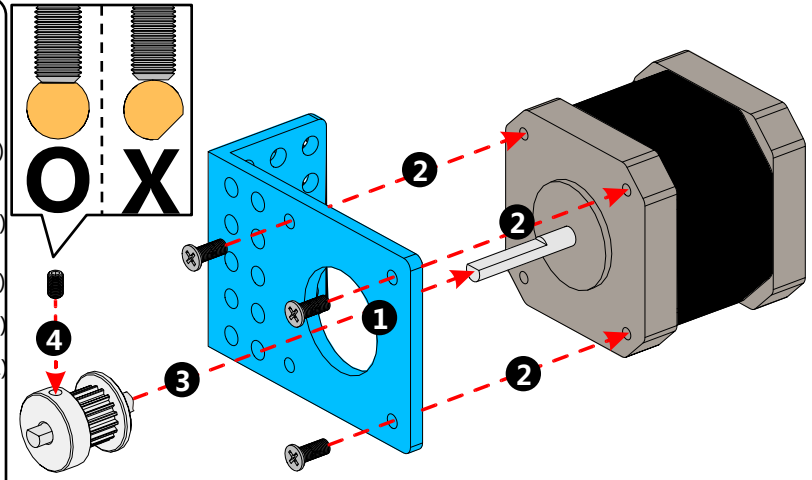


20

M4 Nut(2)

Screw M4×14(2)

2.5mm

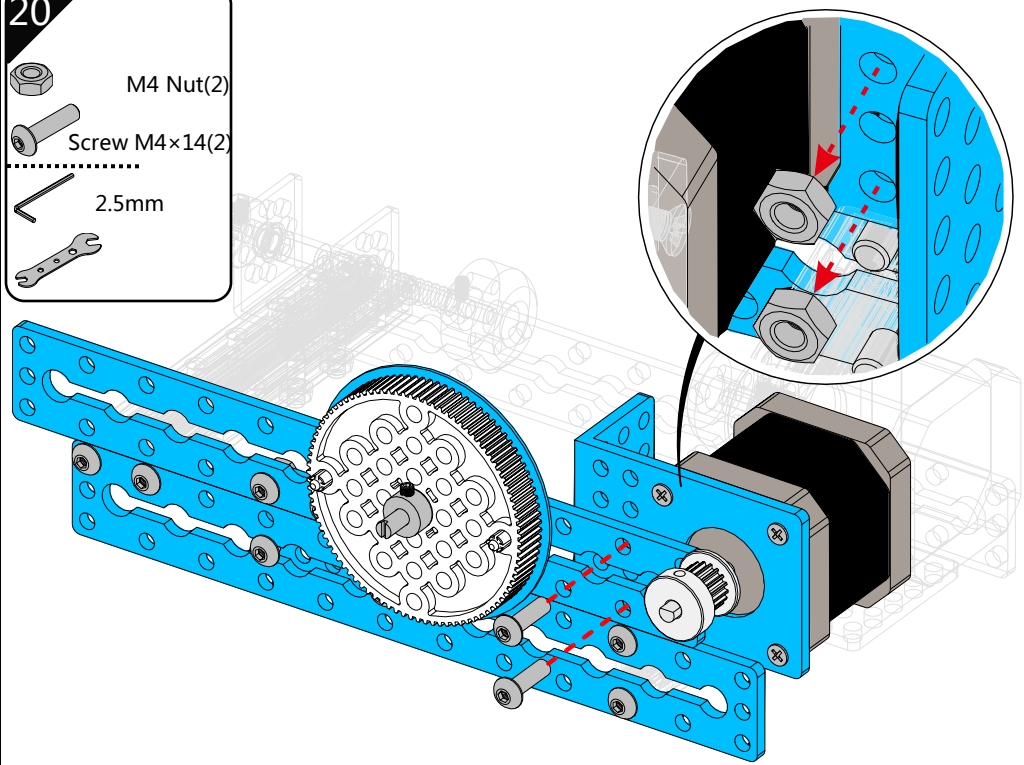

21

112MXL(1)


4× 7× 10(2)

4× 7× 3(4)

Nut M4(2)

Screw M4×22(2)

2.5mm

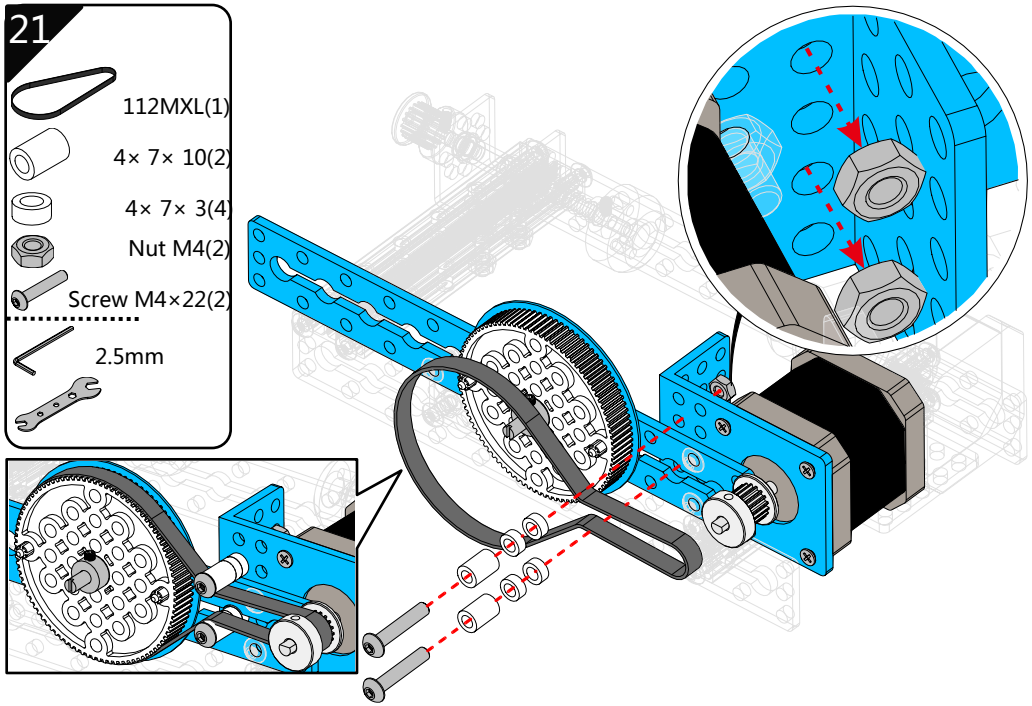


22

(1)

Nut M4(2)

Screw M4×14(2)

2.5mm

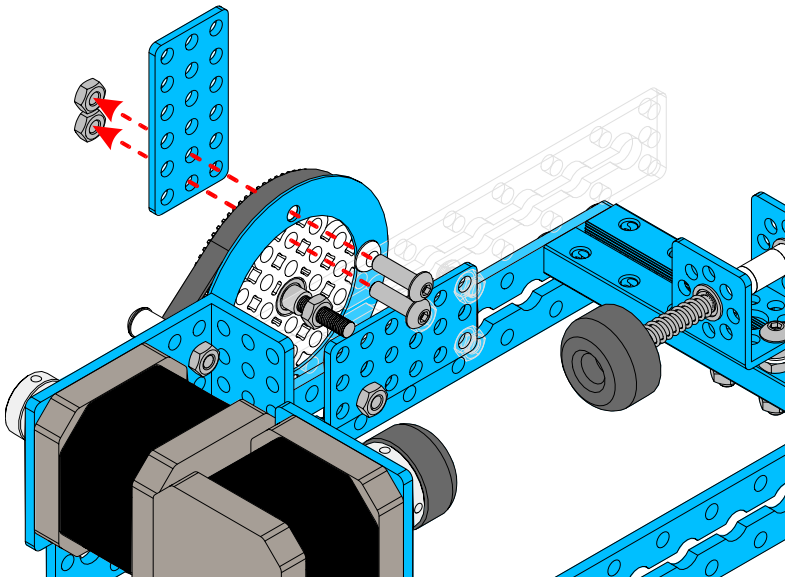


23

(1)

Nut M4(2)

Screw M4×8(2)

2.5mm

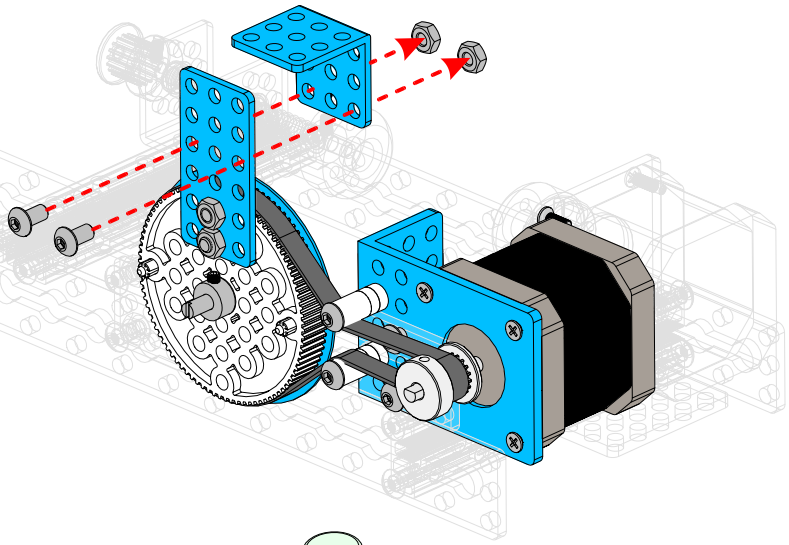


24


M4 Nut(2)

Screw M4×8(2)


2.5mm

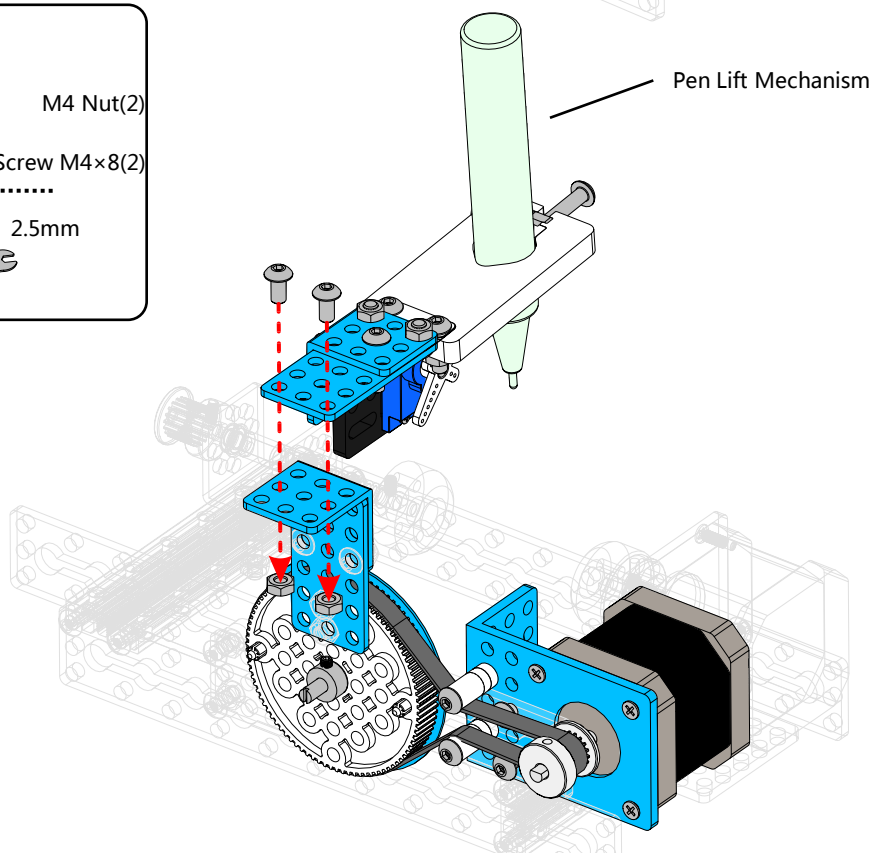


mCar

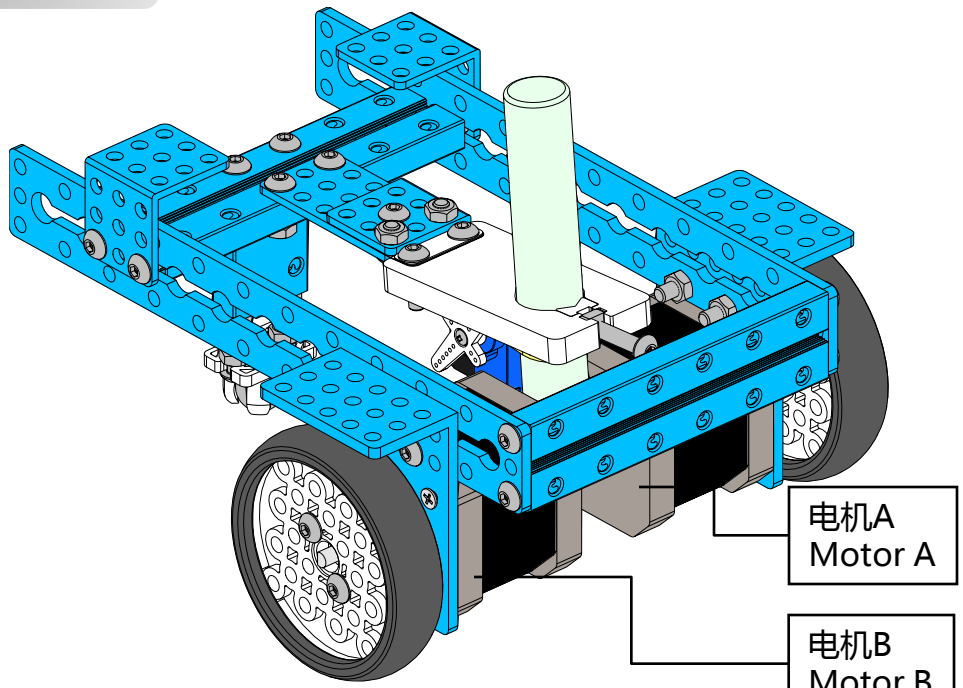

电机A
Motor A
电机B
Motor B


1

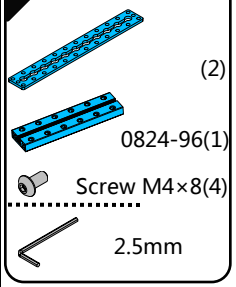
(2)
0824-96(1)
Screw M4×8(4)
2.5mm

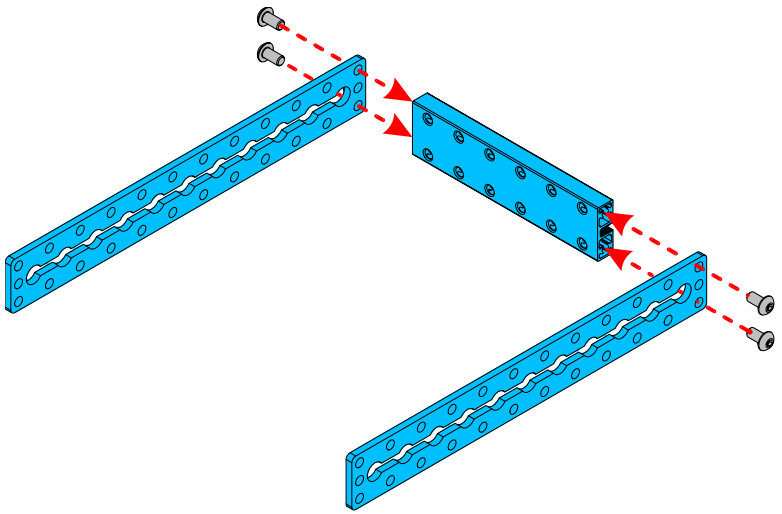


2

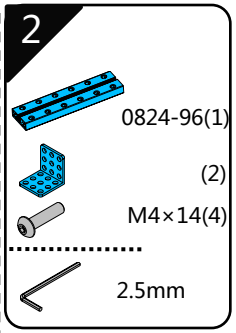

0824-96(1)
(2)
M4×14(4)
2.5mm

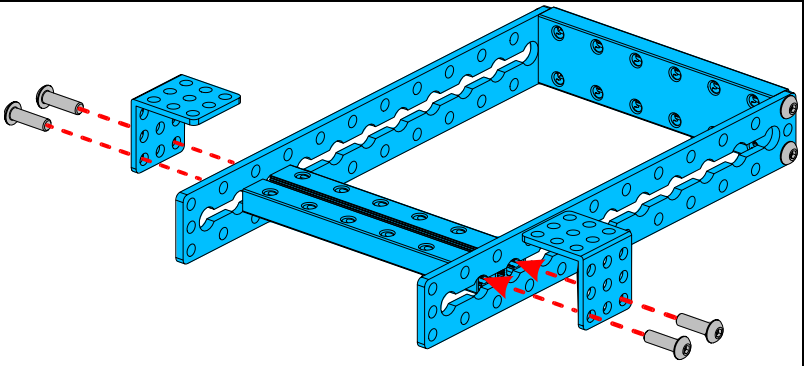


3

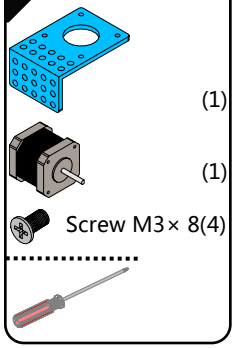

(1)
(1)
Screw M3× 8(4)

×2

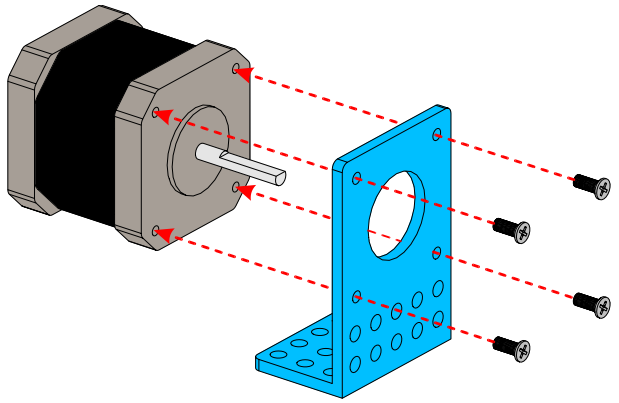

4

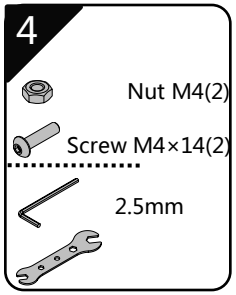
Nut M4(2)
Screw M4×14(2)
2.5mm

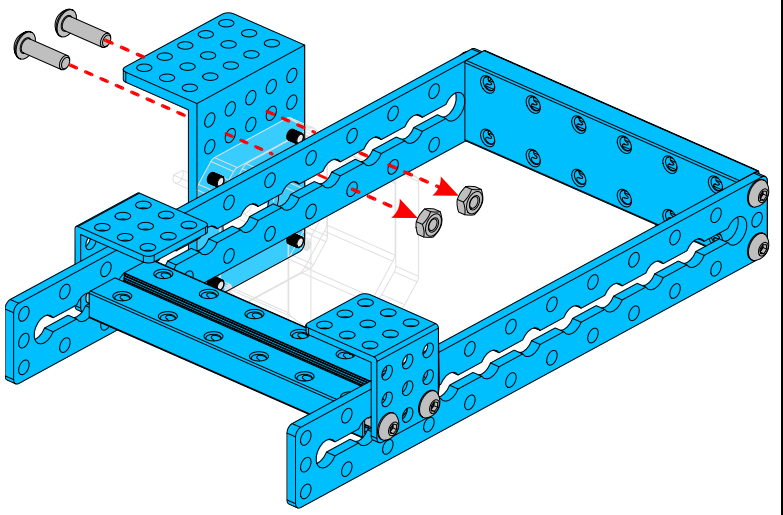


5

Nut M4(2)


Screw M4×14(2)

2.5mm

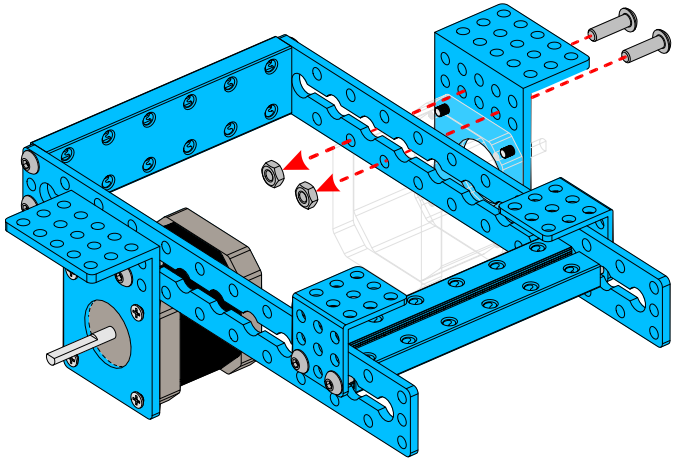

8

(2)

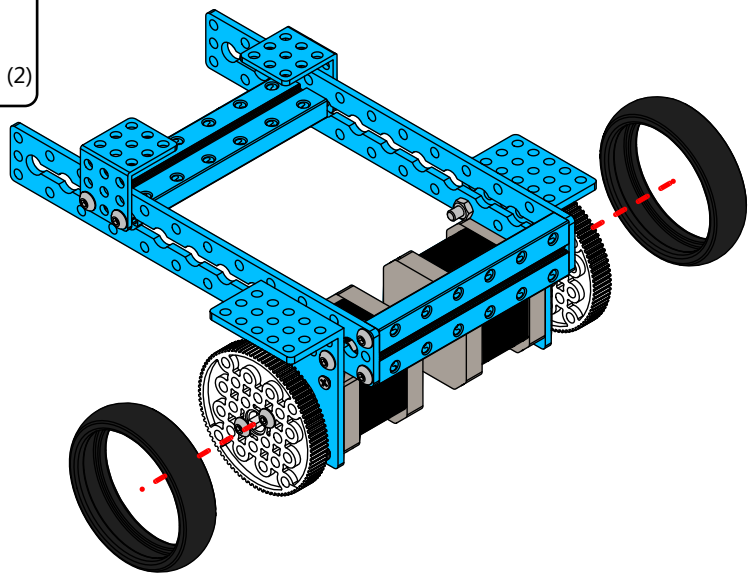

6


(1)

(1)

Screw M4×14(4)

2.5mm

×2

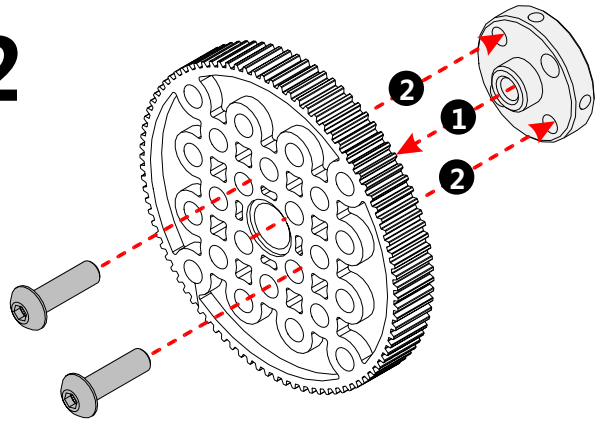


9


(1)


(4)

M4×22(2)

2.5mm

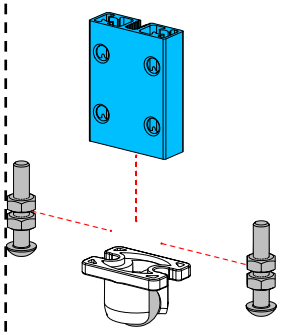

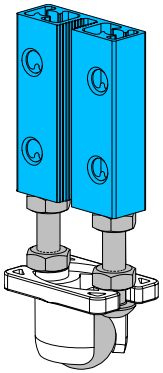


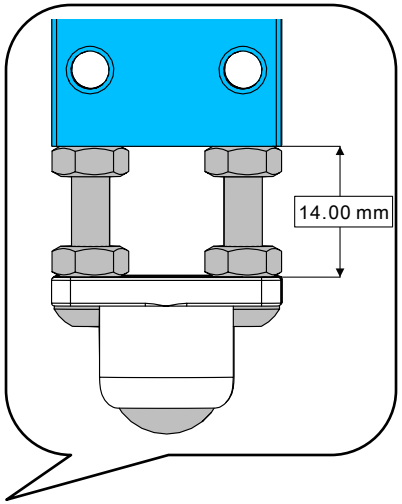

7

Screw M3×5(2)


1.5mm

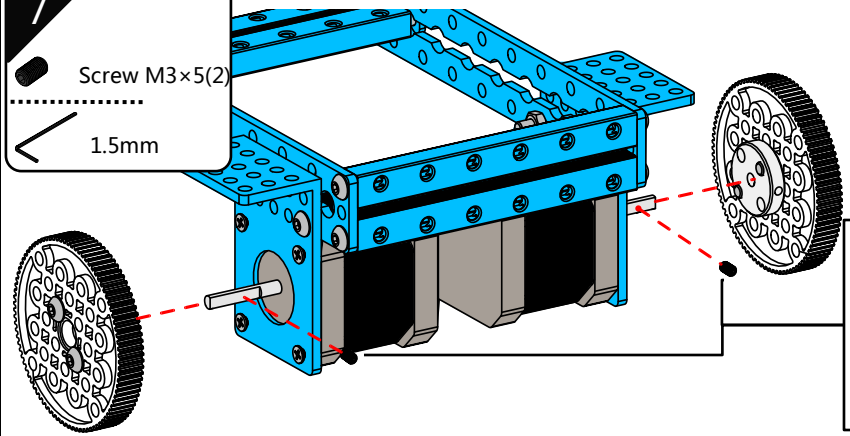

10

M4×14(4)

2.5mm

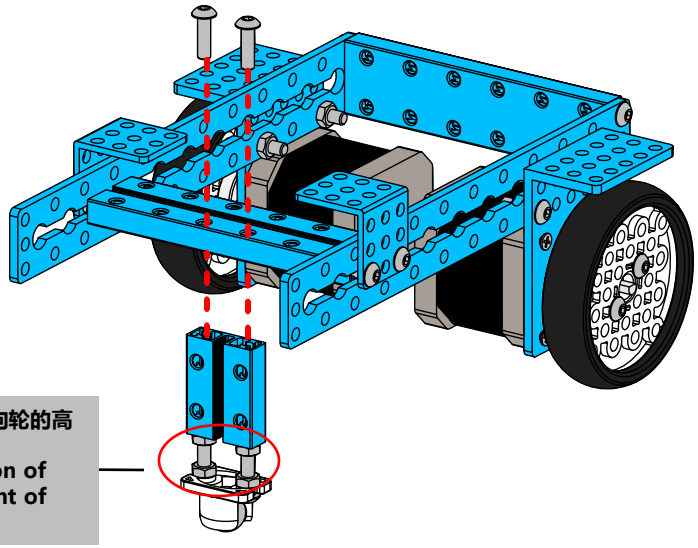

你可以通过调节螺母来调整万向轮的高度。
You can change the position of four nuts to adjust the hight of universal wheel.

11

M4×14(2)

(2)

2.5mm

