


## USB CONNECTOR

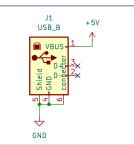

## CH32V003A4M6

PC1/SDA/NSS/T2CH4_/T2CH1ETR_/T1BKIN_PC2/SCL/URTS/T1BKIN/AETR_/T2CH2_/T1EPC3/T1CH3/T1CH1N_/UCTS_PC4/A2/T1CH4/MCO/T1CH1CH2N_PC6/MOSI/T1CH1CH3N_/UCTS_/SDA_PC7/MISO/T1CH2_/T2CH2_/URTS_PD1/SWIO/AETR2/T1CH3N/SCL_/URX_PD4/A7/UCK/T2CH1ETR/OPO/T1CH4ETR_	
--	--