


Rhino Multi-Tool Motion System

User Manual

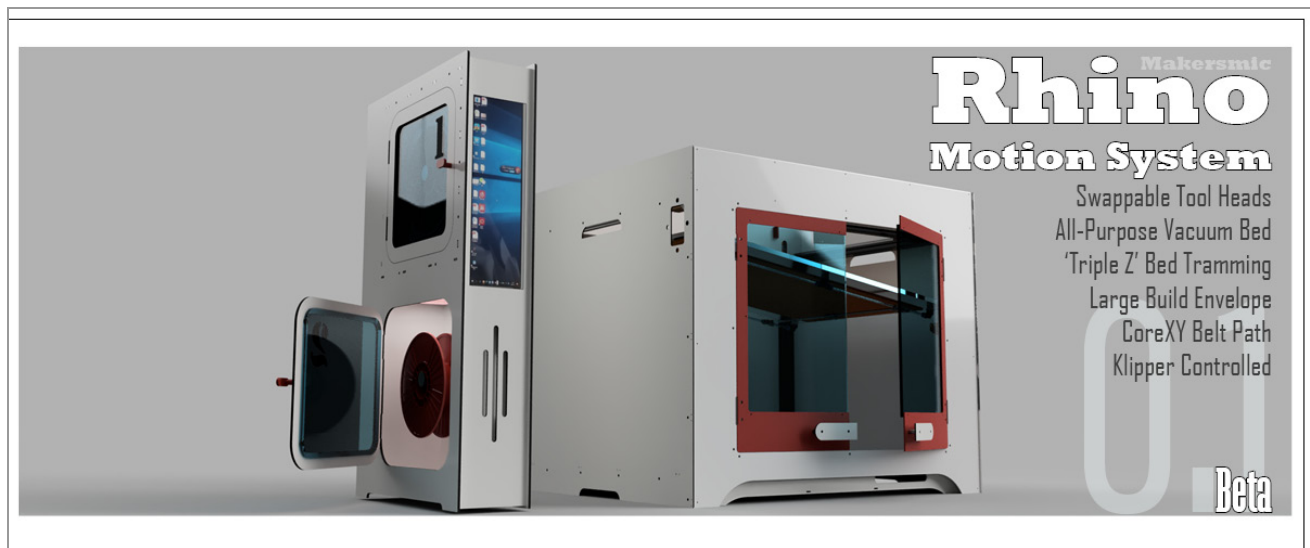

The Rhino is a multi-tool motion system equipped with a variety of tools to help you build your dreams. It uses Klipper firmware. Information can be found online at the Makersmic GitHub page.



Contents

Part 1 • The Rhino	3
About the Rhino	4
System necessities	6
The machine	8
Wiring and pin mapping	10
Part 2 • The Tools	21
The tools	22
BlockOne	24
SwitchFly	28
LightSaber	32
HotJoe	36
DragKnife	40
Tools you add	44
Rhino tools log	52
Part 3 • Software and Operation	55
How the software fits together	56
Install and first start	57
Swapping tools	59
Running a job	60
Pause, resume and cancel	63
The Tool Manager portal	64
Pins, outputs and system hardware	79
Admin lists	82
Console commands	85
Safety systems	87
Part 4 • Maintenance	89
Maintenance tracking	90
Task Library and Task Books	99
Status codes	104
Maintenance procedures	106
Part 5 • Reference	109
Troubleshooting	110
Files, backups and tests	112
Build reference	114

PART 1

The Rhino

The machine, what it needs, and how it is wired.

About the Rhino


System necessities

The machine

Wiring and pin mapping

About the Rhino

One motion system, five built-in tools, and room for more: the Rhino changes discipline by changing the tool on its X-carriage, and Klipper changes behaviour to match.

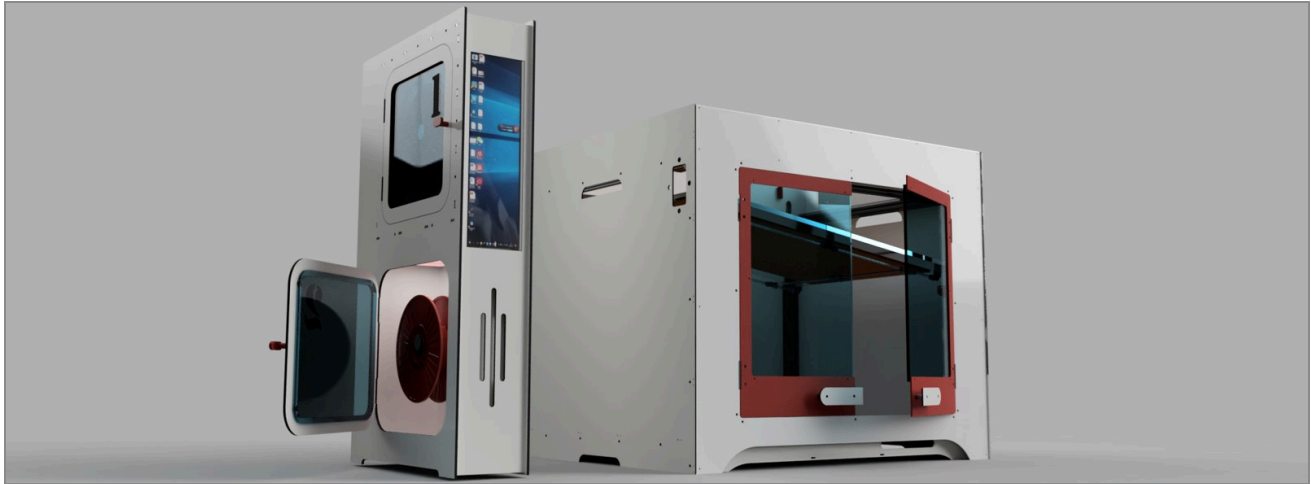

Full assembly render: the enclosed machine and its side tower with display and filament bay

Feature	Rhino
Motion	CoreXY, 15 mm GT2 belts on X and Y (3 m per belt, 6 m total)
Axis travel (from <code>printer.cfg</code>)	X 576 mm, Y 406 mm, Z 400 mm
X axis	MGW7 linear rail with MGW7H carriage on an aluminium-tube gantry
Z axis	Three leadscrews (rear T12×2, front T8×2) on kinematic couplings; automatic tramming with <code>Z_TILT_ADJUST</code>
Build plate	Aluminium heat spreader with silicone heater mats, air-gap insulated; designed as an all-purpose vacuum bed
Enclosure	3 mm ACP panels with twin front doors
Tool change	Tool slides onto the carriage's V-groove, held by one M3×50 bolt and knurled nut; one 21-pin umbilical plug
Tools	Print heads (BlockOne, SwitchFly), LightSaber laser, HotJoe CNC spindle, DragKnife, plus tools you add
Air	"Fresh Air" lines: print part cooling, laser blow-air, spindle chip evacuation
Controller	BTT Octopus (STM32F446)
Software	Klipper, Moonraker, Mainsail, the Rhino Tool Manager; OrcaSlicer for printing, LaserWeb 4 for laser and drag knife (Kiri:Moto is being looked at)

The design files, drawings and build notes are in the Makersmic `Rhino-3d-Printer` repository on GitHub (see *Build reference*). Still in development there: the “Cheeky Monkey” filament box (filament monitoring, air handling, chip exhaust) and a needle-cutter tool.

System necessities

Klipper runs on a wide range of controller boards, so the Rhino is not tied to one. This manual and the configuration are written for the Big Tree Tech Octopus v1.1, but any controller will do if its microcontroller and mainboard provide what the two tables below list. The third table is the additional hardware the build needs: power, switching, protection and wiring for the electronics cabinet, plus the mechanical parts.

Microcontroller	
1	Capable of running Klipper firmware
2	1 × 24 V hotend PWM channel
3	1 channel capable of controlling a 5 V servo
4	7 × 24 V PWM channels
5	3 × 24 V on/off channels
6	3–5 thermistor input channels
7	6–8 individual stepper outputs
8	1 RGB LED channel
9	3 endstop inputs

Mainboard	
	Capable of running Klipper firmware
	2 USB channels

Qty	Recommended additional hardware
3	DIN-mount SSR rated 3–30 V / 220 V
3	DIN-mount 24 V / 24 V SSR
1	21W4 female socket connector
1	40 mm double-stack Delta fan
1	40 mm fan
2	DIN-mount 20 A circuit breaker, 12–120 V
1	DIN-mount CP40-1P 275 V surge protection
1	DIN-mount DZ47-63 3P breaker
24	211B terminal block
50	Fusable-style terminal block
4	DIN-mount UK10-DREHSI connector
6	300 mm DIN rail
3	Solid-state relay heatsinks
1	WJ175 JQX-38F high-current relay
3	12 V white LED strips
1	12 V RGB LED strip


Qty	Recommended additional hardware
1	12 V power supply
1	24 V power supply
1	T12 leadscrew
2	T8 leadscrew with the same lead as the T12
4	20T 15 mm belt 2GT pulleys (5 mm bore)
12	608zz ABEC-7 bearing
4	12 mm bearings
16	15 mm idler pulleys
6	5 mm × 120 mm stainless steel toy shafts
2	8 mm × 200 mm stainless steel toy shafts
4	M/F 8 mm × 20 mm camera rosette
1	110 V fused power plug
1	220 V power plug
6–8	NEMA 17 stepper motors
3	Optical endstops
1	8 ft CPAP hose
1	PC817 12 V optocoupler

The machine

Every tool rides the same gantry and plugs into the same 21-pin umbilical; only the wiring of each individual tool travels with it.

Gantry


The X beam is 1" aluminium square tube (1/16" wall), lightened with cut-outs made from 3D-printed router templates. The "Bulkup" XY joiners (April 2023) carry extra material at the pulleys and stopped the beam sagging where it meets the joiners. The A/B stepper motors must be no more than 48 mm long with a shaft under 30 mm; they stand on M3×30 mm aluminium standoffs.

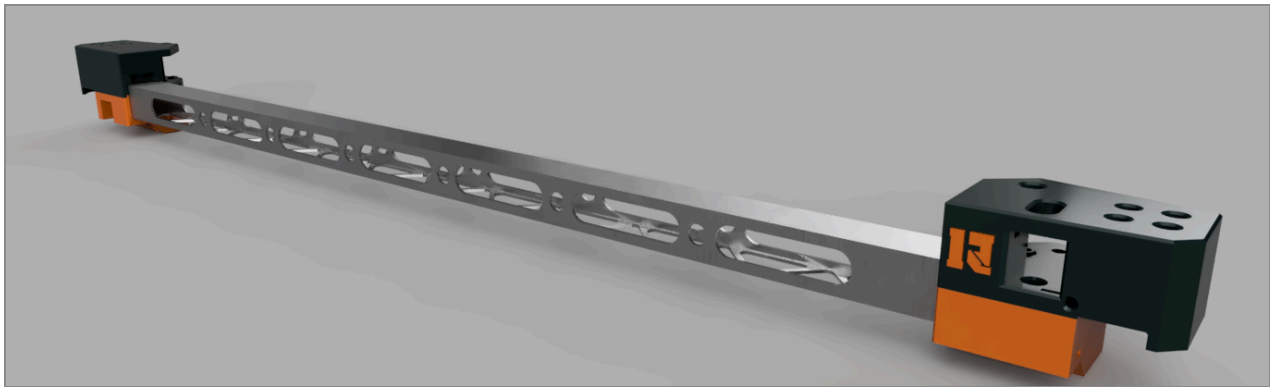

X gantry beam with the Bulkup XY joiners

X-carriage and tool slot

The carriage runs on an MGW7 rail and carries the tool lock, the belt clamps and the optical X endstop. A tool slides down into the V-groove on the carriage face, which aligns it, and one M3×50 bolt with a knurled nut (or wing nut) clamps it.

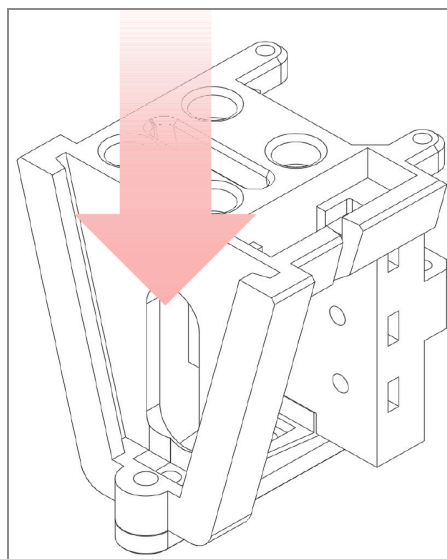

X-carriage detail: the tool drops into the wedge-type slot

Z axis

The bed rides three leadscrews — one T12×2 at the rear, two T8×2 at the front — joined to the plate by kinematic couplings. Each screw is belt-driven through a 2:1 reduction on closed-loop 15 mm GT2 belts of 180–190 mm, and `printer.cfg` matches it with `gear_ratio: 2:1` on all three Z steppers. Because each corner has its own motor, Klipper trams the bed with `Z_TILT_ADJUST`.

Electrical cabinet

The BTT Octopus controller switches every heavy load through a DIN-rail relay, which keeps high currents off the board and makes a failed relay a quick swap.

Circuit	Switched by
12 V low-current: LED and NeoPixel lighting, fans	700-TBR24 6 A relay
12 V high-current: laser module, vacuum pump	JQX-13FL 10 A relay
24 V spindle (ESC power)	JQX-38F 40 A relay
Heated bed mats	Solid-state relays

Power comes from separate 24 V, 12 V and 5 V supplies. DIN-rail fuse holders protect the stepper motor lines against shorts. Bridgeable distribution blocks spread power; Wago-style blocks (the “Hub”) terminate the umbilical inside the cabinet.

The umbilical

An essential assembly of the Rhino, the umbilical provides all the connections each toolhead needs. It uses a 21W4 socket connector for every tool connection, with automatic reconfiguration between tool changes, and the umbilical LED strip signals user-specified alarms.

Each tool ends in a male 21W4 D-sub (four high-current contacts plus seventeen signal pins); the female half is fixed at the top rear of the frame with the Hub below it. The cable is braided Cat5 plus two 14 AWG conductors. Pins 1, 2, 11 and 12 are the high-current contacts.

The pin-by-pin assignment of the umbilical, with the board pin behind each contact, is in *Wiring and pin mapping*. Each tool's own page in *The tools* shows which contacts that tool uses.

Why every tool has a thermistor. Klipper's extruder expects a temperature reading at all times. Rather than editing `printer.cfg` for each tool, every tool carries the same thermistor type on pins 3–4 (the laser's is on its heatsink). The swap wizard reads it to confirm the umbilical is seated.

Constant connections do not pass through the umbilical; they run to the carriage through the *Back Bone*: the X endstop (3 wires), the umbilical LED strip, the chamber temperature sensor and two 20 mm air tubes.

Wiring and pin mapping

These pages record how the Rhino is wired to its Big Tree Tech Octopus v1.1 controller: the 21 contacts of the umbilical, the board pins that stay on the machine, every stepper driver, and the wiring diagrams for the special cases. Blank rows and cards are for your own additions.

Where these sheets and `printer.cfg` disagree, Klipper follows `printer.cfg`. The differences found while preparing this manual are listed in *Still to check on the machine*.


Rhino Wiring: Pin Mapping

Board: Big Tree Tech Octopus v1.1

Umbilical pin	Board pin	Function	Board label
1	PA2 +	Hotend heater	HE0
2	–	Hotend heater	
3	PF4 –	Hotend thermistor	T0
4	+	Hotend thermistor	
5	PE5	Hotend fan	Fan0
6	–	Hotend fan	
7	A1	Stepper A1	Motor2
8	A2	Stepper A2	
9	B1	Stepper B1	
10	B2	Stepper B2	
11	PA1 +	24 V power activate	Bed Out
12	–	24 V power activate	
13	–	Probe	Probe
14	+	Probe	
15	PG10	Probe signal	
16	PB0	Laser PWM (5 V required)	RGB
17			
18	PB11	PWM signal 24 V –, ESC signal to GND pin	
19			
20	PD12 +	12 V power activate +	Fan2
21	–	12 V power activate –	

Umbilical constant connections	Board pin
X-limit switch	PG6
Chamber temperature	PF5
Umbilical LED	PD14

Umbilical colour coding

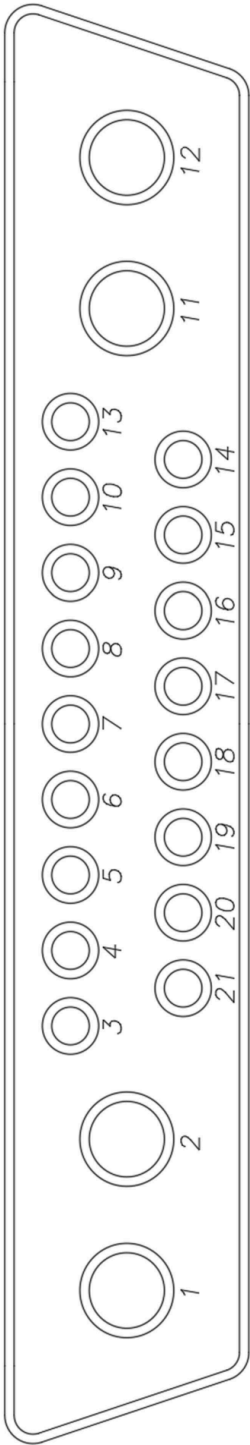

Pin	Wire colour
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	

Record the wire colour on each contact of your umbilical as you build it.

Other board pins · Big Tree Tech Octopus v1.1

[illegible]

Model no: _____

[illegible]

Rhino Wiring: Stepper Assignments

Big Tree Tech Octopus v1.1

X	Driver type and manufacturer		BTT TMC2240
	SPI / UART		
	Run current		1.1 A
	Board socket	0	
	Step	PF13	
	Dir	PF12	
	Enable	PF14	
	CS / UART	PC4	

Y	Driver type and manufacturer		BTT TMC2240
	SPI / UART		
	Run current		1.1 A
	Board socket	1	
	Step	PG0	
	Dir	PG1	
	Enable	PF15	
	CS / UART	PD11	

Rhino Wiring: Stepper Assignments

Big Tree Tech Octopus v1.1

E₀	Driver type and manufacturer		BTT TMC2240
	SPI / UART		
	Run current		0.8 A
	Board socket	4	
	Step	PF9	
	Dir	PF10	
	Enable	PG2	
	CS / UART	PF2	

Pins and current from printer.cfg [extruder]

Z₀	Driver type and manufacturer		BTT TMC2208 v3.0
	SPI / UART		
	Run current		0.65 A
	Board socket	5	
	Step	PE6	
	Dir	PA14	
	Enable	PE0	
	CS / UART	PD3	

Rhino Wiring: Stepper Assignments

Big Tree Tech Octopus v1.1

Z₁	Driver type and manufacturer		BTT TMC2208 v3.0
	SPI / UART		
	Run current		0.8 A
	Board socket	6	
	Step	PC13	
	Dir	PF0	
	Enable	PF1	
	CS / UART	PE4	

Z₂	Driver type and manufacturer		BTT TMC2208 v3.0
	SPI / UART		
	Run current		0.8 A
	Board socket	7	
	Step	PE2	
	Dir	PE3	
	Enable	PD4	
	CS / UART	PE1	

Rhino Wiring: Stepper Assignments

Big Tree Tech Octopus v1.1

X ₁	Driver type and manufacturer		BTT TMC2240
	SPI / UART		
	Run current		0.8 A
	Board socket		
	Step		
	Dir		
	Enable		
	CS / UART		

Y ₁	Driver type and manufacturer		BTT TMC2240
	SPI / UART		
	Run current		0.8 A
	Board socket		
	Step		
	Dir		
	Enable		
	CS / UART		

Rhino Wiring: Stepper Assignments

Big Tree Tech Octopus v1.1


	Driver type and manufacturer	
	SPI / UART	
	Run current	
	Board socket	
	Step	
	Dir	
	Enable	
	CS / UART	

	Driver type and manufacturer	
	SPI / UART	
	Run current	
	Board socket	
	Step	
	Dir	
	Enable	
	CS / UART	

Rhino Wiring: Diagrams


Red: + supply · black: ground / - · blue: signal or PWM · grey: motor phases

SwitchFly servo

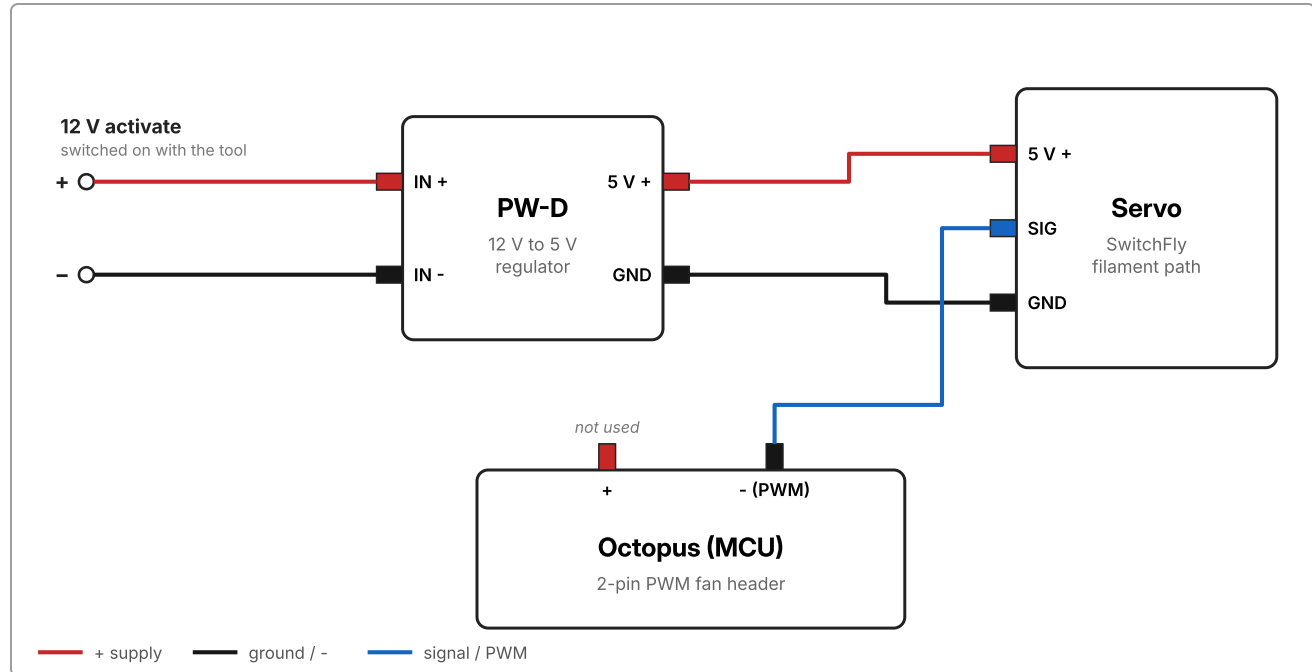

A PW-D regulator turns the switched 12 V into 5 V for the servo; the board's PWM output drives its signal line.

HotJoe BLDC spindle

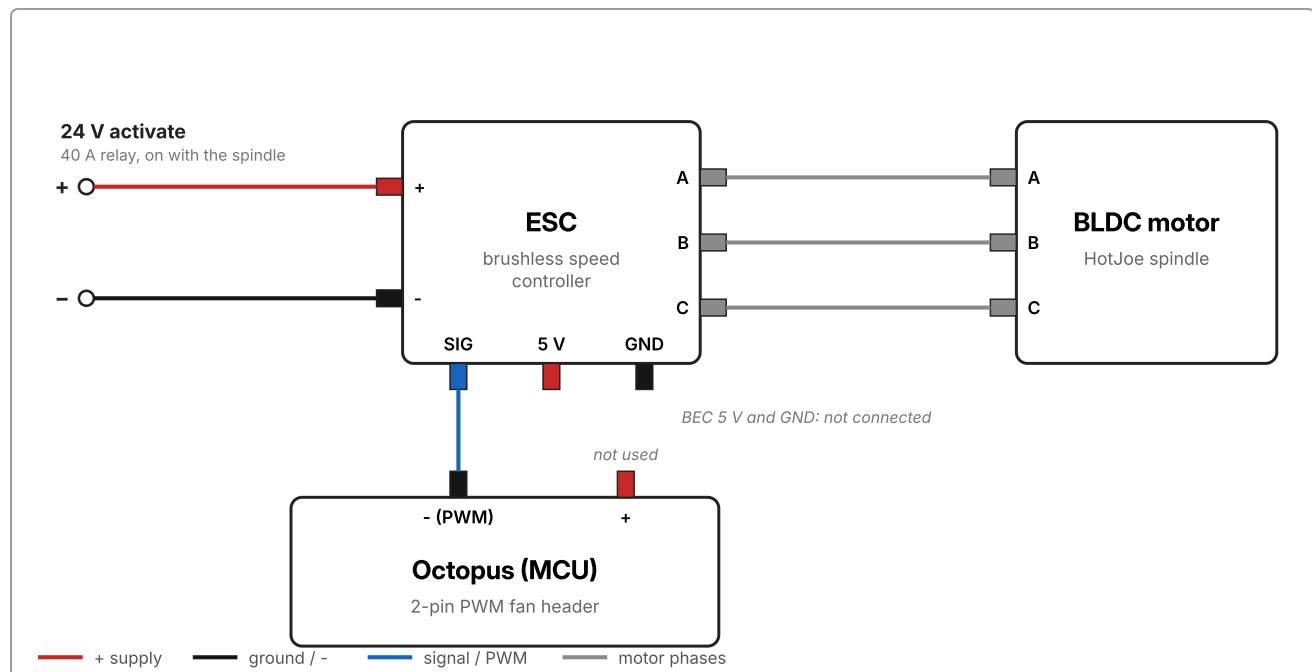


The relay-switched 24 V powers the ESC; the board's PWM output (SPINDLE_SPEED) drives its signal lead.

Rhino Wiring: Diagrams


Red: + supply · black: ground / - · blue: signal or PWM

4-pin part-cooling fan

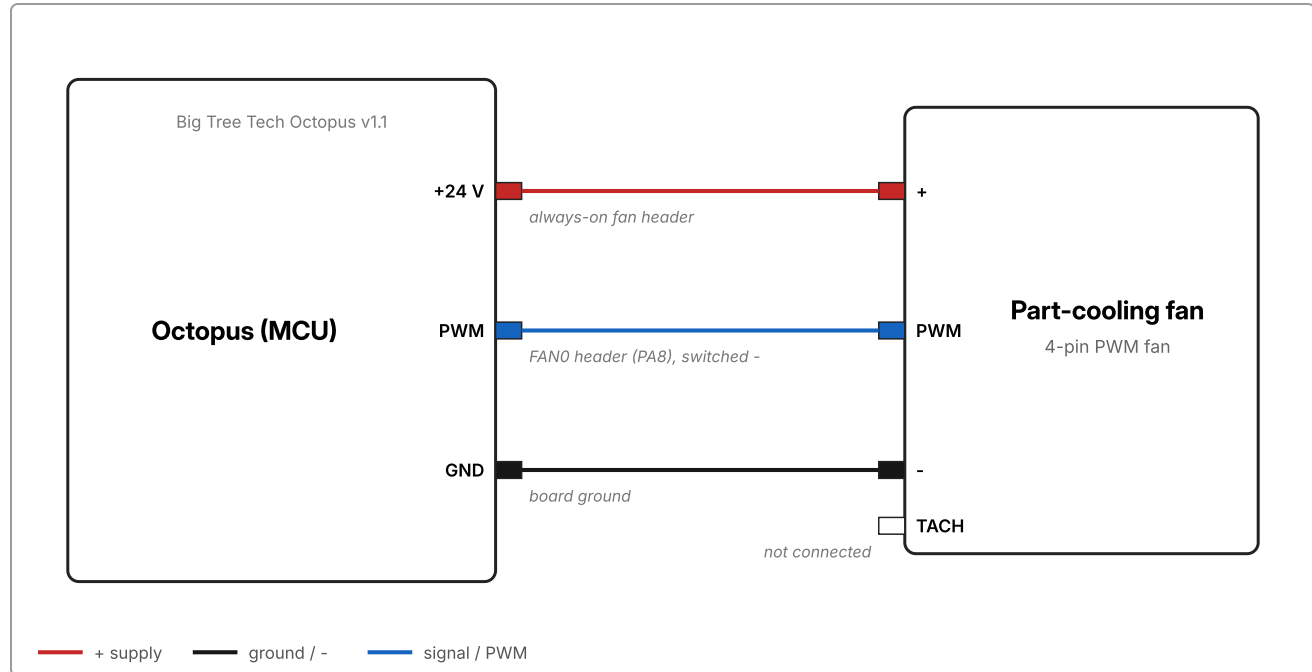

Power from an always-on fan header; the PWM line from the FAN0 header (PA8). The tachometer wire is not used.

Capacitive probe

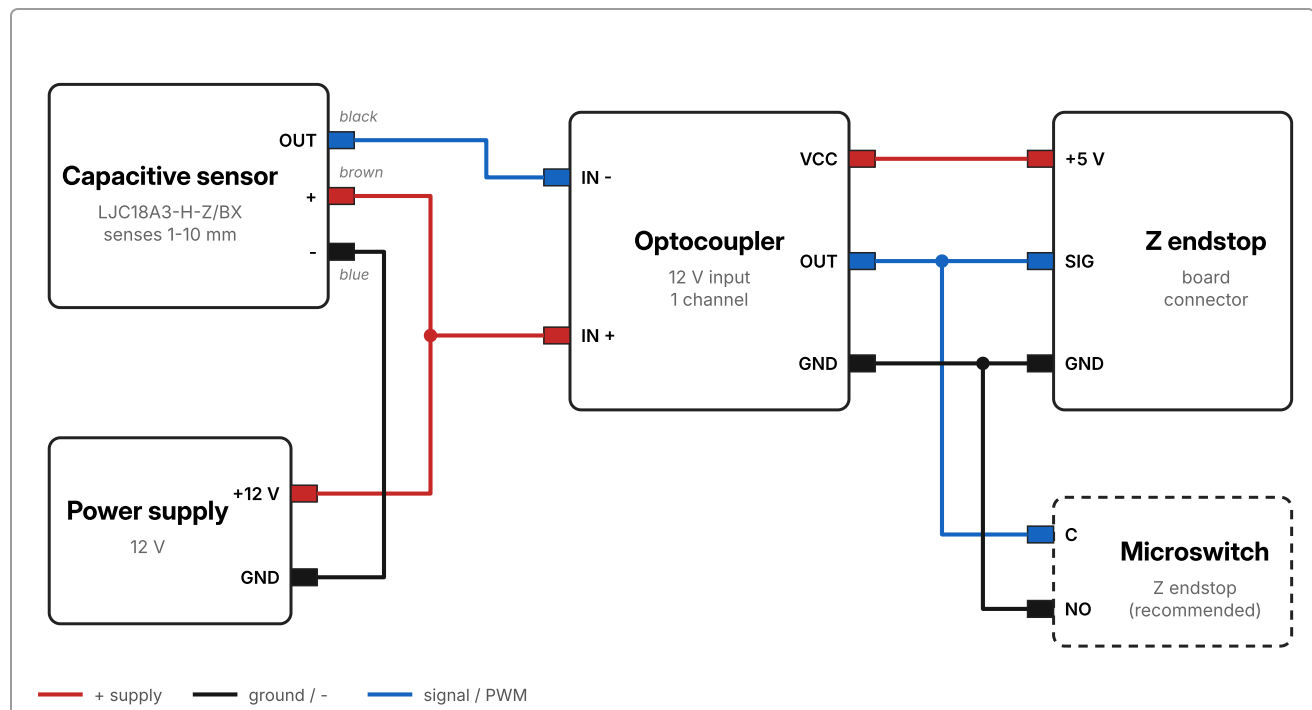

The 12 V sensor switches an optocoupler, which gives the Z endstop input a clean 5 V signal. A microswitch in parallel is recommended as a backup.

PART 2

The Tools

The built-in tools, their umbilical contacts and parts, and sheets for the tools you build.

The tools

BlockOne

SwitchFly

LightSaber

HotJoe

DragKnife

Tools you add

Rhino tools log

The tools

Every tool has a slot number. Slots 1–5 are the built-in tools defined in `variables.cfg`; tools you add in the Tool Manager get slot 6 and up.

Slot	Tool	Hardware	Set up a job with	Power outputs
1	BlockOne	Single-extruder print head	Slicer start G-code (<code>START_JOB</code>)	Hotend heater, fans
2	SwitchFly	Two filaments, one stepper, one nozzle	Slicer start G-code (<code>START_JOB</code>)	Hotend heater, fans, path servo
3	LightSaber	12 V 80 W 450 nm blue diode laser	<code>LASER_JOB_SETUP</code> <code>FILE=<name>.gcode</code>	<code>LASER_INITIALIZE</code> rail, <code>SERVO_LASER</code> intensity
4	HotJoe	24 V brushless spindle, ER8 collet	<code>CNC_JOB_SETUP</code> <code>FILE=<name>.gcode</code>	<code>Spindle_power</code> relay, <code>SPINDLE_SPEED</code> ESC
5	DragKnife	Drag knife for Roland No. 9 and No. 10 blade holders	<code>DRAGKNIFE_JOB_SETUP</code> <code>FILE=<name>.gcode</code>	None
6+	Your tools	Powered, passive or print-head clone	<code>TOOL_JOB_SETUP</code> <code>FILE=<name>.gcode</code> (clones use the slicer)	Own pin or a shared output

Built-in tools are changed by editing `variables.cfg`. Tools you add are changed in the Tool Manager or with console commands, never by hand-editing `custom_tools.cfg`.

Notes


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

Rhino Tools: BlockOne


Direct-drive 3D printing, with profiles for 0.4 mm and 0.8 mm nozzles in OrcaSlicer. E3D v6 Volcano hotend at 24 V, BMG drive gear and 1.75 mm filament.

Function	3D printing (0.4 and 0.8 mm nozzles)
Slot	1
Set up a job with	Slicer start G-code (START_JOB)
Outputs in Klipper	Hotend heater, hotend fan, part-cooling fan

Umbilical connector

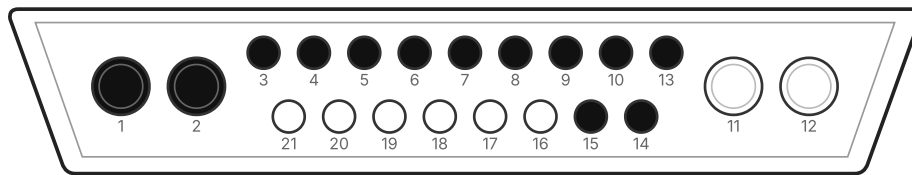

Pin no	Description	Board pin
1	24 V hotend	PA2
2	24 V hotend	
3	Thermistor	PF4
4	Thermistor	
5	24 V hotend fan	PE5
6	24 V hotend fan	
7	Stepper	A1
8	Stepper	A2
9	Stepper	B1
10	Stepper	B2
11		
12		
13	Probe	
14	Probe	
15	Probe	PG10
16		
17		
18		
19		
20		
21		

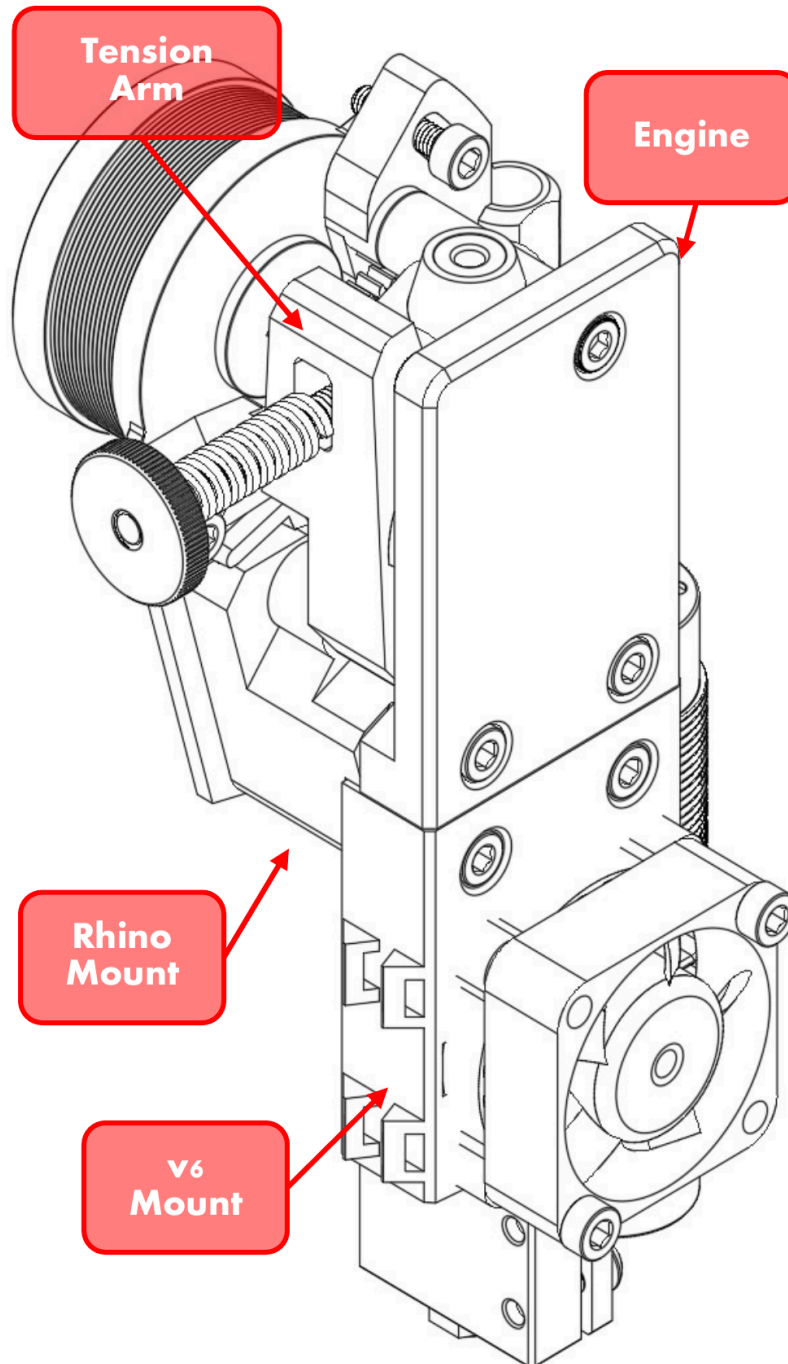

*Part cooling provided by the universal blow-air system.

BlockOne supersedes the Jack Rabbit print head in the repository; the Jack Rabbit files there are outdated. Its materials cover 0.4 and 0.8 mm nozzles.

Rhino Tools: BlockOne

Parts list · 3D printing (0.4 and 0.8 mm nozzles)

Qty	Description
	3D-printed pieces:
1	BlockOne Rhino Mount
1	BlockOne Engine
1	BlockOne Tension Arm
1	V6 Mount
	Off-the-shelf hardware:
1	BMG big gear and shaft
1	625zz sealed bearing
2	MR185 sealed bearing
3	3 × 5 × 7 brass sleeve bearing
1	24 V E3D v6 Volcano hotend assembly
1	J4-HV inductive proximity sensor
1	25 mm NEMA 14 stepper motor
1	30 × 3 mm toy shaft
1	4 × 8 × 25 mm medium-duty (bed) spring
1	21W4 male socket connector
	Fasteners:
6	M3 × 20 mm socket head cap bolt
1	M3 × 30 mm socket head cap bolt
6	2 × 6 × 6 mm M3 square nut
1	M5 × 12 mm socket head cap bolt
1	M4 × 50 mm socket head cap bolt
1	M4 × 2 mm thumb nut
1	M4 washer
7	M3 washers
5	Small zip ties
1	Medium zip tie

Notes · settings that worked, changes, repairs


27

Rhino Tools: SwitchFly


Dual extrusion at its finest: the first true direct-drive, dual-extrusion, single-nozzle extruder for 3D printing. Optimized for the E3D v6 Volcano hotend and BMG drive gear, and rated at 24 V for 1.75 mm filament.

Function	Dual-extrusion 3D printing (0.4 and 0.8 mm nozzles)
Slot	2
Set up a job with	Slicer start G-code (<code>START_JOB</code>)
Outputs in Klipper	Hotend heater, fans, filament-path servo (<code>SERV0_LASER</code>)

Umbilical connector

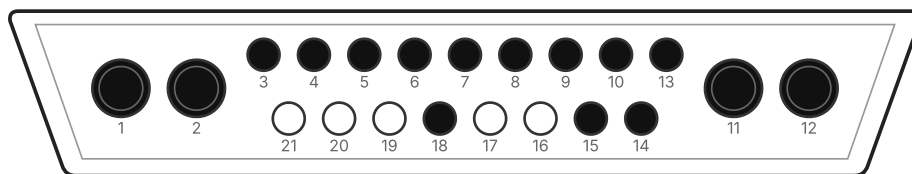

Pin no	Description	Board pin
1	24 V + hotend	PA2
2	24 V hotend	
3	Thermistor	PF4
4	Thermistor	
5	24 V hotend fan	PE5
6	24 V hotend fan	
7	Stepper	A1
8	Stepper	A2
9	Stepper	B1
10	Stepper	B2
11	24 V + power activate	PA1
12	24 V – power activate	
13	Probe	
14	Probe	
15	Probe	PG10
16		
17		
18	PWM – signal	PB11
19		
20		
21		

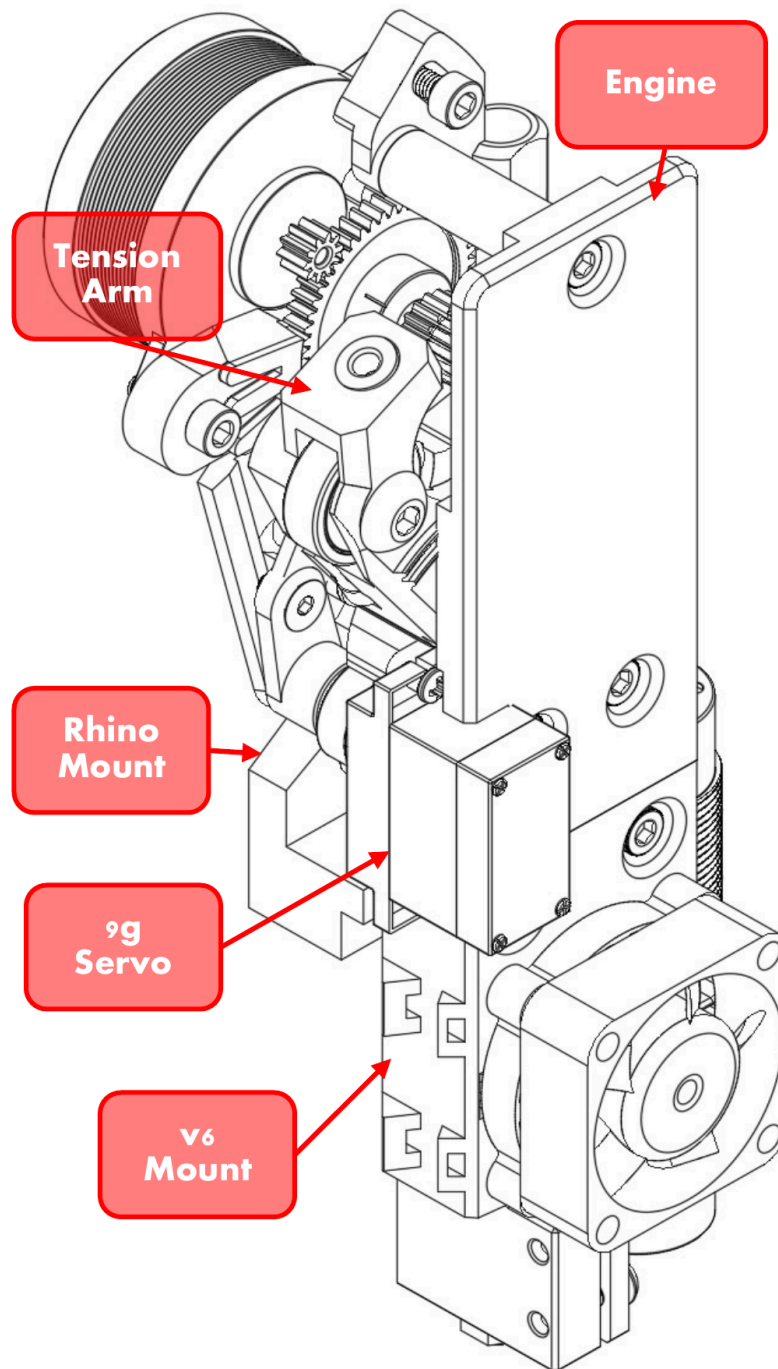

*Part cooling provided by the universal blow-air system.

SwitchFly feeds two filaments through one stepper and one hotend, so there is no second nozzle to align. `SWITCH_T0` and `SWITCH_T1` select the filament with a servo on the shared `SERV0_LASER` output.

Rhino Tools: SwitchFly

Parts list · Dual-extrusion 3D printing (0.4 and 0.8 mm nozzles)

Qty	Description
	3D-printed pieces:
1	SwitchFly Rhino Mount
1	Cam
1	Linkage Arm
1	Left Tension Arm
1	Right Tension Arm
1	SwitchFly Engine
1	V6 Mount
1	30 mm Fan Spacer
	Off-the-shelf hardware:
1	BMG big gear and shaft
2	625zz sealed bearing
2	MR185 sealed bearing
8	3 × 5 × 7 brass sleeve bearing
1	24 V E3D v6 Volcano hotend assembly
1	J4-HV inductive proximity sensor
5	Small zip ties
1	Medium zip tie
1	25 mm NEMA 14 stepper motor
1	Ecopower 827 12 g micro servo
1	12 mm control horn
1	35 × 3 mm toy shaft
2	30 × 3 mm toy shaft
1	3 mm × 25 mm expansion spring
1	21W4 male socket connector
1	3-pin servo extension cable
1	24 V 30 mm fan
	Fasteners:
3	M3 × 30 mm socket head cap bolt
4	M3 × 25 mm socket head cap bolt
6	2 × 6 × 6 mm M3 square nut
2	M3 × 6 mm flat head bolt
2	M5 × 12 mm button head bolt
2	M5 square nut
4	M3 × 12 mm socket head cap bolt
2	M2 × 6 mm Phillips head screw
7	M3 washers

*Shaft rotation is negated by the custom G0 and G1 Klipper commands.

*Ensure the servo default angle is set to 90 degrees in Klipper.

Notes · settings that worked, changes, repairs


[illegible]

Rhino Tools: LightSaber


12 V, 80 W, 450 nm blue diode laser cutter and engraver.

Function	Laser cutting and engraving
Slot	3
Set up a job with	<code>LASER_JOB_SETUP FILE=<name>.gcode</code>
Outputs in Klipper	<code>LASER_INITIALIZE</code> 12 V rail, <code>SERVO_LASER</code> intensity

Umbilical connector

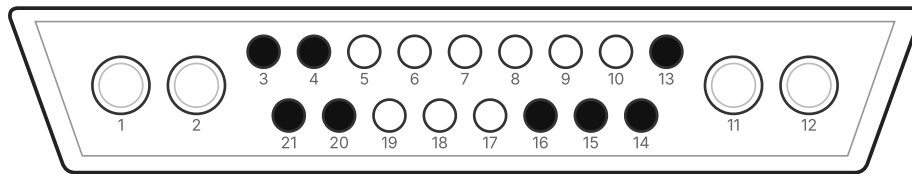

Pin no	Description	Board pin
1		
2		
3	Thermistor	PF4
4	Thermistor	
5		
6		
7		
8		
9		
10		
11		
12		
13	Probe	
14	Probe	
15	Probe	PG10
16	Laser PWM (5 V)	PB0
17		
18		
19		
20	+ 12 V power activate	PD12
21	– 12 V power activate	

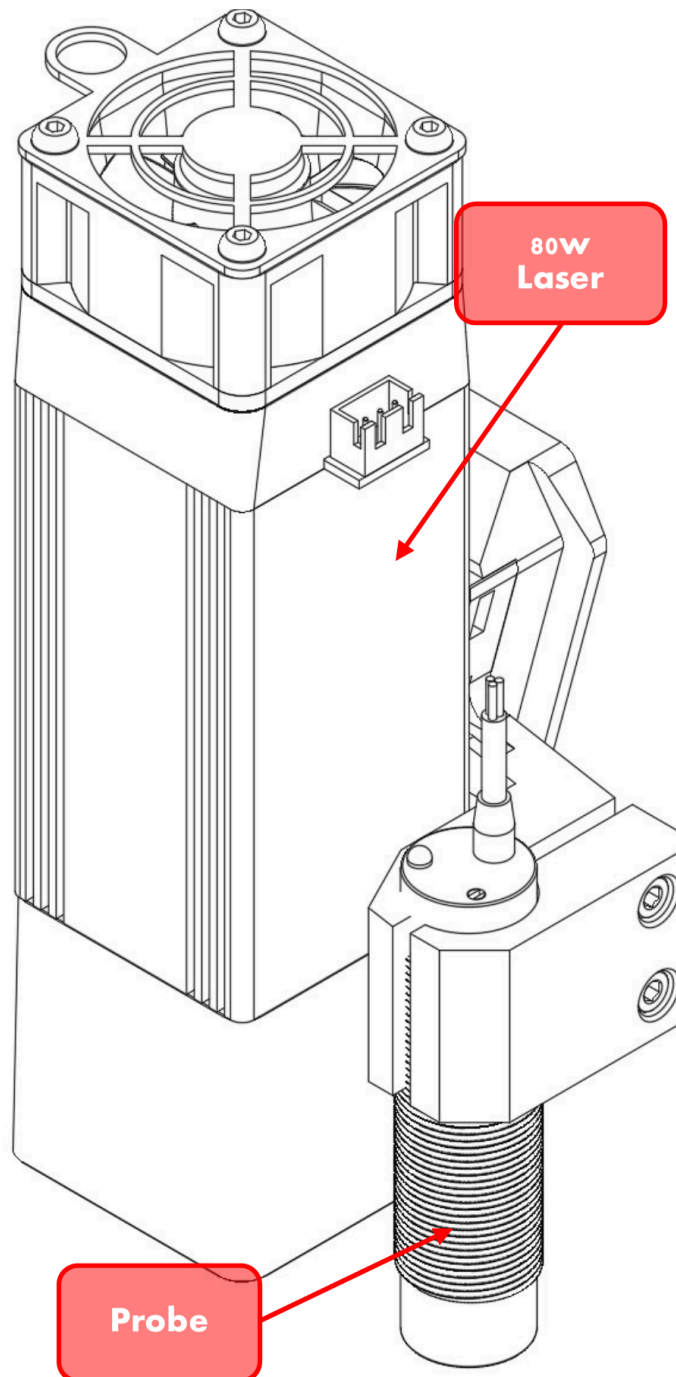

*Blow-air provided by the universal blow-air system.

A relay switches the laser's 12 V supply and Klipper drives its intensity through the PWM contact. The printed height gauge in the build files sets the focus distance.

Safety: wear glasses rated for the laser's wavelength, run extraction, never cut PVC or vinyl, and stay with the machine for the whole cut.

Parts list · Laser cutting and engraving

[illegible]

Notes · settings that worked, changes, repairs


[illegible]

Rhino Tools: HotJoe


Spindle attachment with an ER8 collet and a 2814 1000 kV brushless motor, driven by an 80 A HobbyWing ESC on 24 V power.

Function	CNC spindle for light engraving and milling
Slot	4
Set up a job with	<code>CNC_JOB_SETUP FILE=<name>.gcode</code>
Outputs in Klipper	<code>Spindle_power</code> relay, <code>SPINDLE_SPEED</code> ESC signal

Umbilical connector

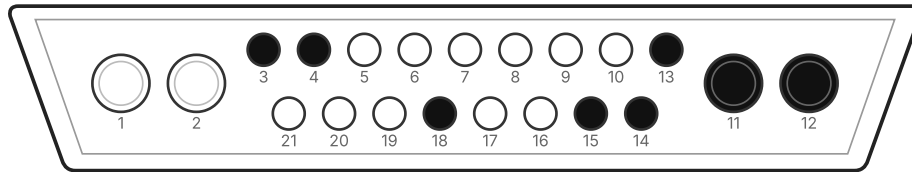

Pin no	Description	Board pin
1		
2		
3	Thermistor	PF4
4	Thermistor	
5		
6		
7		
8		
9		
10		
11	24 V relay power	PA1
12	24 V relay power	
13	Probe	
14	Probe	
15	Probe	PG10
16		
17		
18	PWM	PB11
19		
20		
21		

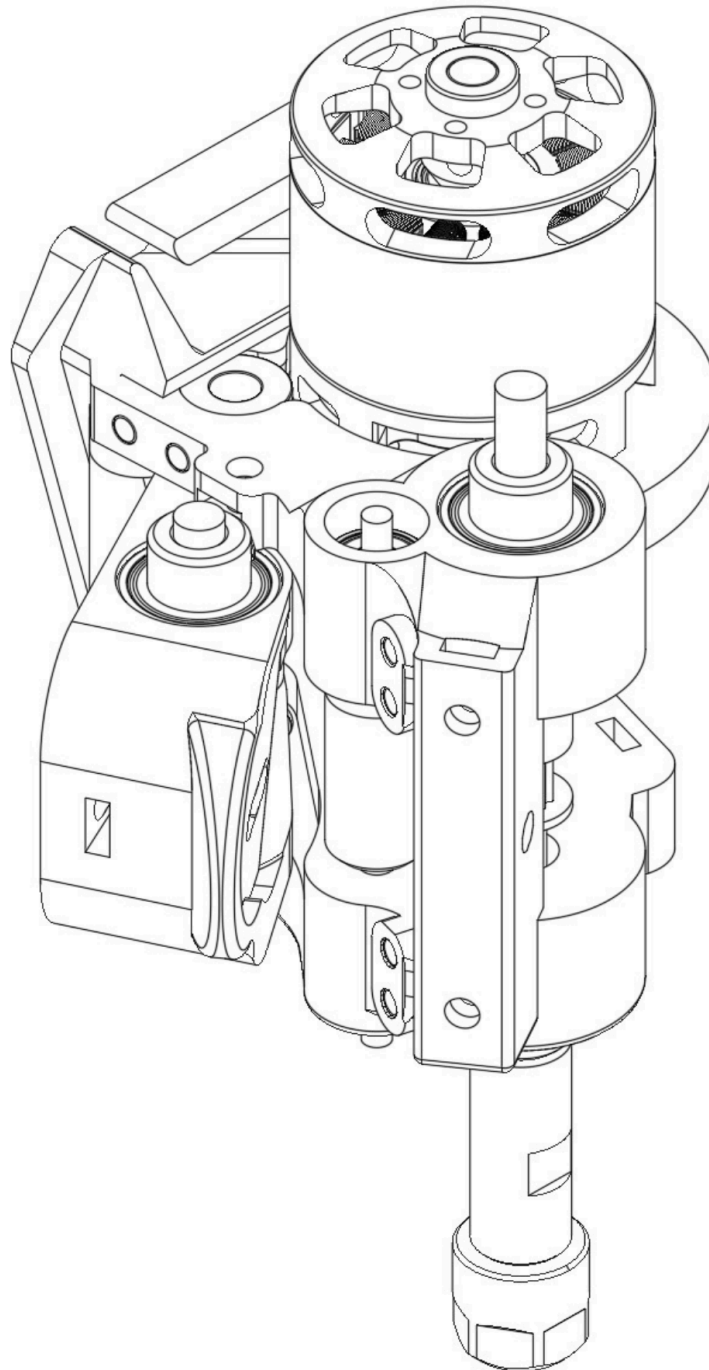

*Shown without safety covers.

*Blow-air provided by the universal blow-air system.

Meant for light-duty milling. A 40 A relay powers the ESC only while the spindle is in use; the speed signal runs at 400 Hz, where 0.3 is stopped (neutral) and about 0.99 is full throttle. Check real speeds at the collet with a tachometer before relying on them. Calibrate the ESC once with `CALIBRATE_ESC` (see *Maintenance*). The build files also include a 70 mm brush holder for dust collection, a blow-air clip and motor and gearbox shields.

Parts list · CNC spindle for light engraving and milling

[illegible]

Rhino Tools: HotJoe

Notes · settings that worked, changes, repairs


[illegible]

Rhino Tools: DragKnife


A drag-knife tool designed for Roland No. 9 and No. 10 blade holders.

Function	Drag-knife cutting (vinyl, cardstock, thin foam)
Slot	5
Set up a job with	<code>DRAGKNIFE_JOB_SETUP FILE=<name>.gcode</code>
Outputs in Klipper	None (passive tool)

Umbilical connector

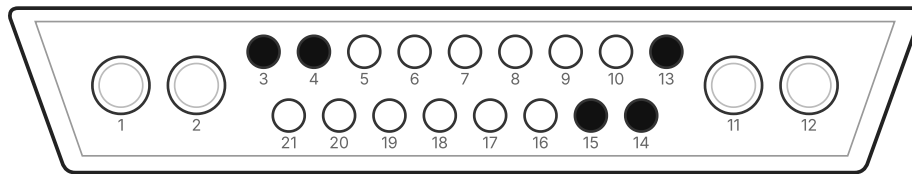

Pin no	Description	Board pin
1		
2		
3	Thermistor	PF4
4	Thermistor	
5		
6		
7		
8		
9		
10		
11		
12		
13	Probe	
14	Probe	
15	Probe	PG10
16		
17		
18		
19		
20		
21		

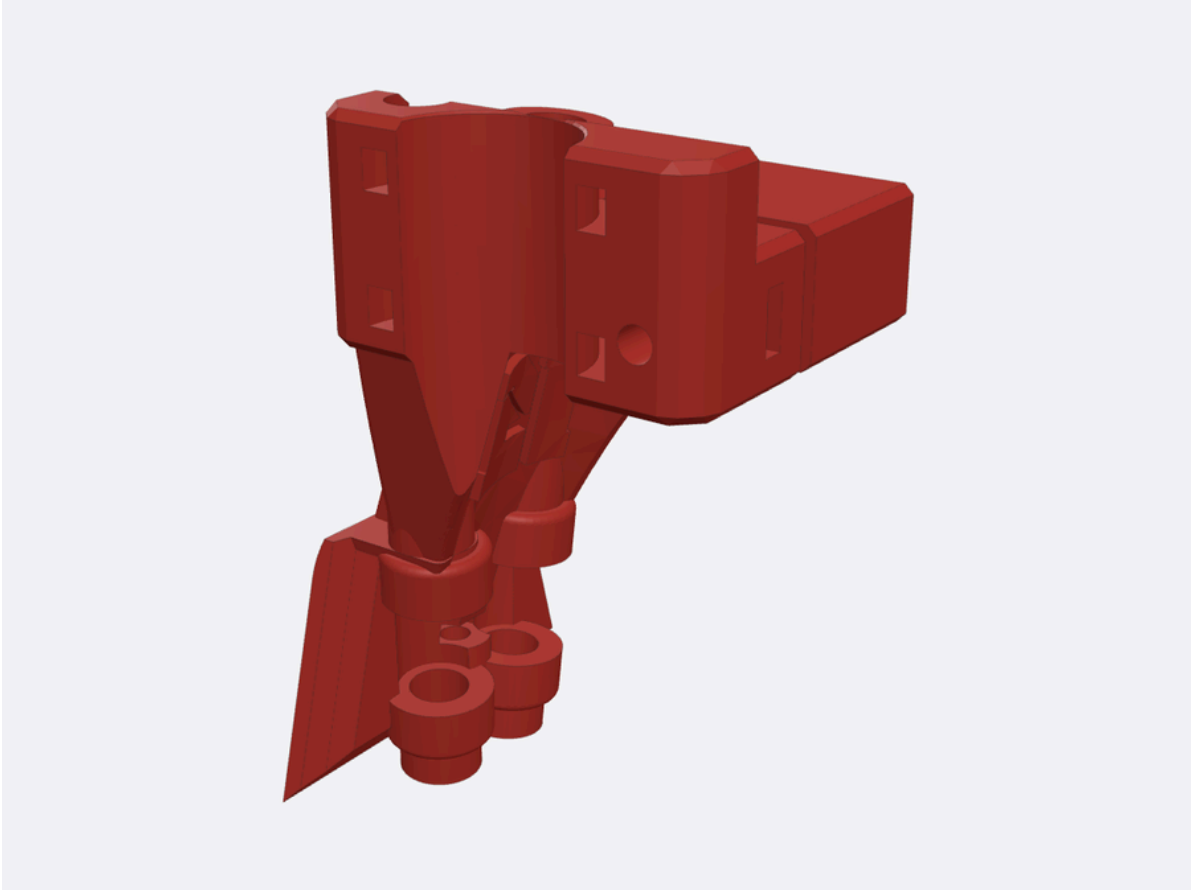

*Rendered from the build files.

The drag knife has no power output; cut depth comes from the blade holder's dial and the Z zero set in the job wizard. Its thermistor and probe contacts let the swap wizard confirm the umbilical is seated.

Parts list · Drag-knife cutting (vinyl, cardstock, thin foam)

[illegible]

Notes · settings that worked, changes, repairs

43

Tools you add

Hot-wire cutters, needle cutters, dispensers, pens and other holders, and extra print-head nozzle sizes are added from the Tool Manager (see *The Tool Manager portal*). A powered tool takes its main power from an umbilical contact it can share, such as the spindle ESC signal on contact 18, or from a new output on a spare pin, and can switch more outputs on with itself.

The next pages are blank tool sheets, two per tool, laid out like the built-in tools' pages. Fill one in for each tool you design. They face each other when the manual lies open: the left page records what the tool is and which umbilical contacts it uses, the right page the settings you enter in the portal (controls, macros, materials) and its parts. Keep the sheet with the tool.

Before wiring a new tool, check **Pins & outputs** in the portal: it shows every contact of the umbilical and what drives it. Only free pins can be given to a new output, and the portal refuses a pin that anything in the config already uses.

Notes


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

Rhino Tools: _____

New tool sheet 1 · identity and umbilical

Tool name	
Slot	
Category and kind	☐ Additive ☐ Subtractive ☐ Passive kind: _____
Function	
Main power (PWM)	contact ____ or new pin ____ output _____
Switch outputs	contacts / pins _____
Power cap / max on-time	_____ % / _____ s

Umbilical connector (shade the contacts the tool uses)

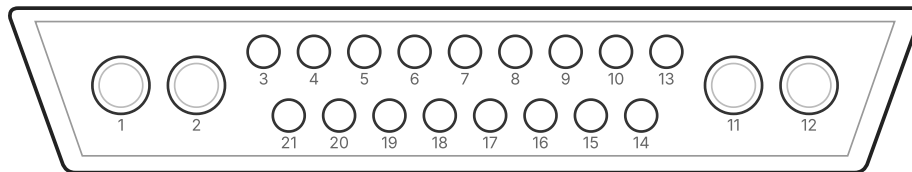

Pin no	Description	Board pin	Output / control
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			

Rhino Tools: _____

New tool sheet 1 · portal settings and parts

Controls

Control name	What it does	Pin	Off on safe-off	Macros
			☐	
			☐	
			☐	
			☐	
			☐	

Macros

Macro name	Purpose

Materials

Material	Power %	Feed mm/min	Z offset mm

Parts list

Qty	Part


Notes

Rhino Tools: _____

New tool sheet 2 · identity and umbilical

Tool name	
Slot	
Category and kind	☐ Additive ☐ Subtractive ☐ Passive kind: _____
Function	
Main power (PWM)	contact ____ or new pin ____ output _____
Switch outputs	contacts / pins _____
Power cap / max on-time	_____ % / _____ s

Umbilical connector (shade the contacts the tool uses)

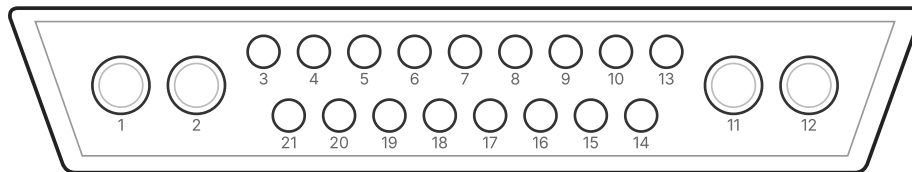

Pin no	Description	Board pin	Output / control
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			

Rhino Tools: _____

New tool sheet 2 · portal settings and parts

Controls

Control name	What it does	Pin	Off on safe-off	Macros
			☐	
			☐	
			☐	
			☐	
			☐	

Macros

Macro name	Purpose

Materials

Material	Power %	Feed mm/min	Z offset mm

Parts list

Qty	Part


Notes

Rhino Tools: _____

New tool sheet 3 · identity and umbilical

Tool name	
Slot	
Category and kind	☐ Additive ☐ Subtractive ☐ Passive kind: _____
Function	
Main power (PWM)	contact ____ or new pin ____ output _____
Switch outputs	contacts / pins _____
Power cap / max on-time	_____ % / _____ s

Umbilical connector (shade the contacts the tool uses)

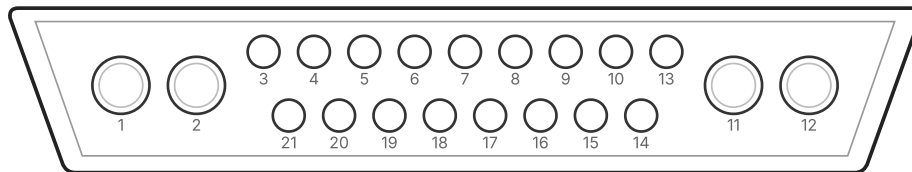

Pin no	Description	Board pin	Output / control
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			

Rhino Tools: _____

New tool sheet 3 · portal settings and parts

Controls

Control name	What it does	Pin	Off on safe-off	Macros
			☐	
			☐	
			☐	
			☐	
			☐	

Macros

Macro name	Purpose

Materials

Material	Power %	Feed mm/min	Z offset mm

Parts list

Qty	Part

Notes

Rhino Tools Log

Print heads and nozzles

Extruder 1	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 2	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 3	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 4	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 5	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 6	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 7	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 8	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Extruder 9	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 1	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 2	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 3	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 4	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 5	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 6	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

SwitchFly 7	
Nozzle size	Nozzle type
0.2 / 0.25 / 0.3 / 0.4 / 0.6 / 0.8 / 1.0	Brass / Steel / Specialty

Rhino Tools Log

Spindles, lasers, knives and your own tools

Hot Joe

Voltage	ESC rating	Motor size	kV rating	Max RPM
12 / 24 / 36 / 48 V	20 / 30 / 50 / 80 A			

Hot Joe (spare)

Voltage	ESC rating	Motor size	kV rating	Max RPM
12 / 24 / 36 / 48 V	20 / 30 / 50 / 80 A			

Light Saber

Voltage	Wattage	Diode type	Wavelength	Focal distance
12 / 24 / 36 / 48 V				

Light Saber (spare)

Voltage	Wattage	Diode type	Wavelength	Focal distance
12 / 24 / 36 / 48 V				

Drag Knife

Blade holder	Blade angle	Blade offset	Cut depth	Notes

Name:

--	--	--	--	--

Name:

--	--	--	--	--

Name:

--	--	--	--	--

Notes

[illegible]

PART 3

Software and Operation

Installing the software, changing tools, running jobs and the Tool Manager portal.

How the software fits together

Install and first start

Swapping tools

Running a job

Pause, resume and cancel

The Tool Manager portal

Pins, outputs and system hardware


Admin lists

Console commands

Safety systems

How the software fits together

Every tool change goes through the registry and goes live when Klipper restarts

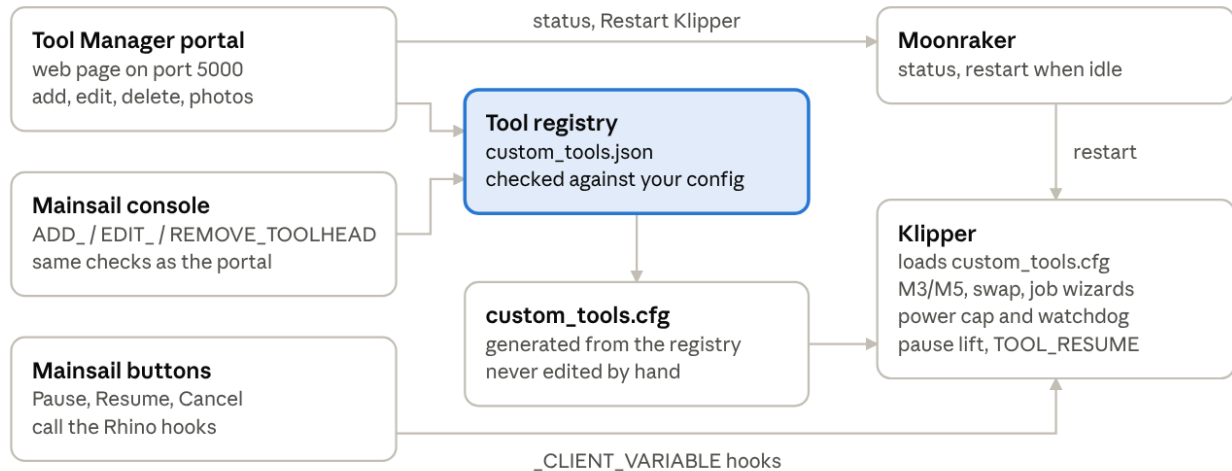

How the Rhino tool manager connects to Mainsail and Klipper

You change tools in the portal or the console; both write the same registry, which generates `custom_tools.cfg`. Klipper picks up the change at its next restart, which the portal requests through Moonraker only when no job is running.

Install and first start

The Rhino software installs from a menu on the Pi, in the style of KIAUH: you upload the zip in Mainsail, type three short commands, then pick numbered options. Every option says what it is about to do and asks before changing anything, and every install backs up your config folder first.

Before you start: the printer idle, and a **print head (BlockOne or SwitchFly) mounted**. The first start homes the machine, and only a print head can home Z safely. You need the Pi's address (the one you open Mainsail with) and its login and password; on most Klipper installs the login is `pi`.

1. **Upload the zip.** In Mainsail open **Machine**, press **Upload** and choose `rhino-config-<version>.zip` (for example `rhino-config-1.3.8.zip`). Check the file list shows exactly that name; if the browser renamed it (`... (1).zip`), fix the name and upload again.
2. **Open a terminal on the Pi.** On Windows open **PowerShell**, on a Mac open **Terminal**, and log in with your login and the Pi's address. Answer `yes` the first time, then type the password (it stays invisible).

```
ssh pi@192.168.1.50
```

3. **Open the Rhino menu.** Paste one line at a time:

```
cd ~/printer_data/config
```

```
unzip -o rhino-config-1.3.8.zip -d ~/rhino-1.3.8
```

```
bash ~/rhino-1.3.8/rhino.sh
```

If `unzip` is missing, run `sudo apt install -y unzip` first. The menu looks like this:

```
/=====\  
|          ~~~~ [ Rhino Tool Manager ] ~~~~          |  
|-----|  
| Installed version : not installed                    |  
| This folder has   : 1.3.8    (/home/pi/rhino-1.3.8)  |  
| Portal           : not installed                    |  
|-----|  
| 1) Preview the install      (changes nothing)      |  
| 2) Install / update from this folder                |  
| 3) Install a new zip (unpack, preview, install)     |  
| 4) Undo an install          (pick a backup)         |  
| 5) Portal status and recent log                    |  
| 6) Restart the portal                                     |  
| |                                                     |  
| Q) Quit                                              |  
|-----|  
\=====/  
Perform action:
```

4. **Preview: option 1.** It checks your login and config folder, whether a job is running, whether something else uses port 5000 and whether an earlier portal is installed, then lists every step without changing anything. It ends with *Dry run finished*, or with **STOPPED:** and what to do.

5. **Install: option 2**, then `y`. It asks for the password once and works through eight stages, each ending in **OK**:

- backs up the config folder to `~/rhino-backup-<date>`;
- copies the new files, never touching `variables.cfg`, `variables.save` or the tool files the portal generates;
- keeps the `SAVE_CONFIG` section at the bottom of `printer.cfg`, and never doubles it;
- fixes `/home/pi` paths if your login is different;
- installs Flask from the Pi's own packages, plus Waitress when it is available;
- replaces any earlier portal service (its settings are saved in the backup), starts the portal at every boot, and checks it answers.

It finishes with the portal's address, `http://<printer address>:5000`. Afterwards the menu is always at `bash ~/rhino-manager/rhino.sh`.

6. **First start, in Mainsail**. With the print head still mounted:

- Run `FIRMWARE_RESTART` and wait for *Ready*. A red box names the file and line Klipper did not accept.
- Answer the pop-up asking which tool is mounted (or run `RESTORE_TOOL`).
- Run `CHECK_TOOLHEADS`. When the console line starting `rhino:` says OK, press **Restart now**.

7. **Check Z before the first job**. After any update, check Z (the Rhino uses `gear_ratio: 2:1` on all three Z steppers). Home with the print head, move Z 10 mm and measure it, then run `Z_TILT_ADJUST` and re-check your Z offsets.

A good place to stop is after the preview (nothing has changed) or after the first start. Avoid stopping between the install and the first start.

Updating: upload the new zip, open the menu, choose **3** and pick it. It unpacks the zip, shows the preview and asks whether to install; answer `y`, then do the first start again. Your tools, photos and maintenance history are kept. **Undoing:** option **4** lists your backups (the oldest is your setup from before the first install), previews the restore and asks first; anything added since is moved aside to `~/rhino-undone-<date>`, not deleted.

Never home Z with the laser, spindle or drag knife mounted. Homing Z brings the bed up to the tool. Their macros refuse to, and jobs end with the bed lowered to the safe park height so the machine can always home X and Y after a restart.

The portal has no login. Anyone who can reach port 5000 can add or remove tools, but it cannot run G-code and refuses to restart Klipper during a job. Keep it on your home network, or start it with `--host 127.0.0.1` and reach it through an SSH tunnel.

Swapping tools

Always change tools through the swap wizard. Klipper's safety checks (laser lockout, spindle lockout, job/tool match) all trust the slot the wizard records.

1. Run `START_TOOL_SWAP` (or press its macro button). A pop-up lists every tool; pick the one you are installing.
2. The machine switches off all tool power, the heaters and the part fan, then waits until the hotend **and the bed** are below 40 °C. After a hot print this can take several minutes.
3. It parks the head at the swap position (`tool_swap_park_x/y/z` in `variables.cfg`), disables the print head's extruder motor and shows **Swap the toolhead**.
4. Unplug the old tool's umbilical at the top rear of the frame. Undo the knurled nut, remove the M3×50 bolt and lift the tool off the carriage.
5. Slide the new tool down into the carriage's V-groove until it seats, then refit the bolt and nut snug.
6. Plug the new tool's umbilical fully home and route the cable clear of the gantry.
7. Confirm in the pop-up. The wizard checks the thermistor reading on pins 3–4; if it is open it shows **Toolhead not detected** – reseal the umbilical and press **Check again**.
8. The new slot is saved to `variables.save` , so it survives a restart.

Tool swaps are refused while a job is running or paused. All tool power is switched off before the swap starts.

After any Klipper restart, a pop-up appears about 8 seconds later: *Klipper restarted – which toolhead is mounted?* Press **Yes** if the tool shown is the one on the machine, or **No – run the swap wizard** if it is not. Until you answer, the tool-mounted safety gates stay locked. You can bring the question back any time with `RESTORE_TOOL` .

Running a job

Print jobs start from the sliced file. Every other tool starts from a guided setup that walks you through safety checks and setting the work zero, then starts the file for you.

Pick the material first (non-print tools): `SET_TOOLHEAD TOOLHEAD=LightSaber MATERIAL=PLYWOOD`. This applies the material's feed, power, acceleration and Z offset, and the setup wizards read it.

3D printing (BlockOne, SwitchFly, print-head clones)

1. Slice with the Rhino profile. Its start G-code calls `START_JOB TOOLHEAD="SwitchFly" MATERIAL="PLA" NOZZLE_SIZE=0.4 EXTRUDER=0`.
2. Upload and print from Mainsail as usual.
3. `START_JOB` refuses to run if the file's tool does not match the mounted tool, then homes and shows a confirmation pop-up. It applies the nozzle height saved for that head by the paper test (`NOZZLE_HEIGHT_CALIBRATE`, run once when a head is mounted - never by the job), and keeps it when the file is released.
4. `END_PRINT` switches off whatever tool is active and runs the staged `BED_COOLDOWN`.

Filament change mid-print: `FILAMENT_CHANGE` pauses, walks you through unload, load and purge, then resumes. `FILAMENT_CHANGE`, `PURGE` and `PREHEAT` only run with a print head mounted (they heat the nozzle), and filament change needs the printer homed.

Setting Z zero (laser, spindle, drag knife, tools you added)

Every non-print job sets its Z zero by eye in the same **Set Z zero** window (the `SET_Z_ZERO` macro, also a Mainsail button). The job setups open it for you.

- **Bed up / Bed down** 10, 1 and 0.1 mm move the bed; *up* brings the material toward the tool. The window shows the bed height and stops at the travel limits (never lower than Z 380).
- Spindle, knife and added tools: bring the material up until the tool tip just touches its top surface. LightSaber: bring it to the focus point - the smallest, sharpest dot - using **Focus dot ON (1%)** with laser glasses on.
- **SET – Z zero here** makes that bed height G-code Z0 (it is saved, and nothing moves). The job then runs with Z0 there; the laser runs at Z0 with no extra focus offset.

After a restart Klipper does not know where the bed is. If the bed was left parked (every job and swap ends with it lowered), the window first asks **Bed position – Is the bed still down where it was parked?** **Yes** takes the saved park height as Z and homes X/Y; choose **No** if the bed was moved by hand with the power off, then home Z with a print head. Choosing a material, or a job's own `START_JOB` line, never changes the Z zero you set.

Homing. Z is only homed with a print head mounted and confirmed - the probe is on the print heads. Any other way of homing Z (Mainsail's Home buttons, `G28`, the old `HOME` macro) is refused with a laser, spindle, knife or added tool mounted, or before the *which toolhead is mounted?* question is answered after a restart. `G28 X Y` always works. When X/Y are homed while Z isn't, Klipper first lowers the bed 10 mm; if the bed's park height was saved, it is updated to match.

Laser (LightSaber)

Run `LASER_JOB_SETUP FILE=<name>.gcode`, then follow the pop-ups:

1. **Laser setup** – confirm ventilation, glasses, no PVC/vinyl, material flat, extinguisher nearby.
2. **Set Z zero** – move the bed to the focus point and press **SET**; a low-power test mark follows.
3. **Check the test mark** – **Yes** to continue, **No – set focus again** to go back.
4. **Ready to cut** – add or remove passes, then **Start the cut**.

CNC (HotJoe)

Run `CNC_JOB_SETUP FILE=<name>.gcode`:

1. **CNC setup** – safety confirmations.
2. **Set X/Y zero** – jog to the corner, then **Set X/Y zero here**.
3. **Set Z zero** – bring the material up to the bit tip and press **SET**.
4. The spindle relay switches on and the ESC ramps to 40 %, then to your starting throttle.
5. **Ready to cut** – nudge the throttle ± 5 %, then **Start the cut**.

Drag knife (DragKnife)

Run `DRAGKNIFE_JOB_SETUP FILE=<name>.gcode`: verify the material and blade dial, set Z zero on the surface in the **Set Z zero** window, cut a test mark, then **Cut looks good – continue** (or **Cut is wrong – help me adjust** for blade-dial help) and **Start the cut**.

Tools you added (slot 6+)

Run `T00L_JOB_SETUP FILE=<name>.gcode`:

1. **<tool> setup** – the checklist you wrote in the portal; **All checked – set work zero**.
2. **Set Work Zero** – **Set X/Y zero here**, then **Set Z zero** (the Set Z zero window; the material's Z offset is added on top); **Continue**.
3. **Ready to start** – **Test pulse** fires briefly at low power; then **Start – tool power ON** (power on for the whole file) or **Start – file controls power** (the file's own M3 / M5 switch it). Passive tools just show **Start**.

M3 *S<value>* / M5 in any file control whichever tool is mounted: the laser, the spindle or your powered tool. *S* is scaled against that tool's *S value for full power* and never exceeds its power cap.

Slicer and CAM settings

OrcaSlicer (printing). Make one printer profile per print head (BlockOne, SwitchFly, and any print head you add). In each profile, **Printer settings > Machine G-code > Machine start G-code** calls `START_JOB`. Type the tool's name once; OrcaSlicer fills in the rest from the filament and nozzle chosen when you slice:

```
START_JOB TOOLHEAD="SwitchFly" MATERIAL="{filament_type[initial_extruder]}" NOZZLE_SIZE=
{nozzle_diameter[initial_extruder]} EXTRUDER={initial_extruder}
```

START_JOB parameter	OrcaSlicer placeholder	Becomes
TOOLHEAD	typed in each printer profile	SwitchFly – must match the mounted tool
MATERIAL	{filament_type[initial_extruder]}	PLA, PETG ... – the filament profile's type
NOZZLE_SIZE	{nozzle_diameter[initial_extruder]}	0.4 – the printer profile's nozzle
EXTRUDER	{initial_extruder}	0 or 1 – the first filament used (SwitchFly)

Together they pick the tool's material profile, such as PLA_0_4. **Filament type** (in the filament profile's settings) must be one of the tool's materials – PLA, PETG, ABS or ASA for BlockOne and SwitchFly; a type such as PLA-CF stops the job at the start with *Material PLA-CF_0_4 not defined for toolhead BlockOne*. End the file (**Machine end G-code**) with `END_PRINT`.

LaserWeb 4 (laser). Use these machine settings. They replace the older ones in the repository's *Laserweb Setup* note, which drove pins (LASERPOWER_pin, VACPUMP_pin) that no longer exist; going through M3 / M5 keeps the laser lockout, the pause handling and the power scaling.

LaserWeb field	Value
Gcode Start	G21 and G90 – homing, focus and work zero are done by LASER_JOB_SETUP
Gcode End	M5
Gcode Homing	leave blank
Tool On	leave blank
Tool Off	M5
Laser Intensity	M3 S
PWM MIN S VALUE	0
PWM MAX S VALUE	1000 (matches laser_s_max in variables.cfg)

Drag-knife files must not contain M3: it is refused while the DragKnife is mounted. Use a separate LaserWeb profile with *Laser Intensity* and *Tool Off* left blank.

CNC files. Spindle speed is set in CNC_JOB_SETUP (the throttle buttons), not by M3 S. An M3 in the file leaves a running spindle alone; M5 at the end stops it.

Pause, resume and cancel

Pause and cancel work from Mainsail's own buttons for every tool. Resume works from Mainsail's button only for print jobs; laser, CNC, drag-knife and added-tool jobs resume with the **Resume job** button in the Rhino pop-up (or `TOOL_RESUME`).

Mainsail's Resume refuses whenever the extruder is cold ("not hot enough"), and with a non-print tool mounted it always is. `TOOL_RESUME` does the same job without that check, and adds the steps a cutting tool needs.

	Print head	Laser	CNC spindle	Drag knife / passive	Powered tool you added
On Pause	Mainsail parks as usual	Lift 10 mm, laser off, park	Lift 10 mm while spinning, spindle off, park	Lift 10 mm, park	Lift 10 mm, power off, park
Pop-up	None	<tool> job paused with Resume job / Cancel job	same	same	same
Resume with	Mainsail Resume	Resume job or <code>TOOL_RESUME</code>	same	same	same
On resume	Mainsail as usual	Back over the spot, down slowly, laser back to its level	Back over the spot, spindle ramps 40 % → its speed (4 s), then down slowly	Back over the spot, down slowly	Back over the spot, down slowly, power back to its level
On Cancel	Tool off, lift 10 mm, home X/Y	same	same	same	same

How the resume moves. The head travels to the paused X/Y at its lifted height, drops to 2 mm above the paused height, then makes the last 2 mm at 5 mm/s. Power comes back only once the head is on the paused spot — never at the park corner.

If Mainsail's Resume is pressed by mistake on a non-print job, nothing moves: the Rhino pop-up comes back and the console says to use `TOOL_RESUME`.

Refusals. `TOOL_RESUME` refuses if nothing is paused, or if the recorded tool differs from the one the job paused with. On a print job it simply hands over to Mainsail's Resume.


The 10 mm lift is set by `variable_lift` in `_RHINO_PAUSE_HOOK` (`tools/tool_power.cfg`); it is reduced automatically near the top of Z travel.

The Tool Manager portal

Open `http://<printer address>:5000`. The portal adds, edits, renames and deletes your own tools, records which umbilical contacts each one uses, sets up system hardware, tracks maintenance, and restarts Klipper when changes need loading. The sidebar groups it into **Tools**, **Hardware**, **Maintenance** and **Admin**; click a group's name to fold it away. The screenshots come from a test run with three example tools (FoamWire, PenPlotter, Needle), three pieces of system hardware and placeholder photos.

Tool library

Every tool is a card: slot, category and kind, outputs, materials, notes and photos. The row of numbered boxes is the tool's pin map: the umbilical contacts it uses are filled in, as on the tool pages in Part 2. The chips at the top right show Klipper's state, the job state and the mounted tool. Built-in tools are read-only here; your tools have an **Edit** button.

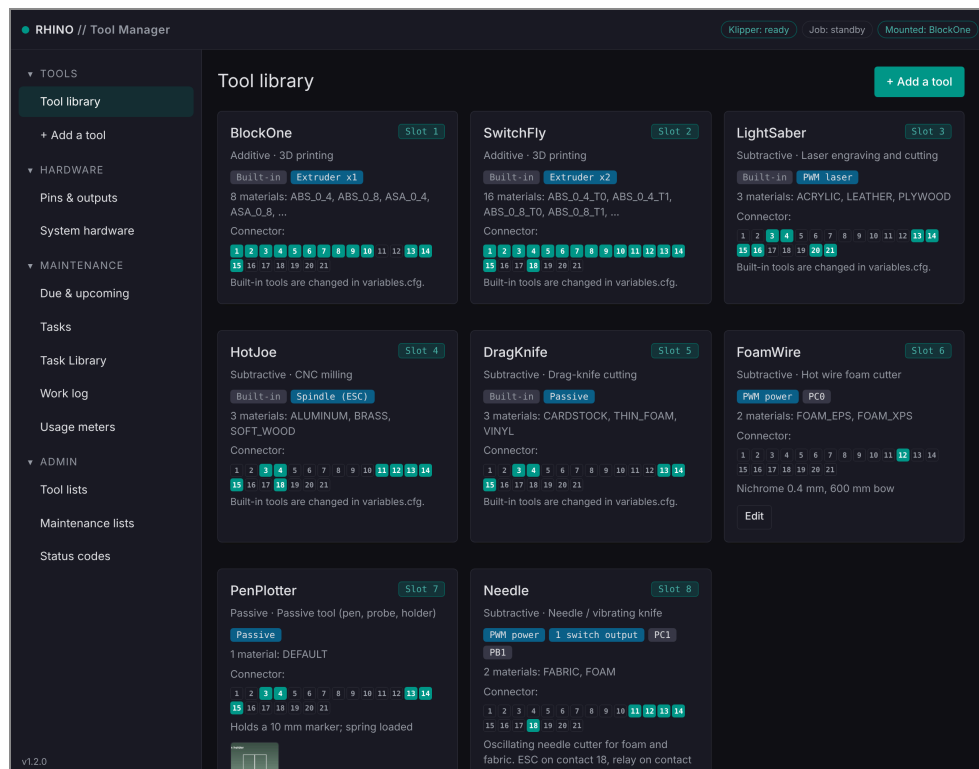

Tool library with the built-in and added tools

Adding a tool

Press **+ Add a tool**. The wizard's steps depend on the kind of tool: powered tools get all seven, passive tools get a Connector step instead of Outputs and Limits, print-head clones get Hardware. Every kind gets Controls and Macros.

Step 1 • Tool – say whether the tool is **Additive** (adds material: print heads, paste or glue dispensers), **Subtractive** (removes or cuts material: lasers, spindles, hot wires, knives) or **Passive** (pens, probes, cameras, holders). Then pick the kind of tool within it, type a name and optional notes. The kind fills in safe starting values; the list of kinds is yours to edit under **Admin > Tool lists**. The name is what G-code and slicers use: 2–24 letters, digits or `_`, starting with a letter.

Add a tool [X]

1. Tool 2. Outputs 3. Limits 4. Materials 5. Controls 6. Macros 7. Review

WHAT KIND OF TOOL IS IT?

Additive
Adds material: print heads, paste or glue dispensers.

Subtractive
Removes or cuts material: lasers, spindles, hot wires, knives.

Passive
Does not make or cut anything: pens, probes, cameras, holders.

WHICH SUBTRACTIVE TOOL?

Needle / vibrating knife

Oscillating needle or knife driven by a PWM output.

NAME

Needle

2-24 characters: letters, digits and `_`, starting with a letter. This is the name used in G-code and slicers.

NOTES (OPTIONAL)

Oscillating needle cutter for foam and fabric. ESC on contact 18, relay on contact 11.

Wiring, supplier, settings that worked... shown on the tool card. Not sent to Klipper.

Cancel Next

Step 1: category, kind, name and notes

Mistakes are caught before you move on, with the rule spelled out:

Add a tool [X]

1. Tool 2. Outputs 3. Limits 4. Materials 5. Controls 6. Macros 7. Review

WHAT KIND OF TOOL IS IT?

Additive
Adds material: print heads, paste or glue dispensers.

Subtractive
Removes or cuts material: lasers, spindles, hot wires, knives.

Passive
Does not make or cut anything: pens, probes, cameras, holders.

WHICH SUBTRACTIVE TOOL?

Needle / vibrating knife

Oscillating needle or knife driven by a PWM output.

NAME

2 needle

2-24 characters: letters, digits and `_`, starting with a letter. This is the name used in G-code and slicers.

NOTES (OPTIONAL)

Wiring, supplier, settings that worked... shown on the tool card. Not sent to Klipper.

Name must start with a letter, use only letters, digits and `_` and be 2-24 characters.

Cancel Next

A name that breaks the rules is refused at step 1

Step 2 · Outputs – one row per output the tool needs. Most tools have a main power feed and a signal or two, so press **+ Add an output** for each. Every row has a job and a source:

- **Main power level (PWM)** – the output `M3 S` sets, scaled and capped. Exactly one per tool.
- **Switch on with the tool** – an on/off output that turns on when the tool's power does and off with it: a relay, a driver enable line, a vacuum.

The source is a **contact of the umbilical** that a Klipper output already drives (contact 18, the spindle ESC signal, for example), a **new output on a spare pin**, a piece of **system hardware**, or another output in the config. Below the outputs, tick the other contacts the tool uses – returns, supplies, the probe – so its pin map is complete. Contacts its outputs drive are ticked for you.

Add a tool [X]

1. Tool 2. **Outputs** 3. Limits 4. Materials 5. Controls 6. Macros 7. Review

Which umbilical contacts power and switch this tool. Most tools have a main power feed and a signal or two: add one row per output. The main power level is what M3 S sets; switch outputs turn on with the tool and off with it (an enable line, a relay, a vacuum).

OUTPUTS

Main power level (PWM) ▾	Contact 18 · PB11 · SPINDL ▾	Remove
Switch on with the tool (on) ▾	Contact 11 · PA1 · Spindle_r ▾	Remove

+ Add an output

CONTACTS THIS TOOL USES

☐ 1 Hotend heater +	☐ 2 Hotend heater -
☐ 3 Hotend thermistor	☐ 4 Hotend thermistor
☐ 5 Hotend fan +	☐ 6 Hotend fan -
☐ 7 Stepper A1	☐ 8 Stepper A2
☐ 9 Stepper B1	☐ 10 Stepper B2
☒ 11 24 V power activate +	☒ 12 24 V power activate -
☒ 13 Probe -	☒ 14 Probe +
☐ 15 Probe signal	☐ 16 Laser PWM (5 V)
☐ 17 Spare	☒ 18 PWM signal 24 V - (ESC signal t...
☐ 19 Spare	☐ 20 12 V power activate +
☐ 21 12 V power activate -	

Contacts its outputs and controls drive are ticked for you. Tick the returns, supplies and signal lines it also uses.

Back **Cancel** **Next**

Step 2: a PWM signal on contact 18, a relay on contact 11, and the contacts the tool uses

Step 3 · Limits – the power cap (a hard ceiling whatever the G-code asks), minimum and idle levels, the watchdog's maximum on-time, and the S value that means full power. Sharing the ESC channel sets the idle level to its neutral 30%.

Add a tool [Close]

1. Tool 2. Outputs **3. Limits** 4. Materials 5. Controls 6. Macros 7. Review

These limits protect the tool. Percentages are of the output's full range. Start low and raise them while watching the tool.

POWER CAP % 100 Hard ceiling, whatever the G-code asks for.	MINIMUM POWER % 0 Output at the lowest non-zero request.	IDLE LEVEL % 30 Output when the tool is OFF. Leave 0 unless the driver needs a neutral signal.
---	--	--

MAX TIME ON (S) 900 Watchdog: output is cut after this long without a new power command.	S VALUE FOR FULL POWER 1000 G-code M3 S<value> is scaled against this (1000 = S1000 is 100%).
--	---

[Back] [Cancel] [Next]

Step 3: power limits and watchdog

Step 4 · Materials – the presets you pick when starting a job (power, feed, Z offset), and the pre-job checklist shown before every job with this tool. The material name box suggests the names listed under **Admin > Tool lists**.

Add a tool [Close]

1. Tool 2. Outputs 3. Limits **4. Materials** 5. Controls 6. Macros 7. Review

Materials are the presets you pick when starting a job: what to cut or draw, and how fast.

MATERIAL	POWER %	FEED MM/MIN	Z OFFSET MM	
FOAM	60	600	0	Remove
FABRIC	40	500	0	Remove

+ Add material

PRE-JOB CHECKLIST (ONE ITEM PER LINE)

Needle or blade is firmly seated
Material is clamped flat
Hands and cables clear of the cutting path

Shown as a confirmation list before every job with this tool.

[Back] [Cancel] [Next]

Step 4: materials and checklist

Step 5 · Controls – extra outputs and inputs the tool brings that are not simply switched with it: a fan with its own speed, a servo, a lid switch. Press **+ Add a control** and answer the guide's questions: you describe what the control does, and the portal works out which Klipper section that needs and shows the exact text it will write.

Add a tool ×

1. Tool 2. Outputs 3. Limits 4. Materials **5. Controls** 6. Macros 7. Review

Extra outputs and inputs this tool brings: a vacuum relay, a cooling fan, a servo, a lid switch... Describe what each one does and the portal works out the Klipper section for it. The tool's main power output is separate (the Hardware step).

needle_vacuum
Vacuum pump relay - on/off - PC1 (inverted) - off when made safe -
macros: NEEDLE_VACUUM_ON, NEEDLE_VACUUM_OFF Edit Delete

needle_lid
Lid switch - input - PB1 (inverted) - on trigger: pause the job Edit Delete

+ Add a control

Back Cancel Next

Step 5: the tool's extra controls

The control guide asks, in order:

1. **Name and purpose.** Lower-case letters, digits and `_`, such as `needle_vacuum`. G-code uses the name (`SET_PIN PIN=needle_vacuum`), so it must not match anything else in your config.
2. **Which way does the signal go?** Rhino controls something on the tool, or the tool sends a signal to Rhino.
3. **What should Rhino do with it?** Pick the closest match:

You pick	Klipper section	Typical use
Switch it on and off	<code>output_pin</code>	Relay, solenoid, vacuum pump, light, valve
Set a level	<code>output_pin</code> , <code>pwm: True</code>	Driver board, LED dimmer, small heater
Run it like a fan	<code>fan_generic</code>	Fan or blower set by speed, with a kick-start
Run it while a heater is hot	<code>heater_fan</code>	Hotend or heat-break cooling
Move it to an angle	<code>servo</code>	Gate, pen lift, deflector
The tool sends a signal	<code>gcode_button</code>	Lid switch, limit switch, foot pedal, sensor

4. **Which pin?** Only free tool-connector pins are listed. If `myrhino/umbilical.json` says what each pin is (`"type": "logic"` or `"type": "mosfet"`), pins that cannot do the job are greyed out.
5. **How does it behave?** Active-low wiring and power-up state for a switch; maximum level and PWM cycle time for a level or a fan; heater and turn-on temperature for a heater fan; pulse widths for a servo.
6. **Safety and shortcuts.** Switch it off whenever the machine is made safe (end of job, cancel, tool swap, `EMERGENCY_STOP`; ticked by default); switch it off or leave it on if Klipper shuts down; and make `NAME_ON` / `NAME_OFF` (or `NAME_SET`, `NAME_ANGLE`) macros, optionally only while this tool is mounted.

The top of the guide: name, direction, what it does and the pin.

New control - Needle

CONTROL NAME

needle_vacuum

WHAT IS IT?

Vacuum pump relay

Lower-case letters, digits and _ Used in G-code, e.g. SET_PIN
PIN=needle_vacuum.

1. WHICH WAY DOES THE SIGNAL GO?

☒ Rhino controls something on the tool
A relay, fan, light, servo, driver...

☐ The tool sends a signal to Rhino
A button, door switch, limit switch, sensor...

2. WHAT SHOULD RHINO DO WITH IT?

☒ Switch it on and off
Relay, solenoid, vacuum pump, light, valve - anything that is simply on or off.

☐ Set a level (power, brightness, speed)
A driver board, LED dimmer or heater that takes a PWM level from 0 to 100%.

☐ Run it like a fan
A fan or blower you set by speed %, with a kick-start to get it spinning.

☐ Run it automatically while a heater is hot
Hotend or heat-break cooling: Kripper turns it on above a temperature by itself.

☐ Move it to an angle (hobby servo)
A servo that swings a gate, lifts a pen or flips a deflector.

3. WHICH PIN ON THE TOOL CONNECTOR?

PIN

PC1

Not described in umbilical.json

4. HOW DOES IT BEHAVE?

☒ On means the pin is pulled LOW (active-low)
Common on relay boards that switch when their input goes to ground.

AT POWER-UP

Off

Cancel

Add control

A new control: name, direction and what it does

The bottom of the guide: safety options, the macros it makes, and the exact text written to `custom_tools.cfg`. **Add control** saves only a valid entry; a name already in use, a taken pin or two controls on one pin are refused, with the reason in the preview box.

New control - Needle

A servo that swings a gate, lifts a pen or flips a deflector.

3. WHICH PIN ON THE TOOL CONNECTOR?

PIN

PC1

Not described in umbilical.json

4. HOW DOES IT BEHAVE?

☒ On means the pin is pulled LOW (active-low)
Common on relay boards that switch when their input goes to ground.

AT POWER-UP

Off

5. SAFETY AND SHORTCUTS

☒ Switch it off whenever the machine is made safe
End of job, cancel, tool swap and emergency stop (TOOL_SAFE_OFF).

IF KLIPPER SHUTS DOWN OR LOSES THE BOARD

☒ Switch it off (recommended)

☐ Leave it on
Only for things that are safe left running, such as cooling.

☒ Make macros for it: NEEDLE_VACUUM_ON, NEEDLE_VACUUM_OFF
Shown on the Macros tab; use them in job files or the console.

☒ Those macros only switch it on while this tool is mounted
Switching it off always works.

WRITTEN TO CUSTOM_TOOLS.CFG

```
[output_pin needle_vacuum]
# control of toolhead Needle: Vacuum pump relay
pin: !PC1
value: 0
shutdown_value: 0

[gcode_macro NEEDLE_VACUUM_ON]
# made by control needle_vacuum of Needle
description: Needle: needle_vacuum on
gcode:
{% if printer["gcode_macro SWAP_TOOL"].current_tool|int != 8 %}
{ action_raise_error("NEEDLE_VACUUM_ON: Needle is not mounted (slot 8). Swap tools first.") }
{% endif %}
```

Cancel Add control

Safety options and the text written to `custom_tools.cfg`

For a signal from the tool, the guide asks how it is wired. A switch to ground turns on the pin's pull-up; a sensor that drives the line needs none. Then it asks what happens when the signal triggers and when it is released: show a message, pause the job (only while one is running), emergency stop, or run a command or macro.

New control - Needle

☐ Rhino controls something on the tool
A relay, fan, light, servo, driver...

☒ The tool sends a signal to Rhino
A button, door switch, limit switch, sensor...

2. WHICH PIN ON THE TOOL CONNECTOR?

PIN
PB1

Not described in umbilical.json

3. HOW DOES IT BEHAVE?

WHAT IS CONNECTED?

☒ A switch or button that connects the pin to ground
The pin's pull-up is turned on, so it reads 'off' until pressed.

☐ A sensor or board that drives the line itself
No pull-up.

☐ Swap pressed and released
Tick if it reports the opposite of what you expect (normally-closed switches).

WHEN IT TRIGGERS

Pause the job

WHEN IT IS RELEASED

MESSAGE

Show a message

lid closed

WRITTEN TO CUSTOM_TOOLS.CFG

```
[gcode_button needle_lid]
# control of toolhead Needle: Lid switch
pin: ~!PB1
press gcode:
(% if printer.print_stats.state == "printing" %)
RESPOND TYPE:error MSG="needle_lid triggered - pausing the job"
PAUSE
(% endif %)
release gcode:
RESPOND MSG="needle_lid: lid closed"
```

needle_lid: make sure PB1 is a plain logic pin, not a MOSFET power output (describe it in myrhino/umbilical.json and the portal checks this for you).

Cancel Add control

A lid switch that pauses the job when opened

Step 6 · Macros – G-code macros that belong to this tool: a test cut, a purge, a park move. They are written to `custom_tools.cfg` with the tool and removed with it. Macros your controls made are listed underneath.

Add a tool

1. Tool 2. Outputs 3. Limits 4. Materials 5. Controls 6. Macros 7. Review

G-code macros that belong to this tool: a purge, a test cut, a park move... They are written to `custom_tools.cfg` with the tool and removed with it.

NEEDLE_TEST_CUT

Run the needle for 2 s with the vacuum on - only while mounted

Edit Delete

Made by your controls

NEEDLE_VACUUM_ON NEEDLE_VACUUM_OFF

Change these on the Controls tab.

+ Add a macro

Back Cancel Next

Step 6: the tool's macros

Press + **Add a macro**. **Macro name**: letters, digits and `_`, saved in capitals because Klipper ignores letter case. **Purpose**: one line, shown in Mainsail's macro list. **Only run when this tool is mounted**: with another tool on the machine the macro refuses with a message. **Macro**: Klipper G-code and Jinja exactly as in a `[gcode_macro]`. The box underneath shows exactly what will be written.

Refused: a name used by any macro or Klipper command (`SET_PIN`, `home`, `PAUSE`), G-code words such as `M3`, and template errors such as a missing `{% endif %}`. **Warned**: `SAVE_CONFIG`, `FIRMWARE_RESTART` or `M112` in the body, an unrecognised command (usually a typo), and text after `#` or `;`, which Klipper drops as a comment.

New macro - Needle

MACRO NAME
needle_test_cut

PURPOSE
Run the needle for 2 s with the vacuum on

Letters, digits and `_`. Klipper ignores case, so it is saved in capitals. Must not clash with any other macro or command. One line. Shown in Mainsail's macro list and console autocomplete.

☒ Only run when this tool is mounted (refused with a message otherwise)

MACRO

```
NEEDLE_VACUUM_ON
M3 S{params.S|default(300)|int}
G4 P2000
M5
NEEDLE_VACUUM_OFF
```

Klipper G-code and Jinja templates (`{% if %}`, `{params.X}`) exactly as in a `[gcode_macro]`. Checked before it is saved.

WRITTEN TO CUSTOM_TOOLS.CFG

```
[gcode_macro NEEDLE_TEST_CUT]
# macro of toolhead Needle
description: Run the needle for 2 s with the vacuum on
gcode:
{% if printer["gcode_macro SWAP_TOOL"].current_tool|int != 8 %}
{ action_raise_error("NEEDLE_TEST_CUT: Needle is not mounted (slot 8). Swap tools first.") }
{% endif %}
NEEDLE_VACUUM_ON
M3 S{params.S|default(300)|int}
G4 P2000
M5
NEEDLE_VACUUM_OFF
```

Cancel Add macro

A macro with its live preview

Step 7 · Review – the portal checks everything against your live Klipper config, warns about shared outputs, and tells you the slot the tool will get. Add up to six photos here, then **Create tool**.

Add a tool ×

1. Tool 2. Outputs 3. Limits 4. Materials 5. Controls 6. Macros 7. Review

Name Needle
Kind Subtractive - Needle / vibrating knife
Main power contact 18 (PB11, SPINDLE_SPEED)
Switch outputs contact 11 (PA1, Spindle_power)
Limits cap 100%, min 0%, idle 30%, max 900s on, S1000 = full
Materials FOAM, FABRIC
Controls needle_vacuum (on/off, PC1), needle_lid (input, PB1)
Macros NEEDLE_TEST_CUT, NEEDLE_VACUUM_ON, NEEDLE_VACUUM_OFF

SPINDLE_SPEED is also used by: HotJoe spindle ESC (idles at 0.3 = neutral). Only one of those tools is mounted at a time, but wire the tool to match.

Spindle_power is also used by: HotJoe spindle relay.

needle_lid: make sure PB1 is a plain logic pin, not a MOSFET power output (describe it in myrhino/umbilical.json and the portal checks this for you).

Ready: this becomes slot 8.

PHOTOS (OPTIONAL, UP TO 6)
Choose Files 2 files

Back Cancel Create tool

Step 7: review, with the outputs, controls and macros listed

Press **Add maintenance tasks** on the confirmation and the portal offers the Task Book that fits the new tool (see *Task Library and Task Books* in Part 4).

Assign the book "Needle cutter" ×

ASSIGN IT TO

Tool - Needle ▼

Adds 2 task(s), linked to the library: editing a library task updates them. "Whole machine" puts each task in its own area.

Only toolheads are listed: these tasks count a tool's own use.

Cancel Assign book

The Task Book offered for a new needle cutter

Restarting Klipper to load changes

A new or changed tool is saved immediately but is not live until Klipper restarts. A yellow banner lists what is waiting, from the portal or the console; press **Restart Klipper** when the machine is idle. Changes Klipper never sees – notes, photos, the pin map – are saved without asking for a restart.

Tool changes are saved but not live yet.

Klipper has to restart to load them. The machine is idle, so it is safe now.

- edited Needle: notes

[Restart Klipper](#)

Changes waiting; the machine is idle, so the restart is allowed

While a job is printing or paused, **Restart Klipper** is greyed out and the banner says why, with the file name, a progress bar, time elapsed and time left, and the clock time when a restart becomes possible. Changes made during a job are saved and queued; only the restart waits, so it can never kill a job.

Tool changes are saved but not live yet.

Klipper loads them at its next restart, which waits until the job finishes - restarting now would stop it.

- edited Needle: notes

Running: bracket_v3.gcode

38% · 47 m 01 s elapsed · about 1 h 14 m left · restart possible at about 9:22 AM

[Restart Klipper](#)☐ Restart automatically when this job finishes

A print running: progress, time left and when a restart is possible

Paused, the countdown stops and the banner shows how long the job has been paused.

Tool changes are saved but not live yet.

Klipper loads them at its next restart, which waits until the job is finished (it is paused now) - restarting now would stop it.

- edited Needle: notes

Paused: bracket_v3.gcode

38% · 47 m 00 s elapsed · about 1 h 15 m left · paused for 6 s - the timer is stopped

[Restart Klipper](#)☒ Restart automatically when this job finishes

The same job paused

Time left comes from the slicer's estimate for 3D prints. Laser, CNC and cutter files usually carry none, so the portal works it out from file progress, the way Mainsail does, and says so.

Tool changes are saved but not live yet.

Klipper loads them at its next restart, which waits until the job finishes - restarting now would stop it.

- edited Needle: notes

Running: sign_v2.nc

25% · 15 m 01 s elapsed · about 44 m 41 s left · restart possible at about 8:52 AM · (estimated from file progress)

[Restart Klipper](#)☒ Restart automatically when this job finishes

A laser job: time left estimated from file progress

Restart automatically when this job finishes is off by default. Tick it and the portal restarts Klipper 30 seconds after the job completes or is cancelled, which leaves time for `END_PRINT` or `CANCEL_PRINT` to finish. After an error it does not restart, so you can see what happened. A restart started anywhere else (Mainsail, `RESTART_FOR_TOOLS`) also clears the banner. The console commands (`ADD_TOOLHEAD` and the rest) stay refused during a job: they run a shell command that Klipper waits for, which would stall the job's G-code.

Editing a tool

Press **Edit** on the tool's card. On the **Settings** tab you can rename it and change its power limits and materials; the legend above the limits lists its outputs and the contacts they use.

Edit Needle

Settings Controls (2) Macros (3)

NAME: Needle KIND: NEEDLE (powered)

Renaming changes the name used in G-code and slicers.

POWER LIMITS - OUTPUTS: POWER: SPINDLE_SPEED (CONTACT 18) - SWITCH: SPINDLE_POWER (CONTACT 11)

POWER CAP %: 100 MINIMUM %: 0 IDLE %: 30

MAX TIME ON (S): 900 S FOR FULL POWER: 1000

MATERIALS

MATERIAL	POWER %	FEED MM/MIN	Z OFFSET MM	
FABRIC	40	500	0	Remove
FOAM	60	600	0	Remove

+ Add material

PRE-JOB CHECKLIST (ONE ITEM PER LINE)

Needle or blade is firmly seated
Material is clamped flat
Hands and cables clear of the cutting path

CONTACTS THIS TOOL USES

☐ 1 Hotend heater +	☐ 2 Hotend heater -	☐ 3 Hotend thermistor	☐ 4 Hotend thermistor
☐ 5 Hotend fan +	☐ 6 Hotend fan -	☐ 7 Stepper A1	☐ 8 Stepper A2
☐ 9 Stepper B1	☐ 10 Stepper B2	☒ 11 24 V power activ...	☒ 12 24 V power activ...
☒ 13 Probe -	☒ 14 Probe +	☐ 15 Probe signal	☐ 16 Laser PWM (5 V)
☐ 17 Spare	☒ 18 PWM signal 24 V...	☐ 19 Spare	☐ 20 12 V power activa...
☐ 21 12 V power activa...			

Contacts its outputs and controls drive are ticked for you. Tick the returns, supplies and signal lines it also uses.

NOTES

Delete tool Cancel Save changes

Edit window: name, outputs, limits and materials

Further down are the checklist, the contacts the tool uses (tick more as you wire them), notes and photos. **x** on a photo deletes it; **Choose Files** adds more. Photos are kept in `~/printer_data/rhino_data/images/`, outside the config folder, so config backups stay small.

The 'Edit Needle' window is a dark-themed interface with a close button (X) in the top right corner. It contains several sections:

- MAX TIME ON (S)**: A text input field with the value '900'.
- S FOR FULL POWER**: A text input field with the value '1000'.
- MATERIALS**: A table with columns: MATERIAL, POWER %, FEED MM/MIN, Z OFFSET MM, and a Remove button.

MATERIAL	POWER %	FEED MM/MIN	Z OFFSET MM	
FABRIC	40	500	0	Remove
FOAM	60	600	0	Remove

 Below the table is a '+ Add material' button.
- PRE-JOB CHECKLIST (ONE ITEM PER LINE)**: A list of three items:
 - Needle or blade is firmly seated
 - Material is clamped flat
 - Hands and cables clear of the cutting path
- CONTACTS THIS TOOL USES**: A grid of 21 items, each with a checkbox and a label:
 - 1 Hotend heater +, 2 Hotend heater -, 3 Hotend thermistor, 4 Hotend thermistor
 - 5 Hotend fan +, 6 Hotend fan -, 7 Stepper A1, 8 Stepper A2
 - 9 Stepper B1, 10 Stepper B2, 11 24 V power activ..., 12 24 V power activ...
 - 13 Probe -, 14 Probe +, 15 Probe signal, 16 Laser PWM (5 V)
 - 17 Spare, 18 PWM signal 24 V..., 19 Spare, 20 12 V power activa...
 - 21 12 V power activa...
 Below the grid is a note: 'Contacts its outputs and controls drive are ticked for you. Tick the returns, supplies and signal lines it also uses.'
- NOTES**: A text area containing the text: 'Oscillating needle cutter for foam and fabric. ESC on contact 18, relay on contact 11.'
- PHOTOS**: Two photo thumbnails with red 'x' delete buttons. Below them is a 'Choose Files' button and the text 'No file chosen'.

At the bottom are three buttons: 'Delete tool' (red), 'Cancel', and 'Save changes' (teal).

Edit window: checklist, contacts, notes and photos

The **Controls** and **Macros** tabs work exactly like steps 5 and 6 of the wizard; their changes are saved with **Save changes** and are live after the restart.

The 'Edit Needle' window is shown with the 'Controls' tab selected. It has a close button (X) in the top right corner. The tabs are 'Settings', 'Controls (2)', and 'Macros (3)'. Below the tabs is a descriptive text: 'Extra outputs and inputs this tool brings: a vacuum relay, a cooling fan, a servo, a lid switch... Describe what each one does and the portal works out the Klipper section for it. The tool's main power output is separate (the Hardware step).'

There are two control entries:

- needle_vacuum**: Vacuum pump relay - on/off · PC1 (inverted) · off when made safe · macros: NEEDLE_VACUUM_ON, NEEDLE_VACUUM_OFF. Buttons: Edit, Delete.
- needle_lid**: Lid switch - input · PB1 (inverted) · on trigger: pause the job. Buttons: Edit, Delete.

Below the entries is a '+ Add a control' button. At the bottom are three buttons: 'Delete tool' (red), 'Cancel', and 'Save changes' (teal).

Edit window, Controls tab

Deleting a tool


In the edit window press **Delete tool**. The button changes to **Click again to delete <name>**; press it within 4 seconds to confirm. The tool's pins are freed, its photos removed and its maintenance tasks archived. Restart Klipper afterwards.



Two-click delete confirmation

On a phone

The portal works on a phone: the menu folds behind , and the status chips scroll sideways in the top bar.

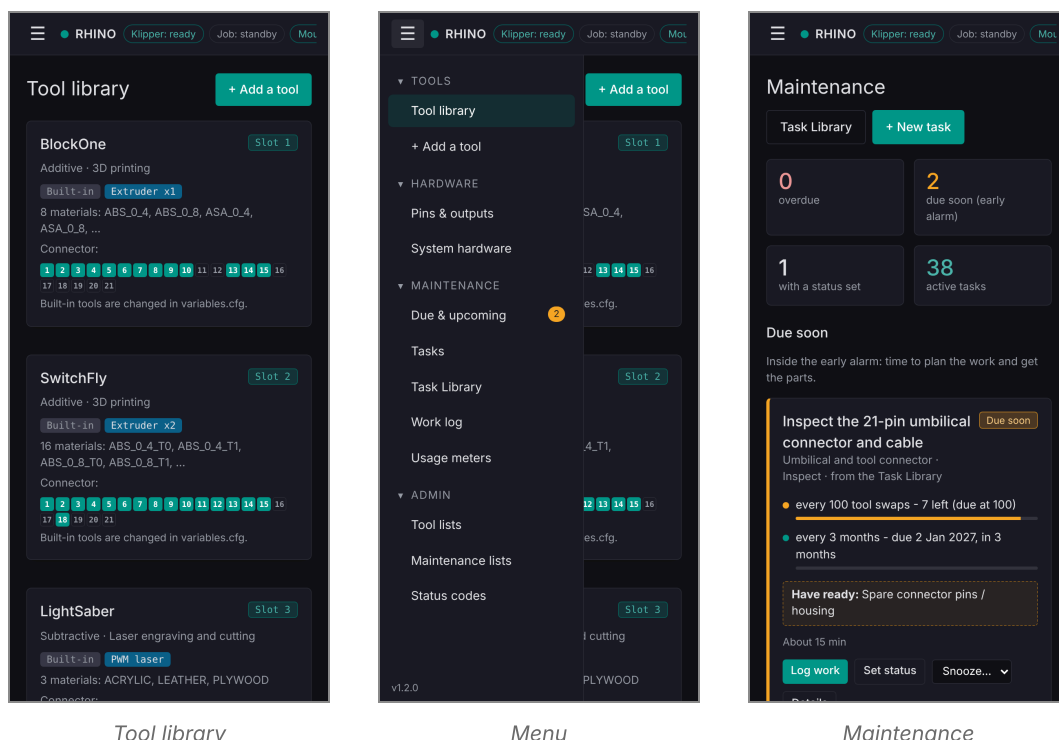

Tool library

Menu

Maintenance

Pins, outputs and system hardware

Hardware > Pins & outputs starts with the tool connector: all 21 contacts of the umbilical, the board pin behind each, what drives it in the Klipper config and which tools use it. A contact whose board pin nothing in the config uses is highlighted – it means the pin map and `printer.cfg` disagree (contact 20 here; see *Still to check on the machine*). The contacts come from the Rhino pin map; describe different wiring with "contacts" in `myrhino/umbilical.json`.

Every contact of the tool connector, the board pin behind it, what drives it in the Klipper config and which tools use it.				
CONTACT	BOARD PIN	FUNCTION	DRIVEN BY	TOOLS USING IT
1	PA2	Hotend heater + Switched output	tools/3dp.cfg [extruder]	BlockOne, SwitchFly
2	-	Hotend heater - Return / -	-	BlockOne, SwitchFly
3	PF4	Hotend thermistor Signal	tools/3dp.cfg [extruder]	BlockOne, SwitchFly, LightSaber, HotJoe, DragKnife, PenPlotter
4	-	Hotend thermistor Return / -	-	BlockOne, SwitchFly, LightSaber, HotJoe, DragKnife, PenPlotter
5	PE5	Hotend fan + Switched output	tools/3dp.cfg [heater_fan fan1]	BlockOne, SwitchFly
6	-	Hotend fan - Return / -	-	BlockOne, SwitchFly
7	-	Stepper A1 Stepper	-	BlockOne, SwitchFly
8	-	Stepper A2 Stepper	-	BlockOne, SwitchFly
9	-	Stepper B1 Stepper	-	BlockOne, SwitchFly
10	-	Stepper B2 Stepper	-	BlockOne, SwitchFly
11	PA1	24 V power activate + Switched output	Spindle_power	SwitchFly, HotJoe, Needle
12	-	24 V power activate - Return / -	-	SwitchFly, HotJoe, FoamWire, Needle
13	-	Probe - Return / -	-	BlockOne, SwitchFly, LightSaber, HotJoe, DragKnife, Needle, PenPlotter
14	-	Probe + Supply +	-	BlockOne, SwitchFly, LightSaber, HotJoe, DragKnife, Needle, PenPlotter
15	PG10	Probe signal Signal	printer.cfg [probe]	BlockOne, SwitchFly, LightSaber, HotJoe, DragKnife, PenPlotter
16	PB0	Laser PWM (5 V) Signal	SERVO_LASER	LightSaber
17	-	Spare Spare	-	-
18	PB11	PWM signal 24 V - (ESC signal to GND) Signal	SPINDLE_SPEED	SwitchFly, HotJoe, Needle
19	-	Spare Spare	-	-
20	PD12	12 V power activate + Switched output	- Nothing in the Klipper config uses PD12 - check the wiring against printer.cfg	LightSaber
21	-	12 V power activate - Return / -	-	LightSaber

The 21 contacts, what drives them and which tools use them


Further down: the spare pins a new tool output may claim (Free, In use with the file and section, or Reserved by a tool), the outputs tools can share with their contact and idle level, and the system hardware.

Output channels tools can share				
Existing outputs a new powered tool may drive instead of using a new pin.				
OUTPUT	TYPE	CONTACT	IDLE LEVEL	ALSO USED BY
FoamWire_PWR	PWM	-	0	-
LASER_INITIALIZE	PWM	-	0	LightSaber laser power rail
SERVO_LASER	PWM	16	0	LightSaber laser intensity / SwitchFly path servo
SPINDLE_SPEED	PWM	18	0.3	HotJoe spindle ESC (idles at 0.3 = neutral)
Spindle_power	On/off	11	0	HotJoe spindle relay
Umbilical_LED	PWM	-	0	umbilical LED strip data line (not a power output!)
dust_vacuum	On/off	system hardware	0	-
enclosure_light	On/off	system hardware	0	-

Output channels tools can share

System hardware

Some hardware belongs to the machine rather than a tool: enclosure fans and lights, an air or vacuum pump, a door switch, a sensor. It is wired to board pins that are *not* on the umbilical and works whatever tool is mounted. **Hardware > System hardware** lists it by category; **+ Add system hardware** opens the same guide as a tool control.

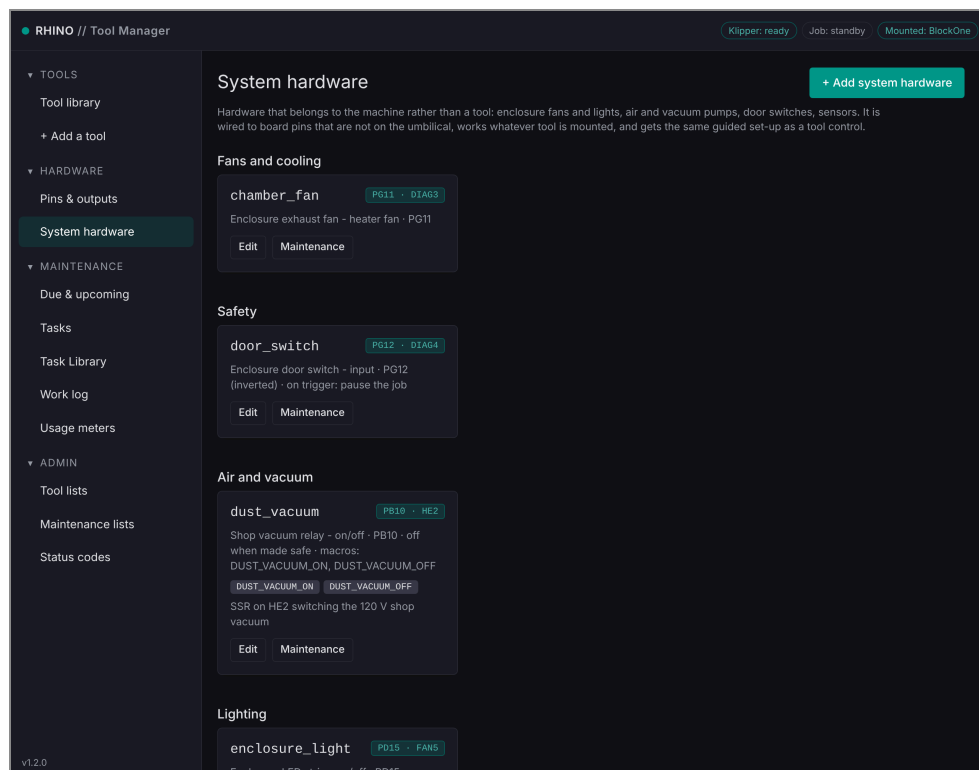

System hardware, grouped by category

The differences from a tool control: the pin list offers free **board headers** (FAN5, HE2, DIAG4...) and refuses any pin on the umbilical; you can type another free pin; you choose a **category** (edited under **Admin > Tool lists**); and its macros have no mounted-tool guard. **Switch it off whenever the machine is made safe** is off by default, since lights and fans usually stay on. A powered tool can switch a piece of system hardware on with itself – a shop vacuum with a cutter – by choosing it as a **Switch on with the tool** output in step 2. Each piece can carry maintenance tasks (**Maintenance** on its card).

New system hardware

NAME: WHAT IS IT?:

Lower-case letters, digits and _ Used in G-code, e.g. SET_PIN
PIN=enclosure_light.

CATEGORY: NOTES (OPTIONAL):

Edit the categories under Admin > Tool lists.

1. WHICH WAY DOES THE SIGNAL GO?

☐ Rhino controls it
A relay, fan, light, servo, driver...

☒ It sends a signal to Rhino
A button, door switch, limit switch, sensor...

2. WHICH BOARD PIN IS IT WIRED TO?

PIN: OR TYPE ANOTHER PIN:

Free headers on the board that are not on the umbilical. Any free board pin, e.g. on the EXP headers. Checked against the whole config.

3. HOW DOES IT BEHAVE?

WHAT IS CONNECTED?

☒ A switch or button that connects the pin to ground
The pin's pull-up is turned on, so it reads 'off' until pressed.

☐ A sensor or board that drives the line itself
No pull-up.

☐ Swap pressed and released
Tick if it reports the opposite of what you expect (normally-closed switches).

WHEN IT TRIGGERS:

WHEN IT IS RELEASED:

WRITTEN TO CUSTOM_TOOLS.CFG

An enclosure door switch that pauses the job

Admin lists

The **Admin** group sets what the portal's drop-down menus offer. Every list is checked as you save: a kind of tool, category or kind of work that something still uses cannot be removed (rename it instead).

Tool lists

Kinds of tool are grouped under Additive, Subtractive and Passive – what step 1 of Add a tool offers. Each has a name, the help line shown in the wizard and what it needs: a print head (copies an extruder), a power output, or nothing. What it needs is fixed once the kind exists; built-in kinds can be renamed but not removed.

Kinds of tool

Step 1 of Add a tool asks Additive, Subtractive or Passive, then offers the kinds listed under it. What a kind needs (a print head, a power output, or nothing) is fixed once it exists; its name, help and starting values can change.

ADDITIVE

Adds material: print heads, paste or glue dispensers.

NAME	IT NEEDS	HELP SHOWN IN THE WIZARD
3D-print head (clone of an existing one)	A print head (copies an extruder)	A new nozzle size or head that reuses :
Built in		Remove
Paste or glue dispenser	A power output	A pump or plunger driven by a PWM or
▶ Starting values for new tools of this kind		
Built in		Remove

+ Add an additive kind

SUBTRACTIVE

Removes or cuts material: lasers, spindles, hot wires, knives.

NAME	IT NEEDS	HELP SHOWN IN THE WIZARD
Hot wire foam cutter	A power output	Heated wire for cutting foam. Power is
▶ Starting values for new tools of this kind		
Built in - used by FoamWire		Remove
Needle / vibrating knife	A power output	Oscillating needle or knife driven by a f
▶ Starting values for new tools of this kind		
Built in - used by Needle		Remove
Other powered cutter	A power output	Any other cutting tool driven by a PWM
▶ Starting values for new tools of this kind		
Built in		Remove
Unpowered blade or knife	Nothing (unpowered)	Cuts by moving through the material: a
▶ Starting values for new tools of this kind		
Built in		Remove

+ Add an subtractive kind

PASSIVE

Does not make or cut anything: pens, probes, cameras, holders.

NAME	IT NEEDS	HELP SHOWN IN THE WIZARD
Passive tool (pen, probe, holder)	Nothing (unpowered)	No power output: a pen, probe, camera
▶ Starting values for new tools of this kind		
Built in - used by PenPlotter		Remove

+ Add a passive kind

Save kinds of tool

Admin > Tool lists: kinds of tool by category

Open **Starting values for new tools of this kind** to set the power cap, maximum on-time, materials (one per line: name, power %, feed) and pre-job checklist that a new tool of this kind starts with.

The screenshot shows a configuration window for a 'Hot wire foam cutter'. It has three tabs: 'NAME', 'IT NEEDS', and 'HELP SHOWN IN THE WIZARD'. The 'NAME' tab is active, showing the tool name 'Hot wire foam cutter'. Below the tabs, there is a section titled 'Starting values for new tools of this kind'. This section contains four input fields: 'POWER CAP %' with a value of 50, 'MAX TIME ON (S)' with a value of 600, 'MATERIALS (ONE PER LINE: NAME POWER% FEED)' with two entries 'FOAM_EPS 40% 300' and 'FOAM_XPS 50% 250', and 'PRE-JOB CHECKLIST (ONE PER LINE)' with two entries 'Wire installed, taut and clear of the stock' and 'Foam is clamped flat and cannot shift'. At the bottom left, it says 'Built in · used by FoamWire', and at the bottom right, there is a 'Remove' button.

NAME	IT NEEDS	HELP SHOWN IN THE WIZARD
Hot wire foam cutter	A power output	Heated wire for cutting foam. Power is

▼ Starting values for new tools of this kind

POWER CAP %	MAX TIME ON (S)
50	600

MATERIALS (ONE PER LINE: NAME POWER% FEED)	PRE-JOB CHECKLIST (ONE PER LINE)
FOAM_EPS 40% 300	Wire installed, taut and clear of the stock
FOAM_XPS 50% 250	Foam is clamped flat and cannot shift

Built in · used by FoamWire Remove

Starting values of the hot-wire kind

The same page holds the material names suggested in the material tables, by category; the nozzle sizes offered when you add a print head; and the system hardware categories.

The screenshot shows a 'Material names' configuration window. It has a title bar 'Material names' and a subtitle 'Suggested in the material tables of Add a tool and Edit, by category. Any other name can still be typed.' Below the subtitle, there are three columns of material names: 'ADDITIVE' (PLA, PETG, ABS, ASA, TPU, NYLON, PC, PASTE, GLUE), 'SUBTRACTIVE' (PLYWOOD, MDF, HARDWOOD, ACRYLIC, LEATHER, CARDSTOCK, VINYL, FABRIC, FOAM_EPS, FOAM_XPS, ALUMINIUM, PCB), and 'PASSIVE' (PAPER, CARD, DEFAULT). At the bottom, there is a note 'Separate names with commas. Letters, digits and _ - spaces become _' and a 'Save material names' button.

Material names

Suggested in the material tables of Add a tool and Edit, by category. Any other name can still be typed.

ADDITIVE	SUBTRACTIVE	PASSIVE
PLA, PETG, ABS, ASA, TPU, NYLON, PC, PASTE, GLUE	PLYWOOD, MDF, HARDWOOD, ACRYLIC, LEATHER, CARDSTOCK, VINYL, FABRIC, FOAM_EPS, FOAM_XPS, ALUMINIUM, PCB	PAPER, CARD, DEFAULT

Separate names with commas. Letters, digits and _ - spaces become _

Save material names

Material name suggestions by category

Maintenance lists

The machine areas tasks are grouped by, the kinds of work (Inspect, Clean...) with how many tasks use each, and the names of the four priority levels.

Machine areas

Machine tasks are grouped by area (the 'For' list of a task). An area with tasks cannot be removed.

Motion X/Y	Remove
Motion Z	Remove
Frame and enclosure	Remove
Electronics	Remove
Umbilical and tool connector	Remove
Other	Remove

[+ Add area](#) [Save areas](#)

Kinds of work

Inspect, clean, lubricate... the 'Kind of work' list of a task.

Adjust	1 task(s)	Remove
Calibrate	2 task(s)	Remove
Clean	9 task(s)	Remove
Inspect	11 task(s)	Remove
Lubricate	2 task(s)	Remove
Other	1 task(s)	Remove
Replace	4 task(s)	Remove

[+ Add kind of work](#) [Save kinds of work](#)

Priorities

Four levels, most urgent last. They order the Mainsail reminder; rename them to suit you.

LOW

NORMAL

HIGH

CRITICAL

Low	Normal	High	Critical
-----	--------	------	----------

[Save priorities](#)

Admin > Maintenance lists

Status codes are described with maintenance tracking in Part 4.

Console commands

Everything the portal does can also be typed in the Mainsail console. Lines starting `rhino:` are the tool manager's replies; nothing changes if a command is refused.

Managing tools

Command	What it does
<code>ADD_TOOLHEAD NAME=FoamWire KIND=HOT_WIRE PIN=PB1</code>	Add a powered tool on a new pin
<code>ADD_TOOLHEAD NAME=Needle KIND=NEEDLE POWER_PIN=SPINDLE_SPEED</code>	Add a powered tool on a shared output
<code>ADD_TOOLHEAD NAME=Wide KIND=PRINT_HEAD BASE=Block0ne NOZZLES=0.6,1.0</code>	Add a print-head clone with new nozzle sizes
<code>EDIT_TOOLHEAD NAME=FoamWire CAP=0.4 MAX_ON_S=300</code>	Change limits (also <code>MIN=</code> , <code>IDLE=</code> , <code>S_MAX=</code> , <code>DEFAULT_POWER=</code>)
<code>EDIT_TOOLHEAD NAME=FoamWire MATERIAL=FOAM_EPS POWER=0.45 FEED=280 ZOFF=0</code>	Add or change a material
<code>EDIT_TOOLHEAD NAME=FoamWire DELMATERIAL=FOAM_XPS</code>	Remove a material
<code>RENAME_TOOLHEAD NAME=FoamWire NEWNAME=HotWire</code>	Rename
<code>REMOVE_TOOLHEAD NAME=FoamWire</code>	Remove (asks you to confirm)
<code>LIST_TOOLHEADS</code>	Every tool with slot, type and materials
<code>TOOLHEAD_PINS</code>	Which connector pins are free, used or reserved
<code>CHECK_TOOLHEADS</code>	Re-check the registry against the config and regenerate <code>custom_tools.cfg</code>
<code>RESTART_FOR_TOOLS</code>	Restart Klipper to load tool changes (refused during a job)
<code>TOOLS_MENU</code>	Reminder of where to add, edit and remove tools

Running the machine

Command	What it does
<code>START_TOOL_SWAP</code>	Guided tool change
<code>RESTORE_TOOL</code>	Confirm the mounted tool after a restart
<code>SET_TOOLHEAD TOOLHEAD=<tool> MATERIAL=<material></code>	Select tool and material for the next job
<code>LASER_JOB_SETUP / CNC_JOB_SETUP / DRAGKNIFE_JOB_SETUP / TOOL_JOB_SETUP FILE=<name>.gcode</code>	Guided job setup for that tool
<code>G28 / G28 X Y</code>	Home. Z only with a print head confirmed; <code>G28 X Y</code> always

Command	What it does
SET_Z_ZERO	Set Z zero by eye for the laser (at focus), spindle, drag knife or an added tool – Bed up/down, then SET
TOOL_RESUME	Resume a paused non-print job
M3 S<value> / M5	Mounted tool on / off
SET_TOOL_POWER POWER=<0-1>	Set an added powered tool's output (fraction of its cap)
FILAMENT_CHANGE	Guided filament change
BED_COOLDOWN	Staged, material-aware bed cooldown
EMERGENCY_STOP	All tool power off (see Safety systems)
BACKUP_CFG MSG=<note>	Push the config folder to your GitHub backup
SWITCH_T0 / SWITCH_T1	SwitchFly: select filament path 1 or 2
Z_TILT_ADJUST	Tram the bed with the three Z motors (home first)
CALIBRATE_ESC	Guided spindle ESC throttle calibration (bit removed)
PM_STATUS	List maintenance that is overdue or due soon (live)
PM_REMINDER	Show the start-up maintenance pop-up again

Safety systems

Each of these is automatic; none needs switching on.

- **Tool must match.** `START_JOB` refuses a file sliced for a different tool. The laser and spindle commands refuse to fire unless LightSaber or HotJoe is the recorded tool, and switch their outputs off when they refuse.
- **Shared pin guard.** `SERVO_LASER` is the laser's intensity signal on LightSaber and SwitchFly's filament servo otherwise; servo commands are blocked while LightSaber is mounted.
- **Power cap.** An added powered tool never exceeds its cap, whatever `M3 S` or `SET_TOOL_POWER` asks for.
- **Watchdog.** Every 5 seconds while an added powered tool is on: with no job running it is cut after the tool's *Max time on*; during a pause it is held off; if the tool is no longer mounted everything is switched off.
- **Everything off on the way out.** Tool swap, `CANCEL_PRINT`, `END_PRINT` and `EMERGENCY_STOP` all switch off the laser rail and signal, the spindle relay (ESC to 0.3 neutral) and every added tool.
- **Pause makes it safe.** See *Pause, resume and cancel*: lifted clear and powered off before parking.
- **Nothing changes mid-job.** Tool swaps, adding/editing/removing tools and Klipper restarts from the portal are all refused while a job is printing or paused.

EMERGENCY_STOP is a power-off, not a halt. It cuts tool power but does not stop motion. To stop the machine dead, use Mainsail's emergency-stop button (`M112`), which shuts Klipper down; then `FIRMWARE_RESTART`.

Start low. Every starting power value (hot wire 40–50 %, caps, maximum on-times) is a placeholder. Test a new tool from a current-limited supply first, then raise its values in the portal while watching it.

Hardware layer. Heavy loads (laser, spindle, bed, vacuum pump) are switched through relays, so a controller fault cannot hold them on through the board itself. The spindle ESC's signal falls to neutral (0.3) and its relay opens if Klipper shuts down. Close the enclosure doors while the laser or spindle runs. Smoke detection is planned in the build notes but not yet fitted, so never leave a laser, hot-wire or spindle job unattended.

Notes

[illegible]

PART 4

Maintenance

Tracking preventive maintenance in the portal, and the procedures themselves.

Maintenance tracking
Task Library and Task Books
Status codes
Maintenance procedures

Maintenance tracking

The portal keeps track of preventive maintenance for the machine, every tool and the system hardware. It tells you what is overdue, what is coming up and what parts to have ready. It never blocks a job, a swap or a command. Open it from **Maintenance** in the sidebar: **Due & upcoming**, **Tasks**, **Task Library**, **Work log** and **Usage meters**.

Getting started

Open the **Task Library** and assign a **Task Book** to the whole machine and to each tool: *Rhino motion system and frame* on the machine, *3D print head* on BlockOne and SwitchFly, *Laser module* on LightSaber, and so on. The intervals are starting points; tune them to how your machine wears (see *Task Library and Task Books*). When you add a tool, the confirmation offers the book that fits it.

Due & upcoming

Tasks are grouped by status. The tiles at the top count them. Each card shows every rule with a progress bar, how far off it is, and an estimate in days at your usual rate of use. Once the early alarm goes off, the card lists the parts to **Have ready**.

RHINO // Tool Manager

Klipper: ready | Job: standby | Mounted: BlockOne | Maintenance: 1 overdue

Tools

- Tool library
- + Add a tool

Hardware

- Pins & outputs
- System hardware

Maintenance

- Due & upcoming** 1
- Tasks
- Task Library
- Work log
- Usage meters

Admin

- Tool lists
- Maintenance lists
- Status codes

Maintenance

Task Library + New task

1 overdue | 2 due soon (early alarm) | 1 with a status set | 34 active tasks

Overdue

Past the due point. Nothing is blocked - fit it in when it suits you.

Clean the nozzle and check it for wear Overdue

BlockOne - Clean - from the Task Library

- every 100 working hours - 4.0 h over (due at 100 h)

Have ready: Brass brush

About 10 min

Log work Set status

Snooze... Details

Due soon

Inside the early alarm: time to plan the work and get the parts.

Inspect the 21-pin umbilical connector and cable Due soon

Umbilical and tool connector - Inspect - from the Task Library

- every 100 tool swaps - 7 left (due at 100)
- every 3 months - due 2 Jan 2027, in 3 months

Have ready: Spare connector pins / housing

About 15 min

Log work Set status

Snooze... Details

Clean the laser lens / protective window In progress Due soon

LightSaber - Clean - High priority - from the Task Library

In progress - Lens soaking in IPA

Set Oct 2, 2026 - ends by itself Oct 5, 2026

- every 10 working hours - 0.8 h left (due at 10 h)

Have ready: Lens tissue, Isopropyl alcohol

About 5 min

Log work Change status

Details

Pending - Waiting on parts

Parts are on order. Say what in the note. The task keeps ageing so it comes back as soon as you clear it.

Check and tension the X/Y belts Pending - Waiting on parts Overdue

Motion X/Y - Adjust - from the Task


v1.2.0

Due & upcoming

Group	Meaning
Overdue	Past the due point
Due soon	Inside the early alarm: time to plan the work and order parts
A status code's own group	Tasks set to a status shown in its own group, such as <i>Pending – Waiting on parts</i>
Snoozed	Put off on purpose
Coming up	The next eight tasks by how close they are to due, plus tasks set to a status shown with the upcoming ones

Log work records what happened. **Set status** puts a status code on the task. **Snooze** puts an overdue or due-soon task off for 1 day to 2 weeks. **Details** opens the task. The sidebar badge and a chip in the top bar show the count: red for overdue, amber for due soon.

A card with a status code set shows it at the top in its colour, with the note, when it was set and when it ends by itself. Here *In progress* ends after three days; the task is still due soon underneath.

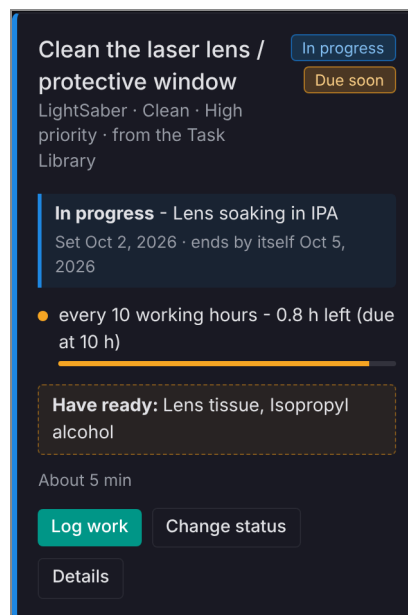

A task set to *In progress*, with its note

Logging work

Log work shows the task's steps and safety notes. **What happened?** is a list: **Done**; **Skipped – not needed this time** if you checked and nothing needed doing; or one of your status codes. Done and Skipped start the schedule again from here, and so do a part's hours, so a new nozzle starts at zero. You can backdate the entry and add notes; the current meter readings are saved with it.

The screenshot shows a dark-themed dialog box titled "Log work - Clean the nozzle and check it for wear". At the top, it says "BlockOne · 4.0 h over (due at 100 h)". Below this is a section "Steps" with a list: "1. Heat the nozzle", "2. Brush the outside clean", and "3. Check the tip for wear or a widened hole". A yellow box contains the text "Safety: The nozzle is hot." Below this are two dropdown menus: "WHAT HAPPENED?" set to "Done" and "WHEN" set to "10/02/2026". A small text line says "The schedule starts again from now (a part replaced starts its hours again too)." Below that is a "NOTES (OPTIONAL)" section with a text box containing "Brushed clean; tip shows no wear." At the bottom, there are "Cancel" and "Save to the work log" buttons. A note at the very bottom states "The current meter readings are saved with this entry."

Logging a nozzle clean as done

Choosing a status code instead sets that status on the task and logs it. The help line says what the status does; *Pending – Waiting on parts* needs a note saying what is on order.

This screenshot shows the same dialog box as above, but with "WHAT HAPPENED?" set to "Pending - Waiting on parts". Below this dropdown, a text line reads: "Parts are on order. Say what in the note. The task keeps ageing so it comes back as soon as you clear it. The task keeps ageing. A note is required." The "NOTES (REQUIRED)" section now has a text box containing "0.4 mm hardened nozzle ordered". The bottom buttons are "Cancel" and "Set status and log it". A note at the bottom states: "The status shows on the task until it is cleared, logged done, or ends by its own rule (Admin > Status codes)."

Logging a task as waiting on parts

Set status on a card does the same without the steps, and **Clear the status** takes it off again.

Status - Clean the nozzle and check it for wear

STATUS

Deferred to next shutdown

NOTE (OPTIONAL)

Do it with the nozzle change at the weekend

Shown with the upcoming tasks. Left out of the Mainsail reminder.

Cancel

Set status

Setting a status from the card

Tasks

Every task in one table, sorted overdue first, with its status code and status. Library tasks show *Library* and the Task Book they came from. **Show** filters it: overdue and due soon, with a status set, one machine area, one tool or piece of system hardware, or archived. Choosing an area or a tool also shows its usage meters.

RHINO // Tool Manager

Klipper: ready

Job: standby

Mounted: BlockOne

Maintenance: 2 due soon

TOOLS

Tool library

+ Add a tool

HARDWARE

Pins & outputs

System hardware

MAINTENANCE

Due & upcoming

Tasks

Task Library

Work log

Usage meters

ADMIN

Tool lists

Maintenance lists

Status codes

Tasks

Task Library

+ New task

SHOW

Every task

TASK	FOR	SCHEDULE	STATUS	LAST DONE	
Check and tension the X/Y belts Library - Rhino motion system and frame	Motion X/Y	every 100 production hours or every month	Pending - Waiting on parts Overdue (due at 100 h) 12 h over (due at 100 h)	never	Log work
Clean the laser lens / protective window Library - Laser module	LightSaber	every 10 working hours	In progress Due soon 0.8 h left (due at 10 h)	never	Log work
Inspect the 21-pin umbilical connector and cable Library - Rhino motion system and frame	Umbilical and tool connector	every 100 tool swaps or every 3 months	Due soon 7 left (due at 100)	never	Log work
Back up the Klipper config (BACKUP.CFG) Library - Rhino motion system and frame	Electronics	every month	Scheduled due 2 Nov 2026, in 4 weeks	never	Log work
Check frame bolts and squareness Library - Rhino motion system and frame	Frame and enclosure	every 6 months	Scheduled due 2 Apr 2027, in 6 months	never	Log work
Check laser focus and alignment Library - Laser module	LightSaber	every 50 working hours	Scheduled 41 h left (due at 50 h)	never	Log work
Check spindle runout and bearing noise Library - CNC spindle	HotJoe	every 100 working hours	Scheduled 100 h left (due at 100 h)	never	Log work
Check the hot-wire tension and replace a kinked wire Library - Hot wire cutter	FoamWire	every 10 working hours	Scheduled 10 h left (due at 10 h)	never	Log work
Check the hotend screws, heater and thermistor wiring Library - 3D print head	BlockOne	every 200 working hours or every 6 months	Scheduled 96 h left (due at 200 h)	never	Log work
Check the Z belt drive (3:1 reduction) Library - Rhino motion system and frame	Motion Z	every 500 production hours or every 6 months	Scheduled 386 h left (due at 500 h)	never	Log work
Clean and lubricate the X/Y linear guides Library - Rhino motion system and frame	Motion X/Y	every 200 production hours or every 3 months	Scheduled 88 h left (due at 200 h)	never	Log work
Clean and lubricate the Z leadscrews Library - Rhino motion system and frame	Motion Z	every 250 production hours or every 3 months	Scheduled 198 h left (due at 250 h)	never	Log work

Tasks

Creating a task

+ **New task** opens the task editor:

- **Task** – a short title. It is also shown in the Mainsail reminder.
- **For** – a machine area, a tool or a piece of system hardware.
- **Kind of work** and **Priority** – used for sorting and the card's label (the lists are under **Admin › Maintenance lists**).
- **When is it due?** – up to four rules. The task is due when the first of them is reached.
- **Start counting from** (new tasks only) – now, or the date it was last done, with the meter readings at that time.
- **How to do it** – steps, parts and consumables, tools needed, time needed, safety notes and links.
- **Reminders** – include it in the start-up reminder, or pause the task.

New maintenance task [X]

TASK
Replace the laser module fan

FOR
Machine - Motion X/Y

Short - it is also shown in the Mainsail reminder.

KIND OF WORK
Inspect

PRIORITY
Normal

WHEN IS IT DUE? (WHICHEVER RULE COMES FIRST)

Every so often every 3 months early alarm 14 days before
[Remove]

After so much use every 100 h Machine: Production hours early alarm
10 h before [Remove]

+ Add another rule

TIME RULES COUNT...

☒ **From when it was last done**
Done late? The next one moves later too.

☐ **On a fixed calendar**
Same dates every time, e.g. the 1st of every month.

START COUNTING FROM

☒ **Now - treat it as just done**

☐ **The last time it was done**

HOW TO DO IT

STEPS (ONE PER LINE)

PARTS AND CONSUMABLES (ONE PER LINE)

TOOLS NEEDED
2.5 mm hex key, belt tension gauge

[Cancel] [Save]

A new task with two rules

Rule	Example	Early alarm
Every so often	every 3 months	14 days before
After so much use	every 100 working hours of this tool	10 h before
After each event	after each emergency stop or Klipper shutdown	due straight away
Once, on a date	1 Dec 2026	7 days before

Time rules count from when the task was last done, so doing it late moves the next one later. Choose **On a fixed calendar** to keep the same dates every time, such as the 1st of every month. A usage rule's early alarm is in the meter's own unit; leave it empty for 10% of the interval. Events are a tool swap, this tool being mounted, a job, and an emergency stop or shutdown. **Add this task to the Task Library**, at the bottom of an existing task, turns it into a library task and links it.

Work log

Every entry, newest first: work done or skipped, status codes set and cleared, and meter changes. Filter it by machine area, tool or system hardware.

WHEN	FOR	TASK	WHAT	NOTES
Oct 2, 2026, 12:50 PM	BlockOne	Clean the nozzle and check it for wear	Done (was overdue)	Brushed clean; tip shows no wear.
Oct 2, 2026, 12:50 PM	Light Saber	Clean the laser lens / protective window	Status set: In progress	Lens soaking in IPA
Oct 2, 2026, 12:50 PM	Motion XY	Check and tension the X/Y belts	Status set: Pending - Waiting on parts	OT2 6 mm belt ordered, arrives Friday
Oct 2, 2026, 12:50 PM	BlockOne	Meter set: Working hours	0 → 104	
Oct 2, 2026, 12:50 PM	Machine	Meter set: Tool swaps	0 → 93	
Oct 2, 2026, 12:50 PM	Light Saber	Meter set: Working hours	0 → 9	
Oct 2, 2026, 12:50 PM	Machine	Meter set: Production hours	0 → 112	Hours before tracking started

Work log

Usage meters

Usage rules count these meters. The portal reads them from Moonraker every few seconds and from Moonraker's job history.

RHINO // Tool Manager Klipper: ready Job: standby Mounted: BlockOne Maintenance: 2 due soon

Usage meters

Machine
Tracking since Oct 2, 2026. Use Set if the machine had hours before tracking started.

METER	READING	AVERAGE
Machine up hours Klipper running and ready (counted while the portal runs)	0.0 h	- Set
Production hours A job running. Pauses are not counted.	112 h	- Set
Jobs Finished jobs from Moonraker's history	0	- Set
Filament used From Moonraker's job history	0.0 m	- Set
Tool swaps Times a different tool was mounted (connector and dock wear)	93	- Set
Emergency stops and shutdowns Klipper entering shutdown	0	- Set

BlockOne hours mounted 0.0 h - production hours 0.0 h

SwitchFly hours mounted 0.0 h - production hours 0.0 h

LightSaber hours mounted 0.0 h - production hours 0.0 h

HotJoe hours mounted 0.0 h - production hours 0.0 h

DragKnife hours mounted 0.0 h - production hours 0.0 h

FoamWire hours mounted 0.0 h - production hours 0.0 h

PenPlotter hours mounted 0.0 h - production hours 0.0 h

Needle hours mounted 0.0 h - production hours 0.0 h

Reminders
Show overdue and due-soon tasks in Mainsail after Klipper starts
☒ Once per start, after the "which tool is mounted?" question, it never blocks a job. PM_STATUS in the console lists them any time. A status code can leave its tasks out (Admin > Status codes).

v12.0

Usage meters

Meter	Machine	Each tool	Counts
Machine up hours	yes	–	Klipper running and ready
Production hours	yes	yes	A job running. Pauses are not counted.
Hours mounted	–	yes	The tool on the machine while Klipper is up
Working hours	–	yes	Print heads: nozzle heater on. LightSaber: laser on. HotJoe: spindle running. Added powered tools: output on. Passive tools and DragKnife: running a job.
Jobs	yes	yes	Finished jobs, from the job history
Filament used	yes	print heads	From the job history
Tool swaps / Times mounted	yes	yes	A different tool mounted. A restart is not a swap.
Emergency stops and shutdowns	yes	–	Klipper entering shutdown

The first time the portal runs, it imports the jobs already in Moonraker's history as the machine's starting reading. If the machine had hours before that, press **Set** on a meter and note why; the change goes in the work log. Jobs that ran while the portal was stopped are filled in from the history the next time it starts. System hardware tasks count the machine's meters. The page also has the start-up reminder switch.

Reminders in Mainsail

After Klipper starts, once you answer *which toolhead is mounted?*, Mainsail shows a **Maintenance due** pop-up with up to eight overdue and due-soon tasks, overdue first. It appears once per start; close it with **OK**. Snoozed tasks, tasks with the reminder unticked and tasks set to a status code that leaves them out of the reminder are not shown.

The portal keeps `myrhino/maintenance_status.cfg` up to date, and Klipper reads it when it starts. At any other time, type `PM_STATUS` in the console for the live list, or `PM_REMINDER` to show the start-up pop-up again. Renaming a tool moves its tasks and meters with it. Removing a tool or a piece of system hardware archives its tasks (filter **Archived**) and keeps their work-log entries.

Task Library and Task Books

The **Task Library** holds task definitions that are not tied to anything yet – the starter tasks for the Rhino and each kind of tool, and any you add. A **Task Book** is a named group of library tasks. Assign a book to a toolhead, a piece of system hardware or the whole machine, and it carries all of its tasks there.

The **Task Books** tab shows each book, its tasks and where it is assigned. **Assign...** puts it on something more; the **x** on an assignment takes it off, which archives the tasks it added there (their work log is kept). Books whose tasks count a tool's own use, such as working hours, can only go on toolheads.

RHINO // Tool Manager Klipper: ready Job: standby Mounted: BlockOne Maintenance: 2 due soon

Task Library + Library task + Task Book

Library tasks are task definitions that are not tied to anything yet. A Task Book groups library tasks under one name; assign the book to a toolhead (or the whole machine) and it carries all of its tasks there. Those tasks stay linked to the library, so editing a library task updates every copy.

Task Books (9) **Library tasks (29)**

3D print head Starter
 Nozzle, hotend and extruder care for any print head.
 1. Clean the nozzle and check it for wear
 2. Replace the nozzle
 3. Check the hotend screws, heater and thermistor wiring
 4. Clean the extruder drive gears
 5. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 BlockOne x
 Assign... Edit

CNC spindle Starter
 Collet, runout and chip clearing.
 1. Clean the collet and collet nut
 2. Check spindle runout and bearing noise
 3. Clear chips from the spindle mount and Z axis
 4. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 HotJoe x
 Assign... Edit

Drag knife Starter
 Blade and bearing.
 1. Inspect or replace the drag-knife blade
 2. Clean the drag-knife bearing
 3. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 DragKnife x
 Assign... Edit

Hot wire cutter Starter
 Wire tension and the connector.
 1. Check the hot-wire tension and replace a kinked wire
 2. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 FoamWire x
 Assign... Edit

Laser module Starter
 Lens, focus and module cooling.
 1. Clean the laser lens / protective window
 2. Check laser focus and alignment
 3. Clean the laser module fan and air assist
 4. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 LightSaber x
 Assign... Edit

Needle cutter Starter
 Needle or blade and the connector.
 1. Replace the needle or blade
 2. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 Needle x
 Assign... Edit


Passive tool Starter
 General checks for any unpowered tool you add.
 1. Inspect and clean the tool
 2. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 PenPlotter x
 Assign... Edit

Powered tool Starter
 General checks for any powered tool you add.
 1. Inspect the tool and its power cable
 2. Inspect the tool connector pins and latch
 ON (TOOLHEADS ONLY)
 Not assigned yet
 Assign... Edit

v12.0

Task Books, with where each is assigned


Assign... asks where. **Whole machine** puts each task in its own machine area (belts in Motion X/Y, leadscrews in Motion Z...). Assigning a book twice adds nothing twice.

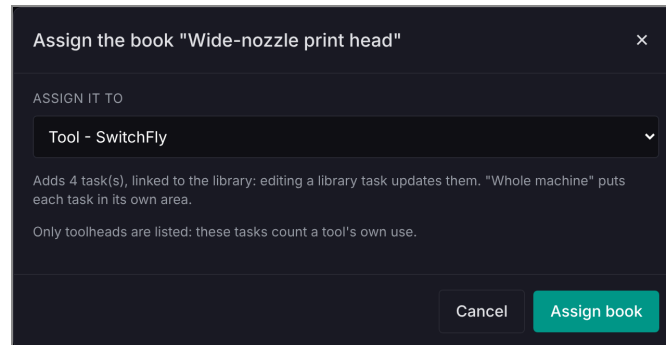

Assigning a Task Book

Linked tasks

Tasks that come from the library stay **linked** to it. Their steps and schedule are the library's, so **Details** on a linked task shows them read-only with two choices: **Edit the library task**, which changes every copy at once, or **Detach to customise**, which turns this one task into an ordinary task you can edit on its own. Pausing a linked task affects only that task. Each copy keeps its own schedule: when it was last done, its readings and its status.

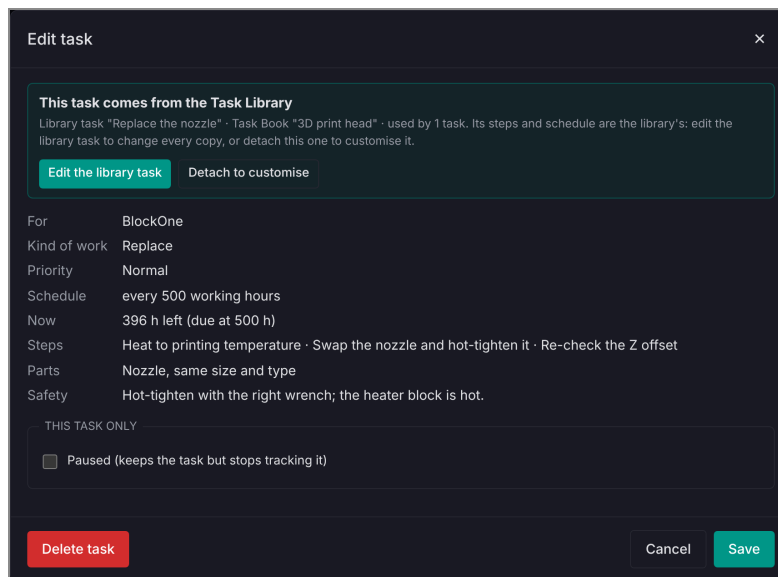

A linked task

▼

HARDWARE

Pins & outputs

System hardware

▼

MAINTENANCE

Due & upcoming

2

Tasks

Task Library

Work log

Usage meters

▼

ADMIN

Tool lists

Maintenance lists

Status codes

Task Books (9)

Library tasks (29)

LIBRARY TASK	SCHEDULE	GOES ON	IN BOOKS	USED BY		
Back up the Klipper config (BACKUP_CFO) Other - starter	every month	Anything (machine: Electronics)	Rhino motion system and frame	Electronics	Edit	Add to...
Check and tension the X/Y belts Adjust - starter	every 100 production hours or every month	Anything (machine: Motion X/Y)	Rhino motion system and frame	Motion X/Y	Edit	Add to...
Check frame bolts and squareness Inspect - starter	every 6 months	Anything (machine: Frame and enclosure)	Rhino motion system and frame	Frame and enclosure	Edit	Add to...
Check the Z belt drive (3:1 reduction) Inspect - starter	every 500 production hours or every 6 months	Anything (machine: Motion Z)	Rhino motion system and frame	Motion Z	Edit	Add to...
Clean and lubricate the X/Y linear guides Lubricate - starter	every 200 production hours or every 3 months	Anything (machine: Motion X/Y)	Rhino motion system and frame	Motion X/Y	Edit	Add to...
Clean and lubricate the Z leadscrews Lubricate - starter	every 250 production hours or every 3 months	Anything (machine: Motion Z)	Rhino motion system and frame	Motion Z	Edit	Add to...
Clean dust from the electronics bay and fans Clean - starter	every 1000 machine up hours or every 3 months	Anything (machine: Electronics)	Rhino motion system and frame	Electronics	Edit	Add to...
Clean the enclosure LED strip and diffuser Clean	every 3 months	Anything (machine: Frame and enclosure)	-	enclosure light	Edit	Add to...
Inspect and clean the tool Clean - starter	every 3 months	Anything	Passive tool	PenPlotter	Edit	Add to...
Inspect the 21-pin umbilical connector and cable Inspect - starter	every 100 tool swaps or every 3 months	Anything (machine: Umbilical and tool connector)	Rhino motion system and frame	Umbilical and tool connector	Edit	Add to...
Inspect the machine after an emergency stop or shutdown Inspect - starter	after an emergency stop or Klipper shutdown	Anything (machine: Other)	Rhino motion system and frame	Other	Edit	Add to...
Inspect wiring, connectors and cable chains Inspect - starter	every 6 months	Anything (machine: Electronics)	Rhino motion system and frame	Electronics	Edit	Add to...
Level the gantry (Z-tilt ADJUST) and check the first layer Calibrate - starter	every month	Anything (machine: Motion Z)	Rhino motion system and frame	Motion Z	Edit	Add to...

v12.0

Library tasks

Editing a library task: the box at the top lists the tasks it will update.

Edit library task

Used by 1 task

Saving updates every one of them: LightSaber. Their schedules carry on from where they are.

TASK

Clean the laser lens / protective window

Short - it is also shown in the Mainsail reminder.

AREA WHEN THE BOOK GOES ON THE WHOLE MACHINE

Choose when assigned...

Ignored on a toolhead or system hardware.

KIND OF WORK

Clean

PRIORITY

High

WHEN IS IT DUE? (WHICHEVER RULE COMES FIRST)

After so much use

every

10

h

The tool's own: Working hours

early alarm

2

h before

+ Add another rule

A rule that counts the tool's own use makes this a toolhead-only task.

HOW TO DO IT

STEPS (ONE PER LINE)

Laser and power rail off

Wipe the lens with lens tissue and isopropyl alcohol

Check for burn marks or pitting

PARTS AND CONSUMABLES (ONE PER LINE)

Lens tissue

Isopropyl alcohol

Listed as 'Have ready' once the early alarm goes off.

TOOLS NEEDED

2.5 mm hex key, belt tension gauge

TIME NEEDED (MINUTES)

5

SAFETY NOTES

Laser off and LASER_INITIALIZE off before touching the module. Wear laser goggles for any test fire.

LINKS (MANUALS, VIDEOS - ONE PER LINE)

REMINDEES

Delete library task

Cancel

Save and update 1 task

Editing the laser-lens library task

+ **Task Book** makes a book: a name, an optional description and the library tasks in it, found with the search box. Tasks you add to a book that is already assigned are added there too; tasks you take out are archived there.

New Task Book

BOOK NAME: Wide-nozzle print head

DESCRIPTION (OPTIONAL): Print heads with 0.8 mm and larger nozzles

TASKS IN THE BOOK

Find a library task... 4 selected

- ☐ Clean the drag knife bearing every 50 production hours
- ☒ Clean the extruder drive gears every 1000 m of filament
- ☐ Clean the laser lens / protective window every 10 working hours
- ☐ Clean the laser module fan and air assist every 25 working hours or every month
- ☒ Clean the nozzle and check it for wear every 100 working hours
- ☐ Clear chips from the spindle mount and Z axis every 10 jobs
- ☐ Inspect or replace the drag-knife blade every 20 production hours
- ☐ Inspect the tool and its power cable every 50 working hours or every 3 months
- ☒ Inspect the tool connector pins and latch every 50 mounts
- ☐ Replace the needle or blade every 20 working hours
- ☒ Replace the nozzle every 500 working hours

Need a task that is not here? Add it with + Library task first.

Cancel Save book

A new Task Book for wide-nozzle print heads

Status codes

Admin > Status codes lists two kinds of status. The **built-in statuses** – Overdue, Due soon, Scheduled, Done, Snoozed and Paused – are worked out from each task's schedule, the snooze and the pause switch. Rename them or change their colour; they cannot be removed.

Built-in statuses			
Worked out from each task's schedule, the snooze and the pause switch. Rename them or change their colour; they cannot be removed.			
STATUS	NAME SHOWN	COLOUR	WHEN
overdue	Overdue	 Red	Past the due point.
due_soon	Due soon	 Amber	Inside the early alarm: plan the work, get the parts.
ok	Scheduled	 Teal	Not due yet.
done	Done	 Grey	A one-off task that has been done.
snoozed	Snoozed	 Indigo	Due, but put off for a few days.
paused	Paused	 Grey	Kept, but not tracked.

Built-in statuses: name and colour

Your status codes are set by hand, from a task card or the Log work list: *Pending – Waiting on parts, In progress, Deferred to next shutdown*, or any you add with **+ Add a status code**. Each answers four questions, and the portal applies the answers as rules.

NAME	COLOUR	DESCRIPTION (SHOWN WHEN IT IS CHOSEN)
Pending - Waiting on parts	 Purple	Parts are on order. Say what in the note
1. WHERE DOES THE TASK SHOW? ☐ With the due tasks ☐ With the upcoming tasks ☒ In its own group		
2. WHAT HAPPENS TO ITS SCHEDULE? ☒ Keeps running - the task still ages toward overdue ☐ Pauses - time and use while it is set do not count ☐ Counts as done - the interval starts again		
3. WHEN DOES IT END BY ITSELF? ☒ Never - until someone changes it ☐ After a number of days ☐ When the machine or tool is used again When it ends, the task goes back to its built-in status. Logging the task done also ends it.		
4. ALSO ☐ Keep it in the Mainsail reminder The task still shows after a Klipper start when it is due. ☒ A note is required Whoever sets it has to say why (which parts, who, when). ☒ Offer it in the Log work list Next to Done and Skipped.		
Remove		

The rules of Pending – Waiting on parts

Question	Choices	What it does
1. Where does the task show?	With the due tasks · in its own group · with the upcoming tasks	Where Due & upcoming lists it. Only <i>with the due tasks</i> keeps it in the overdue and due-soon counts.
2. What happens to its schedule?	Keeps running · pauses · counts as done	<i>Keeps running</i> : the task still ages toward overdue. <i>Pauses</i> : time and use while the status is set do not count; the due point moves later by that much when it ends. <i>Counts as done</i> : the interval starts again when the status is set.
3. When does it end by itself?	Never · after a number of days · when the machine or tool is used again	When it ends, the task goes back to its built-in status and the end is logged. Logging the task done also ends it.
4. Also	Keep it in the Mainsail reminder · a note is required · offer it in the Log work list	Whether the start-up pop-up still shows the task when due; whether whoever sets it must say why; whether it appears next to Done and Skipped.

A status code that tasks are set to cannot be removed until they are cleared. The three codes the portal starts with:

Status code	Shows	Schedule	Ends
Pending – Waiting on parts	own group	keeps running	never (note required)
In progress	with the due tasks	keeps running	after 3 days
Deferred to next shutdown	with the upcoming tasks	pauses	when the machine is used again


Maintenance procedures

Four items are scheduled in the build notes; no intervals are set yet, so record what you find and when.

Item	What to do
XY belts	Check for stretch and uneven tension; re-tension as below. Replacements: 15 mm GT2, glass-fibre core, 3 m per belt
Bearings and rails	Check the X rail and the bearings in the idlers and tensioners for roughness or play
Z leadscrews	Clean and re-lubricate all three leadscrews
Under the bed	Clear dust, chips and filament from the underside of the machine

Tensioning the XY belts

Each belt has a cam tensioner on the rear frame bar with an adjustment knob that indexes into one of five settings.

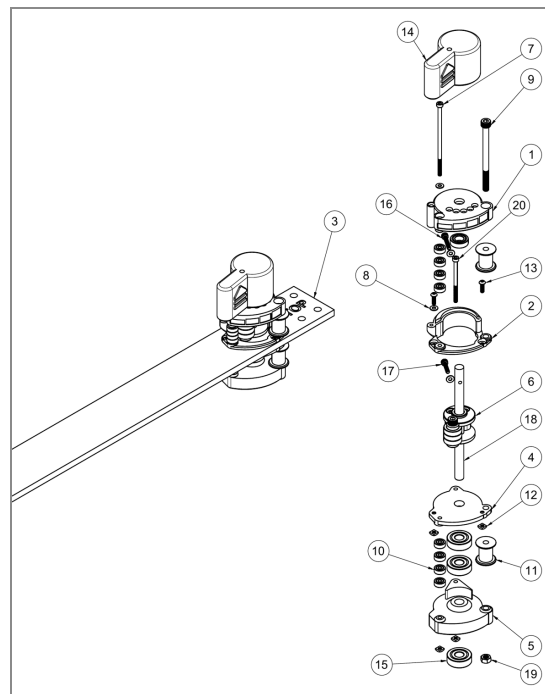

Belt tensioner assembly, exploded (item 14 is the adjustment knob)

1. Loosen both belt clamps on the X-carriage.
2. Turn both tensioners to their lowest setting.
3. Pull each belt through its carriage clamp until it is snug with no slack – not tight – while keeping the gantry square to both Y rails. The holes in the linear rails are a quick reference.
4. Tighten the belt clamps.

5. Turn both tensioner knobs to the same setting.

Tramming the bed

With a print head mounted, home with `G28`, then run `Z_TILT_ADJUST`. Klipper probes three points and levels the bed with its three Z motors, retrying up to five times until the points agree within 0.05 mm. Run it after any work on the leadscrews or the bed.

Calibrating the spindle ESC

Do this once when an ESC is new or replaced, or if spindle speeds look wrong. **Remove the bit from the collet first.**

1. Mount HotJoe and run `CALIBRATE_ESC`.
2. Press **Step 2: Send full throttle (1.0)**. This switches the spindle relay on with a full-throttle signal, so the ESC powers up and plays its start-up tones.
3. As soon as the tones finish, press **Step 4: Send low endpoint (0.3)**.
4. The ESC confirms with a tone. Its throttle range now matches Klipper's 0.3–1.0.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

PART 5

Reference

When something goes wrong, where things live, and what is left to check.

Troubleshooting

Files, backups and tests

Build reference

Still to check on the machine

Troubleshooting

Symptom	Likely cause	Fix
Mainsail's Resume says <i>extruder not hot enough</i>	A non-print tool's job is paused	Use Resume job in the Rhino pop-up, or <code>TOOL_RESUME</code>
Console: <i>resume it with TOOL_RESUME</i> after pressing Resume	Same – the extruder happened to be warm	<code>TOOL_RESUME</code>
Job refuses to start: <i>HARDWARE MISMATCH</i>	File sliced for a different tool than the one recorded	<code>START_TOOL_SWAP</code> to the right tool, or answer the restart pop-up correctly
Laser or spindle command: <i>CRITICAL SAFETY BLOCK</i>	Recorded tool is not LightSaber / HotJoe	Check the restart pop-up answer; run <code>RESTORE_TOOL</code>
New tool not listed in Mainsail / <i>Unknown command</i>	Klipper not restarted since adding it	Restart Klipper in the portal, or <code>RESTART_FOR_TOOLS</code>
Portal shows Moonraker offline	Moonraker stopped, or portal pointed at the wrong address	Restart Moonraker; the portal still edits tools but cannot restart Klipper
Portal: <i>Restarting now would kill it</i>	A job is printing or paused	Wait for the job to finish or cancel it
<code>REMOVE_TOOLHEAD</code> : <i>is the mounted tool</i>	You cannot remove the tool on the machine	Swap to another tool first
Tool commands: <i>blocked while a job is printing</i>	Registry changes are locked during jobs	Finish or cancel the job
Add wizard offers no free pins	All three free connector pins (PB1, PC0, PC1) are taken	Share an existing output, or list more umbilical pins in <code>myrhino/umbilical.json</code>
Swap wizard: <i>Toolhead not detected</i>	Umbilical not seated	Re-seat the 21-pin umbilical and press verify
Added tool switched itself off	Watchdog: on longer than <i>Max time</i> on with no job	Raise <i>Max time</i> on in the portal, or run it from a job file
ABS/ASA bed cooldown stops early	Klipper's 600 s idle timeout	Add <code>[idle_timeout]</code> with <code>timeout: 1800</code>
<code>rhino_toolgen</code> or backup commands fail	Login is not <code>pi</code>	Fix the <code>/home/pi</code> paths (see <i>Install</i>)
Swap wizard stays on Cooling Down & Parking	It waits until the hotend and the bed are both below 40 °C	Wait; after a hot print the bed is usually the slow one
Drag-knife file stops with M3 rejected	The CAM profile writes laser power commands	Use a drag-knife LaserWeb profile with Laser Intensity and Tool Off blank
Spindle speed range wrong, or ESC will not arm	ESC endpoints not calibrated to Klipper's 0.3–1.0 signal	Run <code>CALIBRATE_ESC</code> with the bit removed

Symptom	Likely cause	Fix
Control or macro refused: <i>already exists</i>	The name is used by another macro, a Klipper command or a config object (Klipper ignores case for macros)	Choose another name; the message says who has it
A pin is greyed out in the controls guide	<code>umbilical.json</code> marks it as a MOSFET output, which cannot read a signal or drive a servo	Use a logic pin, or correct the pin's type
Banner says <i>time left unknown</i>	The file has no slicer estimate and is under 2% done	Wait a moment; it estimates from progress after that
Meters do not move	The portal service is not running (meters are counted by it)	<code>sudo systemctl status rhino-portal</code> ; missed jobs are filled in from the history when it starts
No maintenance pop-up after a restart	Nothing was due, the reminder is switched off, or the tool-restore question was not answered yet	Answer the question, or run <code>PM_STATUS</code>

Files, backups and tests

To change one thing, open the one file that owns it.

To change	Edit
Built-in tools, their materials and slots	<code>variables.cfg</code>
Your added tools	The portal or console commands (stored in <code>myrhino/custom_tools.json</code> ; <code>custom_tools.cfg</code> is generated – never edit it)
Starting values, caps, checklists, allowed characters	<code>rhino/presets.py</code>
Which pins reach the tool connector	<code>myrhino/umbilical.json</code> (copy <code>umbilical.example.json</code>)
M3 / M5 , power cap, watchdog, safe-off, pause/resume	<code>tools/tool_power.cfg</code>
What Pause / Resume / Cancel add to Mainsail's buttons	<code>_CLIENT_VARIABLE</code> and <code>_RHINO_CANCEL</code> in <code>client_macros.cfg</code>
Tool swap and restart prompt	<code>toolchanger.cfg</code> , <code>guided/tool_swap_wizard.cfg</code>
Job setup wizards	<code>guided/*_workflow.cfg</code>
Portal screens	<code>rhino/portal/static/portal.js</code> , <code>templates/index.html</code> , <code>portal.css</code>
A tool's controls and macros	The portal (Controls and Macros tabs). They are written into <code>custom_tools.cfg</code> ; the rules are in <code>rhino/extras.py</code>
Maintenance tasks, work log, meters	The portal. Stored in <code>myrhino/maintenance/</code> (<code>tasks.json</code> , <code>history.json</code> , <code>meters.json</code>), so the GitHub backup keeps them
Starter task intervals	<code>rhino/maint/library.py</code> (only affects tasks added afterwards)
The start-up maintenance pop-up	<code>guided/maintenance.cfg</code> ; <code>myrhino/maintenance_status.cfg</code> is generated - never edit it

Backups. `BACKUP_CFG MSG=<note>` pushes the config folder to your GitHub backup through `klipper-backup`. The tool registry keeps its last 10 versions in `myrhino/registry_backups/`. Photos live outside the config folder in `~/printer_data/rhino_data/images/`, so they are not in the GitHub backup.

Tests. `sh dev/run_all.sh` runs a static check of the whole config and 530 automated checks: the macros in a simulated Klipper (against the real Mainsail macros); motion tests that follow where the bed and head go and run every macro and button from seven machine states with each toolhead against five safety rules; the portal, tool controls and macros, maintenance and the Admin lists; and every portal screen opened in a real browser. It needs `pip install jinja2 flask` (and Playwright for the browser test), and runs on every change pushed to GitHub. The simulator knows the travel limits, not the shape of your tools or stock, so every release also has on-machine checks - the plan is in `docs/testing.md`, and the ones for the current version are in *Still to check on the machine*.

Trying the portal without the printer. `python3 dev/demo_server.py` runs the portal against a copy of the config and a pretend Moonraker. Every screen in this manual can be tried there without touching the machine.


Build reference

The printable parts, CAD (STEP) files and assembly drawings are in the `Rhino-3d-Printer` repository. Print structural parts in ABS or ASA.

Repository folder	What is there
<code>frame</code>	Frame assembly drawing and STEP model; <code>frame/panels</code> – 3 mm ACP enclosure panels, doors and hinges, front spacer assembly
<code>motion/xy</code>	XY joiners, X-carriage and Back Bone, stepper mounts, rear centre idler, belt tensioners, gantry router-template guide
<code>motion/z</code>	Leadscrew carriages and Z stepper mounts
<code>bed</code>	Vacuum bed heat spreader
<code>toolheads</code>	BlockOne (build files to come), SwitchFly, LightSaber laser mount and height gauge, HotJoe spindle parts, DragKnife; Jack Rabbit kept as legacy
<code>electrical</code>	Controller, relays, umbilical and wiring diagrams
<code>filament-box</code>	"Cheeky Monkey" roll stand and runout switch (unfinished)
<code>docs</code>	Software, safety (planned smoke detection) and maintenance notes
<code>archive</code>	2023 Klipper configs for the old SKR GTR board, ESC, fan and heated-bed notes – superseded by this config package

Frame

The frame is 2020/2040/2060 aluminium extrusion with 2" × ¼" aluminium flat bar across the top; some components mount straight to the flat bar, using printed drilling templates for hole placement.

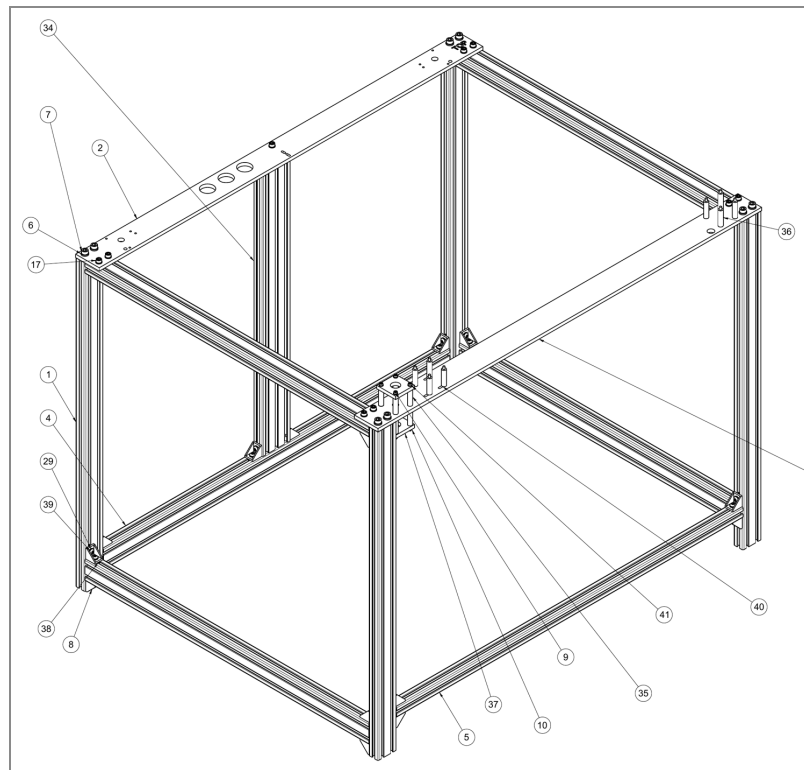

Frame assembly drawing

Item	Qty	Part
1	8	2040 extrusion, 24 in
2	1	Rear top frame flat bar, 2 in × 0.25 in aluminium
3	1	Front top frame flat bar, aluminium
4	1	2040 extrusion, 744 mm
5	1	2020 extrusion, 744 mm
6	8	M6 washer
7	8	M6 × 20 mm hex socket head screw
8	22	Cast corner bracket
9	4	M3 × 85 mm socket head screw
10	4	M3 hex nut
17	9	M5 × 12 mm screw
29	53	M5 washer

Item	Qty	Part
34	1	2060 extrusion, 550 mm
35	9	M3 × 30 mm spacer
36	8	M3 × 30 mm standoff
37	2	Motion system bracket, aluminium
38	44	M5 hammer nut
39	44	M5 × 10 mm button head hex drive bolt
40	8	M3 × 12 mm socket head screw
41	16	M3 washer

The frame notes recommend socket-head rather than button-head bolts wherever a bolt is torqued hard, because button heads strip more easily.

Still to check on the machine

The automated tests can't move the machine, so each release is checked on it. Work through these in order, with a hand on the emergency stop; stop at any test that doesn't pass and note its number. The full plan, with what counts as a pass, is in `docs/testing.md`.

Install and start

- ☐ **A1** Install 1.3.8 with menu option 3 – the preview shows no STOPPED, and the portal answers on port 5000.
- ☐ **A2** `FIRMWARE_RESTART` with a print head mounted – Klipper ready, no config errors.
- ☐ **A3** The *which toolhead is mounted?* question appears; `CHECK_TOOLHEADS` lists every tool.

Motion and homing

- ☐ **B1** Jog X and Y 100 mm and measure – 100 mm ± 0.5 . About 50 mm means a step setting is wrong: stop and report it.
- ☐ **B2** Jog Z 10 mm and measure – 10 mm ± 0.1 (gear_ratio 2:1). Then `Z_TILT_ADJUST`.
- ☐ **B5** Cancel a print – the bed lowers to Z150 or more, X/Y home, the head parks at X551 Y381 without touching the frame.

Homing guard (new in 1.3.8)

- ☐ **A6** LightSaber mounted: Mainsail's Home All is refused with a message and nothing moves; Home X and Home Y work. BlockOne mounted: Home All homes as before.
- ☐ **C4** Restart with the bed parked, then swap: the console says homing X/Y lowered the bed 10 mm and the park height was updated; `SET_Z_ZERO` then shows the new height.

Tool swaps

- ☐ **C1** Swap BlockOne to LightSaber – waits for 40 °C, lowers the bed, never homes Z.
- ☐ **C2** Confirm a swap with the umbilical unplugged – *Toolhead not detected*; plug in, **Check again**.
- ☐ **C3** Start a BlockOne file with the laser mounted – refused, nothing moves.

Printing

- ☐ **D1–D3** Paper test, then a test cube with the Orca profiles: the PLA question closes when answered, 210/65 °C, a 120 mm prime line, a slow first layer, the bed parked at the end. The first layer is laid at the paper-test height (1.3.8 keeps it when the file is released).

Set Z zero

- ☐ **E1-E2** `SET_Z_ZERO` with LightSaber or HotJoe – the buttons move the bed the amount shown, Bed down stops at Z380, SET moves nothing, and `G1 Z5 F300` then lifts the tool 5 mm above the surface.
- ☐ **E3** Restart with the bed parked, run `SET_Z_ZERO` – the *Bed position* question; **Yes** moves nothing until a Bed button, then X/Y home. Needs `[force_move] enable_force_move: True` (in `toolchanger.cfg`).
- ☐ **E4** Restart after moving the bed below Z150 – no question; home Z with a print head.
- ☐ **E6** After a CNC or drag-knife setup, swap to BlockOne and print – no X/Y shift.

Laser, CNC and drag-knife jobs

- ☐ **F1-F3** Laser at low power on scrap; a CNC air cut 10 mm above the stock first; a drag-knife test line. Run the first file from the LaserWeb settings in *Slicer and CAM settings* at low power.
- ☐ **F4** Pause and resume each tool type – the 10 mm lift clears the work, and the spindle is back to speed before it re-enters the cut.
- ☐ Power values – tune every placeholder power and on-time on the real tools.

Emergency stop and backups

- ☐ **H1-H2** `EMERGENCY_STOP` with the focus dot on – laser off at once; with HotJoe – relay open, ESC quiet.
- ☐ **I1** Klipper-Backup shows your config files in GitHub again after removing the stray `.git` folder.

Settings to know

- ☐ Idle timeout – add `[idle_timeout] timeout: 1800` if you use the full ABS/ASA cooldown.
- ☐ Connector pins – only PB1, PC0 and PC1 are free; list any other spare umbilical pins in `myrhino/umbilical.json`.
- ☐ `LEDFLASH` takes about 1.35 s, which also delays the macros that call it (cancel, emergency stop).

Wiring to confirm

- ☐ **Spindle and servo PWM contact.** The umbilical pin map puts the ESC signal (PB11) on contact 18, but the original HotJoe and SwitchFly sheets listed the PWM signal on contact 19. This manual and the portal use 18, which matches the pin map and `printer.cfg`; check the connector and correct the pages if it is 19.
- ☐ **Laser 12 V power pin.** The pin map lists PD12 (Fan2) for the 12 V power activate on contacts 20–21; `printer.cfg` drives `LASER_INITIALIZE` from PD13 (Fan3 on the Octopus v1.1).
- ☐ **X and Y endstops.** The wiring sheets give X-limit PG6 and Y-limit PG9; `printer.cfg` has `stepper_x` on PG9 and `stepper_y` on PG6.
- ☐ **SwitchFly servo power.** The SwitchFly page lists 24 V power activate on contacts 11–12, while its servo wiring diagram feeds the regulator from 12 V activate.
- ☐ **Fan labels.** On the Octopus v1.1 PA8 is FAN0 and PE5 is FAN1; the pin sheets label them Fan5 and Fan0. The pins are right; only the labels differ.