

3 PERIODIC INSPECTIONS

3.1	Monthly Inspections	3-1
3.1.1	Pull Belt Unit.	3-1
3.2	3-Month Inspections	3-3
3.2.1	Lubrication	3-3
3.2.1.1	Jaw Unit	3-3
3.2.1.2	Central Lubrication (Linear Guides and Ball Screw) Gear Box.	3-4
3.2.1.3	Cam Followers	3-5
3.2.1.4	Shaker Unit Gear (Option)	3-7
3.3	6-Month Inspections	3-9
3.3.1	Vacuum System Air Filter	3-9
3.3.2	Lubrication	3-10
3.3.2.1	Film Tracking Linear Guides	3-10


3 PERIODIC INSPECTIONS

3.1 Monthly Inspections


3.1.1 Pull Belt Unit

1. Press the [Run/Lace] key.


► The pull-down belts move outward.

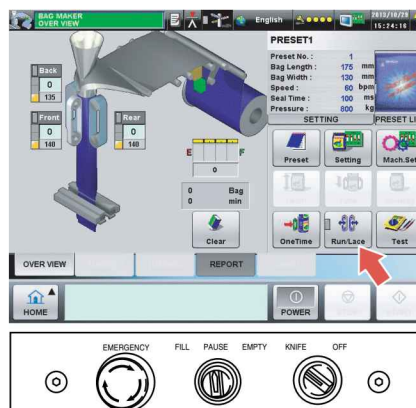


2. Turn the main power OFF.

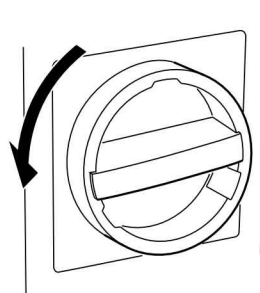

3. Open the front cover.

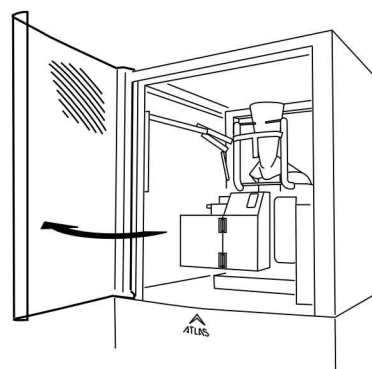


4. Pull the handle forward, and swing the back seal unit out.

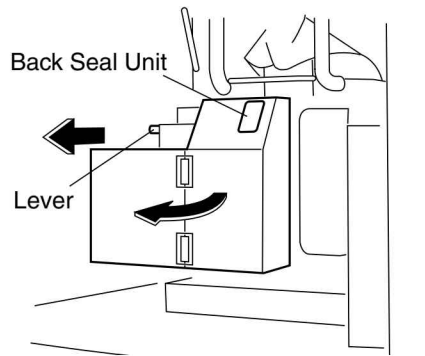


5. Remove the former, and make sure that the pull belt is free of grime, flaws, and splits.




- **Be careful when handling the former. It is heavy.**

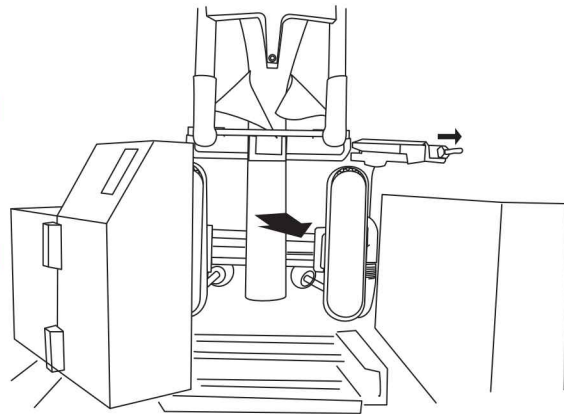

6. Press down on the center of the pull belt. Confirm that the belt deflects approximately 3 to 4 millimeters.

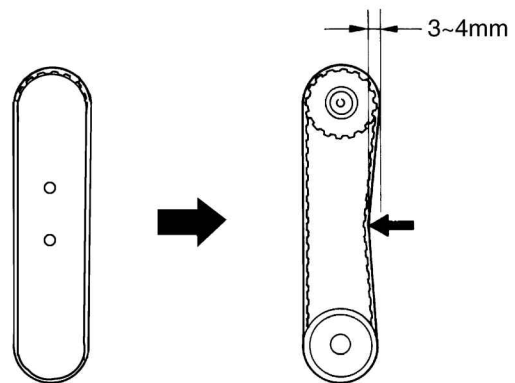

7. If adjustment is needed, loosen the nut at the reverse side of the pull belt unit and adjust the tension.

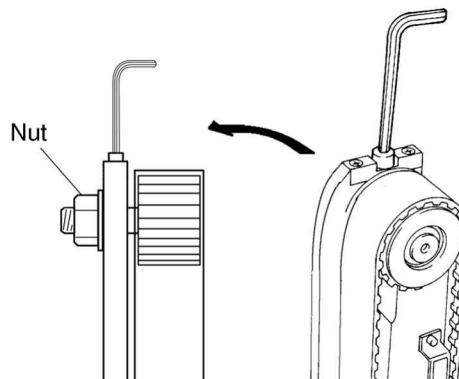

3.2 3-Month Inspections

3.2.1 Lubrication

CAUTION

- Lubricate periodically.

3.2.1.1 Jaw Unit

CAUTION

- Make sure that the product is lubricated every three months. Use Shell Alvania.

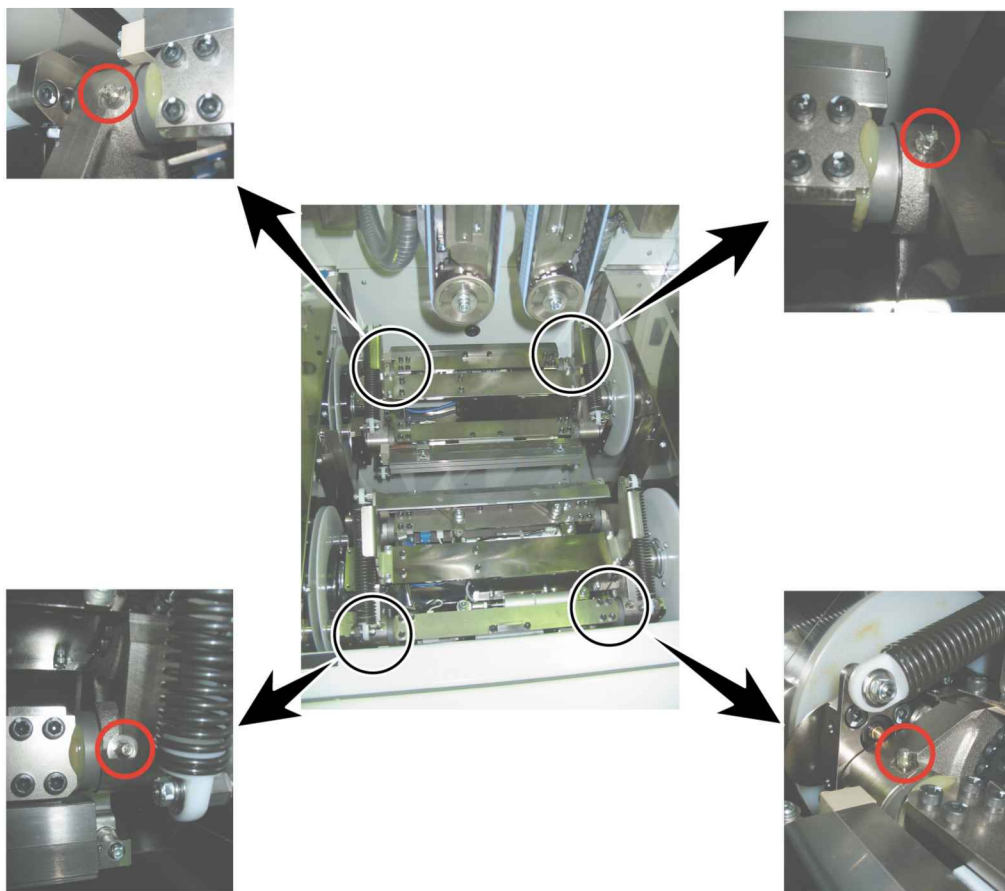


Fig. 3-1 JAW unit

1. Turn the main power OFF.

2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Lubricate the 8 locations as follows.
 - Right and left locations at the next of the reverse of the metal plate
 - One location on the jaw arm
 - Each location for 4 jaw units (Total 8 locations)

NOTE

- Apply grease to the jaw base until the old (existing) grease begins to ooze from the clearance with the shaft.

5. Using a sharp-pointed object, make sure that the grease point ball moves.


3.2.1.2 Central Lubrication (Linear Guides and Ball Screw) Gear Box




CAUTION


- **Make sure that the product is lubricated every three months. Use Shell Alvania.**

1. Turn the main power OFF.
2. Open the cover of the rear side.

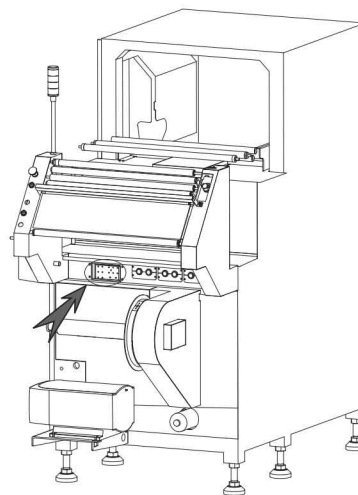

3. Lubricate central lubrication point.
4. Grease the linear guides.

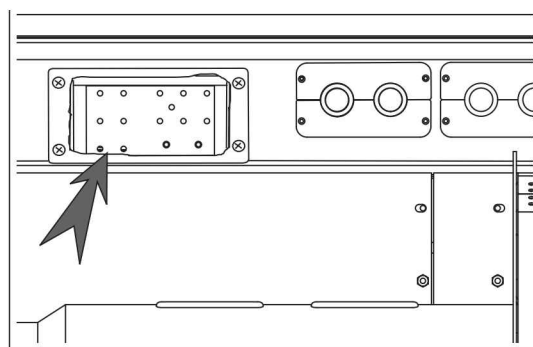


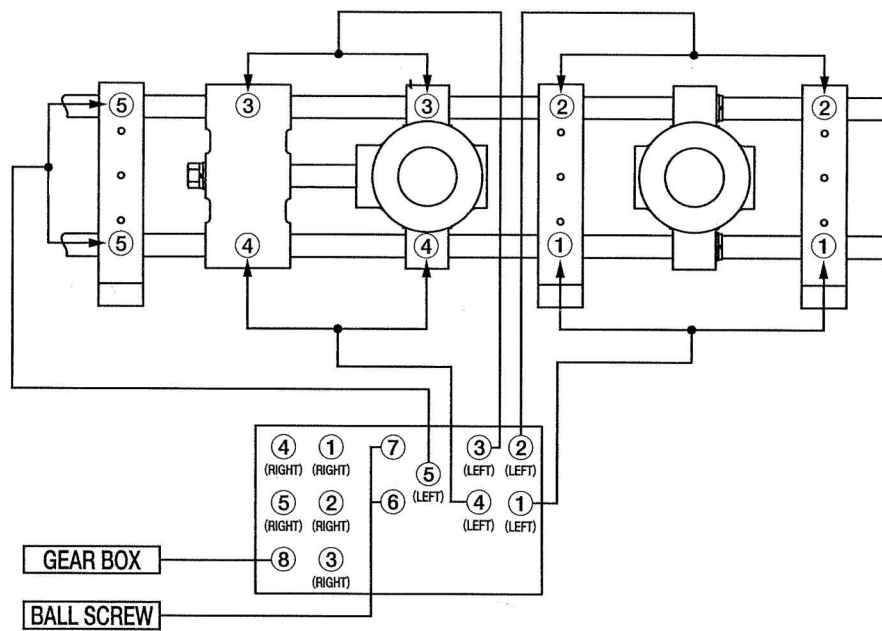

3.2.1.3 Cam Followers

This procedure describes how to lubricate the four cam followers found in the jaw area of the Atlas Bagmaker. Cam follower lubrication must be accomplished every **4,000,000 cycles** to prevent cam follower damage.

Tools Needed: Set of metric Allen wrenches and extension bar;
grease gun (96-9008-08 Hand Grease Pump) provided with Atlas Bagmaker;
use Shell Alvania Grease (64-5201-04 Grease)

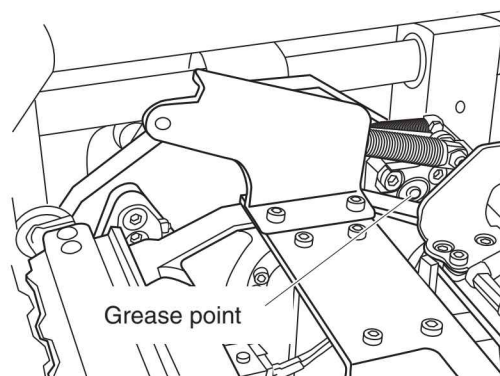

WARNING

- **Jaws of the Bagmaker may be very hot. Allow the jaws to cool before working in the jaw area.**
Use caution when working near the knife blade.


1. Follow all Lockout / Tagout Procedures.



2. Open the front cover.
3. Locate the four brass cam follower lubrication nipples.

CAUTION


- **Use caution rotating jaws manually to avoid pinch points.**

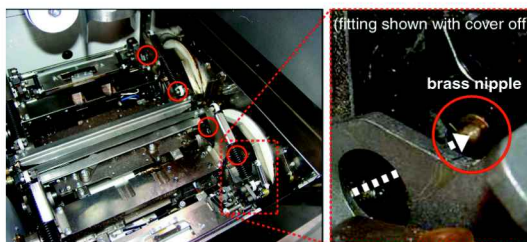

4. Remove the cam follower covers (clam shell type) by removing two 3mm Allen bolts and the four 5mm Allen bolts.

NOTE

- Rotate the jaws 180° to locate the opposite set of bolts.
The 5mm bolts are firmly secured. Use an extension handle to loosen them.

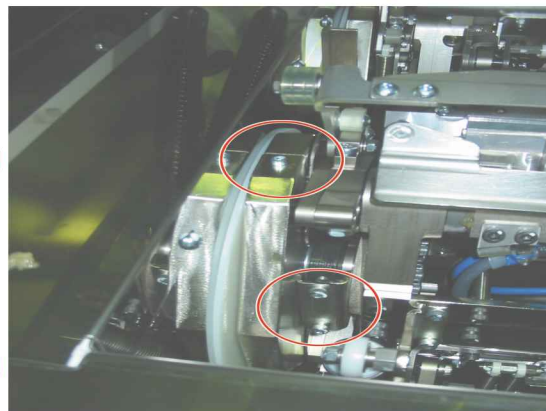

5. After removing the Allen bolts, use your hand to remove both clam shell covers. Completely clean the front and rear jaw clam shell covers.



6. Once the covers have been cleaned and slid into position, replace the Allen bolts.
7. Place the Ishida grease gun into position and slide the nozzle over brass nipple.
8. Pump the grease gun 5 times. **Rotate jaws 180° to lube second front nipple.**
9. Repeat the procedure on the rear jaw cam followers top and bottom nipples.



3.2.1.4 Shaker Unit Gear (Option)

1. Press the [RUN/LACE] key.
 ► The pull-down belts move outward.
2. Turn the main power OFF.
3. Open the front cover.
4. Grease the inner gear.

