



7. Remove the allen bolt and remove the knife blade.

WARNING

- **Be careful when removing the knife blade. It is very sharp and hot.**

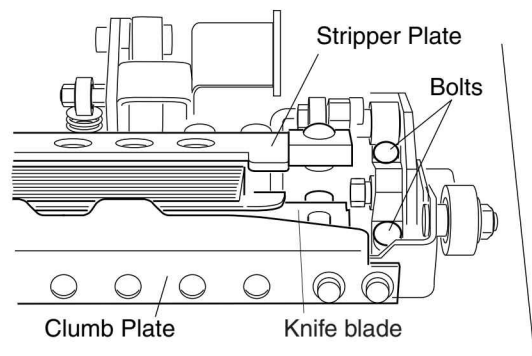


8. Remove 8 screws, remove the heater unit from the arm unit.

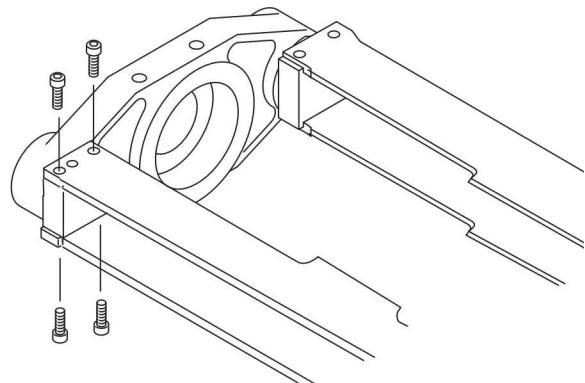


9. Remove 4 screws, remove the heater cover.
10. Remove 3 screws, remove the heater cap then pull the heater.

TIP

- In case of replacing thermocouple, remove the fixing screw then pull the thermocouple.

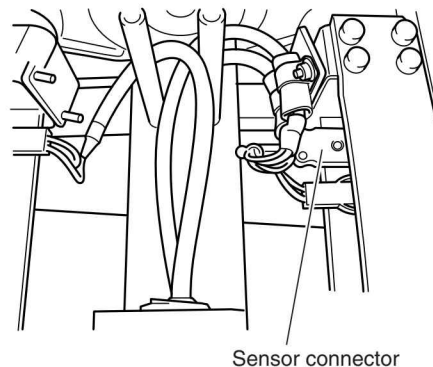


11. Attach the new heater or thermocouple.
12. Install in the reverse order of removal.
13. Check the engagement of the jaws. If the engagement is not proper, adjustment is needed. (To adjust the position of the jaws, see "4.1.2 Jaw Alignment")

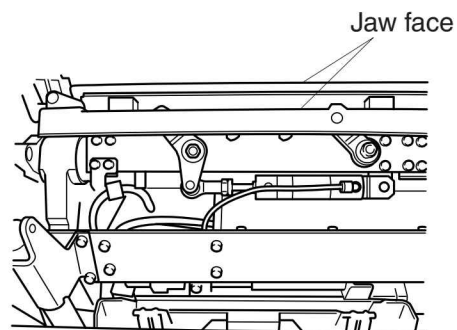


4.1.6 M3 Motor

4.1.6.1 Timing Belt of M3 Motor


1. Turn the main power OFF.
2. Remove the tracking unit cover.
3. Move the tracking unit to the right edge.
(Rotate the tracking motor by hand to move the unit.)
4. Perform the operation from the back side of the main unit.

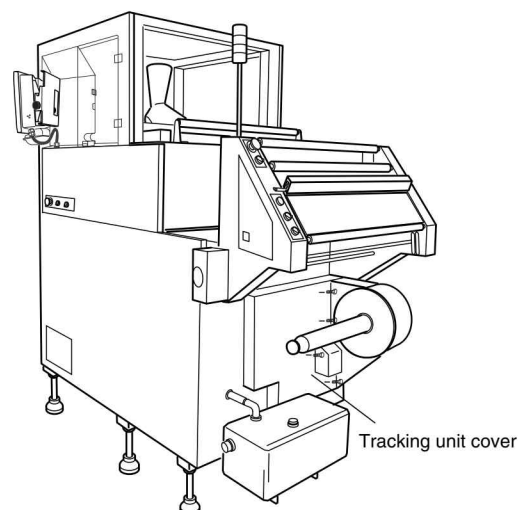

5. Loosen the allen bolts that fasten the M3 motor.
6. Lift the M3 motor, and temporarily fasten the allen bolts.
7. Replace the belt with a new one.
8. Lift the motor down and tighten the bolt.

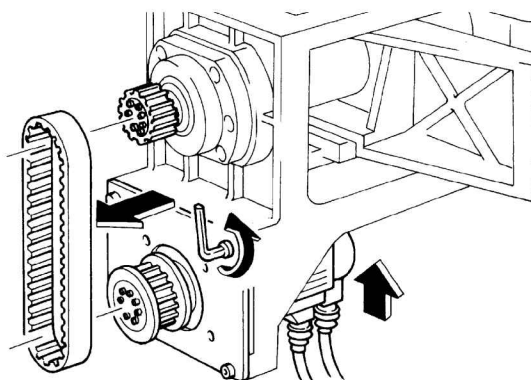


9. Using your finger, press down on the center of the belt between pulleys. Adjust until the deflection is approximately 2 millimeters; then tighten the M3 motor fixing bolts.


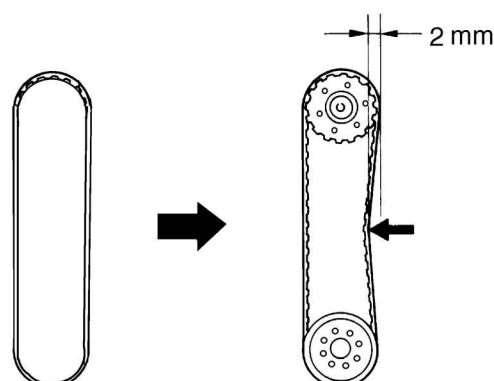


4.1.6.2 Replacing the M3 Pivot Point Motor

1. Turn the main power OFF.
2. Remove the tracking unit cover.
3. Remove the main unit lower cover on the right side.
4. Move the tracking unit to the right edge.
(Rotate the tracking motor by hand to move the unit.)

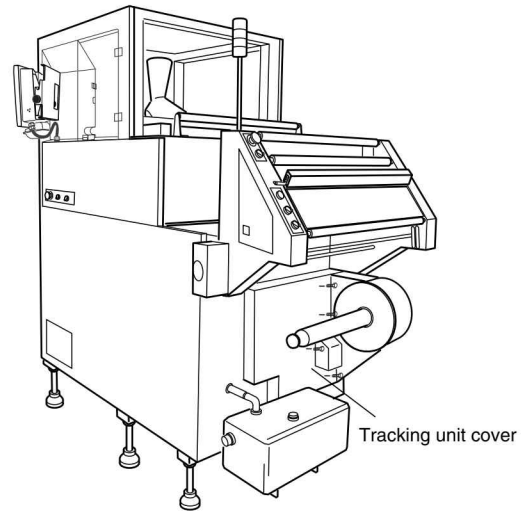


5. Loosen the allen bolts that fasten the M3 motor.
6. Lift the M3 motor, and temporarily fasten the allen bolts.
7. Remove the timing belt.
8. Remove the two cables connected to motor.
9. Remove the 4 screws, and replace the motor with a new one.
10. Move the electrical control panel with the front side of the panel centered and remove the motor through the panel for installation.
11. Temporarily fasten the motor.
12. Attach the belt.
13. Lift the motor down.
14. Using your finger, press down on the center of the belt between gears. Adjust until the deflection is approximately 2 millimeters; then tighten the M3 motor fixing bolts.

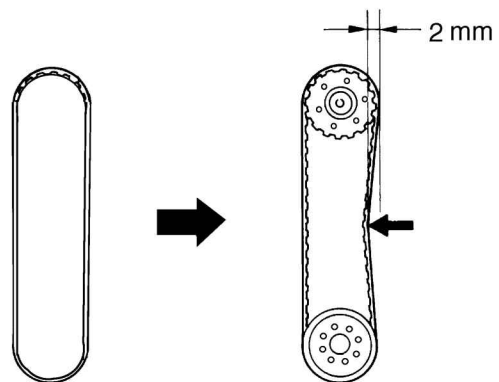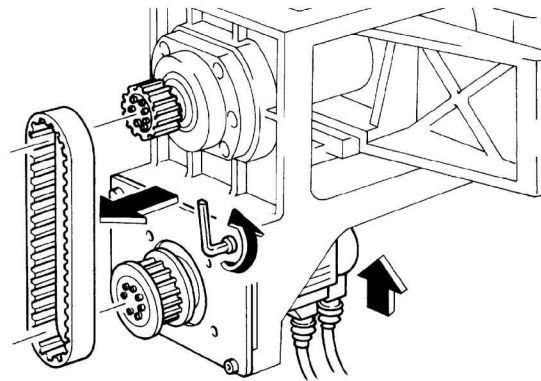

4.1.6.3 Home Position of Pivot

1. Turn the motor power supply OFF.
2. Turn the main power supply OFF.
3. Remove the main unit lower cover on the right side.
4. Open the front cover.
5. Pull the handle forward, and swing the back seal unit out.
6. Remove 4 bolts and remove the crumb plate and the stripper plate.

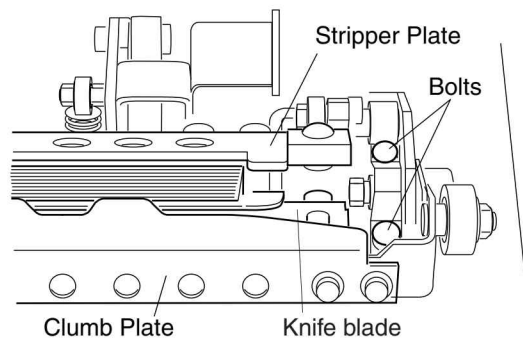


CAUTION

- After operation, the jaws are extremely hot. Do not touch directly. You can get burned.

7. Jog arms around until jaw faces mesh together and arm are perfectly horizontal.


NOTE

- Arms must be perfectly horizontal.

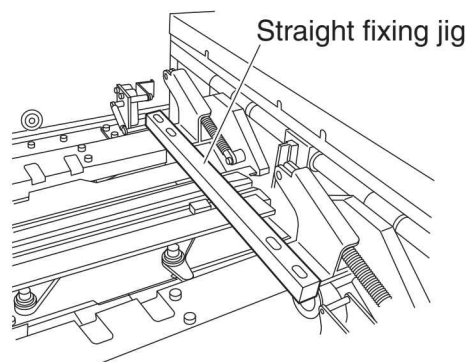


8. Attach a straight fixing jig to the jaw arm.


9. Set gap to 0.3mm between flag and sensor.

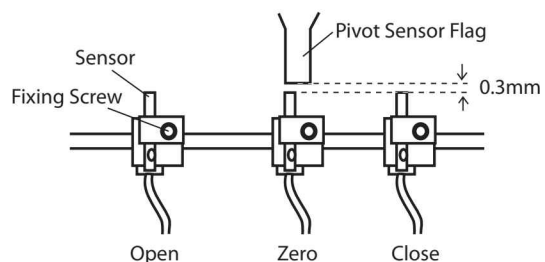

10. Make a space for 3mm between jaw faces.

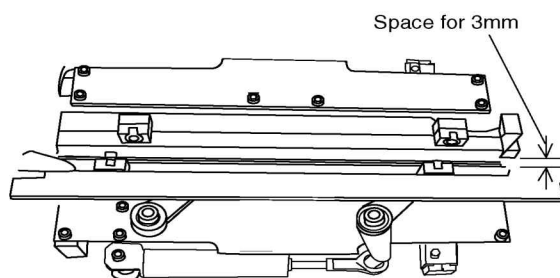



11. Adjust the middle(zero) sensor position to the right edge of the flag.
12. Remove the fixing jig.
13. Set the distance to 34mm between middle block and right(close) block.
14. Set the distance to 32mm between middle block and left(open) block.

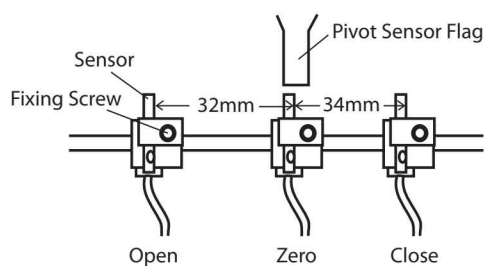

4.2 Back Seal Unit

4.2.1 Replacing the Heater Band



1. Turn the main power OFF.
2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Open the back seal cover.
5. Lift the tension lever located on the side of the back seal unit.
6. Replace the heater band with a new one.

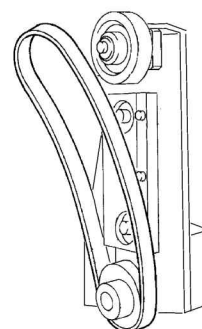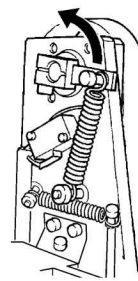

4.2.2 Back Seal Heater

4.2.2.1 Replacing the Heater Sensor


1. Turn the main power OFF.
2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Open the back seal cover.
5. Lift the tension lever located on the back of the steel belt, and remove the heater belt.

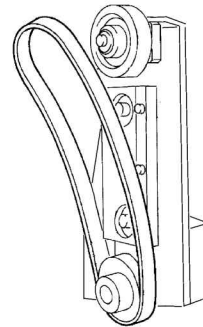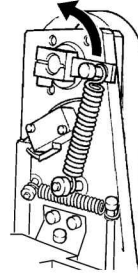

6. Remove the heater block.

NOTE


- The lengths of the bolts that fasten the heater block are different.

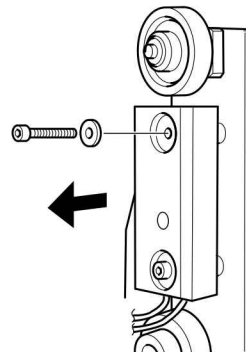

7. Loosen the two allen screws ③ from the side of the heater block and remove the heater shoe.
8. Loosen the screws ① and/or ② from the side of the heater block, and pull out the heater and/or thermocouple.

CAUTION

- **If the thermal joint is sticking, making it difficult to pull out the heater, press with a rod-shaped tool from the opposite side; then pull out.**

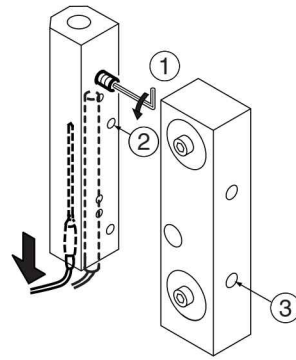

9. Replace the heater and/or thermocouple with new ones.
10. Reinstall all parts in the reverse order of removal.

4.2.2.2 Replacing the Heat Pipe

1. Turn the main power OFF.
2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Open the back seal cover.
5. Lift the tension lever located on the back of the steel belt, and remove the heater belt.

